



Telephone with voice control

From model year 2001

Main fuse

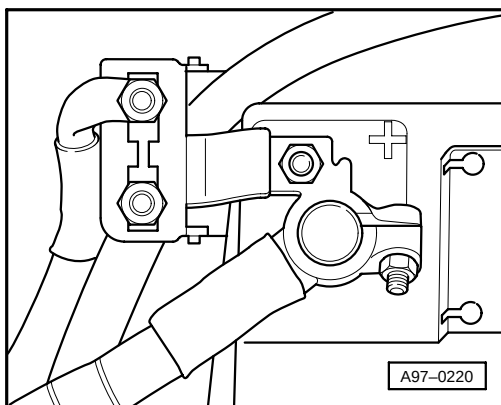

Fuse box

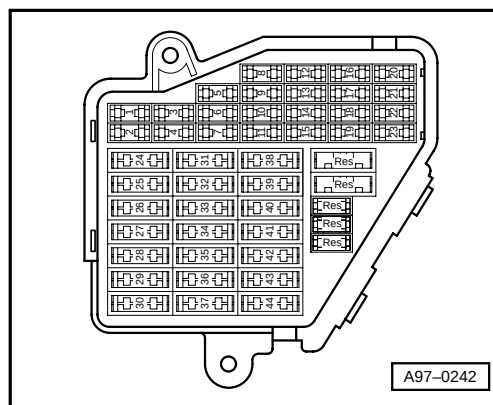


Fuse colours

- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 7.5A – orange
- 5 A – beige

From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.

4-point relay carrier with screw connection

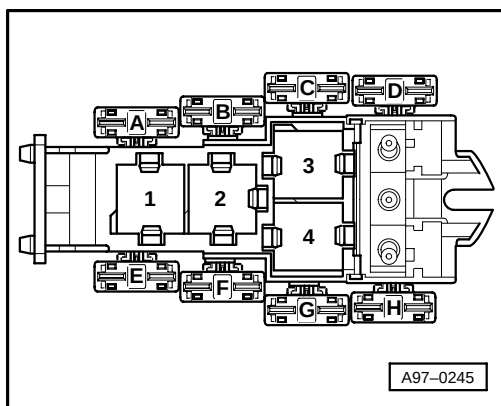


www.car60.com

Telephone transmitter and receiver unit, fuses

- D – Ignition/starter switch
 R36 – Telephone transmitter and receiver unit
 S5 – Fuse in fuse box/relay plate
 S8 – Fuse in fuse box/relay plate
 T10m – 10-pin connector, black, on telephone transmitter and receiver unit

- (346) – Earth connection (audio), in dash panel wiring harness
 (501) – Screw connection -2- (30), on relay plate
 (610) – Earth point (audio), below centre console, front
 (A2) – Positive (+) connection (15), in dash panel wiring harness
 (A32) – Positive (+) connection (30), in dash panel wiring harness
 (A52) – Positive (+) connection -2- (30), in dash panel wiring harness
 (A74) – Connection (15a, fuse 5), in dash panel wiring harness
 (V32) – Positive (+) connection (30), in telephone wiring harness

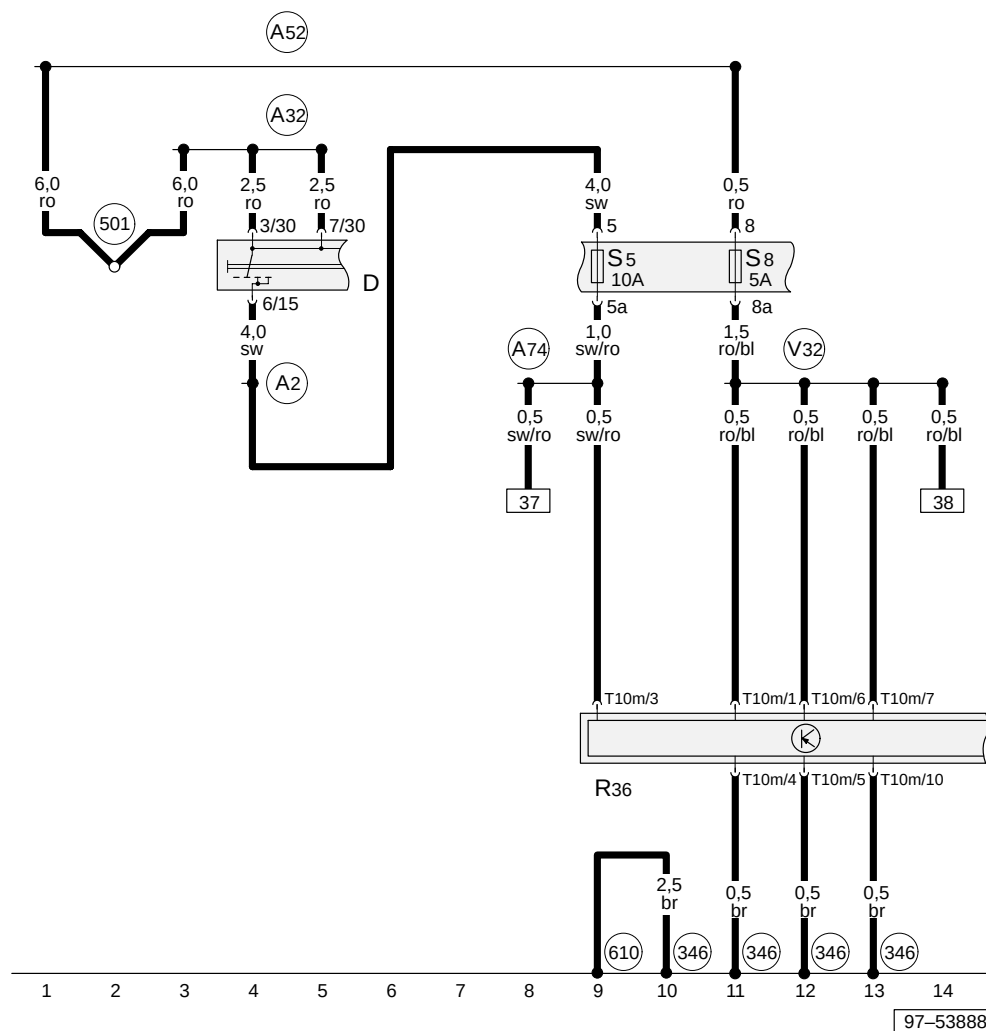


ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange

www.car60.com

Telephone transmitter and receiver unit, aerial

- R1 – Aerial connection
- R36 – Telephone transmitter and receiver unit
- R37 – Telephone handset
- R65 – Telephone aerial
- T46 – 46-pin connector, black, on telephone transmitter and receiver unit

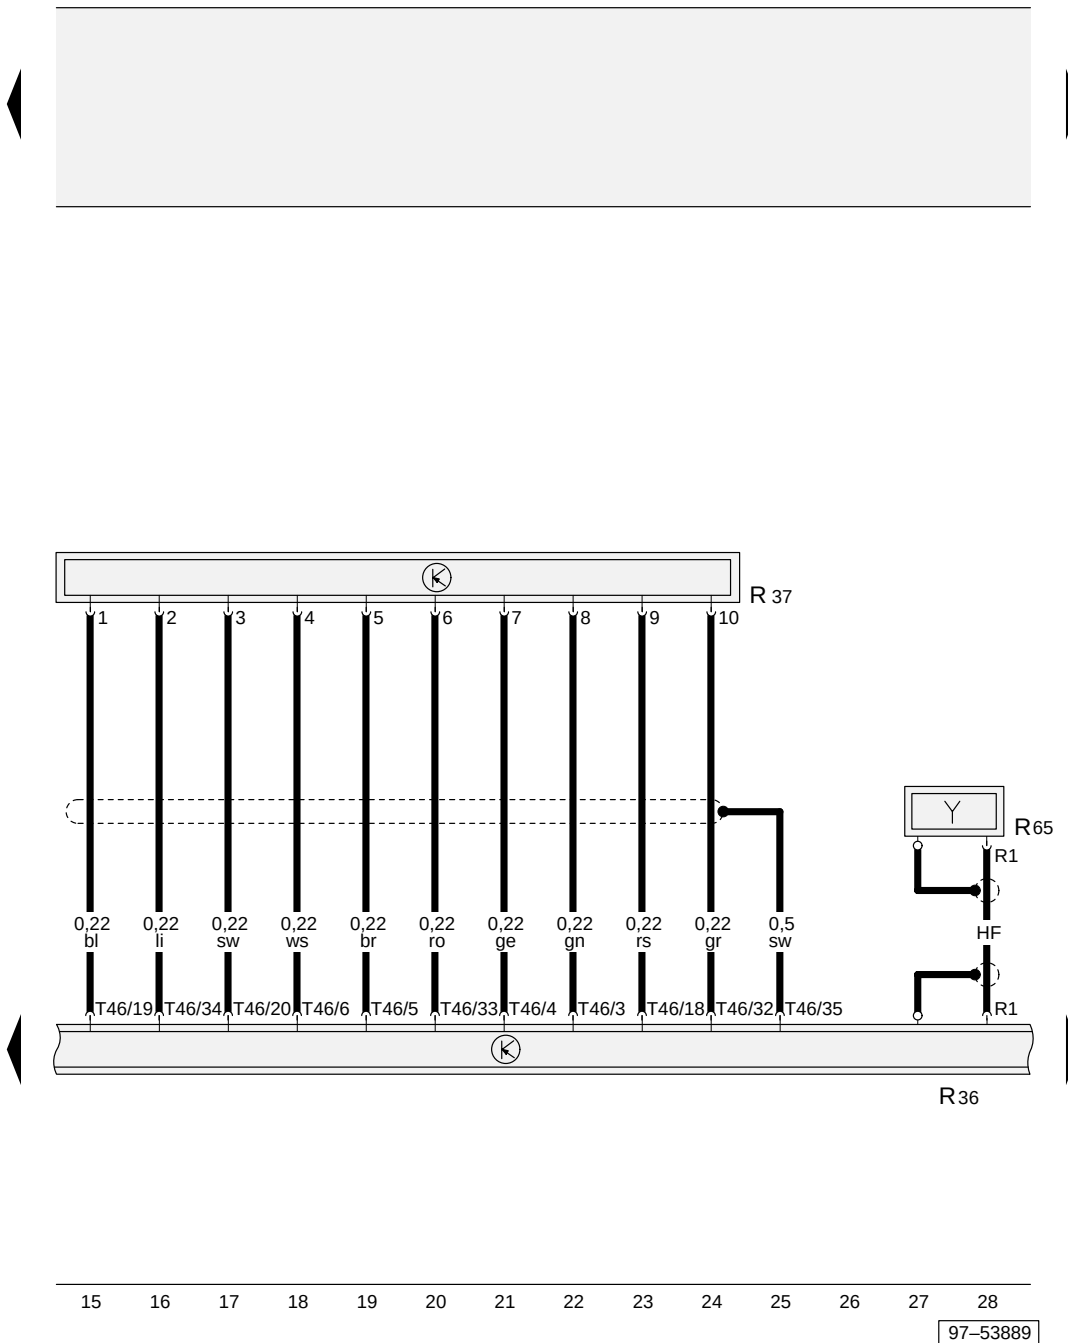

97-53889

Control unit for voice control, telephone transmitter and receiver unit, fax unit

J507 – Control unit for voice control

R36 – Telephone transmitter and receiver unit

R73 – Fax unit


T46 – 46-pin connector, black, on telephone transmitter and receiver unit

(346) – Earth connection (audio), in dash panel wiring harness

(V16) – Connection (screening), in telephone wiring harness

(V44) – Connection (FAX), in communication wiring harness

* – Optional equipment

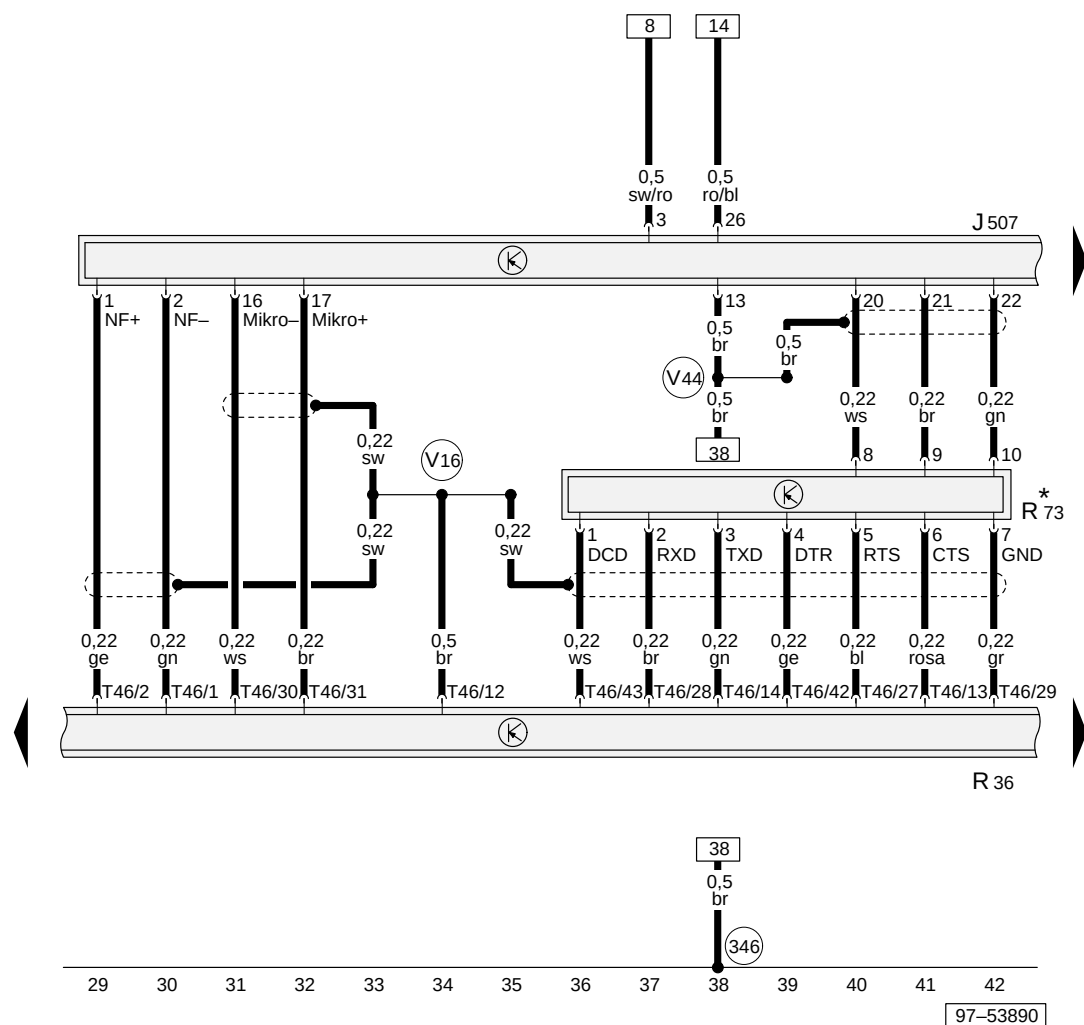


Control unit for voice control, telephone transmitter and receiver unit, telephone microphone

- J401 – Navigation system with CD drive control unit
 J402 – Operating electronics control unit, navigation
 J507 – Control unit for voice control
 R – Radio
 R36 – Telephone transmitter and receiver unit
 R38 – Telephone microphone
 T8 – 8-pin connector, black, radio connector III
 T10l – 10-pin connector, red, radio connector IV
 T10m – 10-pin connector, black, on telephone transmitter and receiver unit
 T17f – 17-pin connector, orange, connector point, A pillar, left
 T20d – 20-pin connector, black, radio connector I
 T20e – 20-pin connector, black, navigation system with CD drive control unit

- (A129) – Connection (muting), in dash panel wiring harness
 (V49) – Connection (audio frequency, NF +), in communication wiring harness
 (V50) – Connection (audio frequency, NF –), in communication wiring harness

- * – Models with radio without navigation system
 ** – Models with navigation system "NS Low"
 *** – Models with radio navigation system

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange

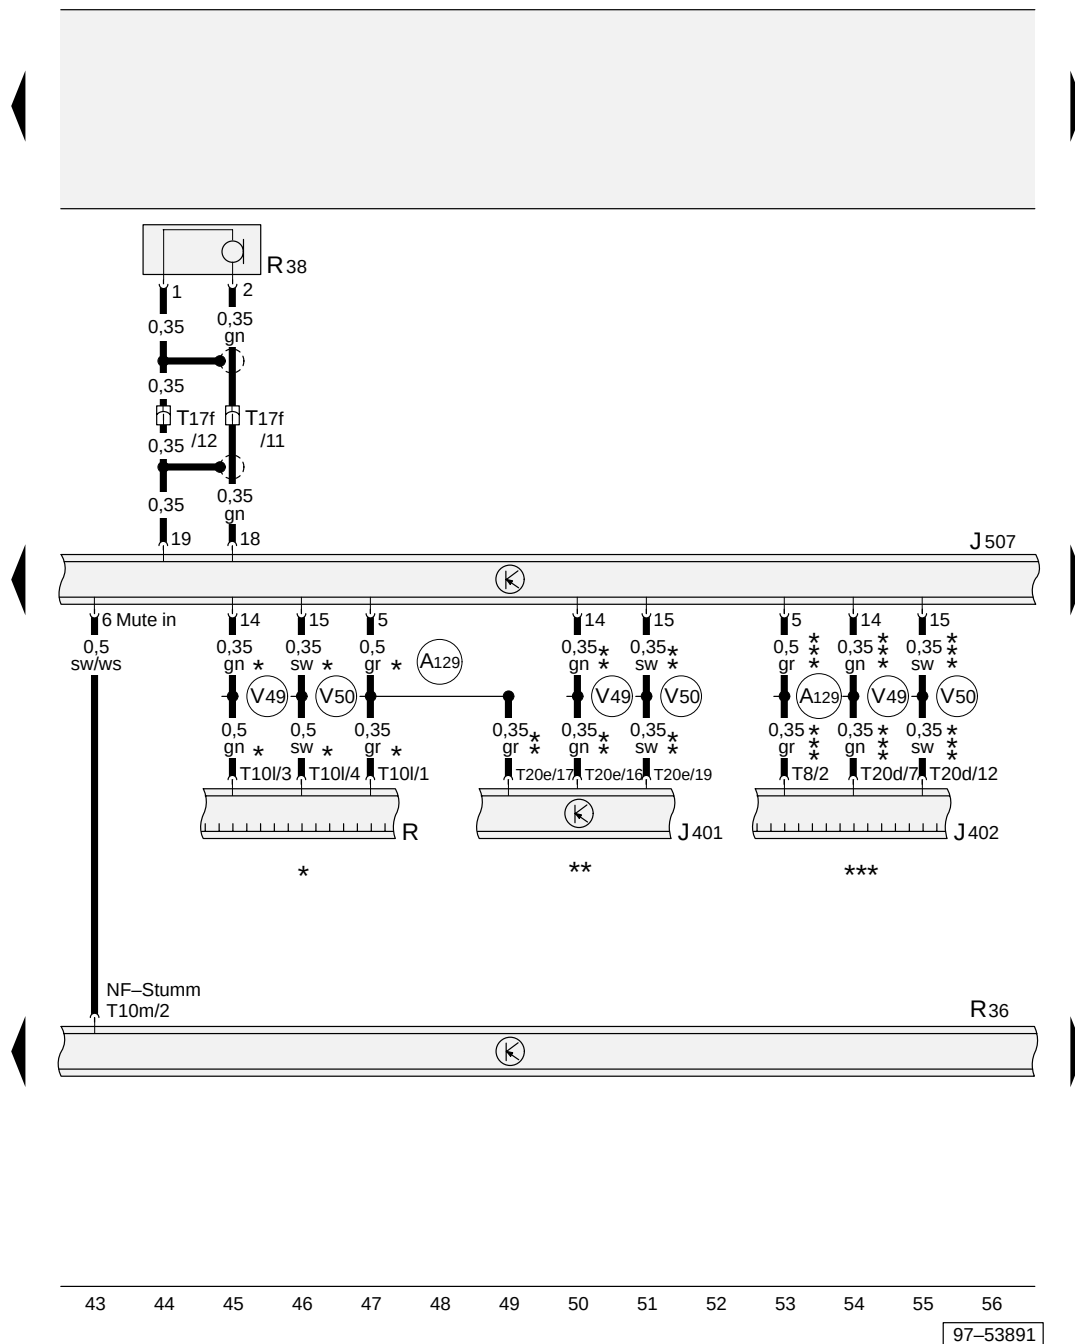

Control unit for voice control, telephone transmitter and receiver unit, CAN bus

- J285 – Control unit with display in dash panel insert
 J507 – Control unit for voice control
 R36 – Telephone transmitter and receiver unit
 T16 – 16-pin connector, black, diagnostic connector
 T32 – 32-pin connector, blue, on dash panel insert
 T32a – 32-pin connector, green, on dash panel insert
 T46 – 46-pin connector, black, on telephone transmitter and receiver unit

- (A76) – Connection (diagnosis wire K), in dash panel wiring harness
 (A178) – Connection (infotainment CAN bus, high), in dash panel wiring harness
 (A179) – Connection (infotainment CAN bus, low), in dash panel wiring harness

