



Multi-function steering wheel

From model year 2001

Main fuse

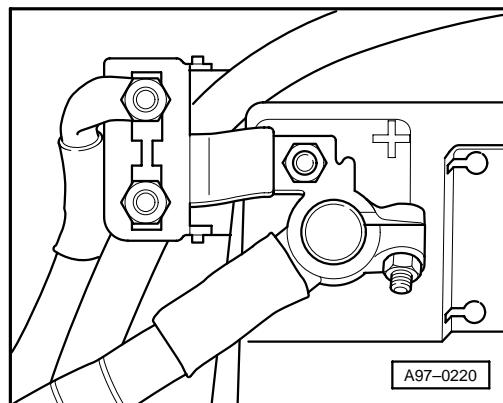

Fuse box

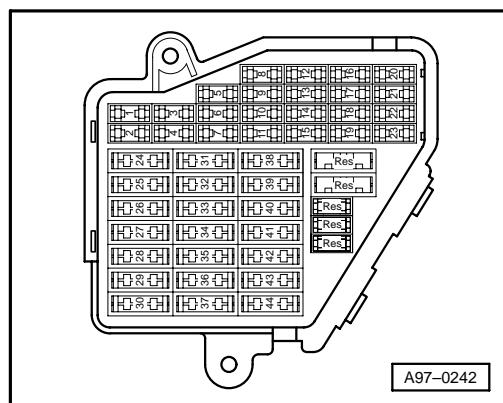


Fuse colours

- 30 A – green
- 25 A – white
- 20 A – yellow
- 15 A – blue
- 10 A – red
- 7.5A – orange
- 5A – beige

From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.

www.Car60.cc

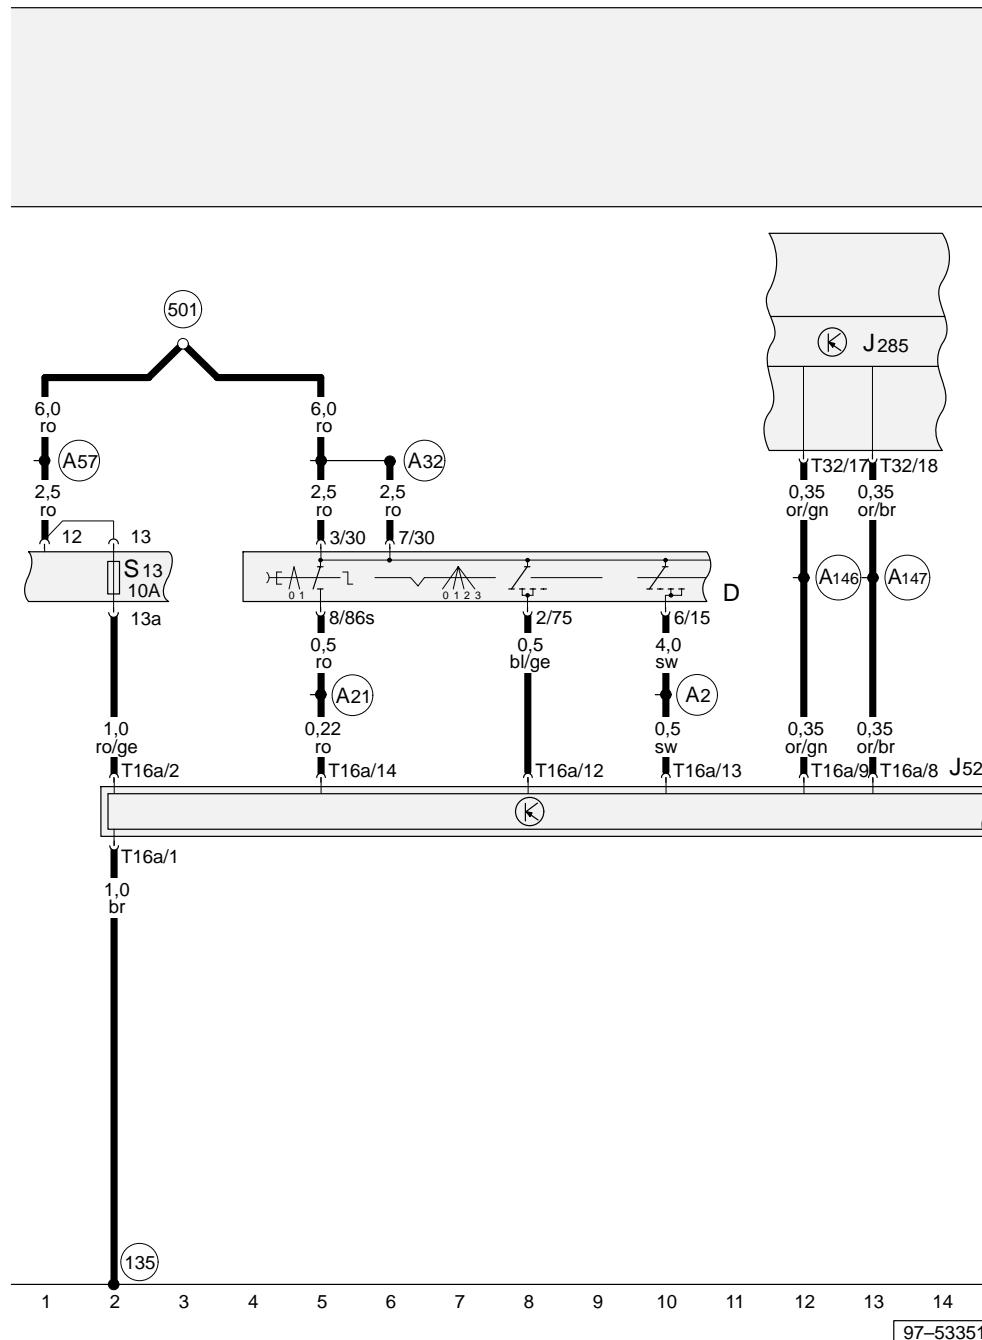


Ignition/starter switch, control unit with display in dash panel insert, steering column electronics control unit, fuse

- D - Ignition/starter switch
- J285 - Control unit with display in dash panel insert
- J527 - Steering column electronics control unit
- S13 - Fuse in fuse box/relay plate
- T16a - 16-pin connector, black, on steering column electronics control unit
- T32 - 32-pin connector, blue, on dash panel insert
- (135) - Earth connection -2-, in dash panel wiring harness
- (501) - Screw connection -2- (30), on relay plate
- (A2) - Positive (+) connection (15), in dash panel wiring harness
- (A21) - Connection (86s), in dash panel wiring harness
- (A32) - Positive (+) connection (30), in dash panel wiring harness
- (A57) - Positive (+) connection -3- (30), in dash panel wiring harness
- (A146) - Connection (convenience CAN bus, high), in dash panel wiring harness
- (A147) - Connection (convenience CAN bus, low), in dash panel wiring harness

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange

Operating unit in steering wheel, steering column
electronics control unit

E221 – Operating unit in steering wheel
J527 – Steering column electronics control unit

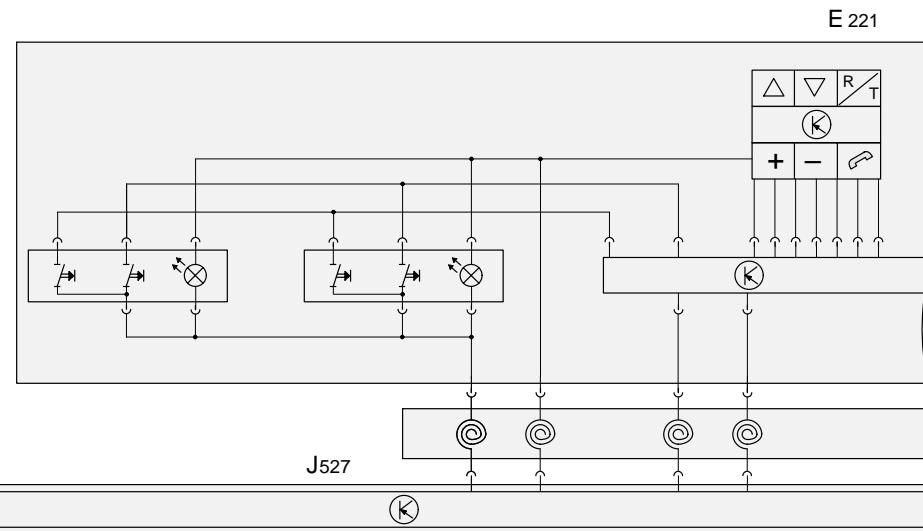

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange


15 16 17 18 19 20 21 22 23 24 25 26 27 28

97-53352

Operating unit in steering wheel, steering column electronics control unit

E221 – Operating unit in steering wheel
 F138 – Airbag coil connector, return spring with slip ring
 G189 – Overheating sensor
 H – Horn plate
 J234 – Airbag control unit
 J527 – Steering column electronics control unit
 N95 – Airbag igniter, driver's side
 T4e – 4-pin connector, yellow, connector point: module carrier in vehicle interior
 Z36 – Heated steering wheel

* – Operated via convenience CAN bus by heated driver's seat adjuster in control and display unit for air conditioner/Climatronic

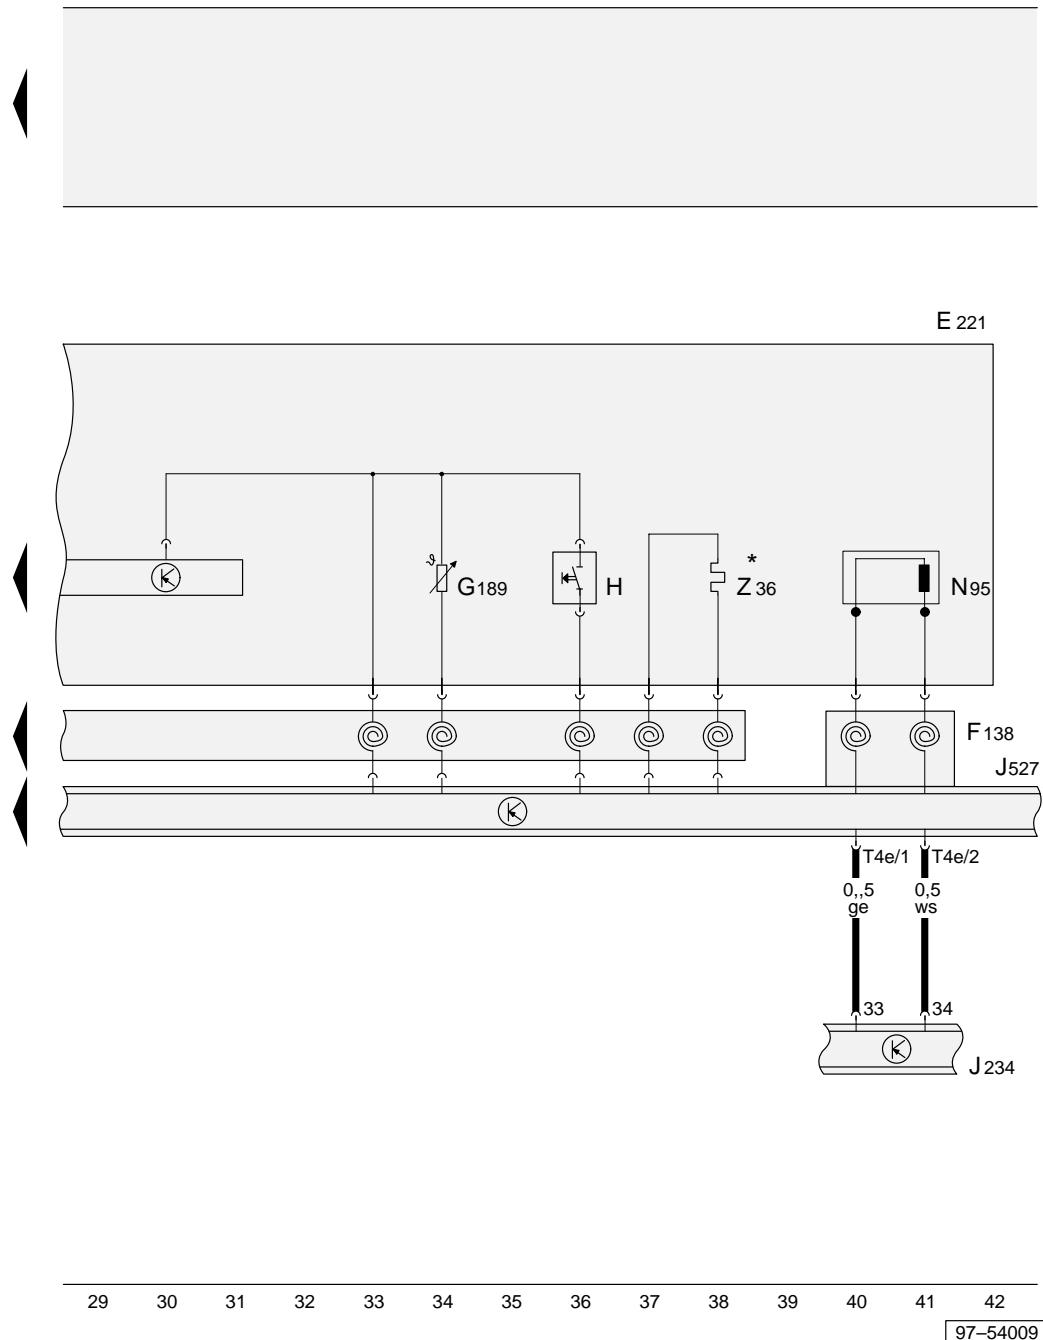

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange