


FUSES		
Fuse	Description	Amperage
F01	MK C1 ABS MODULE	70A
F02	GLOW PLUG CONTROL UNIT	60A
F04	ABS MODULE FANS	40A
F05	PTC 3	40A
F07	MAIN RELAY (2.9V6 MASTER)	50A
F09	KL30 ECM	7.5A
F10	HORN	15A
F11	ECM SECONDARY LOADS	15A
F14A	BLOW-BY HEATER (2.0L/2.2L)	7.5A
F14B	BLOW-BY HEATER (EXCEPT 2.0L/2.2L)	10A
F15	PTC 1	40A
F16	KL15 FROM BCM FOR ECM,ATC, DCTM	5A
F17	ECM (2.2JTDM)	20A
F19	A/C COMPRESSOR	10A
F20	KL30	7.5A
F22	ECM ENGINE PRIMARY LOADS (SLAVE 2.9V6 AND 2.2JTDM)	20A
F23	ADDITIONAL ELECTRIC WATER PUMP (2.9V6/2.2JTDM)	20A
F30	KL30 ATX LEVER	10A
F81A	PTC 2	60A
F81B	SECONDARY AIR PUMP	50A
F82	WINDSCREEN WASHER	20A
F84	+30 ECM 2.9V6 MASTER	7.5A
F89	GEARBOX OIL COOLING CIRCUIT ELECTRIC PUMP (2.9V6)	30A

RELAYS			
Relay	Alternate	Description	Amperage
T07	D820	AUTO SHUT DOWN	N/A
T09	D907	AUTO SHUT DOWN 2	N/A
T17	D825	HEADLAMP WASHER	N/A

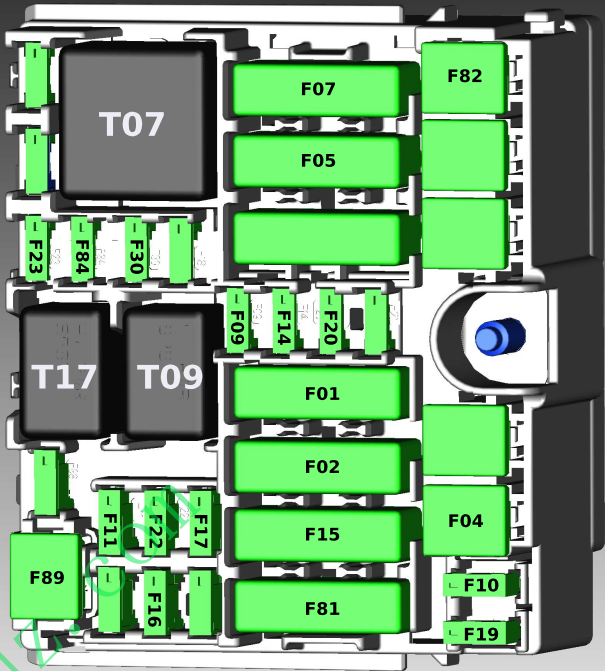

Underhood - Power Distribution Center