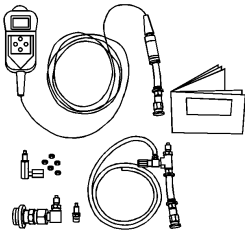 
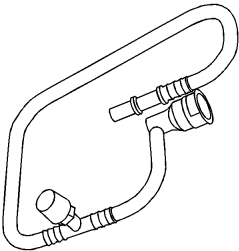 
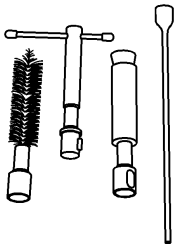 
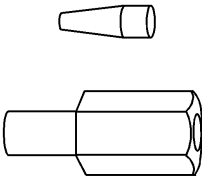 
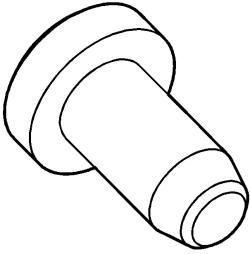 


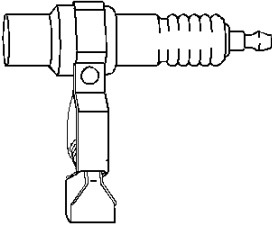 


 
 


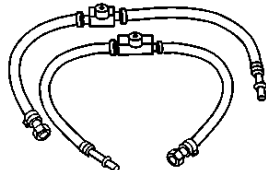 
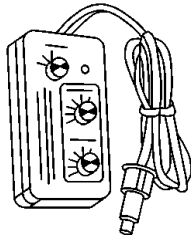 
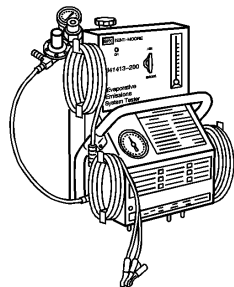 
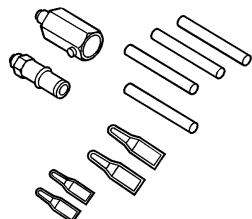 
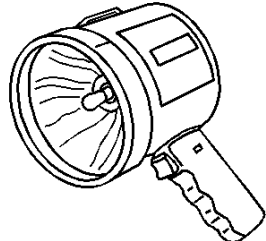 
6.4.7 专用工具和设备

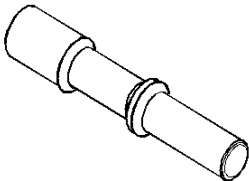 
 
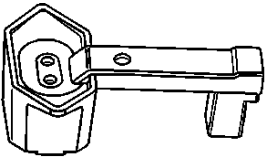 

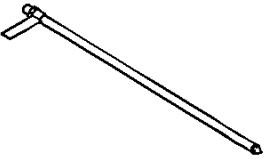 
6.4.7.1 专用工具

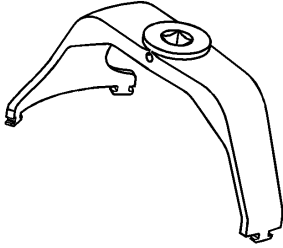 
图示	工具编号 / 说明
 1738990	CH 48027 数字式压力表
 1755444	CH 48096 蒸发排放检修口检修工具
 1651394	EN 47909 喷油器孔和套管清洁组件
 1786470	EN 48266 喷油器密封件安装工具和分级器

图示	工具编号 / 说明
 1993689	EN 48896 高压燃油泵安装定位仪
 1368839	GE 41415-50 燃油箱加注口盖适配器
 982	J 2619-01 惯性锤
 5381	J 26792 HEI 火花测试仪

图示	工具编号 / 说明
 <p>1413862</p>	<p>J 34730-262 燃油压力测试表适配器</p>
 <p>13552</p>	<p>J 35616-A/B-8637 连接器测试适配器组件</p>
 <p>1338380</p>	<p>J 35616-200 测试灯- 探测组件</p>
 <p>13542</p>	<p>J 37088-A 燃油管路断开工具组件</p>
 <p>1786471</p>	<p>J 37281-A 喷油器拆卸工具</p>

图示	工具编号 / 说明
 <p>13541</p>	<p>J 37287 燃油管路断开适配器</p>
 <p>416666</p>	<p>J 38522 可变信号发生器</p>
 <p>825000</p>	<p>J 41413-200 蒸发排放系统测试器 (EEST)</p>
 <p>1253126</p>	<p>J 41413-300 蒸发排放口盖和孔塞组件</p>
 <p>829182</p>	<p>J 41413-SPT 高强度白光灯</p>

图示	工具编号 / 说明
 382677	J 42960-2 燃油加注口门固定器
 696431	J 43244 继电器拔出钳
 677554	J 44175 燃油成分测试仪
 740729	J 44581 燃油管路断开工具
 793709	J 45004 燃油箱排放软管

图示	工具编号 / 说明
 1299798	J 45722 燃油传送器锁环扳手

空白