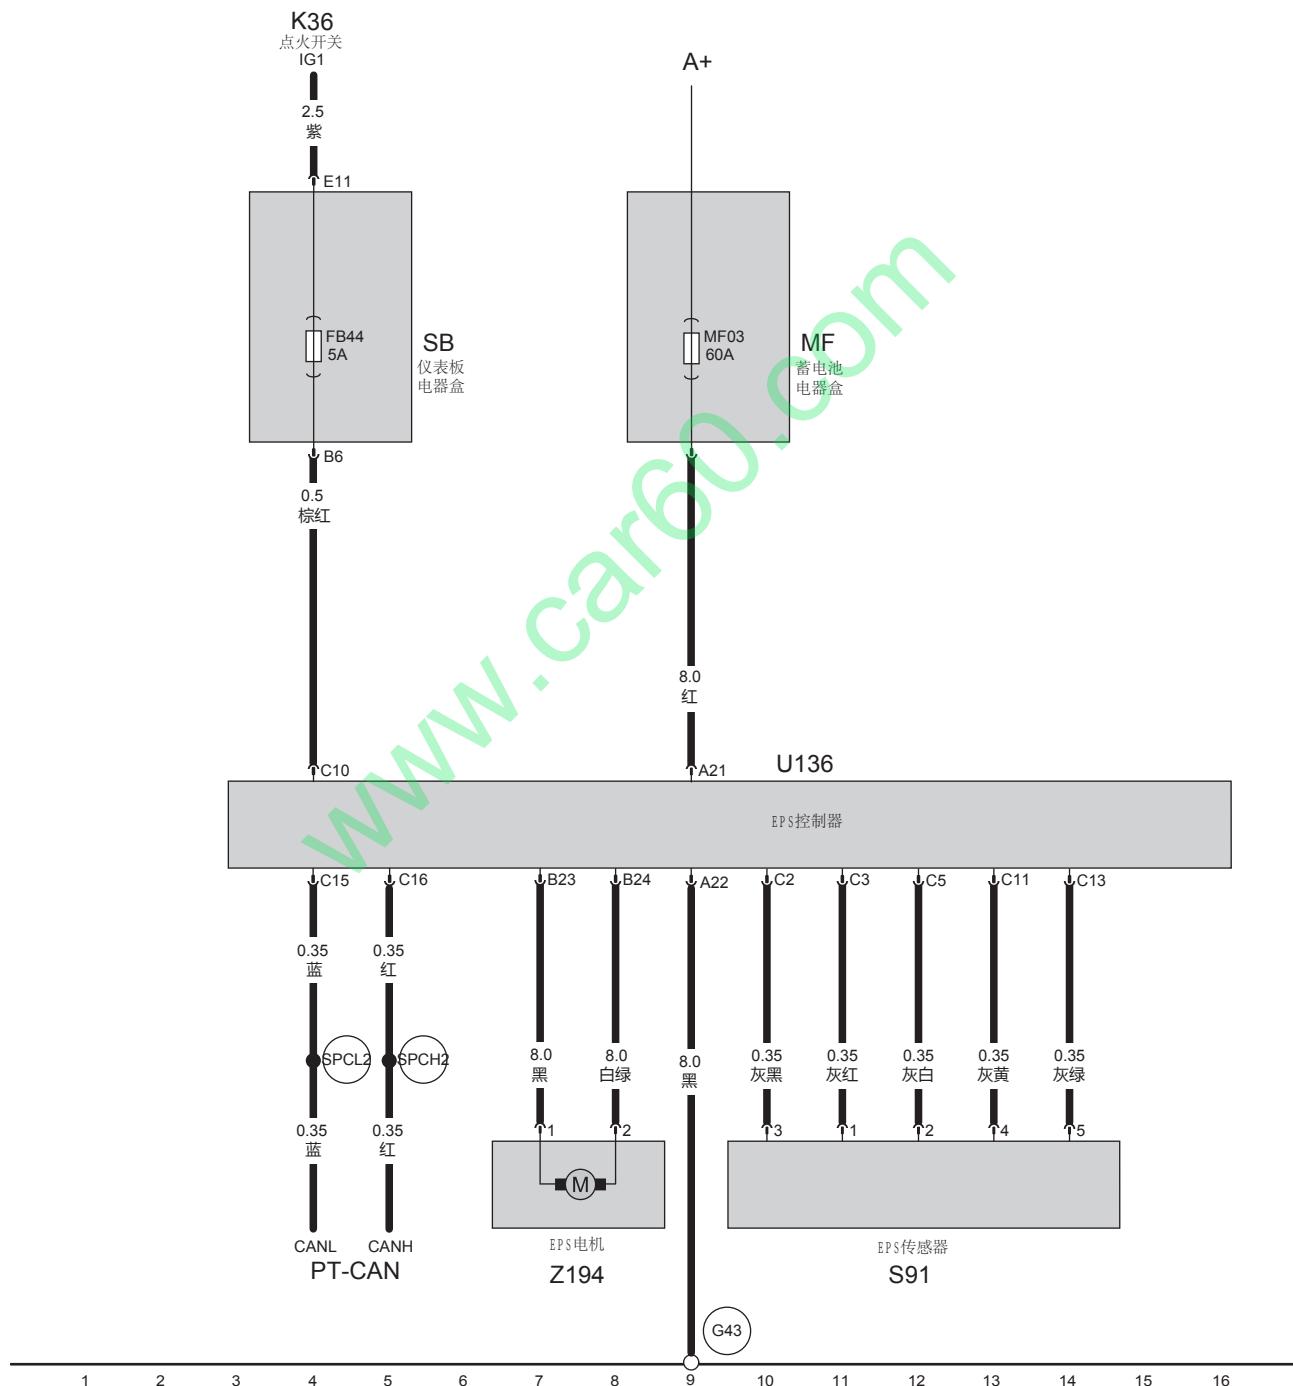


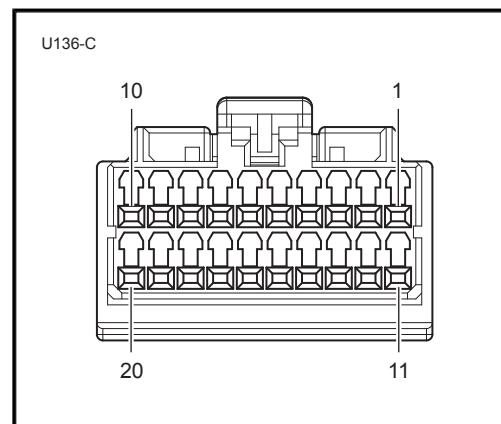
9.4 电子助力转向系统电路图

[Q25-76-004010915]

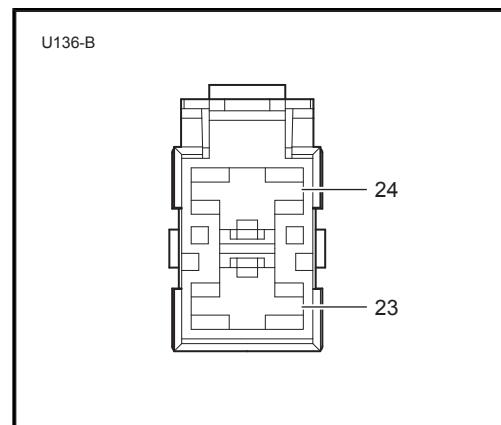


U136 - EPS控制器C-20芯插头

- 1-空
- 2-传感器电源地线
- 3-传感器电源
- 4-空
- 5-副力矩信号
- 6-空
- 7-空
- 8-空
- 9-空
- 10-点火信号
- 11-传感器电源
- 12-空
- 13-主力矩信号
- 14-空
- 15-PT-CANL
- 16-PT-CANH
- 17-空
- 18-空
- 19-空
- 20-空

**U136-EPS控制器B-2芯插头**

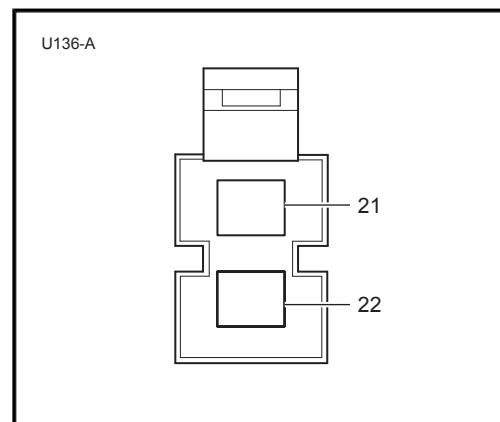
- 23-电机输出信号
- 24-电机输出信号



U136-EPS控制器A-2芯插头

21-电源电压

22-电源地

**S91-EPS传感器-6芯插头**

1-传感器电源

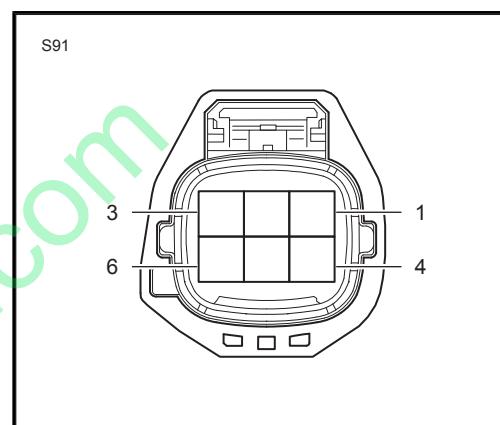
2-副力矩信号

3-传感器电源地线

4-传感器电源

5-主力矩信号

6-空

**Z194-EPS电机-2芯插头**

1-EPS电机信号

2-EPS电机信号

