

PE07.10-P-2700DAA	点火接通的电气功能原理图	22.7.10
-------------------	--------------	---------

发动机 271.8, 在车型 212 中


PE07.10-P-2700-97DAA	点火接通的电气功能原理图		PE07.10-P-2700-97DAA
OV00.01-P-1901-03DAA	电路图的使用		OV00.01-P-1901-03DAA
OV00.01-P-1901DAA	所有电路图组别的搜索帮助	车型 212 电路图	OV00.01-P-1901DAA
GF00.19-P-1000DAA	线路和连接器的位置和分配		GF00.19-P-1000DAA
GF00.19-P-2000DAA	接地点的位置和分配		GF00.19-P-2000DAA
GF00.19-P-3000DAA	Z 结点 (线束中的线路连接器) 的位置和分配		GF00.19-P-3000DAA
PE00.19-P-1100DAA	包括多个功能组的电路图概述	更多电路图	PE00.19-P-1100DAA

代码 :	款式 :	位置 :
1		
10	Fuel pump, actuation	5B
11	Engine diagnosis indicator lamp, actuation	13H
12	Correction programming, communication	15F
12	Correction programming, communication	
12	Correction programming, communication	
12	Correction programming, communication	
2		
3	Circuit 15, status ON	4C
3	Circuit 15, status ON	5F
4	Combustion engine circuit 87 relay, actuation	5E
5	Circuit 30, status	5J
5	Circuit 30, status	7K
6	Circuit 87, status	8H
7	Circuit 31, status	7H
7	Circuit 31, status	8F
8	Throttle valve actuator, actuation	9J
9	Fuel pump, request ON	3J
9	Fuel pump, request ON	10H
A1	Instrument cluster	12G
A1	Engine diagnosis indicator lamp	14D
A8/1	Transmitter key	13C
CAN B	Interior CAN	36
CAN C	Drive train CAN	3B
CAN D	Diagnostic CAN	10G
CAN E	Chassis CAN	9B
CAN E	Chassis CAN	4F
CAN E	Chassis CAN	6D
G1	On-board electrical system battery	10F
M16/6	Throttle valve actuator	9L
M3	Fuel pump (FP)	3J
M10/1	Front SAM control unit with fuse and relay module	15H
M10/1kJ	Circuit 15 relay	6A
M10/1kN	Engine circuit 87 relay	4D
M118	Fuel pump control unit	6K
M3/10	ME-SFI [ME] control unit	14H
N73	Electronic ignition switch control unit	6F
N10	Right front battery ground point	2F
N16/5	Left major assembly compartment electronics ground point	9J
		9D

文件编号: pe07.10-p-2700-97daa
文件标题: 点火接通的电气功能原理图

代码: 款式: Diagnostic connector
X11/4

位置: 11B

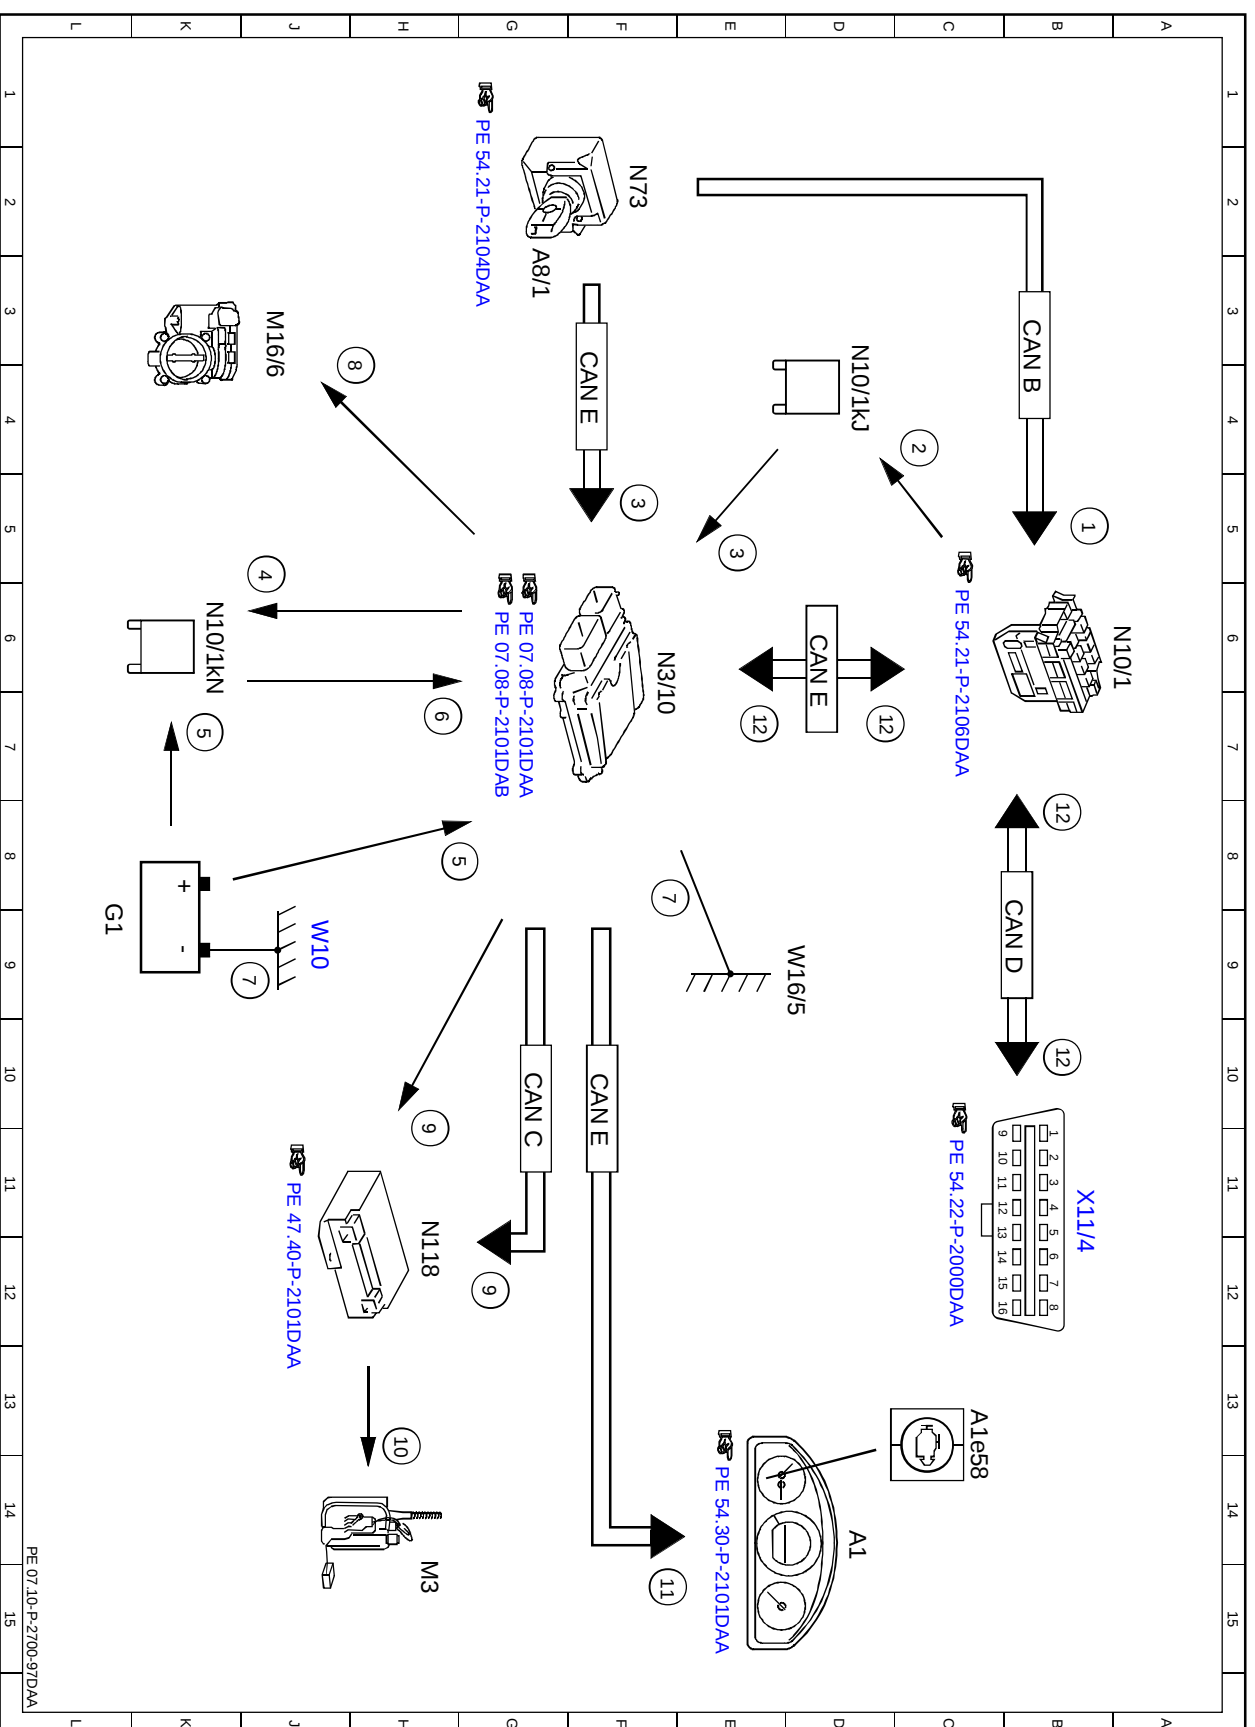


PE07.10-P-2701DAA	起动的电气功能原理图	29.9.09
-------------------	------------	---------

发动机 271.8, 在车型 212 中

PE07.10-P-2701-97DAA	起动的电气功能原理图		PE07.10-P-2701-97DAA
OV00.01-P-1901-03DAA	电路图的使用		OV00.01-P-1901-03DAA
OV00.01-P-1901DAA	所有电路图组别的搜索帮助	车型 212 电路图	OV00.01-P-1901DAA
OV00.01-P-1901DAB	所有电路图组别的搜索帮助	车型 212 功能原理图	OV00.01-P-1901DAB
GF00.19-P-1000DAA	线路和连接器的位置和分配		GF00.19-P-1000DAA
GF00.19-P-2000DAA	接地点的位置和分配		GF00.19-P-2000DAA
GF00.19-P-3000DAA	Z 结点 (线束中的线路连接器) 的位置和分配		GF00.19-P-3000DAA
PE00.19-P-1100DAA	包括多个功能组的电路图概述	更多电路图	PE00.19-P-1100DAA

代码 :	款式 :	位置 :
1	Circuit 50, status	6E
2	Fuel pump, request ON	10G
2	Fuel pump, request ON	11F
3	Fuel pump, specified pressure request	11F
4	Fuel pump, actuation	13G
5	Starter circuit 50 relay, actuation	6H
6	Starter, actuation	7H
A8/1	Transmitter key	6C
B11/4	Coolant temperature sensor	16
B6/15	Intake camshaft Hall sensor	2H
B6/16	Exhaust camshaft Hall sensor	2H
B70	Crankshaft Hall sensor	2H
CAN C	Drive train CAN	3K
CAN E	Chassis CAN	
M1	Starter	8H
M3	Fuel pump (FP)	14G
M10/1km	Starter circuit 50 relay	5J
M18	Fuel pump control unit	11G
M3/10	ME-SFI [ME] control unit	5E
N73	Electronic ignition switch control unit	5B
R4	Spark plugs	11D
T1/1	Cylinder 1 ignition coil	8C
T1/2	Cylinder 2 ignition coil	8D
T1/3	Cylinder 3 ignition coil	8D
T1/4	Cylinder 4 ignition coil	8D
y76/1	Cylinder 1 fuel injector	3C
y76/2	Cylinder 2 fuel injector	3D
y76/3	Cylinder 3 fuel injector	3D
y76/4	Cylinder 4 fuel injector	3D

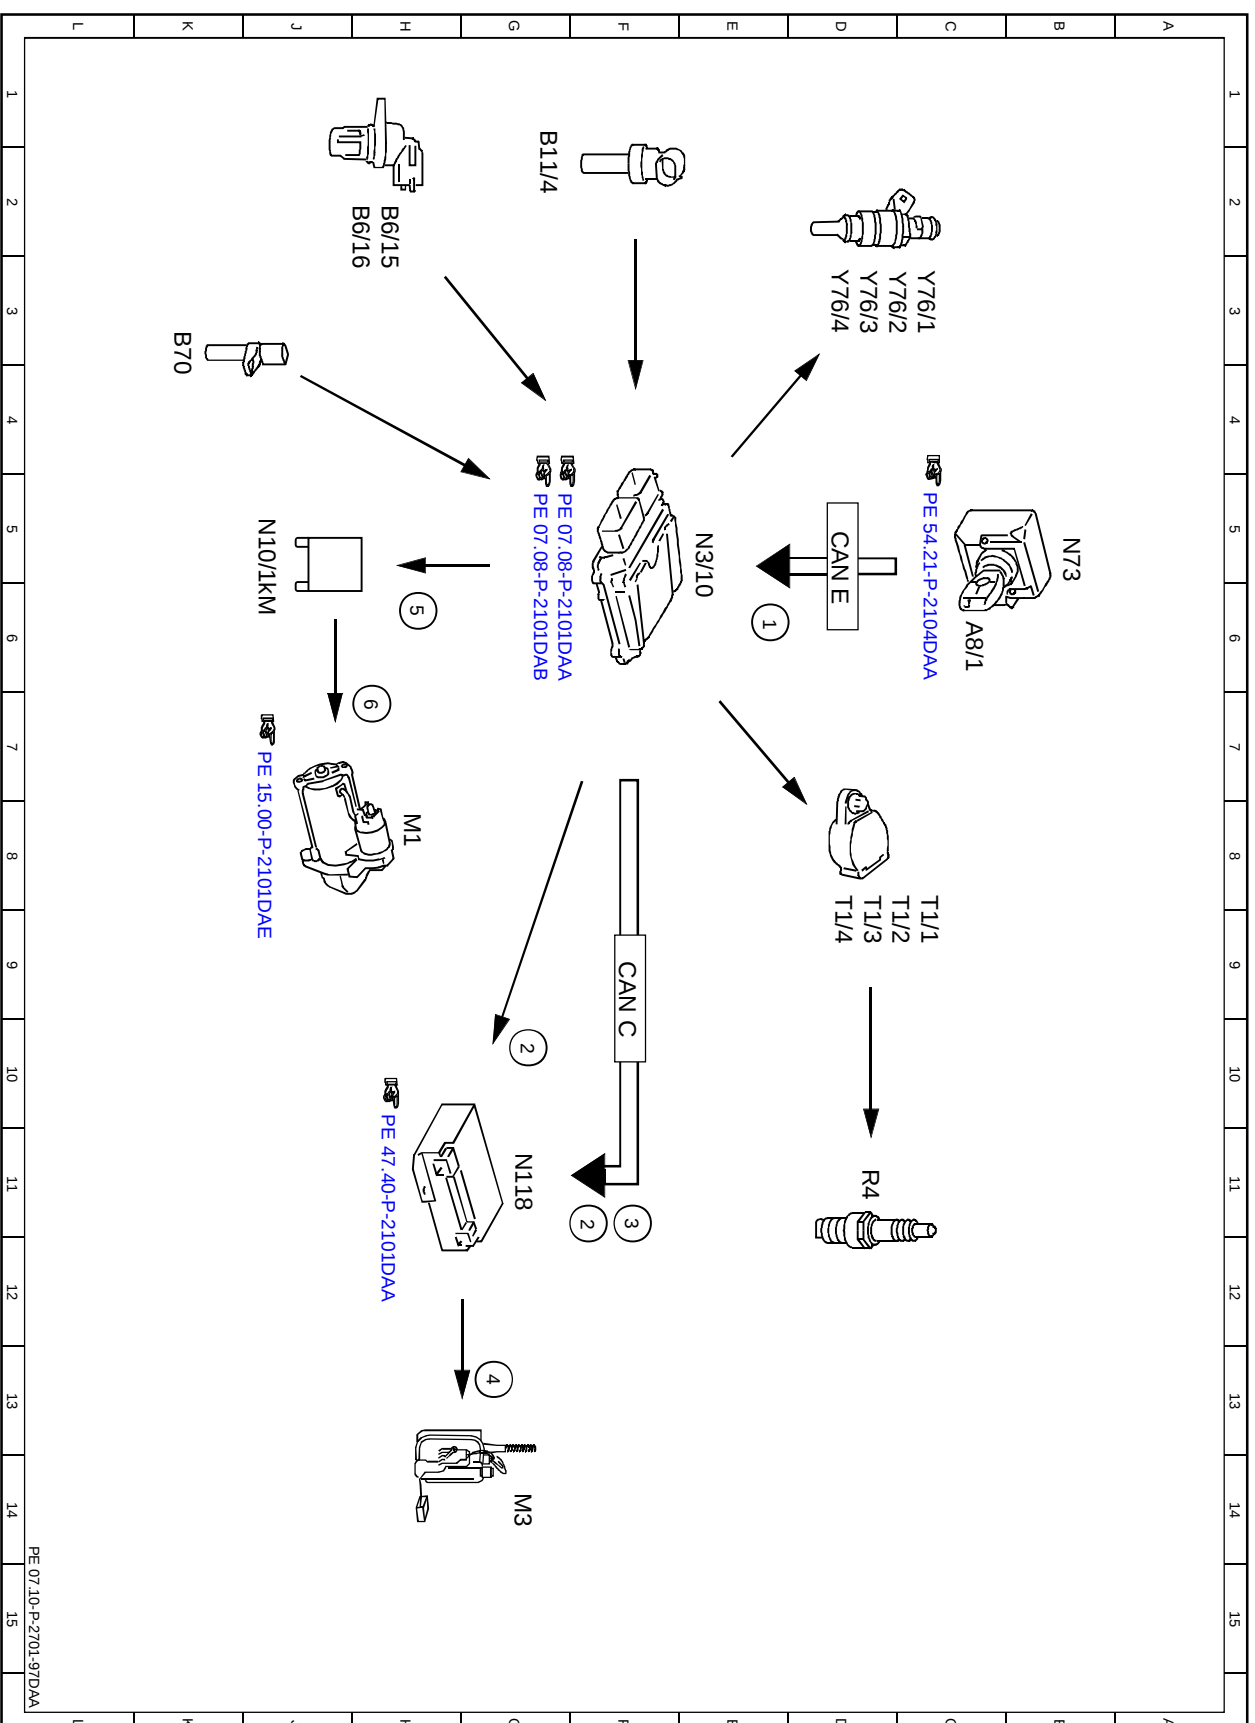


PE07.10-P-2702DAA	点火关闭的电气功能原理图	22.7.10
-------------------	--------------	---------

发动机 271.8, 在车型 212 中

PE07.10-P-2702-97DAA	点火关闭的电气功能原理图		PE07.10-P-2702-97DAA
OV00.01-P-1901-03DAA	电路图的使用		OV00.01-P-1901-03DAA
OV00.01-P-1901DAA	所有电路图组别的搜索帮助	车型 212 电路图	OV00.01-P-1901DAA
GF00.19-P-1000DAA	线路和连接器的位置和分配		GF00.19-P-1000DAA
GF00.19-P-2000DAA	接地点的位置和分配		GF00.19-P-2000DAA
GF00.19-P-3000DAA	Z 结点 (线束中的线路连接器) 的位置和分配		GF00.19-P-3000DAA
PE00.19-P-1100DAA	包括多个功能组的电路图概述	更多电路图	PE00.19-P-1100DAA

代码 :	款式 :	位置 :
1		3B
2		2E
3	Circuit 15, status OFF	5F
3	Circuit 15, status OFF	7E
4	Circuit 30, status	6H
5	Circuit 31, status	4G
5	Circuit 31, status	7J
A8/1	Transmitter key	7C
CAN B	Interior CAN	4B
CAN E	Chassis CAN	6D
61	On-board electrical system battery	6K
N10/1	Front SAM control unit with fuse and relay module	2B
N10/1kJ	Circuit 15 relay	2F
N3/10	ME-SFI [ME] control unit	6F
N73	Electronic ignition switch control unit	6B
W10	Right front battery ground point	6H
W16/5	Left major assembly compartment electronics ground point	3G

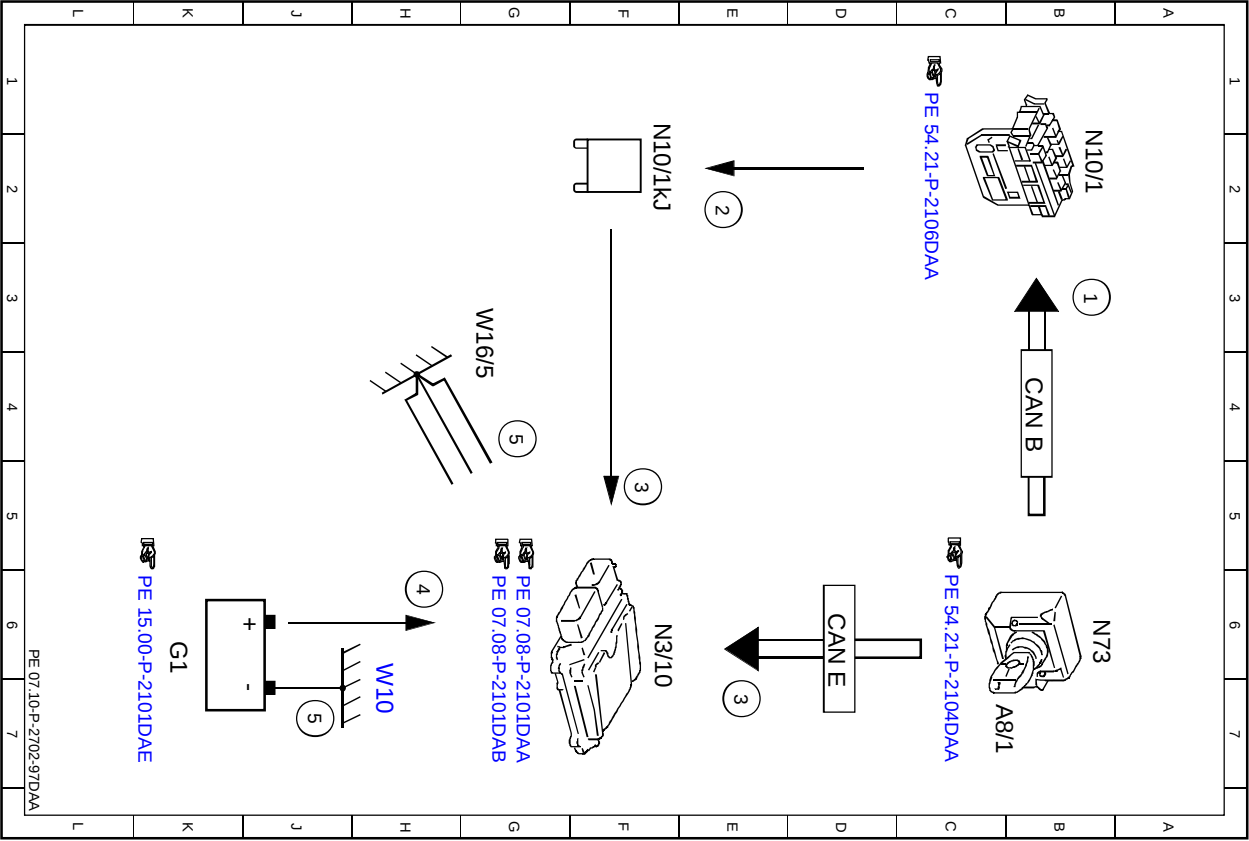


PE07.10-P-2703DAA	燃油供给的电气功能原理图	29.9.09
-------------------	--------------	---------

发动机 271.8, 在车型 212 中

PE07.10-P-2703-97DAA	燃油供给的电气功能原理图		PE07.10-P-2703-97DAA
OV00.01-P-1901-03DAA	电路图的使用		OV00.01-P-1901-03DAA
OV00.01-P-1901DAA	所有电路图组别的搜索帮助	车型 212 电路图	OV00.01-P-1901DAA
OV00.01-P-1901DAB	所有电路图组别的搜索帮助	车型 212 功能原理图	OV00.01-P-1901DAB
GF00.19-P-1000DAA	线路和连接器的位置和分配		GF00.19-P-1000DAA
GF00.19-P-2000DAA	接地点的位置和分配		GF00.19-P-2000DAA
GF00.19-P-3000DAA	Z 结点 (线束中的线路连接器) 的位置和分配		GF00.19-P-3000DAA
PE00.19-P-1100DAA	包括多个功能组的电路图概述	更多电路图	PE00.19-P-1100DAA

代码：	款式：	位置：
1	Fuel pump, request ON	8G
1	Fuel pump, request ON	10F
2	Fuel pump, specified pressure request	10F
3	Fuel pump, actuation	11G
4	Fuel pressure, status	6E
B4/6	Rail pressure sensor	4C
B4/7	Fuel pressure sensor	9K
CAN C	Drive train CAN	
M3	Fuel pump (FP)	12G
M18	Fuel pump control unit	9G
N3/10	ME-SFI [ME] control unit	4E
y76/1	Cylinder 1 fuel injector	4J
y76/2	Cylinder 2 fuel injector	4J
y76/3	Cylinder 3 fuel injector	4J
y76/4	Cylinder 4 fuel injector	4J
y94	Quantity control valve	1F

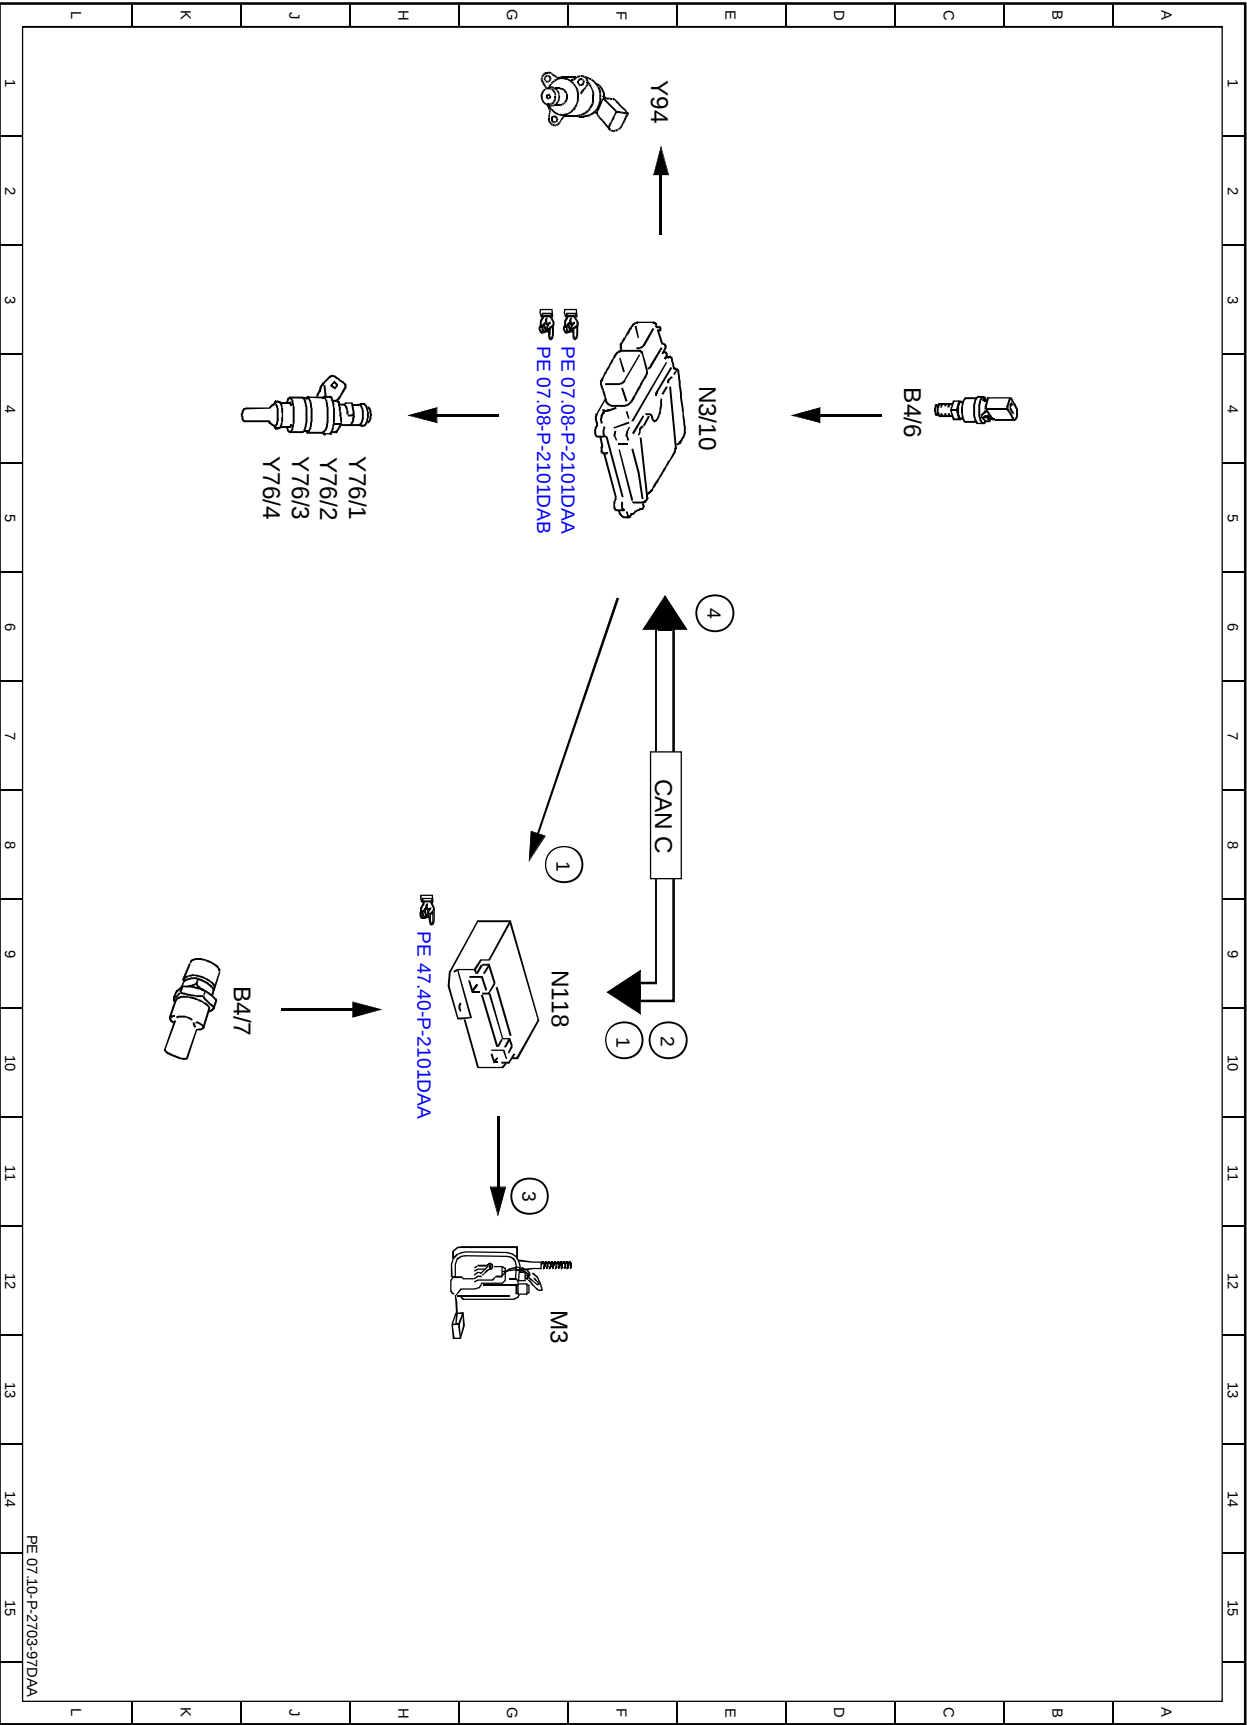


PE07.10-P-2704DAA	喷射控制的电气功能原理图	29.9.09
-------------------	--------------	---------

发动机 271.8, 在车型 212 中

PE07.10-P-2704-97DAA	喷射控制的电气功能原理图		PE07.10-P-2704-97DAA
OV00.01-P-1901-03DAA	电路图的使用		OV00.01-P-1901-03DAA
OV00.01-P-1901DAA	所有电路图组别的搜索帮助	车型 212 电路图	OV00.01-P-1901DAA
OV00.01-P-1901DAB	所有电路图组别的搜索帮助	车型 212 功能原理图	OV00.01-P-1901DAB
GF00.19-P-1000DAA	线路和连接器的位置和分配		GF00.19-P-1000DAA
GF00.19-P-2000DAA	接地点的位置和分配		GF00.19-P-2000DAA
GF00.19-P-3000DAA	Z 结点 (线束中的线路连接器) 的位置和分配		GF00.19-P-3000DAA
PE00.19-P-1100DAA	包括多个功能组的电路图概述	更多电路图	PE00.19-P-1100DAA

代码 :	款式 :	位置 :
B11/4	Coolant temperature sensor	5B
B17/8	Charge air temperature sensor	3H
B28/7	Pressure sensor downstream of throttle valve	5K
B37	Accelerator pedal sensor	2H
B4/6	Rail pressure sensor	6C
B6/15	Intake camshaft Hall sensor	3B
B6/16	Exhaust camshaft Hall sensor	3B
B70	Crankshaft Hall sensor	1C
G3/2	Oxygen sensor upstream of catalytic converter	7H
N3/10	ME-SFI [ME] control unit	5E
Y76/1	Cylinder 1 fuel injector	1E
Y76/2	Cylinder 2 fuel injector	1E
Y76/3	Cylinder 3 fuel injector	1E
Y76/4	Cylinder 4 fuel injector	1F

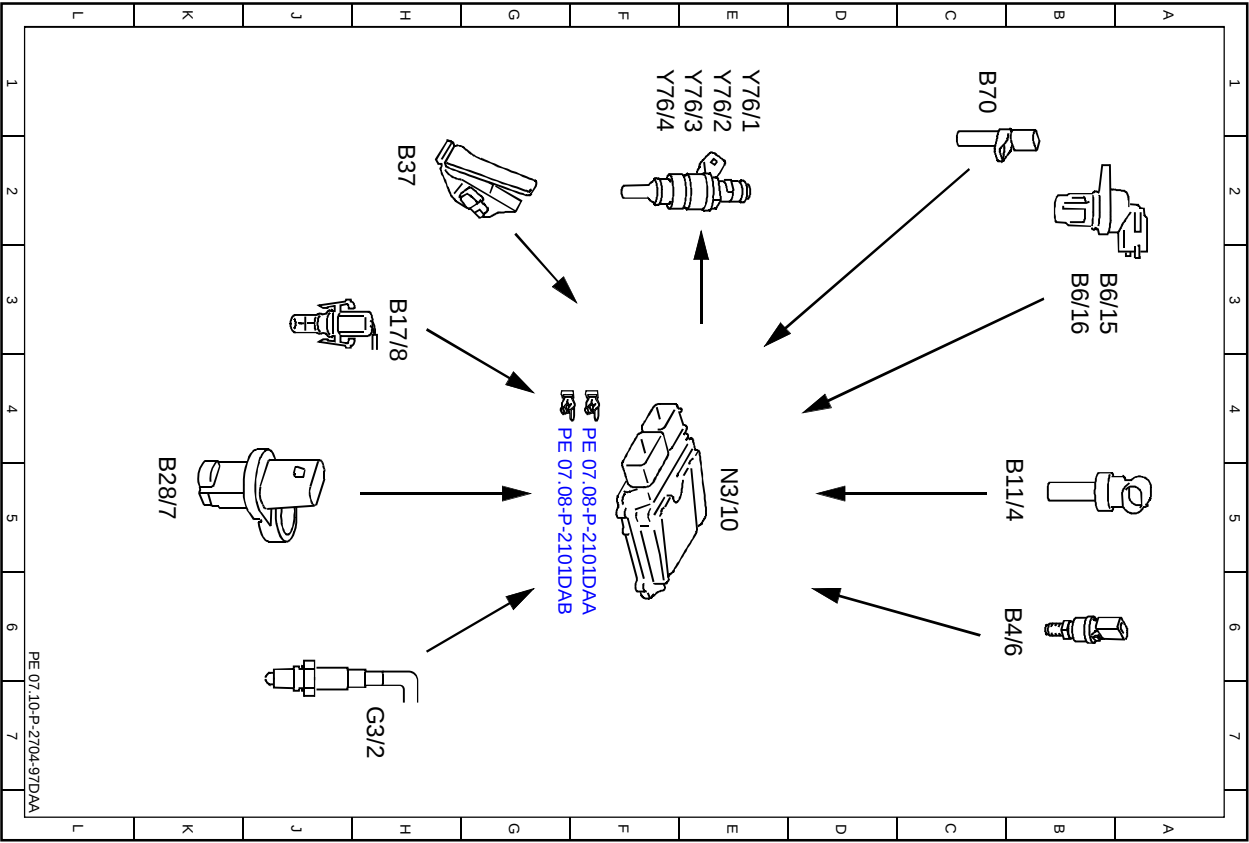


PE07.10-P-2705DAA	点火系统的电气功能原理图	29.9.09
-------------------	--------------	---------

发动机 271.8, 在车型 212 中

PE07.10-P-2705-97DAA	点火系统的电气功能原理图		PE07.10-P-2705-97DAA
OV00.01-P-1901-03DAA	电路图的使用		OV00.01-P-1901-03DAA
OV00.01-P-1901DAA	所有电路图组别的搜索帮助	车型 212 电路图	OV00.01-P-1901DAA
OV00.01-P-1901DAB	所有电路图组别的搜索帮助	车型 212 功能原理图	OV00.01-P-1901DAB
GF00.19-P-1000DAA	线路和连接器的位置和分配		GF00.19-P-1000DAA
GF00.19-P-2000DAA	接地点的位置和分配		GF00.19-P-2000DAA
GF00.19-P-3000DAA	Z 结点 (线束中的线路连接器) 的位置和分配		GF00.19-P-3000DAA
PE00.19-P-1100DAA	包括多个功能组的电路图概述	更多电路图	PE00.19-P-1100DAA

代码 :	款式 :	位置 :
A16/1	Right knock sensor	1F
A16/4	Front knock sensor	1F
B11/4	Coolant temperature sensor	2D
B17/8	Charge air temperature sensor	5A
B28/7	Pressure sensor downstream of throttle valve	5J
B6/15	Intake camshaft Hall sensor	26
B6/16	Exhaust camshaft Hall sensor	2H
B70	Crankshaft Hall sensor	3B
N3/10	ME-SFI [ME] control unit	5E
R4	Spark plugs	1J
T1/1	Cylinder 1 ignition coil	4J
T1/2	Cylinder 2 ignition coil	4J
T1/3	Cylinder 3 ignition coil	4J
T1/4	Cylinder 4 ignition coil	4K

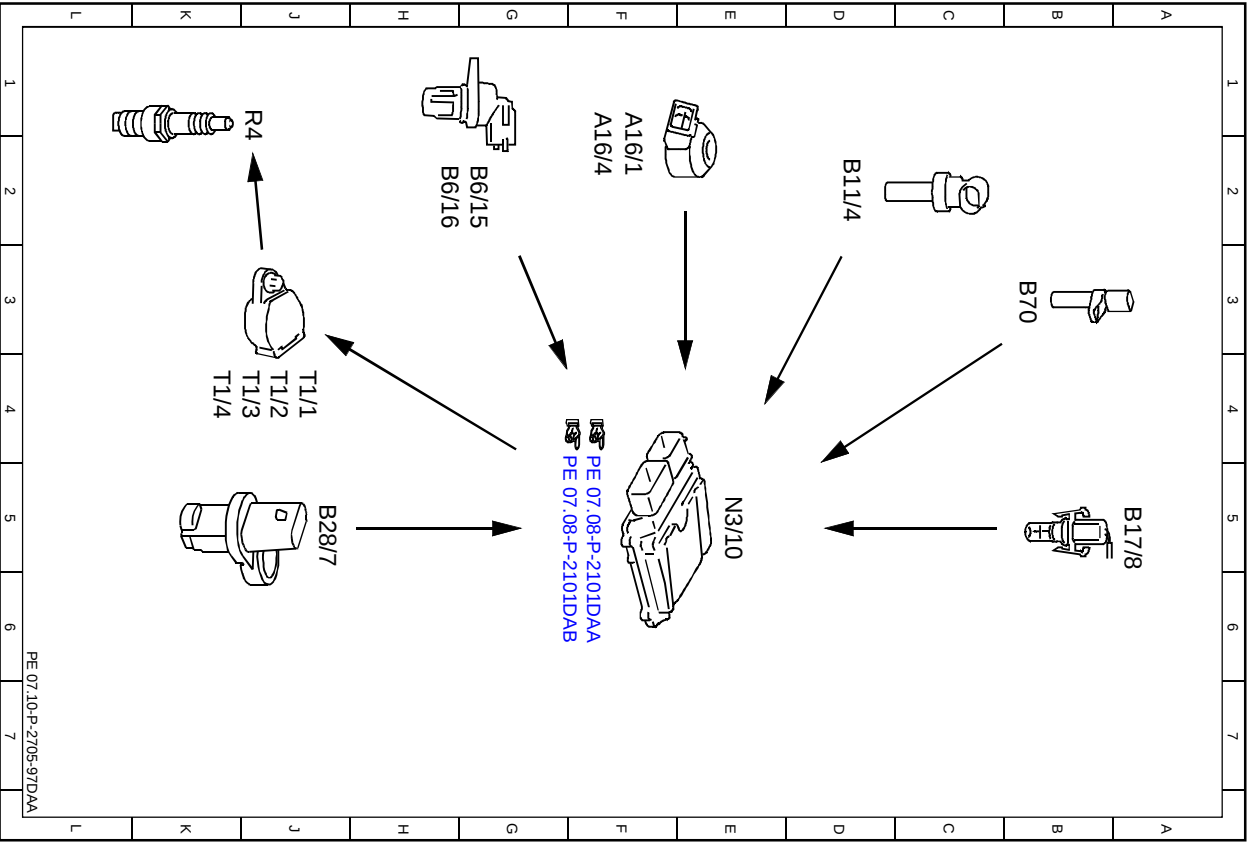


PE07.10-P-2706DAA	喷射和点火顺序的同步, 电气功能原理图	29.9.09
-------------------	---------------------	---------

发动机 271.8, 在车型 212 中

PE07.10-P-2706-97DAA	喷射和点火顺序的同步, 电气功能原理图		PE07.10-P-2706-97DAA
OV00.01-P-1901-03DAA	电路图的使用		OV00.01-P-1901-03DAA
OV00.01-P-1901DAA	所有电路图组别的搜索帮助	车型 212 电路图	OV00.01-P-1901DAA
OV00.01-P-1901DAB	所有电路图组别的搜索帮助	车型 212 功能原理图	OV00.01-P-1901DAB
GF00.19-P-1000DAA	线路和连接器的位置和分配		GF00.19-P-1000DAA
GF00.19-P-2000DAA	接地点的位置和分配		GF00.19-P-2000DAA
GF00.19-P-3000DAA	Z 结点 (线束中的线路连接器) 的位置和分配		GF00.19-P-3000DAA
PE00.19-P-1100DAA	包括多个功能组的电路图概述	更多电路图	PE00.19-P-1100DAA

代码 :	款式 :	位置 :
1	Engine speed, signal	7C
B6/15	Intake camshaft Hall sensor	1F
B6/16	Exhaust camshaft Hall sensor	1F
B70	Crankshaft Hall sensor	4C
CAN E	Chassis CAN	
N3/10	ME-SFI [ME] control unit	4E
R4	Spark plugs	7J
T1/1	Cylinder 1 ignition coil	7F
T1/2	Cylinder 2 ignition coil	7F
T1/3	Cylinder 3 ignition coil	7G
T1/4	Cylinder 4 ignition coil	7G
Y76/1	Cylinder 1 fuel injector	4H
Y76/2	Cylinder 2 fuel injector	4H
Y76/3	Cylinder 3 fuel injector	4H
Y76/4	Cylinder 4 fuel injector	4J

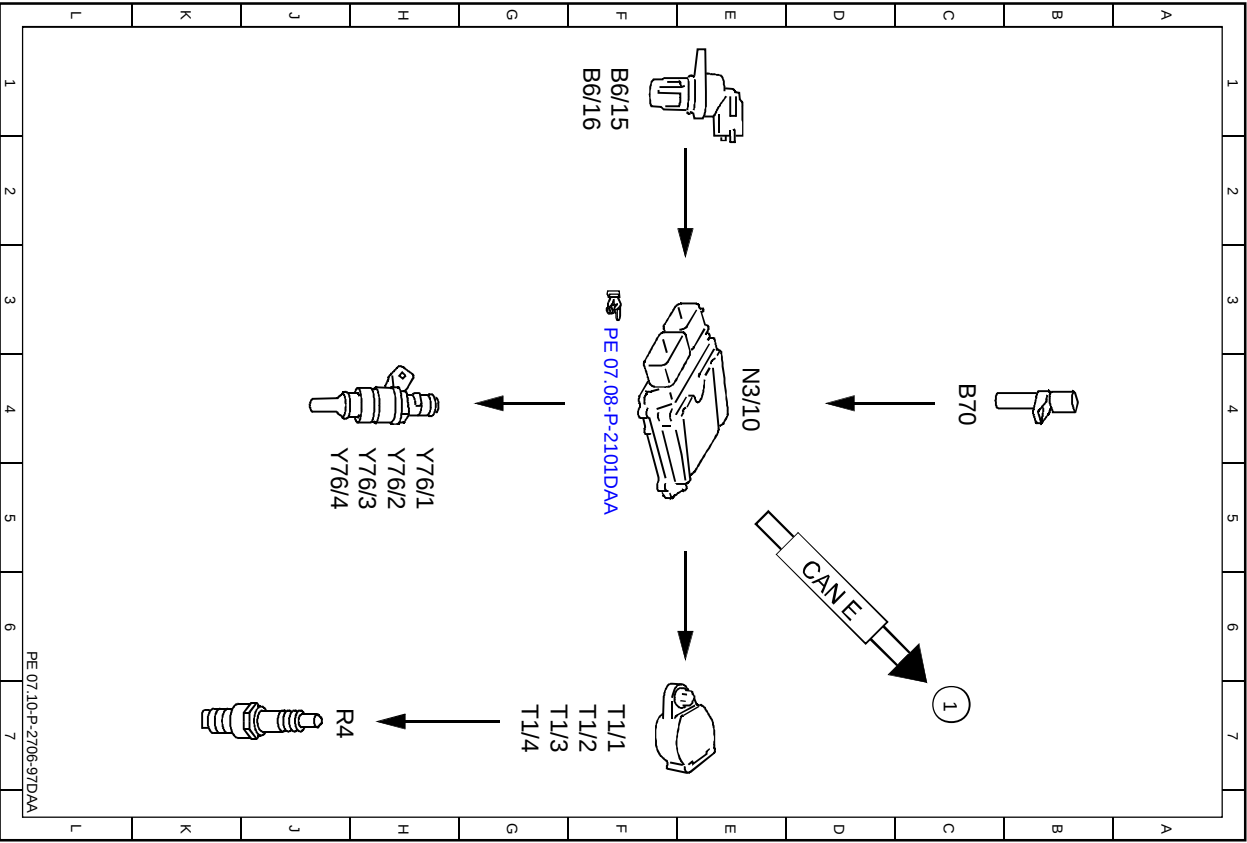


PE07.10-P-2707DAA	起动阶段, 起动后阶段和暖机加浓的电气功能原理图	25.11.10
-------------------	--------------------------	----------

发动机 271.8, 在车型 212 中

PE07.10-P-2707-97DAA	起动阶段, 起动后阶段和暖机加浓的电气功能原理图		PE07.10-P-2707-97DAA
OV00.01-P-1901-03DAA	电路图的使用		OV00.01-P-1901-03DAA
OV00.01-P-1901DAA	所有电路图组别的搜索帮助	车型 212 电路图	OV00.01-P-1901DAA
OV00.01-P-1909DAA	所有电气部件的搜索帮助		OV00.01-P-1909DAA
GF00.19-P-1000DAA	线路和连接器的位置和分配		GF00.19-P-1000DAA
GF00.19-P-2000DAA	接地点的位置和分配		GF00.19-P-2000DAA
GF00.19-P-3000DAA	Z 结点 (线束中的线路连接器) 的位置和分配		GF00.19-P-3000DAA
PE00.19-P-1100DAA	包括多个功能组的电路图概述	更多电路图	PE00.19-P-1100DAA

代码 :	款式 :	位置 :
1	Circuit 30, status	8G
2	Circuit 50, status	6G
3	Selector lever position, status	
A6/1	Transmitter key	7K
B11/4	Coolant temperature sensor	6C
B17/8	Charge air temperature sensor	7A
B28/7	Pressure sensor downstream of throttle valve	10G
B6/15	Intake camshaft Hall sensor	10C
B6/16	Exhaust camshaft Hall sensor	10C
B7/0	Crankshaft Hall sensor	4C
CAN C	Drive train CAN	9E
CAN E	Chassis CAN	6H
Code 423	5-speed automatic transmission	11D
Code 427	7-speed automatic transmission	13D
G1	On-board electrical system battery	13D
N15/3	Electronic transmission control unit	9K
N3/10	ME-SFI [ME] control unit	12E
N73	Electronic ignition switch control unit	6E
R4	Spark plugs	6J
T1/1	Cylinder 1 ignition coil	3K
T1/2	Cylinder 2 ignition coil	2H
T1/3	Cylinder 3 ignition coil	2H
T1/4	Cylinder 4 ignition coil	2H
Y3/8	Fully integrated transmission control unit	2J
Y49/1	Intake camshaft solenoid	14E
Y49/2	Exhaust camshaft solenoid	2F
Y76/1	Cylinder 1 fuel injector	2F
Y76/2	Cylinder 2 fuel injector	1D
Y76/3	Cylinder 3 fuel injector	1D
Y76/4	Cylinder 4 fuel injector	1D
		1E

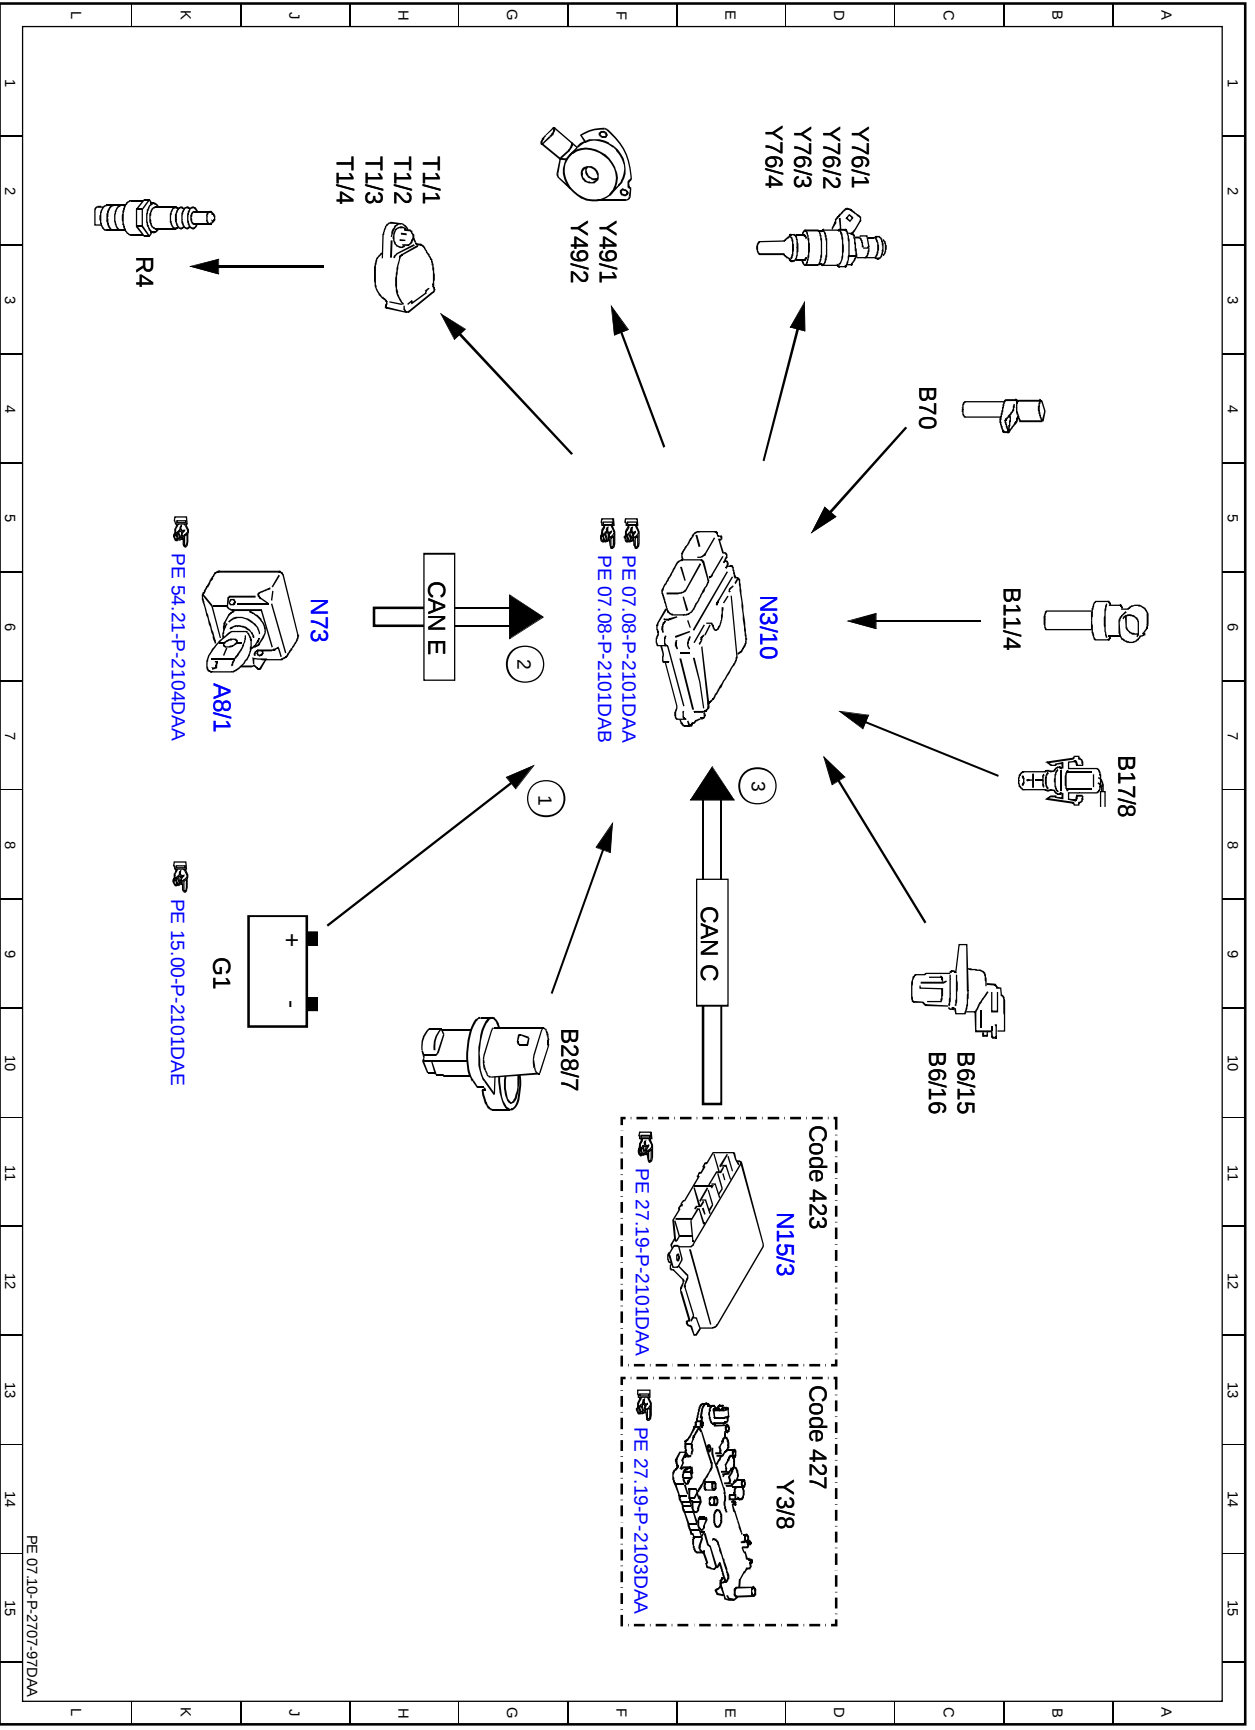


PE07.10-P-2708DAA	转速控制的电气功能原理图	25.11.10
-------------------	--------------	----------

发动机 271.8, 在车型 212 中

PE07.10-P-2708-97DAA	转速控制的电气功能原理图		PE07.10-P-2708-97DAA
OV00.01-P-1901-03DAA	电路图的使用		OV00.01-P-1901-03DAA
OV00.01-P-1901DAA	所有电路图组别的搜索帮助	车型 212 电路图	OV00.01-P-1901DAA
OV00.01-P-1909DAA	所有电气部件的搜索帮助		OV00.01-P-1909DAA
GF00.19-P-1000DAA	线路和连接器的位置和分配		GF00.19-P-1000DAA
GF00.19-P-2000DAA	接地点的位置和分配		GF00.19-P-2000DAA
GF00.19-P-3000DAA	Z 结点 (线束中的线路连接器) 的位置和分配		GF00.19-P-3000DAA
PE00.19-P-1100DAA	包括多个功能组的电路图概述	更多电路图	PE00.19-P-1100DAA

代码 :	款式 :	位置 :
1	Air conditioning, status	6D
1	Air conditioning, status	10A
2	Circuit 30, status	7F
3	Wheel speed, signal	5G
4	Gear range, status	2D
B11/4	Coolant temperature sensor	10G
B28/7	Pressure sensor downstream of throttle valve	6H
B70	Crankshaft Hall sensor	11B
CAN B	Interior CAN	9F
CAN C	Drive train CAN	5H
CAN E	Chassis CAN	7D
CAN E	Chassis CAN	3K
Code 233	DISTRONIC PLUS	10E
Code 423	5-speed automatic transmission	13E
Code 427	7-speed automatic transmission	8J
G1	On-board electrical system battery	5C
M16/6	Throttle valve actuator	8A
N10/1	Front SAM control unit with fuse and relay module	11E
N15/3	Electronic transmission control unit	13A
N22/7	Automatic air conditioning control and operating unit	5E
N3/10	ME-SFI [ME] control unit	5J
N30/4	Electronic Stability Program control unit	5K
N30/7	Premium Electronic Stability Program control unit	2K
R4	Spark plugs	10C
S40/3	Clutch pedal switch	2G
T1/1	Cylinder 1 ignition coil	2G
T1/2	Cylinder 2 ignition coil	2H
T1/3	Cylinder 3 ignition coil	2H
T1/4	Cylinder 4 ignition coil	9C
U24	Valid for manual transmission	4J
U999	Not valid with DISTRONIC PLUS	14E
Y3/8	Fully integrated transmission control control unit	1E
Y76/1	Cylinder 1 fuel injector	1E
Y76/2	Cylinder 2 fuel injector	1F
Y76/3	Cylinder 3 fuel injector	1F
Y76/4	Cylinder 4 fuel injector	1F

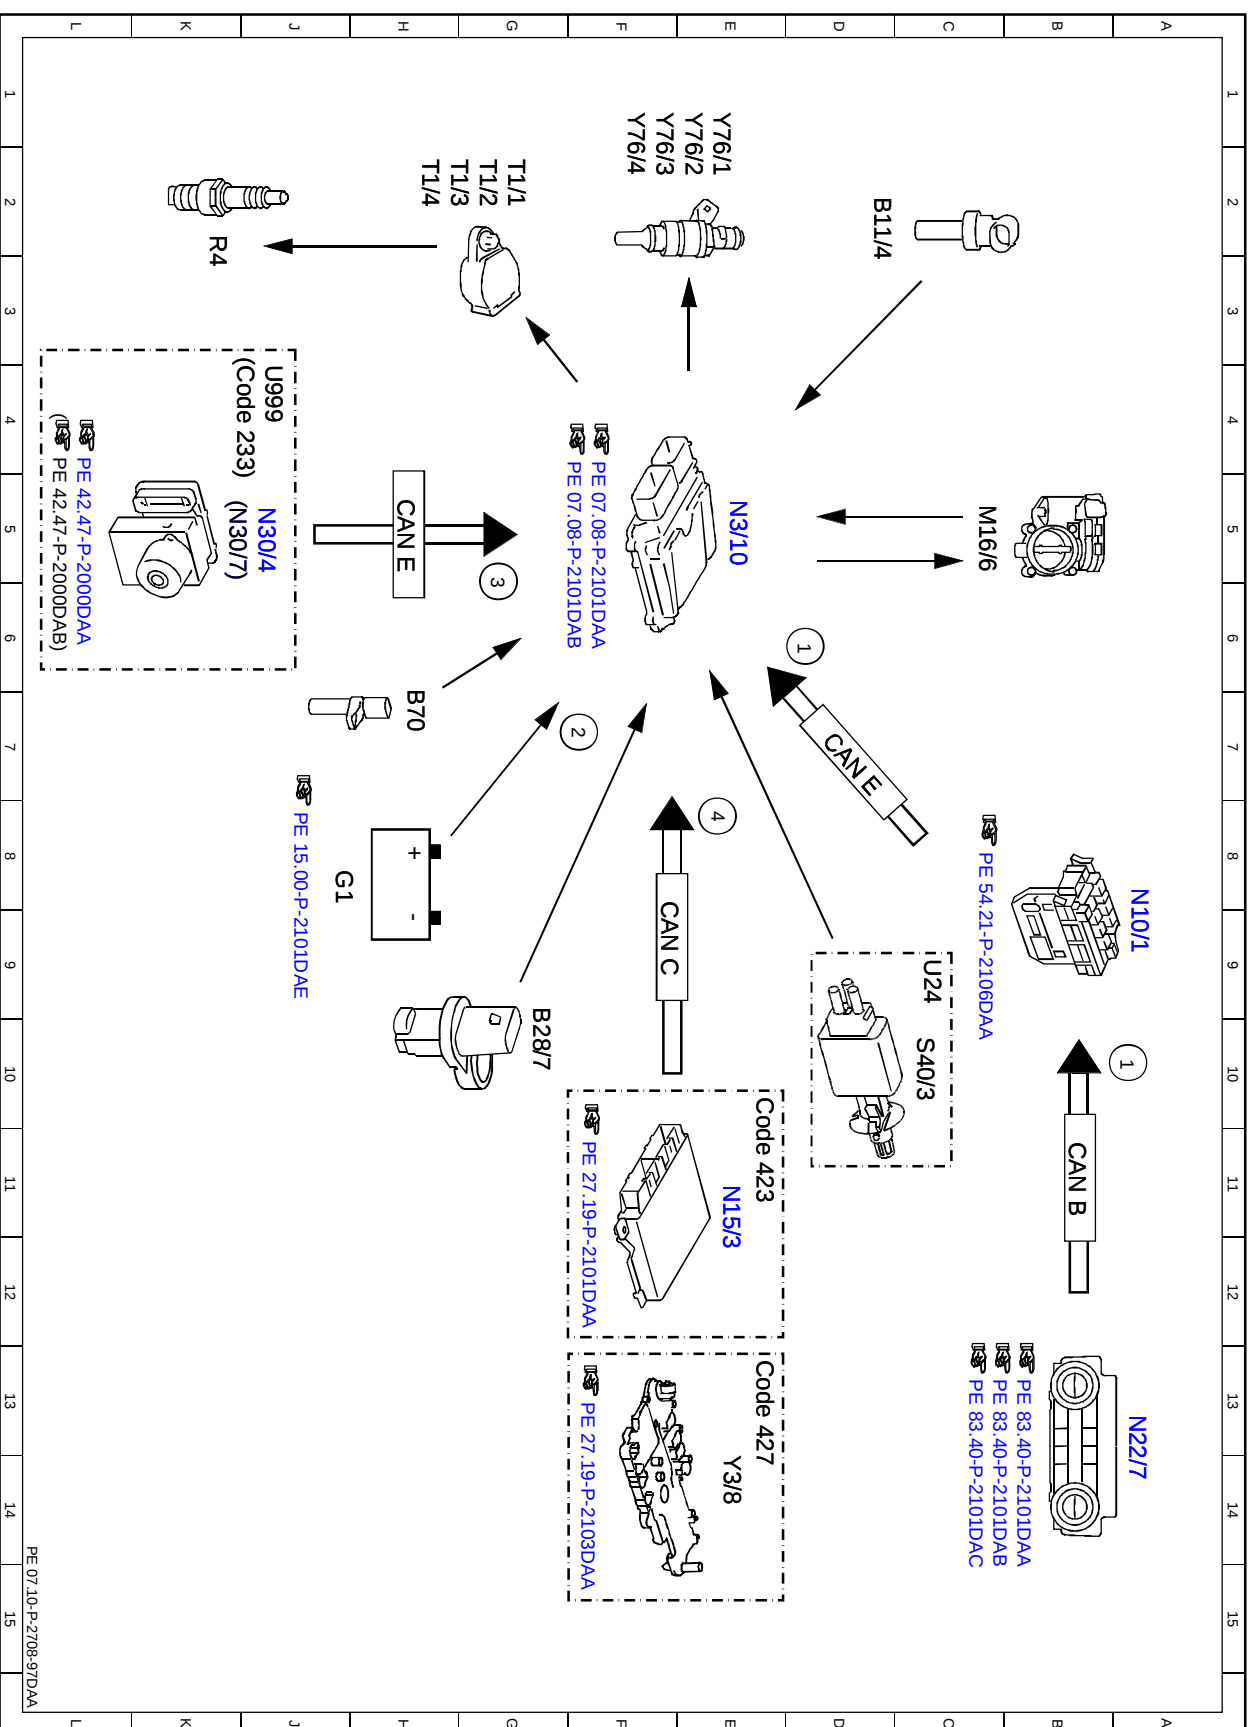


PE07.10-P-2709DAA	发电机接口的电气功能原理图	29.9.09
-------------------	---------------	---------

发动机 271.8, 在车型 212 中

PE07.10-P-2709-97DAA	发电机接口的电气功能原理图		PE07.10-P-2709-97DAA
OV00.01-P-1901-03DAA	电路图的使用		OV00.01-P-1901-03DAA
OV00.01-P-1901DAA	所有电路图组别的搜索帮助	车型 212 电路图	OV00.01-P-1901DAA
OV00.01-P-1901DAB	所有电路图组别的搜索帮助	车型 212 功能原理图	OV00.01-P-1901DAB
GF00.19-P-1000DAA	线路和连接器的位置和分配		GF00.19-P-1000DAA
GF00.19-P-2000DAA	接地点的位置和分配		GF00.19-P-2000DAA
GF00.19-P-3000DAA	Z 结点 (线束中的线路连接器) 的位置和分配		GF00.19-P-3000DAA
PE00.19-P-1100DAA	包括多个功能组的电路图概述	更多电路图	PE00.19-P-1100DAA

代码 :	款式 :	位置 :
1	Alternator, request	5C
2	Alternator, status	5E
3	Circuit 61, status	5D
4	Circuit 30, status	3F
5	Instrument cluster, message	5J
A1	Instrument cluster	4J
B70	Crankshaft Hall sensor	76
CAN E	Chassis CAN	
G1	On-board electrical system battery	26
G2	Alternator	4A
LIN C1	Drive train LIN	
N3/10	ME-SFI [ME] control unit	4E

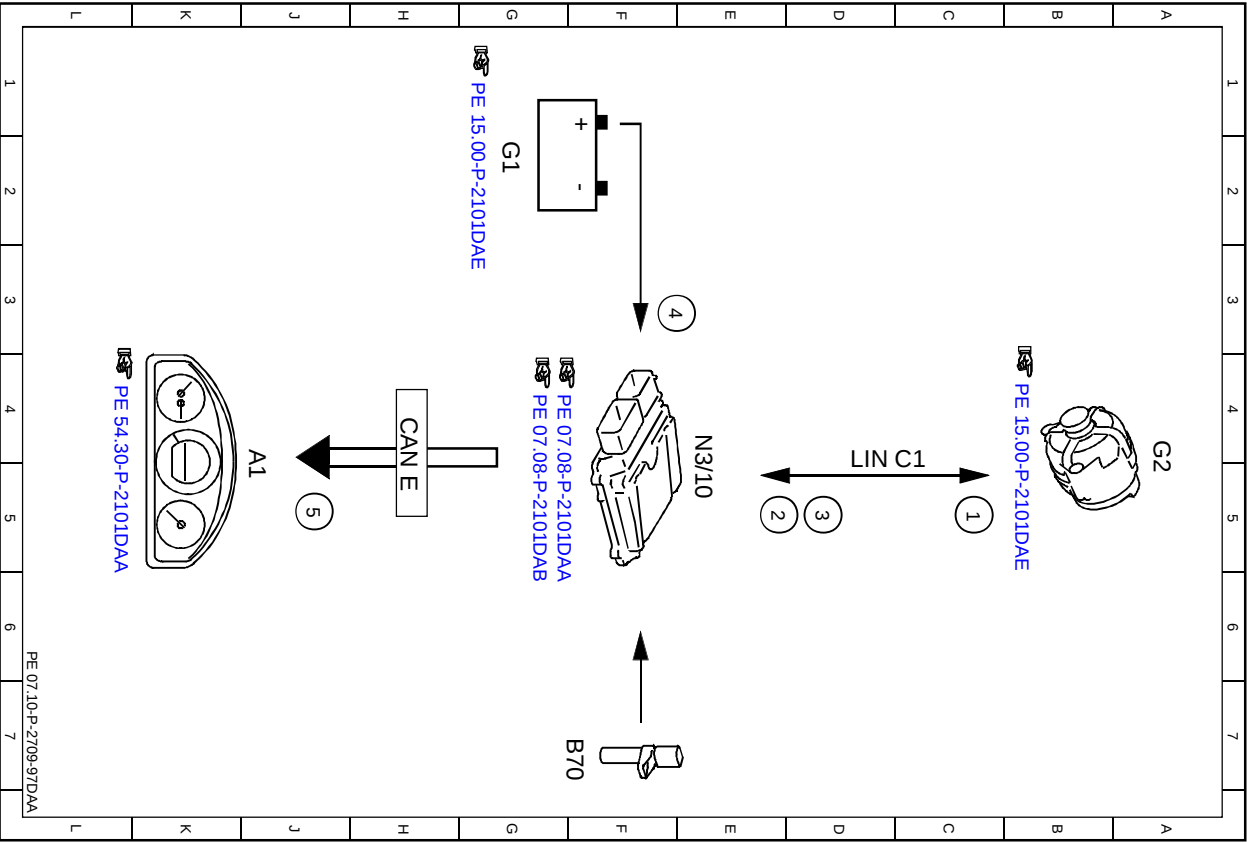


PE07.10-P-2710DAA	空燃比控制的电气功能原理图	29.9.09
-------------------	---------------	---------

发动机 271.8, 在车型 212 中

PE07.10-P-2710-97DAA	空燃比控制的电气功能原理图		PE07.10-P-2710-97DAA
OV00.01-P-1901-03DAA	电路图的使用		OV00.01-P-1901-03DAA
OV00.01-P-1901DAA	所有电路图组别的搜索帮助	车型 212 电路图	OV00.01-P-1901DAA
OV00.01-P-1901DAB	所有电路图组别的搜索帮助	车型 212 功能原理图	OV00.01-P-1901DAB
GF00.19-P-1000DAA	线路和连接器的位置和分配		GF00.19-P-1000DAA
GF00.19-P-2000DAA	接地点的位置和分配		GF00.19-P-2000DAA
GF00.19-P-3000DAA	Z 结点 (线束中的线路连接器) 的位置和分配		GF00.19-P-3000DAA
PE00.19-P-1100DAA	包括多个功能组的电路图概述	更多电路图	PE00.19-P-1100DAA

文件编号 : pe07.10-p-2710-97daa
文件标题 : 空燃比控制的电气功能原理图

代码 :	款式 :	位置 :
1	Engine diagnosis indicator lamp, actuation	4J
A1	Instrument cluster	2H
A1e58	Engine diagnosis indicator lamp	1F
B11/4	Coolant temperature sensor	4B
B28/7	Pressure sensor downstream of throttle valve	
CAN E	Chassis CAN	
63/1	Oxygen sensor downstream of catalytic converter	7F
63/2	Oxygen sensor upstream of catalytic converter	7F
N3/10	ME-SFI [ME] control unit	4E
Y76/1	Cylinder 1 fuel injector	2C
Y76/2	Cylinder 2 fuel injector	2C
Y76/3	Cylinder 3 fuel injector	2D
Y76/4	Cylinder 4 fuel injector	2D

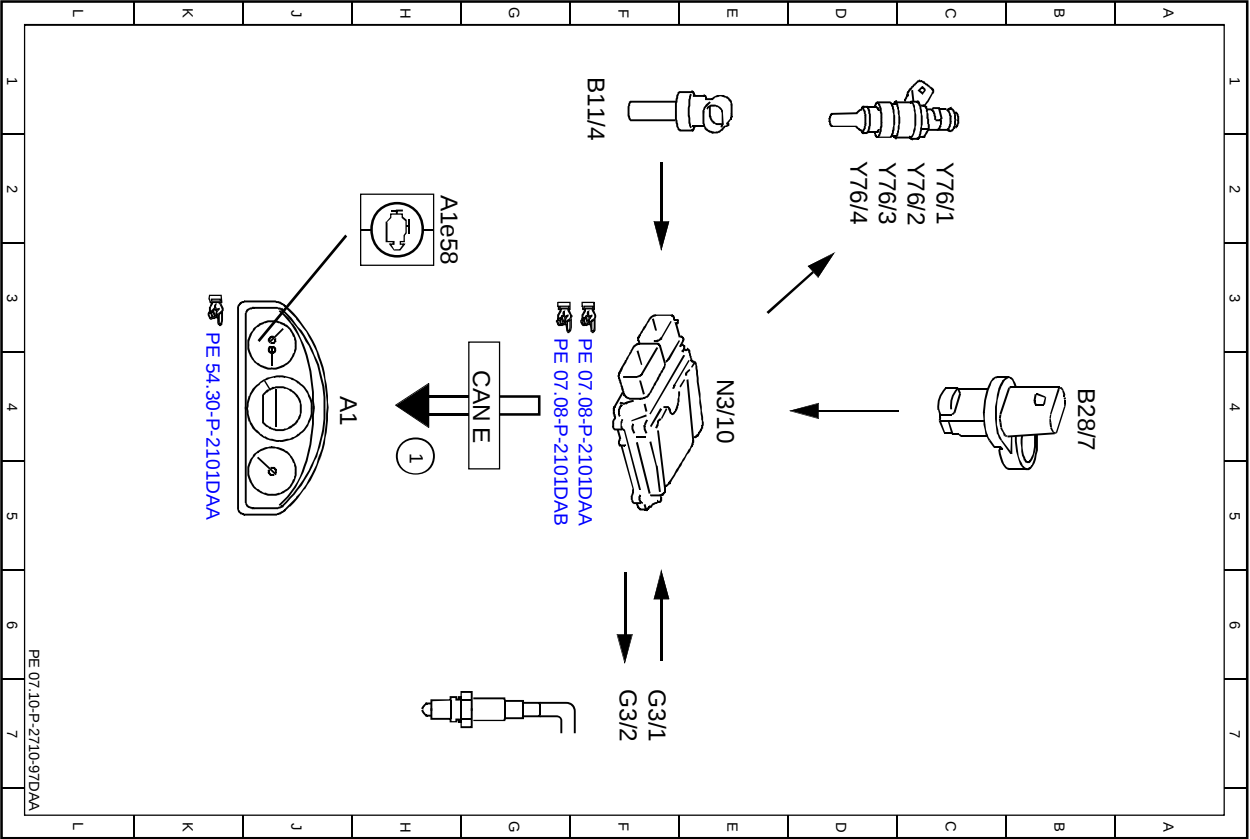


PE07.10-P-2711DAA	平稳运转控制的电气功能原理图	25.11.10
-------------------	----------------	----------


发动机 271.8, 在车型 212 中

PE07.10-P-2711-97DAA	平稳运转控制的电气功能原理图		PE07.10-P-2711-97DAA
OV00.01-P-1901-03DAA	电路图的使用		OV00.01-P-1901-03DAA
OV00.01-P-1901DAA	所有电路图组别的搜索帮助	车型 212 电路图	OV00.01-P-1901DAA
OV00.01-P-1909DAA	所有电气部件的搜索帮助		OV00.01-P-1909DAA
GF00.19-P-1000DAA	线路和连接器的位置和分配		GF00.19-P-1000DAA
GF00.19-P-2000DAA	接地点的位置和分配		GF00.19-P-2000DAA
GF00.19-P-3000DAA	Z 结点 (线束中的线路连接器) 的位置和分配		GF00.19-P-3000DAA
PE00.19-P-1100DAA	包括多个功能组的电路图概述	更多电路图	PE00.19-P-1100DAA

代码：	款式：	位置：
1	Fuel level, signal	6E
1	Fuel level, signal	11C
2	Wheel speed, signal	7F
A1	Instrument cluster	9C
B11/4	Coolant temperature sensor	6J
B28/7	Pressure sensor downstream of throttle valve	5C
B37	Accelerator pedal sensor	3D
B4/1	Left fuel level indicator sensor	13A
B4/2	Right fuel level indicator sensor	13B
B6/15	Intake camshaft Hall sensor	3J
B6/16	Exhaust camshaft Hall sensor	3J
B70	Crankshaft Hall sensor	5J
CAN B	Interior CAN	12D
CAN E	Chassis CAN	8F
CAN E	Chassis CAN	7D
Code 233	DISTRONIC PLUS	9H
N10/2	Rear SAM control unit with fuse and relay module	14C
N3/10	ME-SFI [ME] control unit	5E
N30/4	Electronic Stability Program control unit	10H
N30/7	Premium Electronic Stability Program control unit	10H
U999	Not valid with DISTRONIC PLUS	9G
Y76/1	Cylinder 1 fuel injector	1F
Y76/2	Cylinder 2 fuel injector	1F
Y76/3	Cylinder 3 fuel injector	1F
Y76/4	Cylinder 4 fuel injector	1F

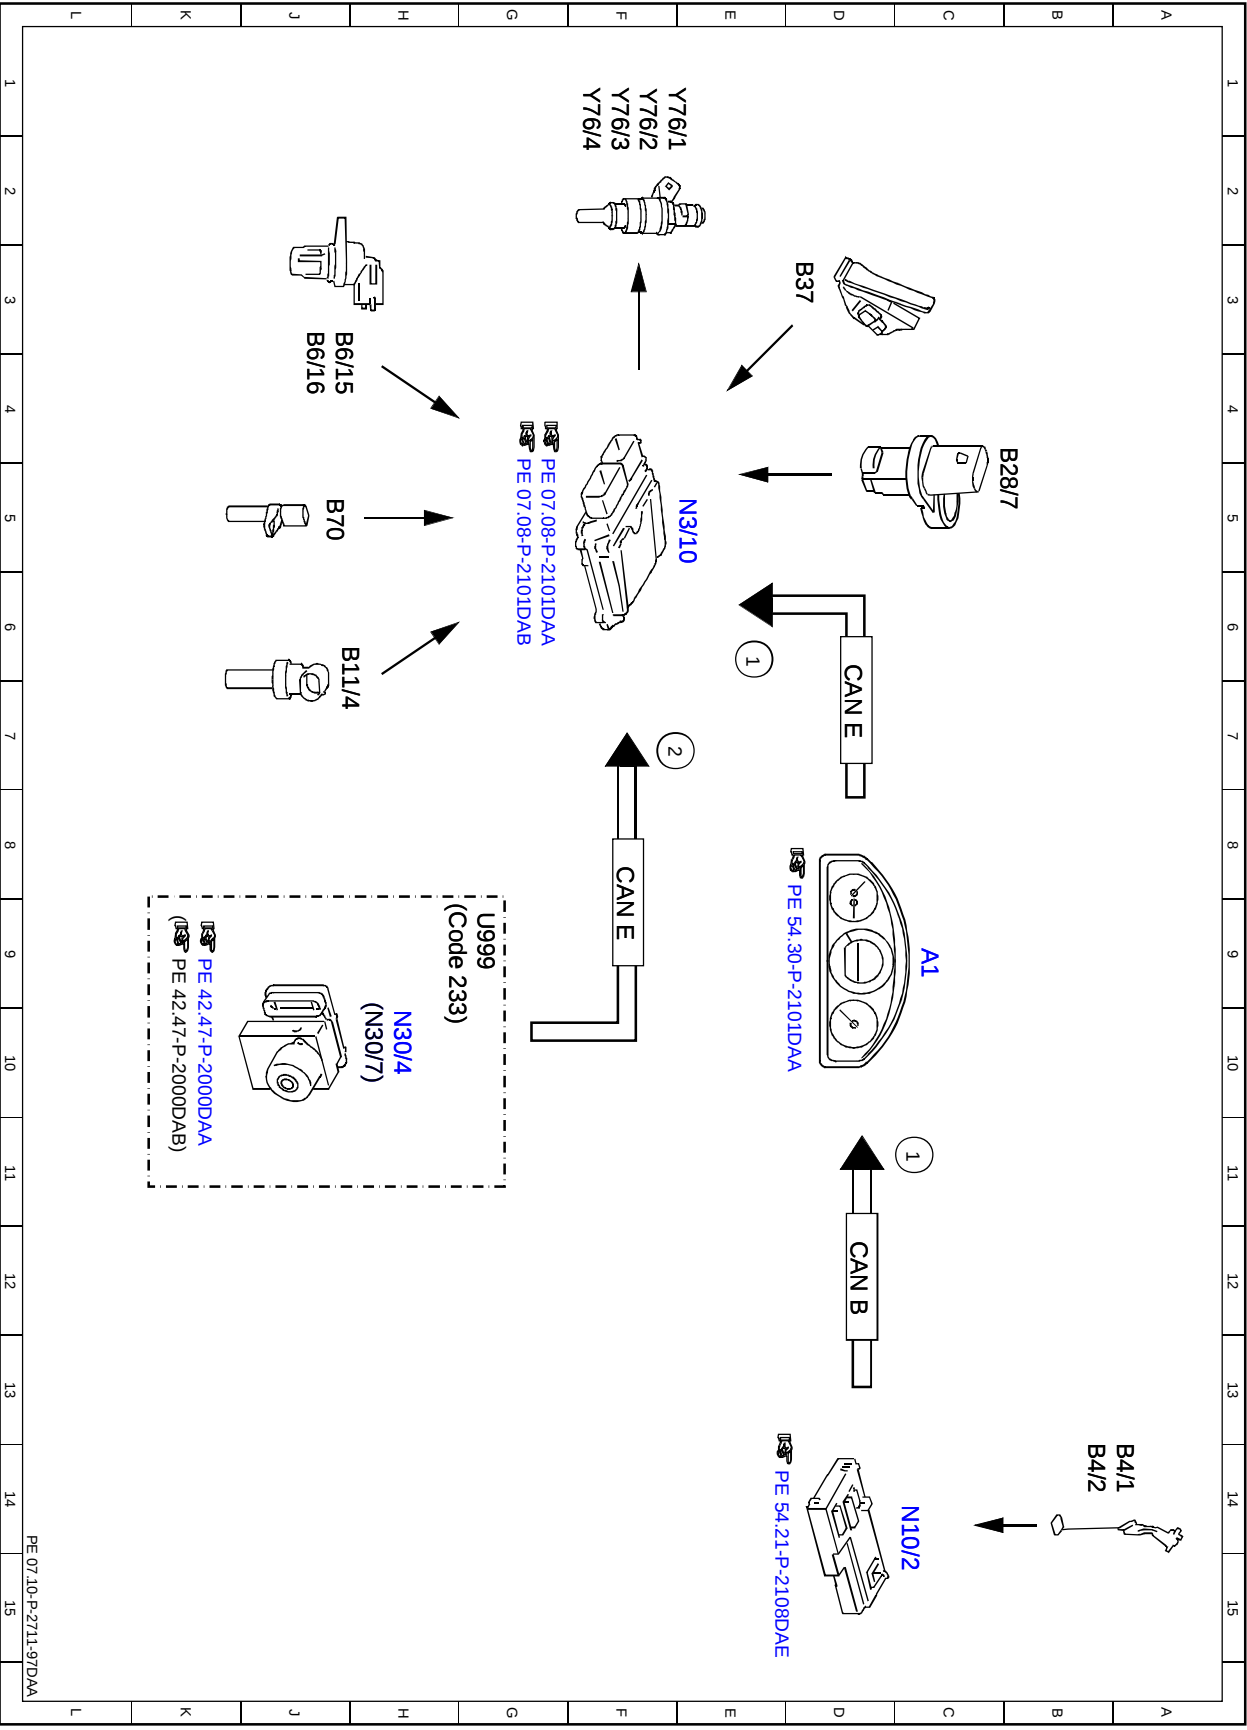

代码 :	款式 :	位置 :
1	Fuel level, signal	6E
1	Fuel level, signal	11C
2	Wheel speed, signal	7F
A1	Instrument cluster	9C
B11/4	Coolant temperature sensor	6J
B28/7	Pressure sensor downstream of throttle valve	5C
B37	Accelerator pedal sensor	3D
B4/1	Left fuel level indicator sensor	13A
B4/2	Right fuel level indicator sensor	13B
B6/15	Intake camshaft Hall sensor	3J
B6/16	Exhaust camshaft Hall sensor	3J
B70	Crankshaft Hall sensor	5J
CAN B	Interior CAN	12D
CAN E	Chassis CAN	8F
CAN E	Chassis CAN	7D
Code 233	DISTRONIC PLUS	9H
N10/2	Rear SAM control unit with fuse and relay module	14C
N3/10	ME-SFI [ME] control unit	5E
N30/4	Electronic Stability Program control unit	10H
N30/7	Premium Electronic Stability Program control unit	10H
U999	Not valid with DISTRONIC PLUS	9G
Y76/1	Cylinder 1 fuel injector	1F
Y76/2	Cylinder 2 fuel injector	1F
Y76/3	Cylinder 3 fuel injector	1F
Y76/4	Cylinder 4 fuel injector	1F

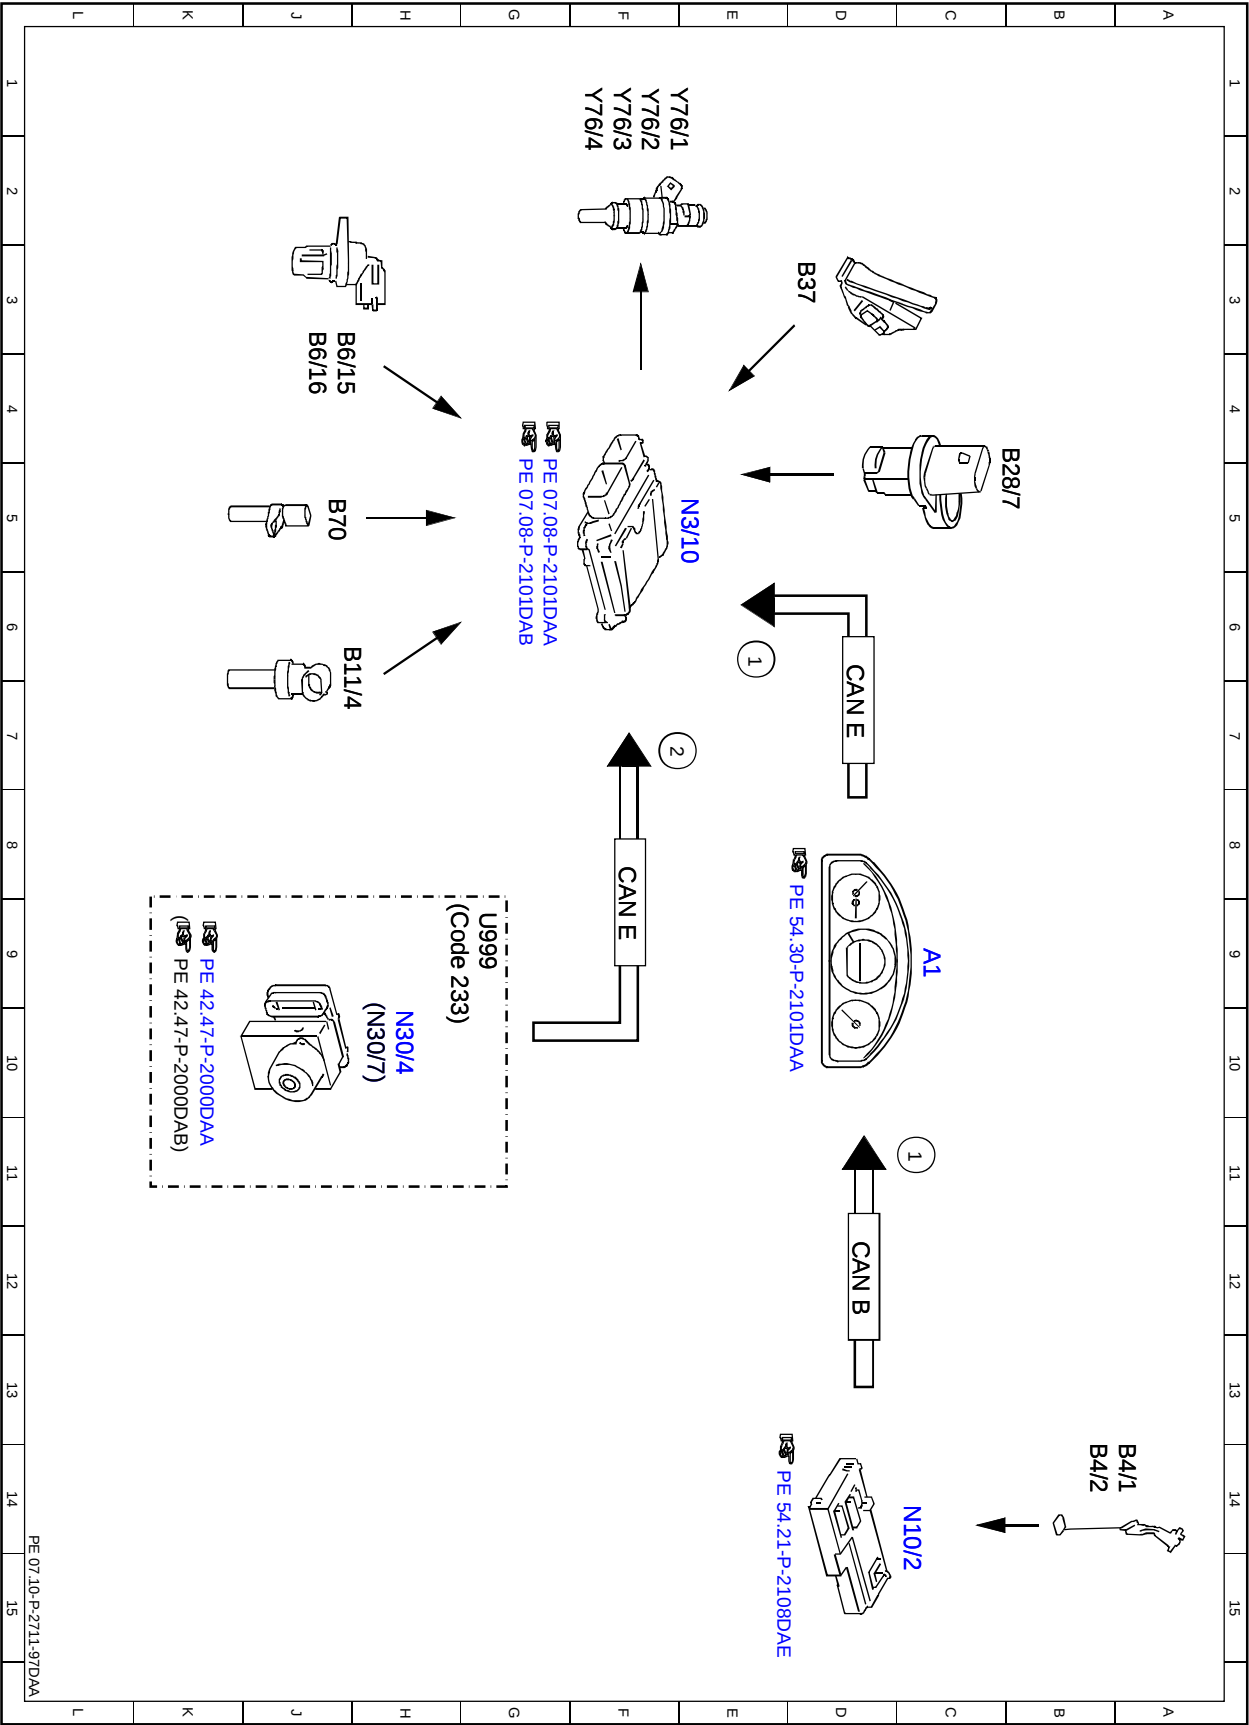

代码 :	款式 :	位置 :
1	Vehicle speed, signal	7F
2	Instrument cluster, message	10F
3	Fan motor, specified rpm request	4C
4	Air conditioning, status	7E
4	Air conditioning, status	10B
5	Outside temperature, signal	7E
7	Wheel speed, signal	7G
A1	Instrument cluster	12E
Alp13	Multifunction display	13D
B11/4	Coolant temperature sensor	3L
B17/8	Charge air temperature sensor	1H
B28/7	Pressure sensor downstream of throttle valve	5K
B37	Accelerator pedal sensor	6D
B70	Crankshaft Hall sensor	7L
CAN B	Interior CAN	11B
CAN E	Chassis CAN	9F
CAN E	Chassis CAN	8G
CAN E	Chassis CAN	9D
Code 233	DISTRONIC PLUS	8H
M4/7	Combustion engine and air conditioning with integrated control fan motor	3C
N10/1	Front SAM control unit with fuse and relay module	9A
N22/7	Automatic air conditioning control and operating unit	14B
N3/10	ME-SFI [ME] control unit	5F
N30/4	Electronic Stability Program control unit	10J
N30/7	Premium Electronic Stability Program control unit	10J
R39/2	Full-load operation vent line heater element	2B
R48	Coolant thermostat heating element	1D
U999	Not valid with DISTRONIC PLUS	9H
Y16/2	Heating system shutoff valve	1G
Y84	Radiator shutters actuator	5A

