


## Electrical Circuit: 01 01 19: Main systems battery mounted fusebox, radiator fan in-line fuse and E-box fuses F29 to F31 and smoothing capacitor LHD (prior to VIN 63288)

No	Description
C00299	Main systems battery [A]
C00302	Alternator [C]
C00303	Voltage regulator [C1]
C00370	Front body control module [J519]
C00717	E-box fusebox
C00721	Main systems battery mounted fusebox
C00751	Fuse F21, 100 amp/spare - E-box fusebox
C00759	Fuse F29, 50 amp - E-box fusebox
C00760	Fuse F30, 50 amp - E-box fusebox
C00761	Fuse F31, 40 amp - E-box fusebox
C00904	Fuse F1, 150 amp - main systems battery fusebox
C00905	Fuse F2, 5 amp - main systems battery fusebox
C00906	Fuse F3, 80/100 amp - main systems battery fusebox
C00907	Fuse F4, 300 amp - main systems battery fusebox
C00908	Fuse F5, 150 amp - main systems battery fusebox
C00909	Fuse F6, 300 amp - main systems battery fusebox
C00922	Smoothing capacitor [C24]
G00414	Ground point connector
S01490	Splice - Black - left-hand drive main body loom
S01515	Splice - Red/blue - left-hand drive main body loom
S01518	Splice - left-hand drive main body loom
S01553	Splice - left-hand drive main body loom
X03468	Junction box connector
X03476	E-box fusebox connector
X03486	Front body control module connector 16-way
X03567	Battery voltage sensing connector
X03676	Main systems battery mounted fusebox connector
X03677	Main systems battery mounted fusebox connector
X03698	Main systems battery mounted fusebox connector

### Circuit Links

Description	Link	Additional Information
A		To the driver's facia fusebox, the E-box fusebox and the thermal fusebox
B		To the LH luggage compartment
C		To the battery parallel circuit relay. See the battery management circuits
D		To the driver's facia fusebox

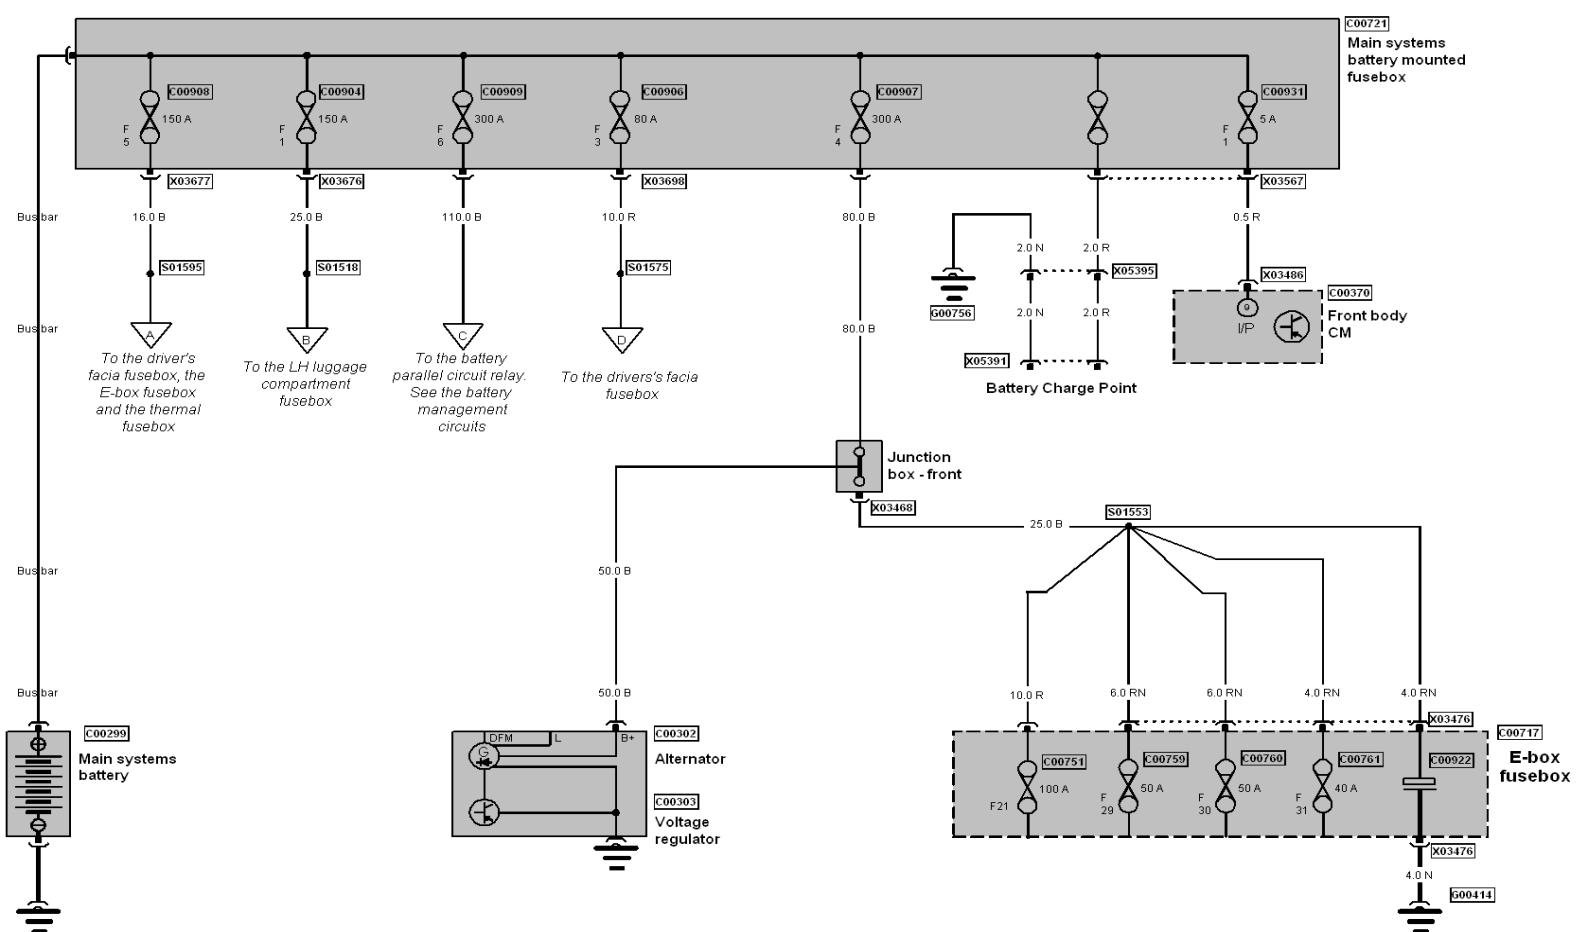


## Electrical Circuit: 01 01 25: Main systems battery mounted fusebox, radiator fan in-line fuse and E-box fuses F29 to F31 and smoothing capacitor LHD (from VIN 63288)

No	Description
C00299	Main systems battery [A]
C00302	Alternator [C]
C00303	Voltage regulator [C1]
C00370	Front body control module [J519]
C00717	E-box fusebox
C00721	Main systems battery mounted fusebox
C00751	Fuse F21, 100 amp/spare - E-box fusebox
C00759	Fuse F29, 50 amp - E-box fusebox
C00760	Fuse F30, 50 amp - E-box fusebox
C00761	Fuse F31, 40 amp - E-box fusebox
C00904	Fuse F1, 150 amp - main systems battery fusebox
C00906	Fuse F3, 80/100 amp - main systems battery fusebox
C00907	Fuse F4, 300 amp - main systems battery fusebox
C00908	Fuse F5, 150 amp - main systems battery fusebox
C00909	Fuse F6, 300 amp - main systems battery fusebox
C00922	Smoothing capacitor [C24]
C00931	F1, 5 Amp - Mains system battery mounted fusebox (top)
G00414	Ground point connector
G00756	Ground Point Connector
S01518	Splice - left-hand drive main body loom
S01553	Splice - left-hand drive main body loom
S01575	Splice - Red - left-hand drive main body loom
S01595	Splice - Black - left-hand drive main body loom
X03468	Junction box connector
X03476	E-box fusebox connector
X03486	Front body control module connector 16-way
X03567	Battery voltage sensing connector
X03676	Main systems battery mounted fusebox connector
X03677	Main systems battery mounted fusebox connector
X03698	Main systems battery mounted fusebox connector
X05391	Charger socket 3-way
X05395	Mains to Charge point link interconnect 2-way

### Circuit Links

Description	Link	Additional Information
A		To the driver's facia fusebox, the E-box fusebox and the thermal fusebox
B		To the LH luggage compartment
C		To the battery parallel circuit relay. See the battery management circuits
D		To the driver's facia

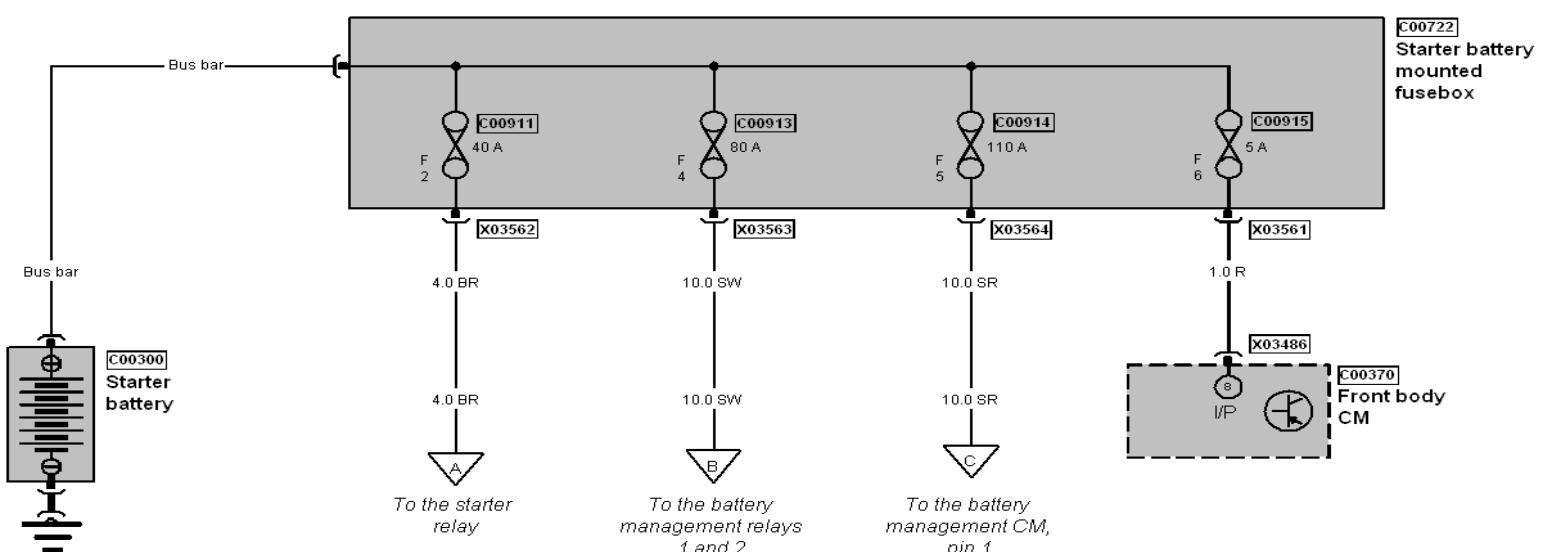


## Electrical Circuit: 01 02 11: Starter battery mounted fusebox LHD (prior to VIN 63288)

No	Description
C00300	Starter battery [A1]
C00370	Front body control module [J519]
C00722	Starter battery mounted fusebox
C00911	Fuse F2, 40 amp - starter battery mounted fusebox
C00913	Fuse F4, 80 amp - starter battery mounted fusebox
C00914	Fuse F5, 110 amp - starter battery mounted fusebox
C00915	Fuse F6, 5 amp - starter battery mounted fusebox
X03486	Front body control module connector 16-way
X03561	Starter battery voltage fuse connector 3-way
X03562	Starter battery mounted fusebox connector
X03563	Starter battery mounted fusebox connector
X03564	Starter battery mounted fusebox connector

### Circuit Links

Description	Link	Additional Information
A		To the starter relay
B		To the battery management relays 1 and 2
C		To the battery management CM, pin 1

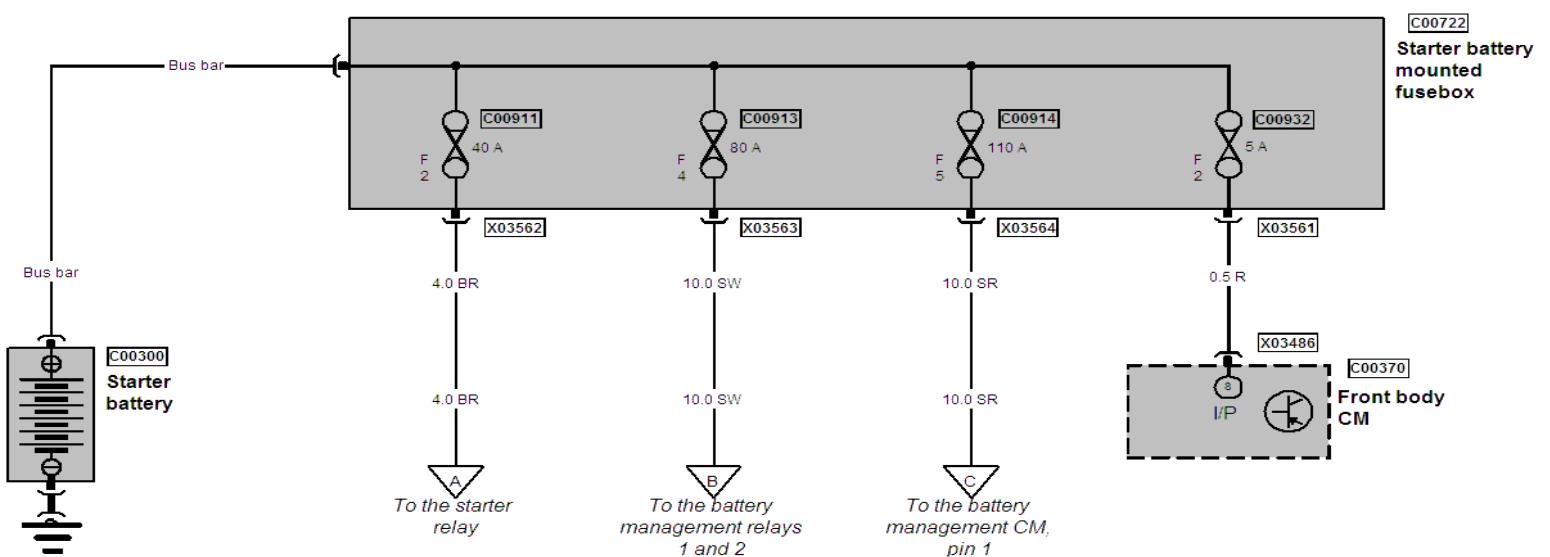


## Electrical Circuit: 01 02 17: Starter battery mounted fusebox LHD (from VIN 63288)

No	Description
C00300	Starter battery [A1]
C00370	Front body control module [J519]
C00722	Starter battery mounted fusebox
C00911	Fuse F2, 40 amp - starter battery mounted fusebox
C00913	Fuse F4, 80 amp - starter battery mounted fusebox
C00914	Fuse F5, 110 amp - starter battery mounted fusebox
C00932	F2, 5 Amp - Starter battery mounted fusebox (top)
X03486	Front body control module connector 16-way
X03561	Starter battery voltage fuse connector 3-way
X03562	Starter battery mounted fusebox connector
X03563	Starter battery mounted fusebox connector
X03564	Starter battery mounted fusebox connector

### Circuit Links

Description	Link	Additional Information
A		To the starter relay
B		To the battery management relays 1 and 2
C		To the battery management CM, pin 1

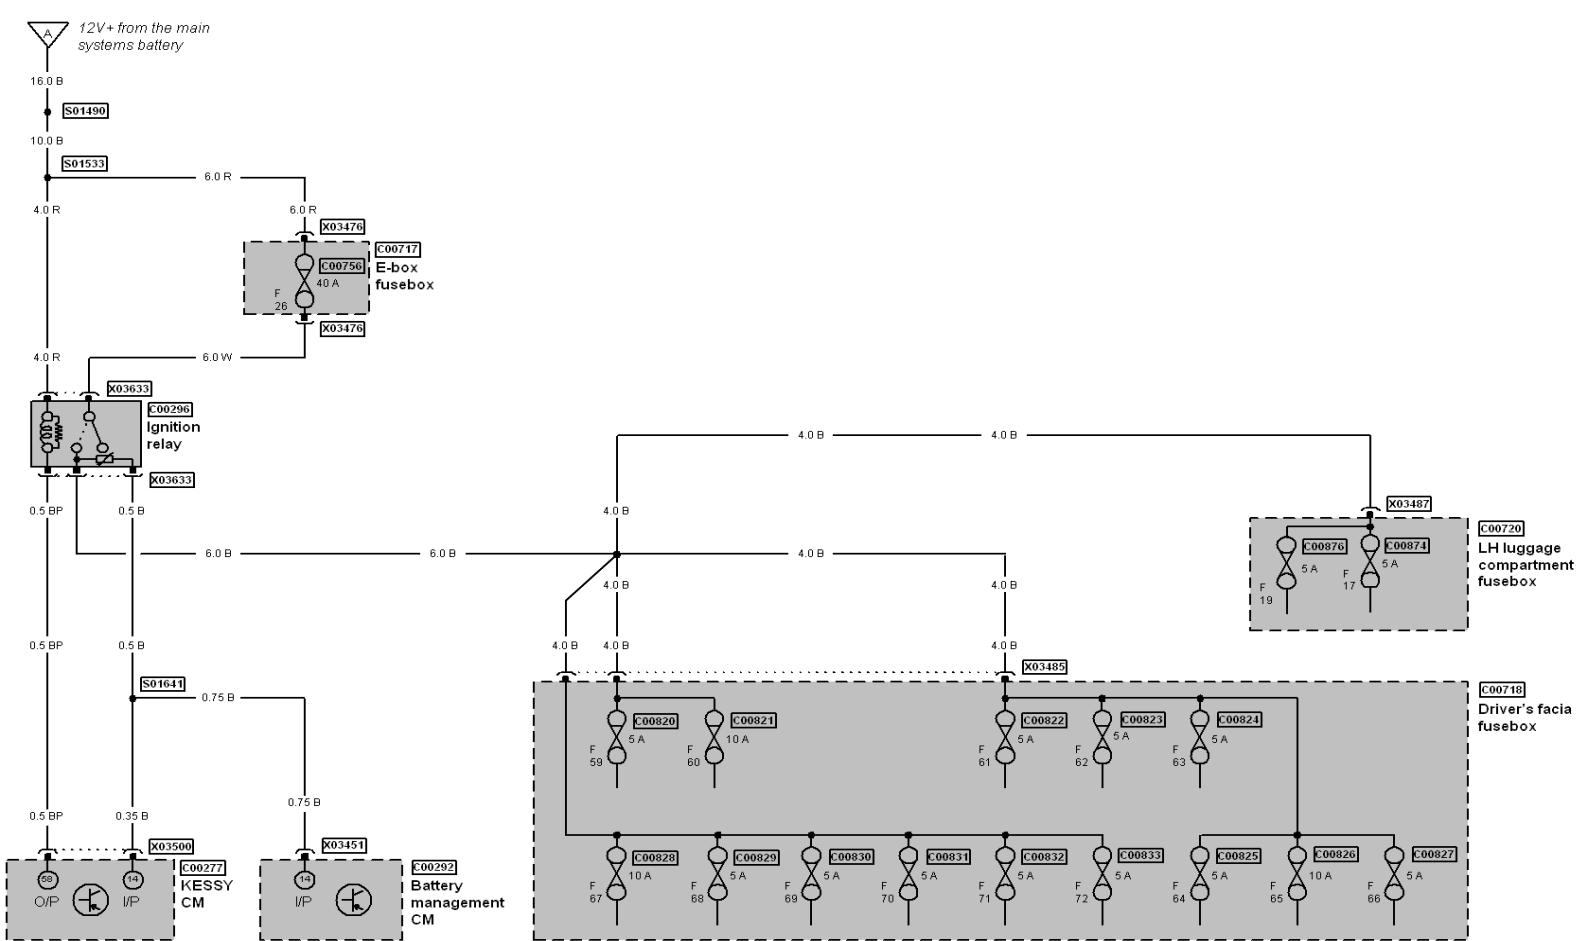


## Electrical Circuit: 01 03 23: Ignition relay, E-box fuse F26 and driver's facia fuses F37, F57, F59 to F67, F69 to F72 and luggage compartment fuse F17 LHD (prior to VIN 63288)

No	Description
C00277	Keyless entry/start control module [J518]
C00292	Battery management control module [J367]
C00296	Ignition relay [J329]
C00717	E-box fusebox
C00718	Driver's facia fusebox
C00720	Left-hand luggage compartment fusebox
C00756	Fuse F26, 40 amp - E-box fusebox
C00820	Fuse F59, 5 amp - driver's facia fusebox
C00821	Fuse F60, 10 amp - driver's facia fusebox
C00822	Fuse F61, 5 amp - driver's facia fusebox
C00823	Fuse F62, spare/5 amp - driver's facia fusebox
C00824	Fuse F63, 5 amp - driver's facia fusebox
C00825	Fuse F64, 5 amp - driver's facia fusebox
C00826	Fuse F65, 10 amp - driver's facia fusebox
C00827	Fuse F66, 5 amp - driver's facia fusebox
C00828	Fuse F67, 10 amp - driver's facia fusebox
C00829	Fuse F68, 5 amp/spare - driver's facia fusebox
C00830	Fuse F69, 5 amp - driver's facia fusebox
C00831	Fuse F70, 5 amp - driver's facia fusebox
C00832	Fuse F71, spare/5 amp - driver's facia fusebox
C00833	Fuse F72, 5 amp - driver's facia fusebox
C00874	Fuse F17, spare/5 amp - LH luggage compartment fusebox
C00876	Fuse F19, 5 amp/spare - LH luggage compartment fusebox
S01490	Splice - Black - left-hand drive main body loom
S01533	Splice - left-hand drive main body loom
S01641	Splice - Black - left-hand drive main body loom
X03451	Battery management control module connector 18-way
X03476	E-box fusebox connector
X03485	Driver's facia fusebox connector
X03487	Left-hand luggage compartment fusebox connector
X03500	Keyless entry/start control module connector 81-way
X03633	Ignition relay connector

### Circuit Links

Description	Link	Additional Information
A	010119	12V+ from the main systems battery

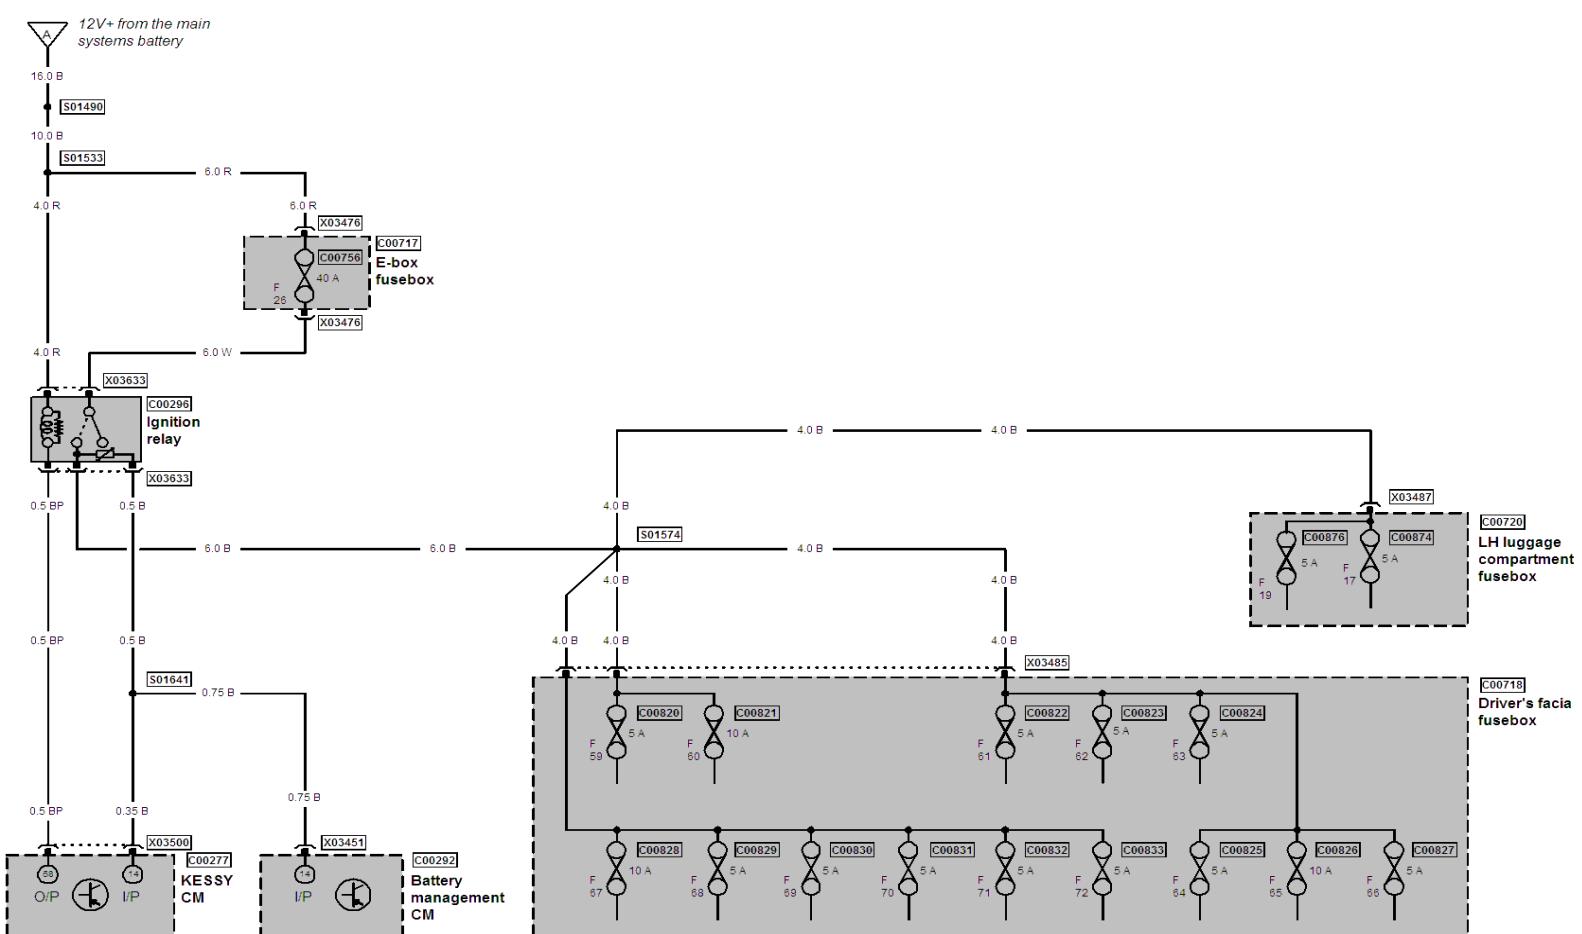


## Electrical Circuit: 01 03 29: Ignition relay, E-box fuse F26 and driver's facia fuses F37, F57, F59 to F67, F69 to F72 and luggage compartment fuse F17 LHD (from VIN 63288)

No	Description
C00277	Keyless entry/start control module [J518]
C00292	Battery management control module [J367]
C00296	Ignition relay [J329]
C00717	E-box fusebox
C00718	Driver's facia fusebox
C00720	Left-hand luggage compartment fusebox
C00756	Fuse F26, 40 amp - E-box fusebox
C00820	Fuse F59, 5 amp - driver's facia fusebox
C00821	Fuse F60, 10 amp - driver's facia fusebox
C00822	Fuse F61, 5 amp - driver's facia fusebox
C00823	Fuse F62, spare/5 amp - driver's facia fusebox
C00824	Fuse F63, 5 amp - driver's facia fusebox
C00825	Fuse F64, 5 amp - driver's facia fusebox
C00826	Fuse F65, 10 amp - driver's facia fusebox
C00827	Fuse F66, 5 amp - driver's facia fusebox
C00828	Fuse F67, 10 amp - driver's facia fusebox
C00829	Fuse F68, 5 amp/spare - driver's facia fusebox
C00830	Fuse F69, 5 amp - driver's facia fusebox
C00831	Fuse F70, 5 amp - driver's facia fusebox
C00832	Fuse F71, spare/5 amp - driver's facia fusebox
C00833	Fuse F72, 5 amp - driver's facia fusebox
C00874	Fuse F17, spare/5 amp - LH luggage compartment fusebox
C00876	Fuse F19, 5 amp/spare - LH luggage compartment fusebox
S01490	Splice - Black - left-hand drive main body loom
S01533	Splice - left-hand drive main body loom
S01574	Splice - Black - left-hand drive main body loom
S01641	Splice - Black - left-hand drive main body loom
X03451	Battery management control module connector 18-way
X03476	E-box fusebox connector
X03485	Driver's facia fusebox connector
X03487	Left-hand luggage compartment fusebox connector
X03500	Keyless entry/start control module connector 81-way
X03633	Ignition relay connector

### Circuit Links

Description	Link	Additional Information
A	010125	12V+ from the main systems battery. See the power distribution circuits.

12 V+ from the main systems battery. See the power distribution circuits.

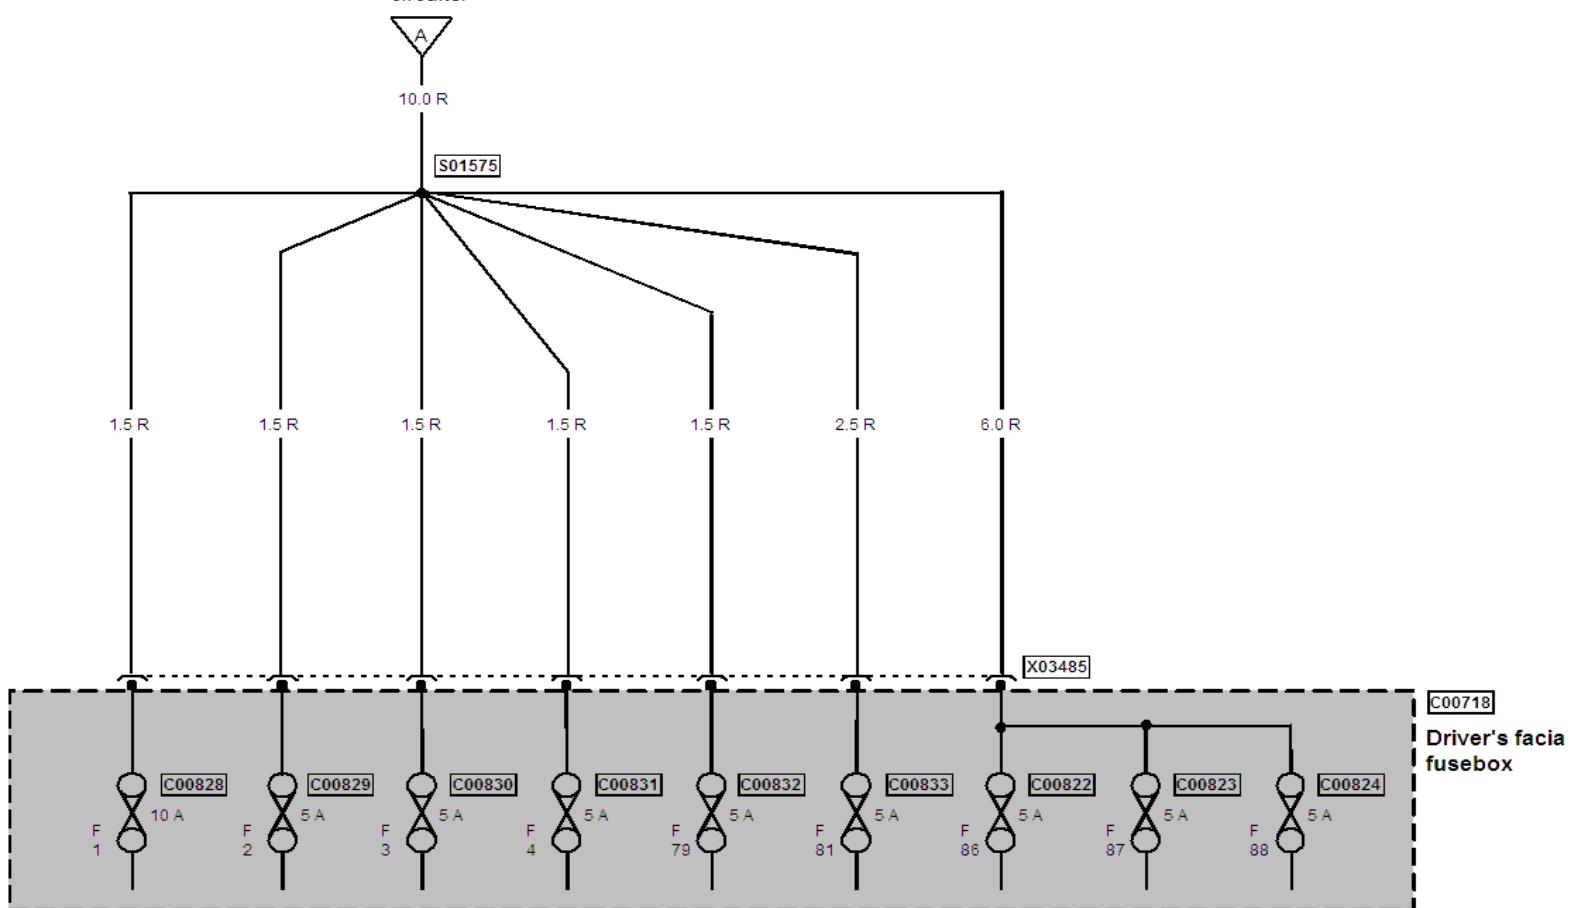


## Electrical Circuit: 01 03 31: Driver's facia fusebox F1-F4, F79, F81 and F86-F88 LHD (from VIN 63288)

No	Description
C00718	Driver's facia fusebox
C00822	Fuse F61, 5 amp - driver's facia fusebox
C00823	Fuse F62, spare/5 amp - driver's facia fusebox
C00824	Fuse F63, 5 amp - driver's facia fusebox
C00828	Fuse F67, 10 amp - driver's facia fusebox
C00829	Fuse F68, 5 amp/spare - driver's facia fusebox
C00830	Fuse F69, 5 amp - driver's facia fusebox
C00831	Fuse F70, 5 amp - driver's facia fusebox
C00832	Fuse F71, spare/5 amp - driver's facia fusebox
C00833	Fuse F72, 5 amp - driver's facia fusebox
S01575	Splice - Red - left-hand drive main body loom
X03485	Driver's facia fusebox connector

### Circuit Links

Description	Link	Additional Information
A	<a href="#">010125</a>	12V+ from the main systems battery. See the power distribution circuits.

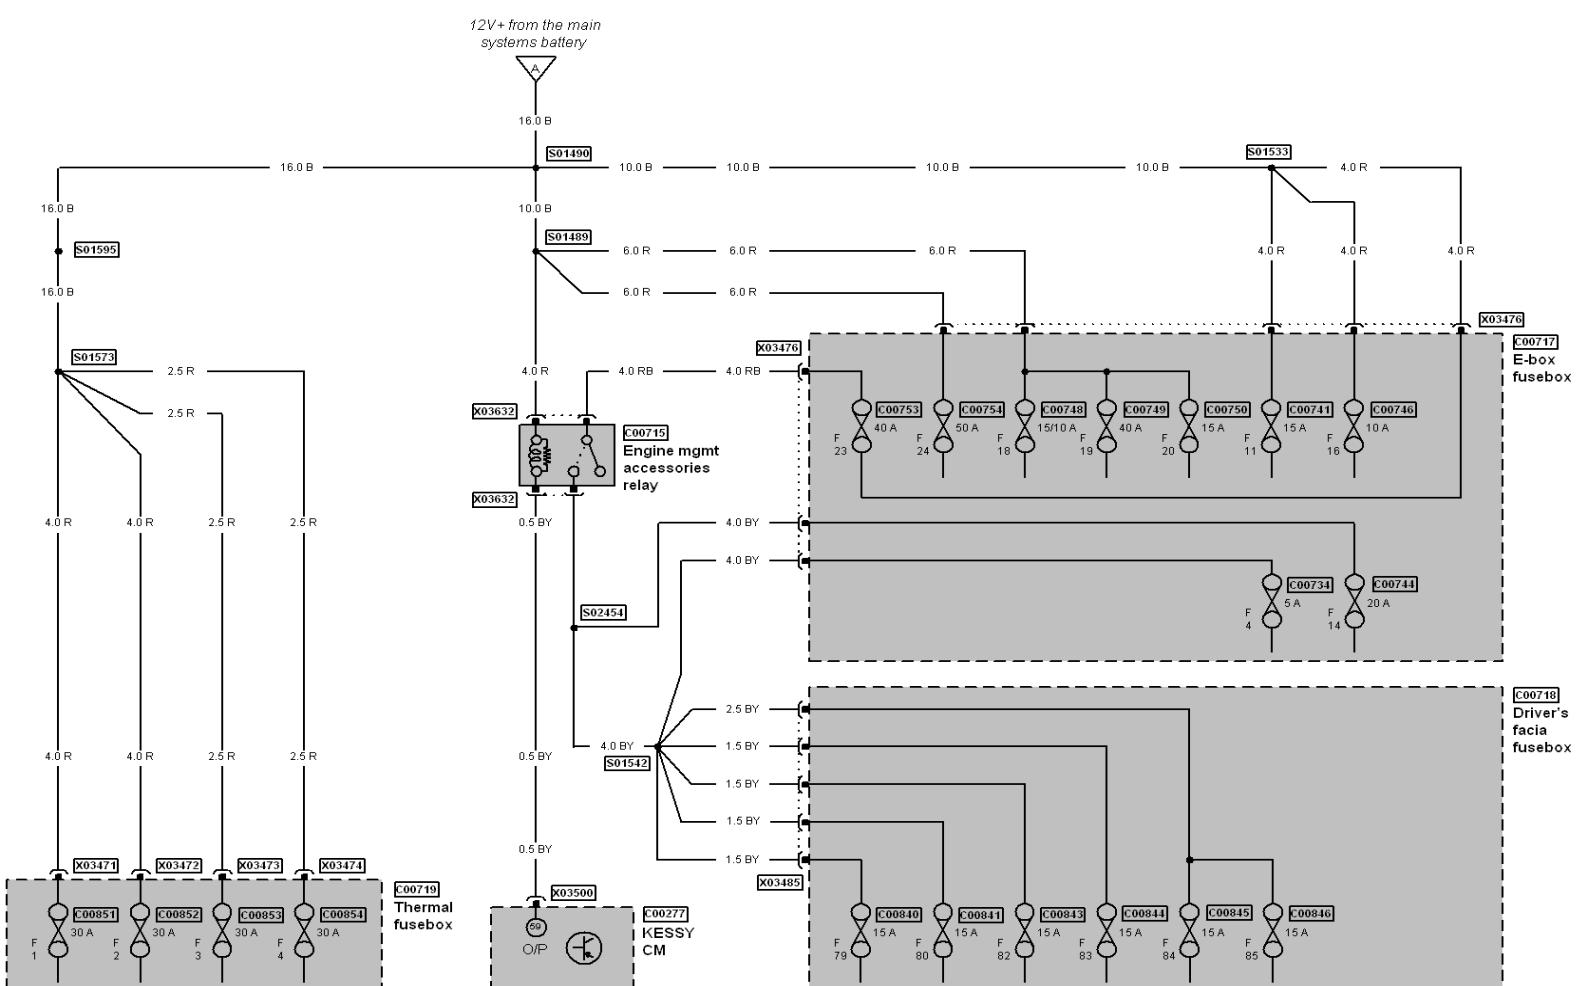


## Electrical Circuit: 01 04 19: Engine management accessories relay, thermal fuses F1 to F4 and E-box fuses F4, F11, F14, F16, F18, F19, F20, F23 and F24 LHD (prior to VIN 63288)

No	Description
C00277	Keyless entry/start control module [J518]
C00715	Engine management accessories relay [J680]
C00717	E-box fusebox
C00718	Driver's facia fusebox
C00719	Thermal fusebox
C00734	Fuse F4, 5 amp/20 amp - E-box fusebox
C00741	Fuse F11, 15 amp - E-box fusebox
C00744	Fuse F14, 20 amp - E-box fusebox
C00746	Fuse F16, 10 amp - E-box fusebox
C00748	Fuse F18, 15/10 amp - E-box fusebox
C00749	Fuse F19, 40 amp - E-box fusebox
C00750	Fuse F20, 15 amp - E-box fusebox
C00753	Fuse F23, 40 amp - E-box fusebox
C00754	Fuse F24, 50 amp - E-box fusebox
C00840	Fuse F79, spare/15 amp - driver's facia fusebox
C00841	Fuse F80, spare/15 amp - driver's facia fusebox
C00843	Fuse F82, spare/15 amp/20 amp - driver's facia fusebox
C00844	Fuse F83, spare/15 amp/20 amp - driver's facia fusebox
C00845	Fuse F84, 15 amp - driver's facia fusebox
C00846	Fuse F85, 15 amp - driver's facia fusebox
C00851	Fuse F1, 30 amp - thermal fusebox
C00852	Fuse F2, 30 amp - thermal fusebox
C00853	Fuse F3, 30 amp - thermal fusebox
C00854	Fuse F4, 30 amp - thermal fusebox
S01489	Splice - left-hand drive main body loom
S01490	Splice - Black - left-hand drive main body loom
S01533	Splice - left-hand drive main body loom
S01542	Splice - Black/yellow - left-hand drive main body loom
S01573	Splice - left-hand drive main body loom
S01595	Splice - Black - left-hand drive main body loom
S02454	Splice - Black/yellow - left-hand drive main body loom
X03471	Thermal fusebox connector 2-way
X03472	Thermal fusebox connector 2-way
X03473	Thermal fusebox connector 2-way
X03474	Thermal fusebox connector 2-way
X03476	E-box fusebox connector
X03485	Driver's facia fusebox connector
X03500	Keyless entry/start control module connector 81-way
X03632	Engine management accessories relay connector

### Circuit Links

Description	Link	Additional Information
A	010119	12V+ from the main systems battery

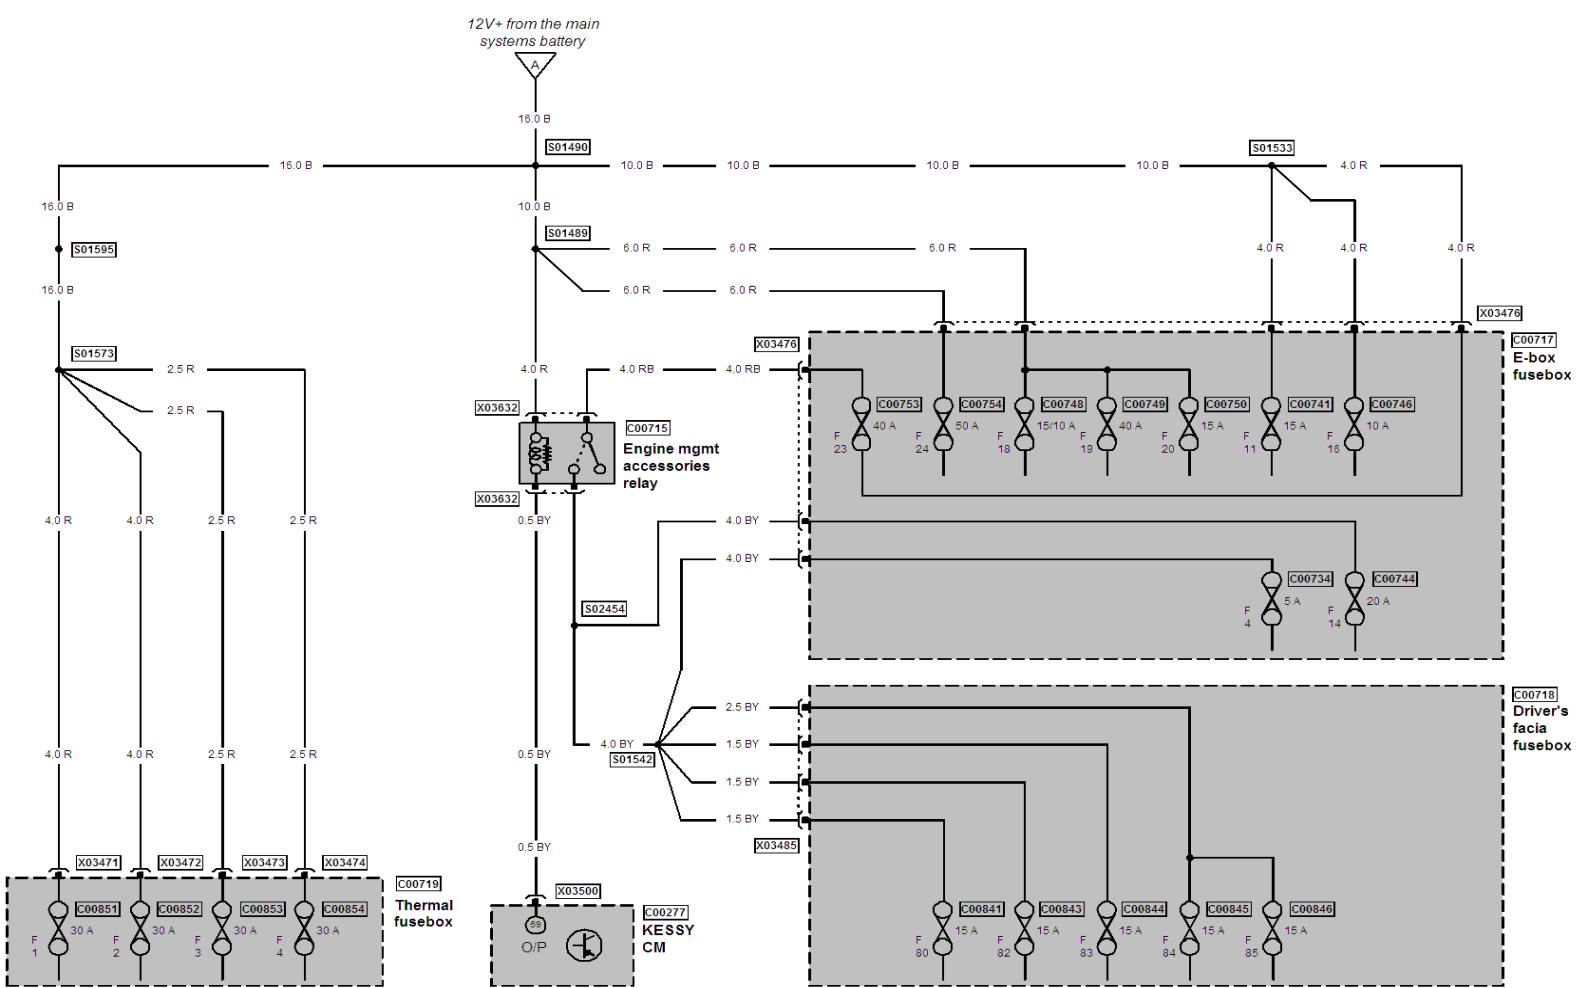


## Electrical Circuit: 01 04 25: Engine management accessories relay, thermal fuses F1 to F4 and E-box fuses F4, F11, F14, F16, F18, F19, F20, F23 and F24 LHD (from VIN 63288)

No	Description
C00277	Keyless entry/start control module [J518]
C00715	Engine management accessories relay [J680]
C00717	E-box fusebox
C00718	Driver's facia fusebox
C00719	Thermal fusebox
C00734	Fuse F4, 5 amp/20 amp - E-box fusebox
C00741	Fuse F11, 15 amp - E-box fusebox
C00744	Fuse F14, 20 amp - E-box fusebox
C00746	Fuse F16, 10 amp - E-box fusebox
C00748	Fuse F18, 15/10 amp - E-box fusebox
C00749	Fuse F19, 40 amp - E-box fusebox
C00750	Fuse F20, 15 amp - E-box fusebox
C00753	Fuse F23, 40 amp - E-box fusebox
C00754	Fuse F24, 50 amp - E-box fusebox
C00841	Fuse F80, spare/15 amp - driver's facia fusebox
C00843	Fuse F82, spare/15 amp/20 amp - driver's facia fusebox
C00844	Fuse F83, spare/15 amp/20 amp - driver's facia fusebox
C00845	Fuse F84, 15 amp - driver's facia fusebox
C00846	Fuse F85, 15 amp - driver's facia fusebox
C00851	Fuse F1, 30 amp - thermal fusebox
C00852	Fuse F2, 30 amp - thermal fusebox
C00853	Fuse F3, 30 amp - thermal fusebox
C00854	Fuse F4, 30 amp - thermal fusebox
S01489	Splice - left-hand drive main body loom
S01490	Splice - Black - left-hand drive main body loom
S01533	Splice - left-hand drive main body loom
S01542	Splice - Black/yellow - left-hand drive main body loom
S01573	Splice - left-hand drive main body loom
S01595	Splice - Black - left-hand drive main body loom
S02454	Splice - Black/yellow - left-hand drive main body loom
X03471	Thermal fusebox connector 2-way
X03472	Thermal fusebox connector 2-way
X03473	Thermal fusebox connector 2-way
X03474	Thermal fusebox connector 2-way
X03476	E-box fusebox connector
X03485	Driver's facia fusebox connector
X03500	Keyless entry/start control module connector 81-way
X03632	Engine management accessories relay connector

### Circuit Links

Description	Link	Additional Information
A	010125	12V+ from the main systems battery

 12V+ from the main systems battery




16.0 B

S01595

16.0 B

X03684

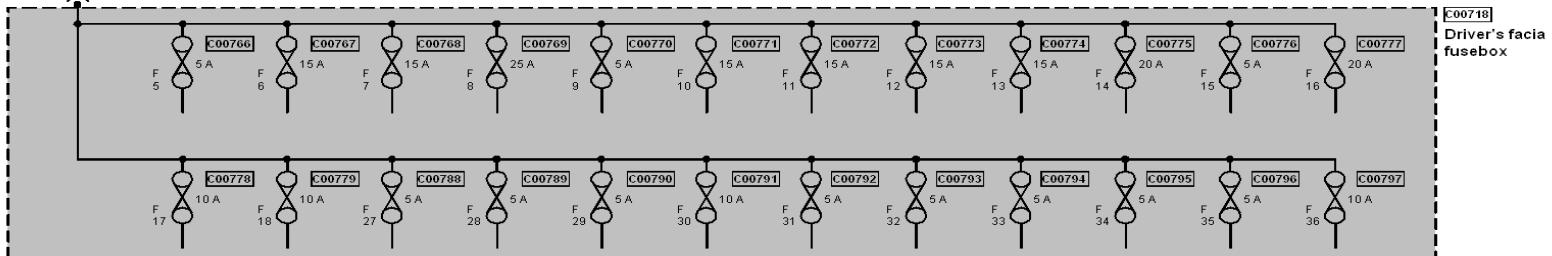


## Electrical Circuit: 01 05 05: Driver's facia fuses F5 to F18 and F27 to F36 LHD

No	Description
C00718	Driver's facia fusebox
C00766	Fuse F5, 5 amp - driver's facia fusebox
C00767	Fuse F6, 15 amp - driver's facia fusebox
C00768	Fuse F7, 15 amp - driver's facia fusebox
C00769	Fuse F8, 25 amp - driver's facia fusebox
C00770	Fuse F9, 5 amp - driver's facia fusebox
C00771	Fuse F10, 15 amp - driver's facia fusebox
C00772	Fuse F11, 15 amp - driver's facia fusebox
C00773	Fuse F12, 15 amp - driver's facia fusebox
C00774	Fuse F13, 15 amp - driver's facia fusebox
C00775	Fuse F14, 20 amp - driver's facia fusebox
C00776	Fuse F15, 5 amp - driver's facia fusebox
C00777	Fuse F16, 20 amp - driver's facia fusebox
C00778	Fuse F17, 10 amp - driver's facia fusebox
C00779	Fuse F18, 10 amp - driver's facia fusebox
C00788	Fuse F27, 5 amp - driver's facia fusebox
C00789	Fuse F28, 5 amp - driver's facia fusebox
C00790	Fuse F29, 5 amp - driver's facia fusebox
C00791	Fuse F30, 10 amp - driver's facia fusebox
C00792	Fuse F31, 5 amp - driver's facia fusebox
C00793	Fuse F32, spare/5 amp - driver's facia fusebox
C00794	Fuse F33, 5 amp - driver's facia fusebox
C00795	Fuse F34, 5 amp - driver's facia fusebox
C00796	Fuse F35, 5 amp - driver's facia fusebox
C00797	Fuse F36, 10 amp - driver's facia fusebox
S01595	Splice - Black - left-hand drive main body loom
X03684	Driver's facia fusebox connector

### Circuit Links

Description	Link	Additional Information
A	010107	12V+ from the main systems battery

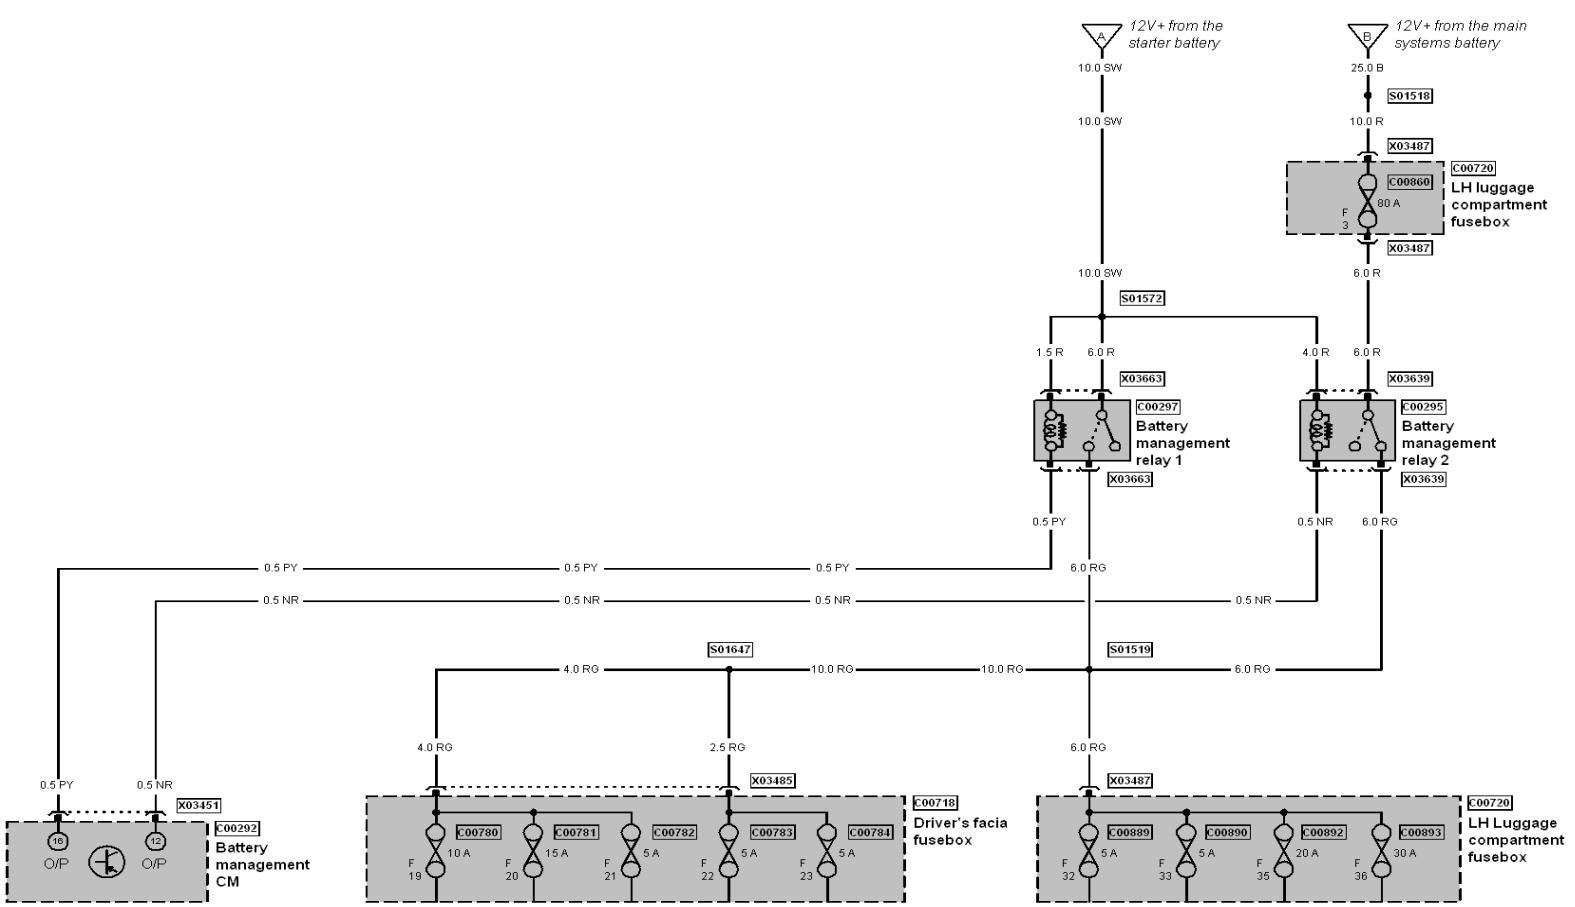


## Electrical Circuit: 01 06 09: Driver's facia fuses F19 to F23 and luggage compartment fuses F32, F33, F35 and F36 LHD (prior to VIN 63288)

No	Description
C00292	Battery management control module [J367]
C00295	Battery management relay 2 [J579]
C00297	Battery management relay 1 [J580]
C00718	Driver's facia fusebox
C00720	Left-hand luggage compartment fusebox
C00780	Fuse F19, 10 amp - driver's facia fusebox
C00781	Fuse F20, spare/15 amp - driver's facia fusebox
C00782	Fuse F21, spare/5 amp - driver's facia fusebox
C00783	Fuse F22, 5 amp - driver's facia fusebox
C00784	Fuse F23, 5 amp - driver's facia fusebox
C00860	Fuse F3, 80 amp - LH luggage compartment fusebox
C00889	Fuse F32, 5 amp - LH luggage compartment fusebox
C00890	Fuse F33, 5 amp - LH luggage compartment fusebox
C00892	Fuse F35, 20 amp - LH luggage compartment fusebox
C00893	Fuse F36, 30 amp - LH luggage compartment fusebox
S01518	Splice - left-hand drive main body loom
S01519	Splice - Red/green - left-hand drive main body loom
S01572	Splice - left-hand drive main body loom
S01647	Splice - Red/green - left-hand drive main body loom
X03451	Battery management control module connector 18-way
X03485	Driver's facia fusebox connector
X03487	Left-hand luggage compartment fusebox connector
X03639	Battery management relay 2 connector
X03663	Battery management relay 1 connector

### Circuit Links

Description	Link	Additional Information
A	010205	12V+ from the starter battery
B	010107	12V+ from the main systems battery

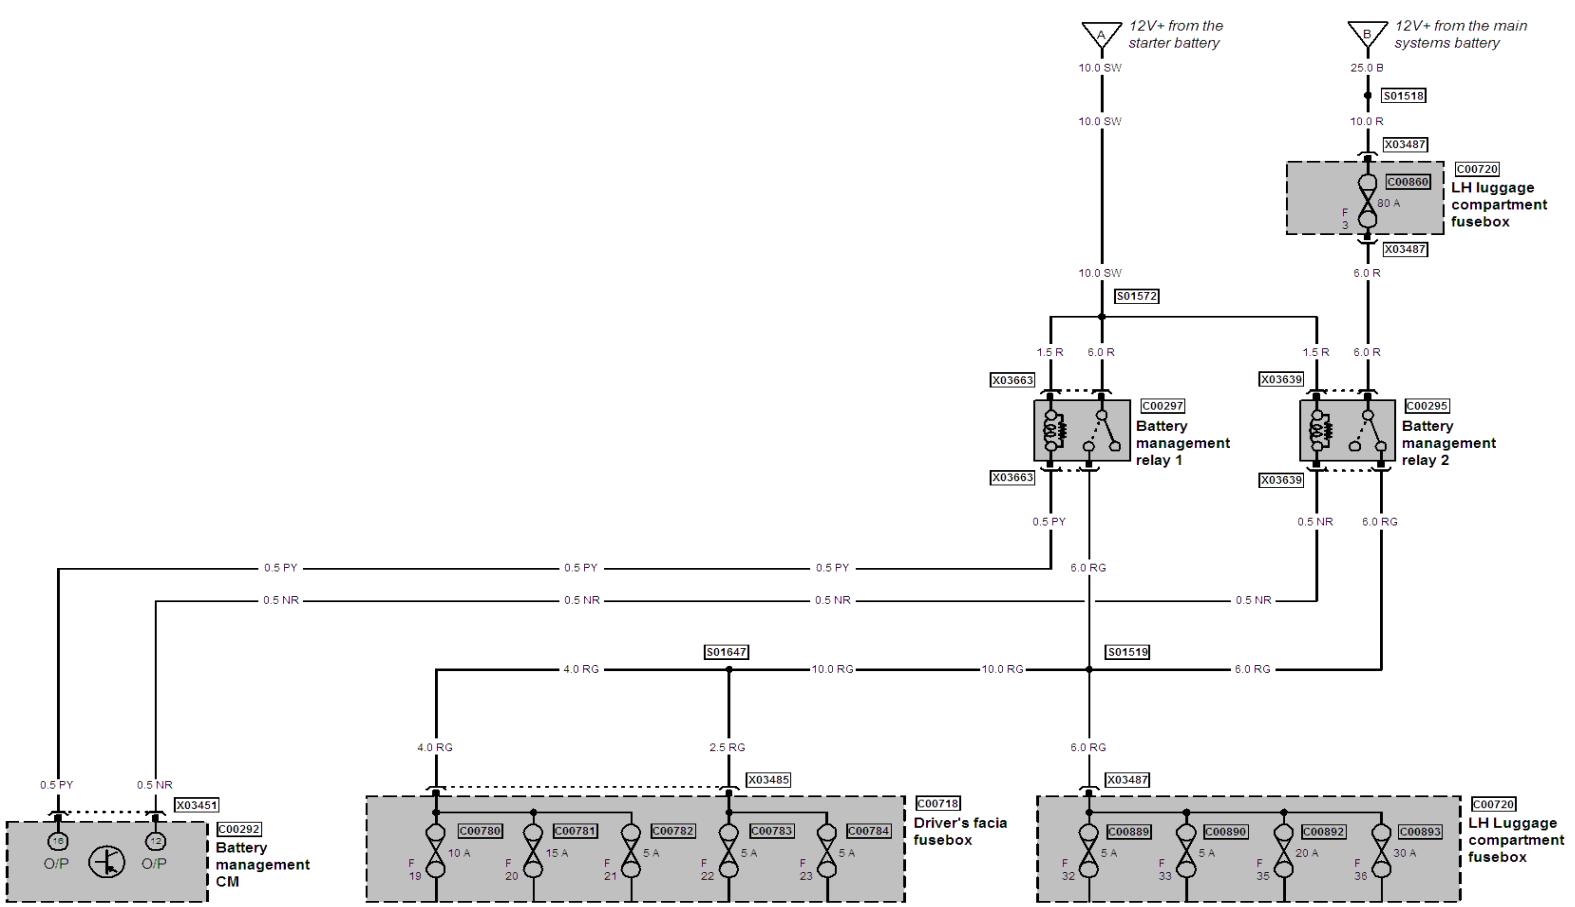


## Electrical Circuit: 01 06 15: Driver's facia fuses F19 to F23 and luggage compartment fuses F32, F33, F35 and F36 LHD (from VIN 63288)

No	Description
C00292	Battery management control module [J367]
C00295	Battery management relay 2 [J579]
C00297	Battery management relay 1 [J580]
C00718	Driver's facia fusebox
C00720	Left-hand luggage compartment fusebox
C00780	Fuse F19, 10 amp - driver's facia fusebox
C00781	Fuse F20, spare/15 amp - driver's facia fusebox
C00782	Fuse F21, spare/5 amp - driver's facia fusebox
C00783	Fuse F22, 5 amp - driver's facia fusebox
C00784	Fuse F23, 5 amp - driver's facia fusebox
C00860	Fuse F3, 80 amp - LH luggage compartment fusebox
C00889	Fuse F32, 5 amp - LH luggage compartment fusebox
C00890	Fuse F33, 5 amp - LH luggage compartment fusebox
C00892	Fuse F35, 20 amp - LH luggage compartment fusebox
C00893	Fuse F36, 30 amp - LH luggage compartment fusebox
S01518	Splice - left-hand drive main body loom
S01519	Splice - Red/green - left-hand drive main body loom
S01572	Splice - left-hand drive main body loom
S01647	Splice - Red/green - left-hand drive main body loom
X03451	Battery management control module connector 18-way
X03485	Driver's facia fusebox connector
X03487	Left-hand luggage compartment fusebox connector
X03639	Battery management relay 2 connector
X03663	Battery management relay 1 connector

### Circuit Links

Description	Link	Additional Information
B	010125	12V+ from the main systems battery
A	010217	12V+ from the starter battery

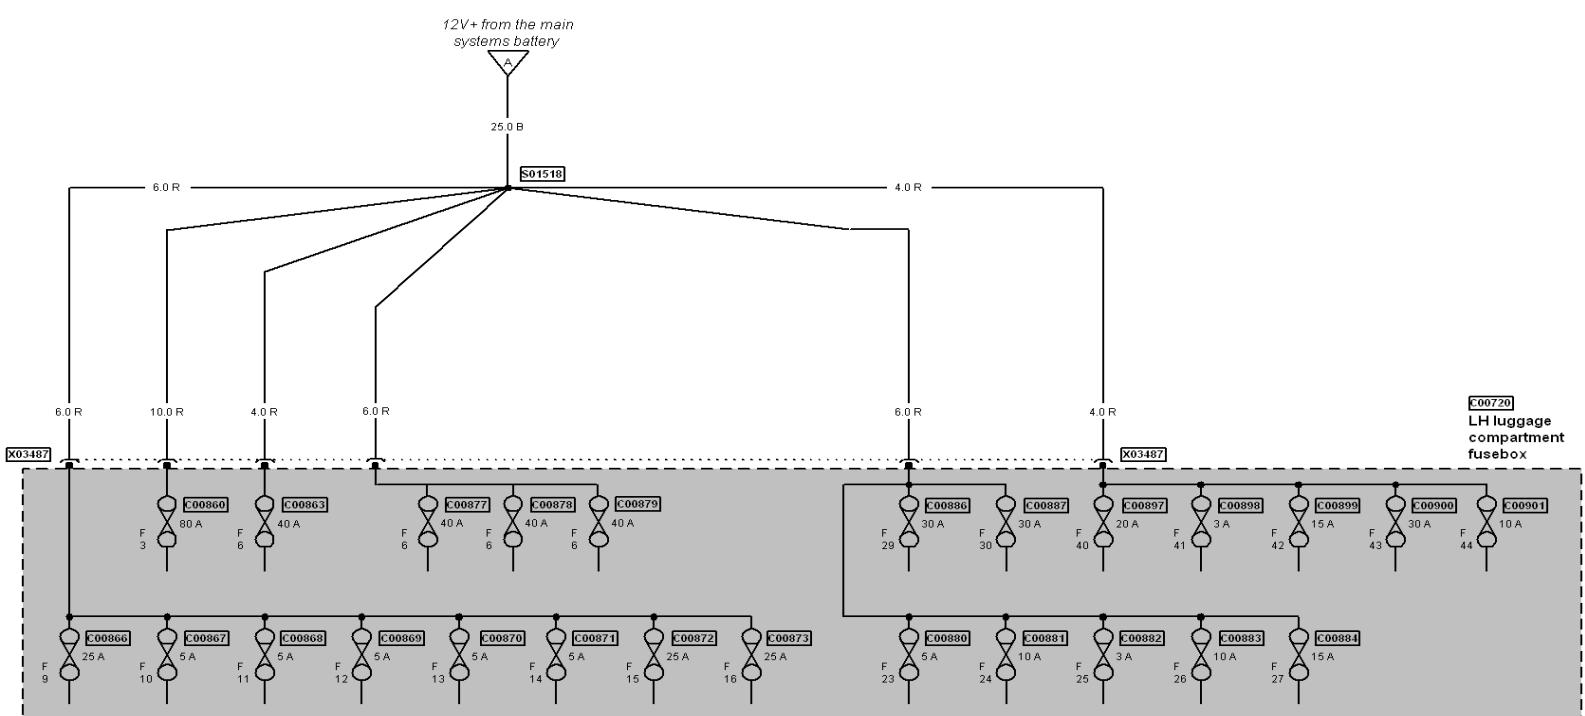


## Electrical Circuit: 01 07 21: Luggage compartment fuses F3, F6, F9 to F16, F23, F24, F26 to F30, F40 to F44 LHD (prior to VIN 63288)

No	Description
C00720	Left-hand luggage compartment fusebox
C00860	Fuse F3, 80 amp - LH luggage compartment fusebox
C00863	Fuse F6, 40 amp - LH luggage compartment fusebox
C00866	Fuse F9, spare/5/25/30 amp - LH luggage compartment fusebox
C00867	Fuse F10, 5 amp - LH luggage compartment fusebox
C00868	Fuse F11, 5 amp - LH luggage compartment fusebox
C00869	Fuse F12, 5 amp - LH luggage compartment fusebox
C00870	Fuse F13, spare/5 amp - LH luggage compartment fusebox
C00871	Fuse F14, 5 amp - LH luggage compartment fusebox
C00872	Fuse F15, 20/25 amp - LH luggage compartment fusebox
C00873	Fuse F16, 25 amp - LH luggage compartment fusebox
C00877	Fuse F20, spare/20 amp - LH luggage compartment fusebox
C00878	Fuse F21, spare/20 amp - LH luggage compartment fusebox
C00879	Fuse F22, spare/20 amp - LH luggage compartment fusebox
C00880	Fuse F23, 5 amp - LH luggage compartment fusebox
C00881	Fuse F24, 10 amp - LH luggage compartment fusebox
C00882	Fuse F25, 3 amp - LH luggage compartment fusebox
C00883	Fuse F26, 10 amp - LH luggage compartment fusebox
C00884	Fuse F27, 15/30 amp - LH luggage compartment fusebox
C00886	Fuse F29, 30 amp - LH luggage compartment fusebox
C00887	Fuse F30, 30 amp - LH luggage compartment fusebox
C00897	Fuse F40, spare/20 amp - LH luggage compartment fusebox
C00898	Fuse F41, 3/5 amp - LH luggage compartment fusebox
C00899	Fuse F42, 15 amp - LH luggage compartment fusebox
C00900	Fuse F43, spare/30 amp - LH luggage compartment fusebox
C00901	Fuse F44, 10 amp - LH luggage compartment fusebox
S01518	Splice - left-hand drive main body loom
X03487	Left-hand luggage compartment fusebox connector

### Circuit Links

Description	Link	Additional Information
A	010119	12V+ from the main systems battery

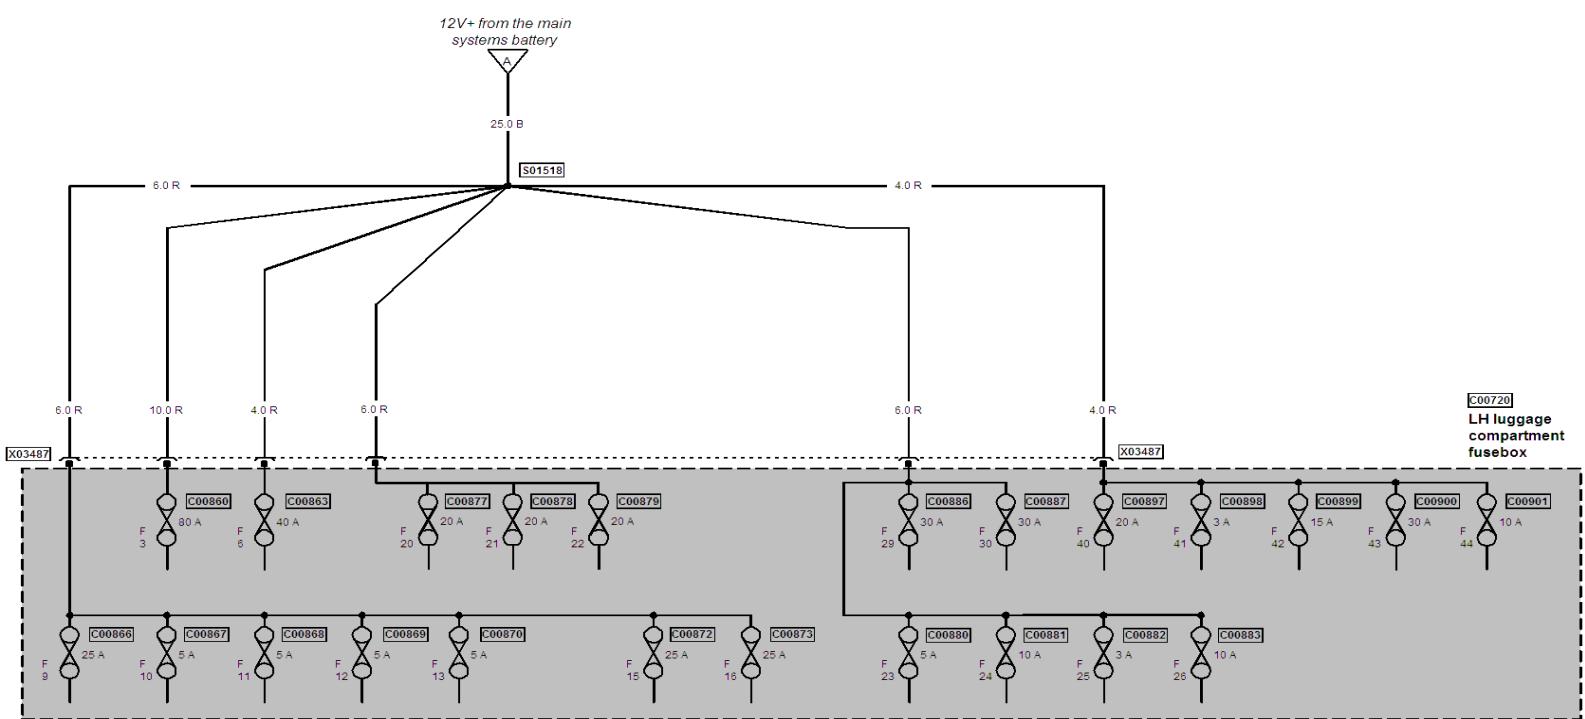


## Electrical Circuit: 01 07 27: Luggage compartment fuses F3, F6, F9 to F16, F23, F24, F26 to F30, F40 to F44 LHD (from VIN 63288)

No	Description
C00720	Left-hand luggage compartment fusebox
C00860	Fuse F3, 80 amp - LH luggage compartment fusebox
C00863	Fuse F6, 40 amp - LH luggage compartment fusebox
C00866	Fuse F9, spare/5/25/30 amp - LH luggage compartment fusebox
C00867	Fuse F10, 5 amp - LH luggage compartment fusebox
C00868	Fuse F11, 5 amp - LH luggage compartment fusebox
C00869	Fuse F12, 5 amp - LH luggage compartment fusebox
C00870	Fuse F13, spare/5 amp - LH luggage compartment fusebox
C00872	Fuse F15, 20/25 amp - LH luggage compartment fusebox
C00873	Fuse F16, 25 amp - LH luggage compartment fusebox
C00877	Fuse F20, spare/20 amp - LH luggage compartment fusebox
C00878	Fuse F21, spare/20 amp - LH luggage compartment fusebox
C00879	Fuse F22, spare/20 amp - LH luggage compartment fusebox
C00880	Fuse F23, 5 amp - LH luggage compartment fusebox
C00881	Fuse F24, 10 amp - LH luggage compartment fusebox
C00882	Fuse F25, 3 amp - LH luggage compartment fusebox
C00883	Fuse F26, 10 amp - LH luggage compartment fusebox
C00886	Fuse F29, 30 amp - LH luggage compartment fusebox
C00887	Fuse F30, 30 amp - LH luggage compartment fusebox
C00897	Fuse F40, spare/20 amp - LH luggage compartment fusebox
C00898	Fuse F41, 3/5 amp - LH luggage compartment fusebox
C00899	Fuse F42, 15 amp - LH luggage compartment fusebox
C00900	Fuse F43, spare/30 amp - LH luggage compartment fusebox
C00901	Fuse F44, 10 amp - LH luggage compartment fusebox
S01518	Splice - left-hand drive main body loom
X03487	Left-hand luggage compartment fusebox connector

### Circuit Links

Description	Link	Additional Information
A	010125	12V+ from the main systems battery

12V+ from the engine  
management accessories relay.  
See the power distribution circuits

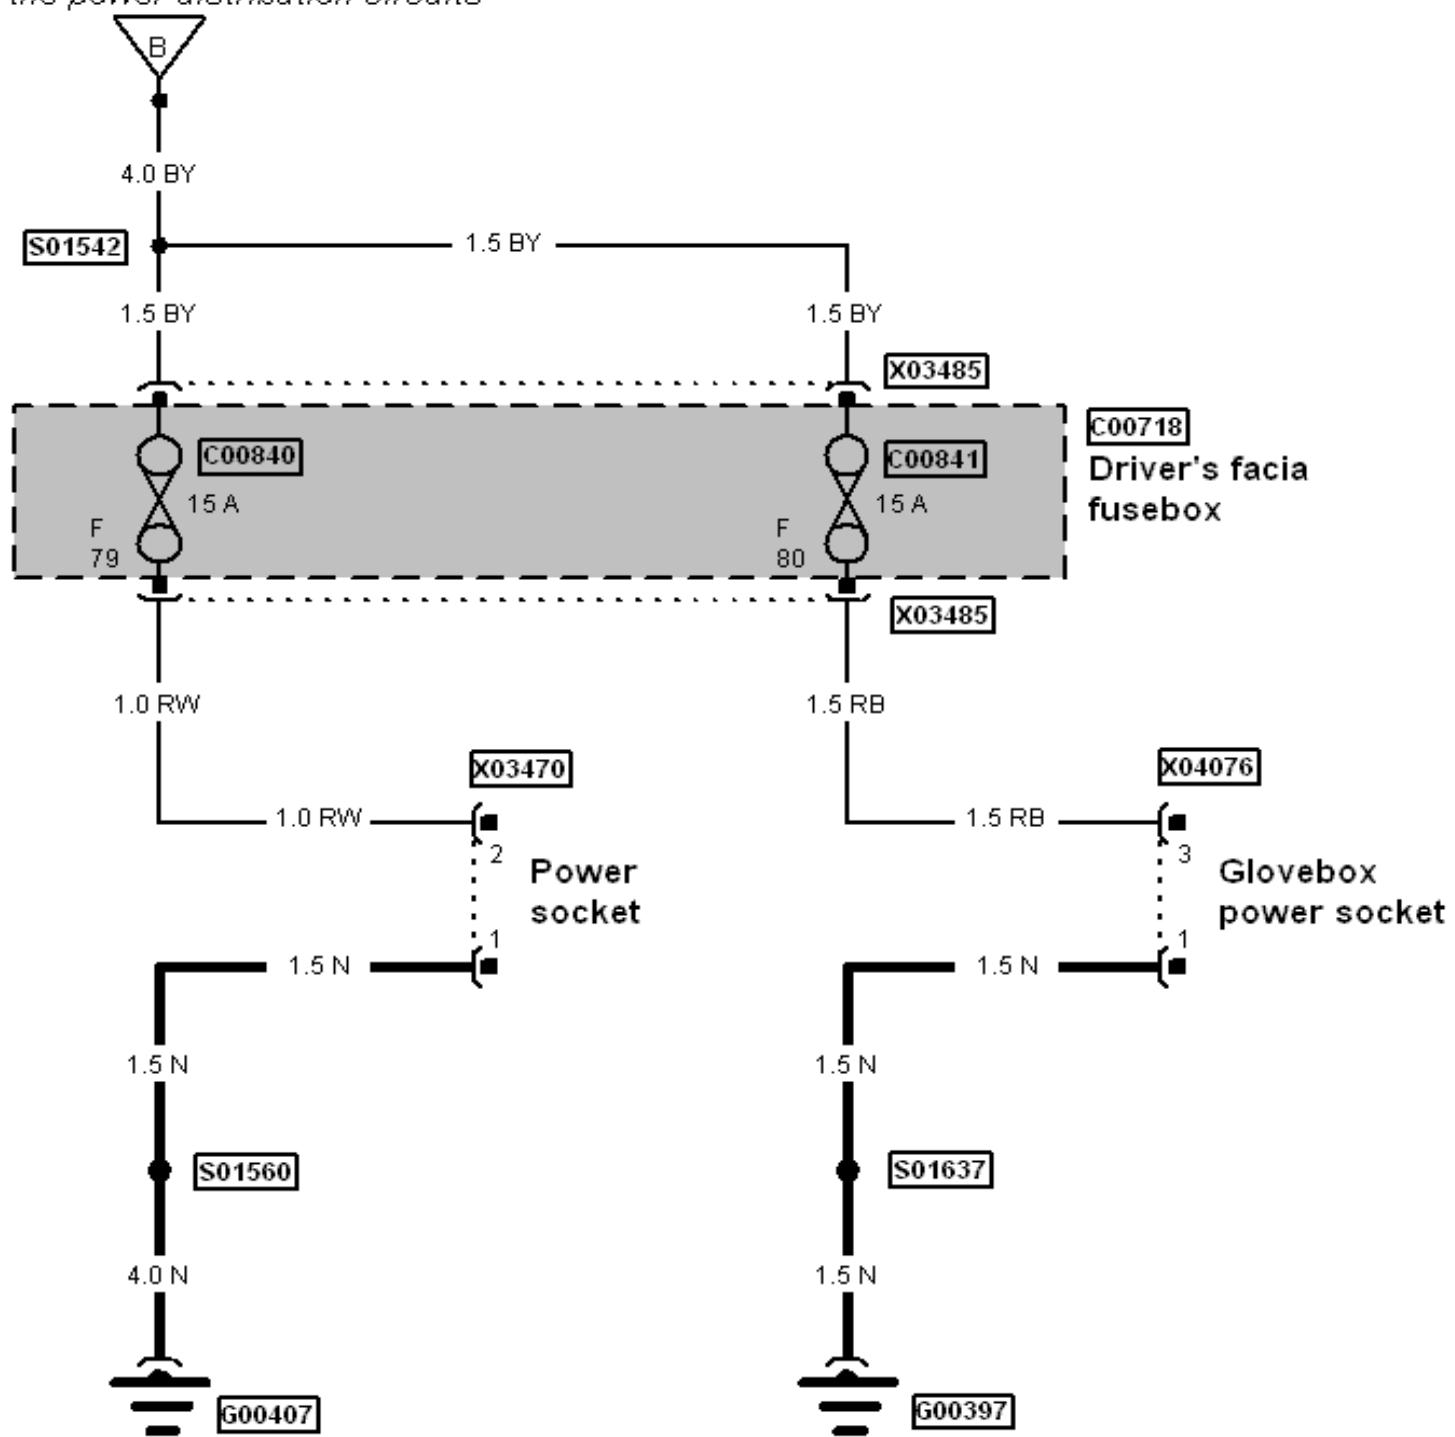

## Electrical Circuit: 01 10 15: Power sockets LHD (prior to VIN 63288)


No	Description
C00718	Driver's facia fusebox
C00840	Fuse F79, spare/15 amp - driver's facia fusebox
C00841	Fuse F80, spare/15 amp - driver's facia fusebox
G00397	Ground point connector
G00407	Ground point connector
S01542	Splice - Black/yellow - left-hand drive main body loom
S01560	Splice - Brown - left-hand drive main body loom
S01637	Splice - Brown - left-hand drive main body loom
X03470	Power socket connector 3-way
X03485	Driver's facia fusebox connector
X04076	Glovebox power socket connector 3 way

### Circuit Links

Description	Link	Additional Information
B	010111	12V+ from the engine management accessories relay. See the power distribution circuits

12V+ from the main system battery. See the power distribution circuits

*12V+ from the engine management accessories relay. See the power distribution circuits*

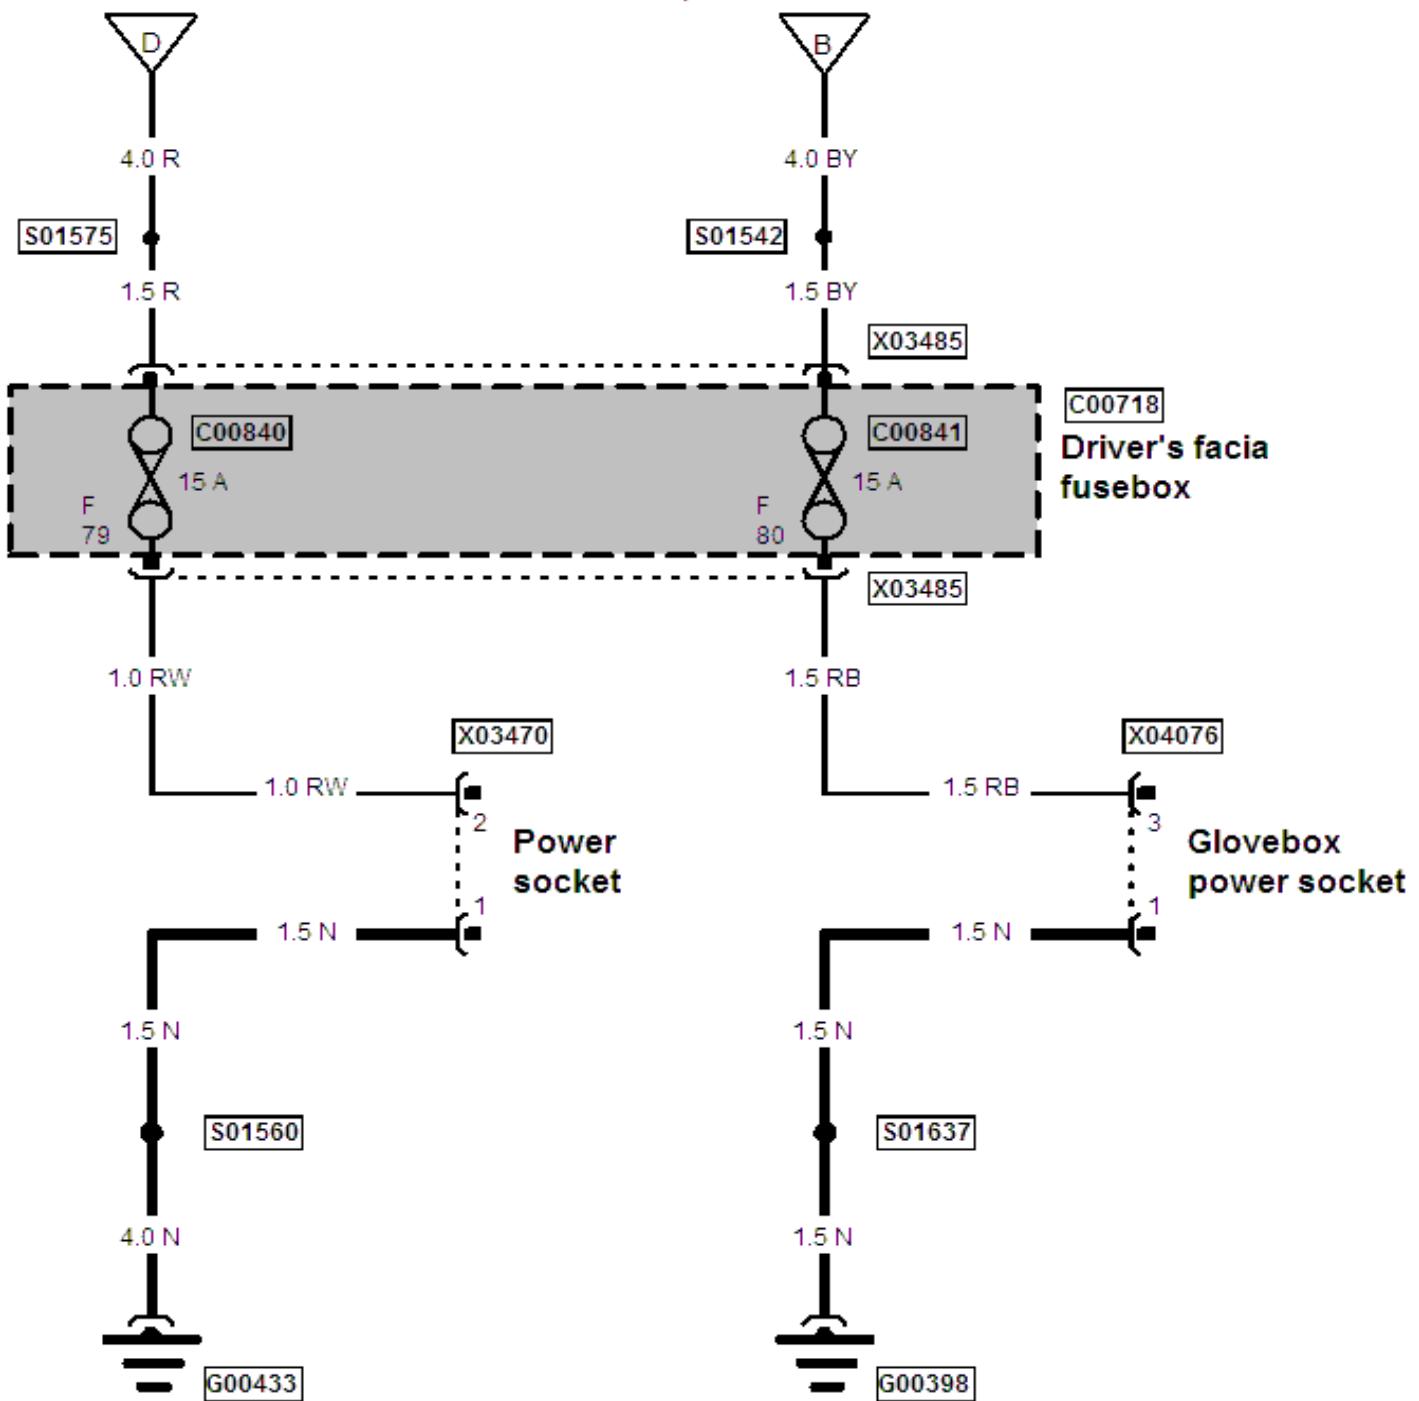

## Electrical Circuit: 01 10 21: Power sockets LHD (from VIN 63288)


No	Description
C00718	Driver's facia fusebox
C00840	Fuse F79, spare/15 amp - driver's facia fusebox
C00841	Fuse F80, spare/15 amp - driver's facia fusebox
G00398	Ground point connector
G00433	Ground point connector
S01542	Splice - Black/yellow - left-hand drive main body loom
S01560	Splice - Brown - left-hand drive main body loom
S01575	Splice - Red - left-hand drive main body loom
S01637	Splice - Brown - left-hand drive main body loom
X03470	Power socket connector 3-way
X03485	Driver's facia fusebox connector
X04076	Glovebox power socket connector 3 way

### Circuit Links

Description	Link	Additional Information
D	<a href="#">010125</a>	12V+ from the main system battery. See the power distribution circuits.
B	<a href="#">010425</a>	12V+ from the engine management accessories relay. See the power distribution circuits.

12 V+ from the main systems battery. See the power distribution circuits

12 V+ ignition. See the power distribution circuits

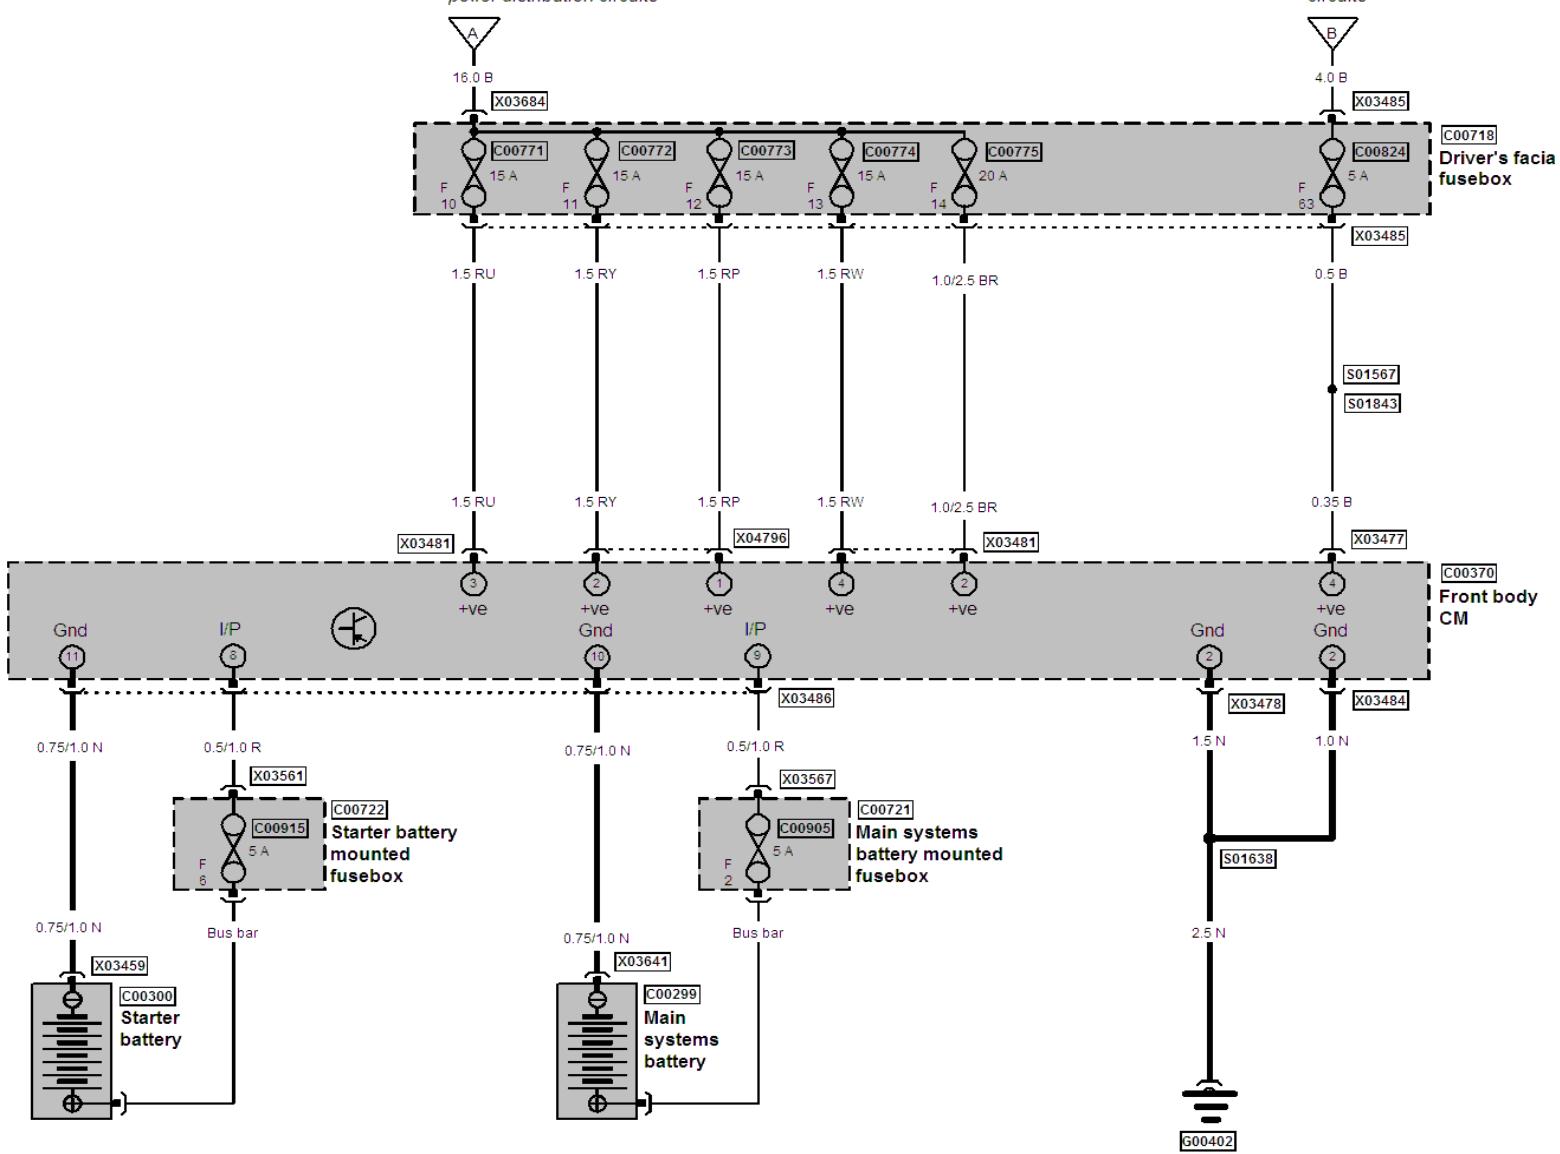


## Electrical Circuit: 01 20 11: Front body control module power supply, grounds and battery voltage sensing LHD (prior to VIN 63288)

No	Description
C00299	Main systems battery [A]
C00300	Starter battery [A1]
C00370	Front body control module [J519]
C00718	Driver's facia fusebox
C00721	Main systems battery mounted fusebox
C00722	Starter battery mounted fusebox
C00771	Fuse F10, 15 amp - driver's facia fusebox
C00772	Fuse F11, 15 amp - driver's facia fusebox
C00773	Fuse F12, 15 amp - driver's facia fusebox
C00774	Fuse F13, 15 amp - driver's facia fusebox
C00775	Fuse F14, 20 amp - driver's facia fusebox
C00824	Fuse F63, 5 amp - driver's facia fusebox
C00905	Fuse F2, 5 amp - main systems battery fusebox
C00915	Fuse F6, 5 amp - starter battery mounted fusebox
G00402	Ground point connector
S01567	Splice - Black - left-hand drive main body loom
S01638	Splice - Brown - left-hand drive main body loom
S01843	Splice - Black - left-hand drive main body loom
X03459	Starter battery negative connector
X03477	Front body control module connector 26-way
X03478	Front body control module connector 6-way
X03481	Front body control module connector 4-way
X03484	Front body control module connector 6-way
X03485	Driver's facia fusebox connector
X03486	Front body control module connector 16-way
X03561	Starter battery voltage fuse connector 3-way
X03567	Battery voltage sensing connector
X03641	Main systems battery negative connector
X03684	Driver's facia fusebox connector
X04796	Body control module connector 2-way

### Circuit Links

Description	Link	Additional Information
A	010509	12 V+ from the main systems battery. See the power distribution circuits
B	010307	12 V+ ignition. See the power distribution circuits

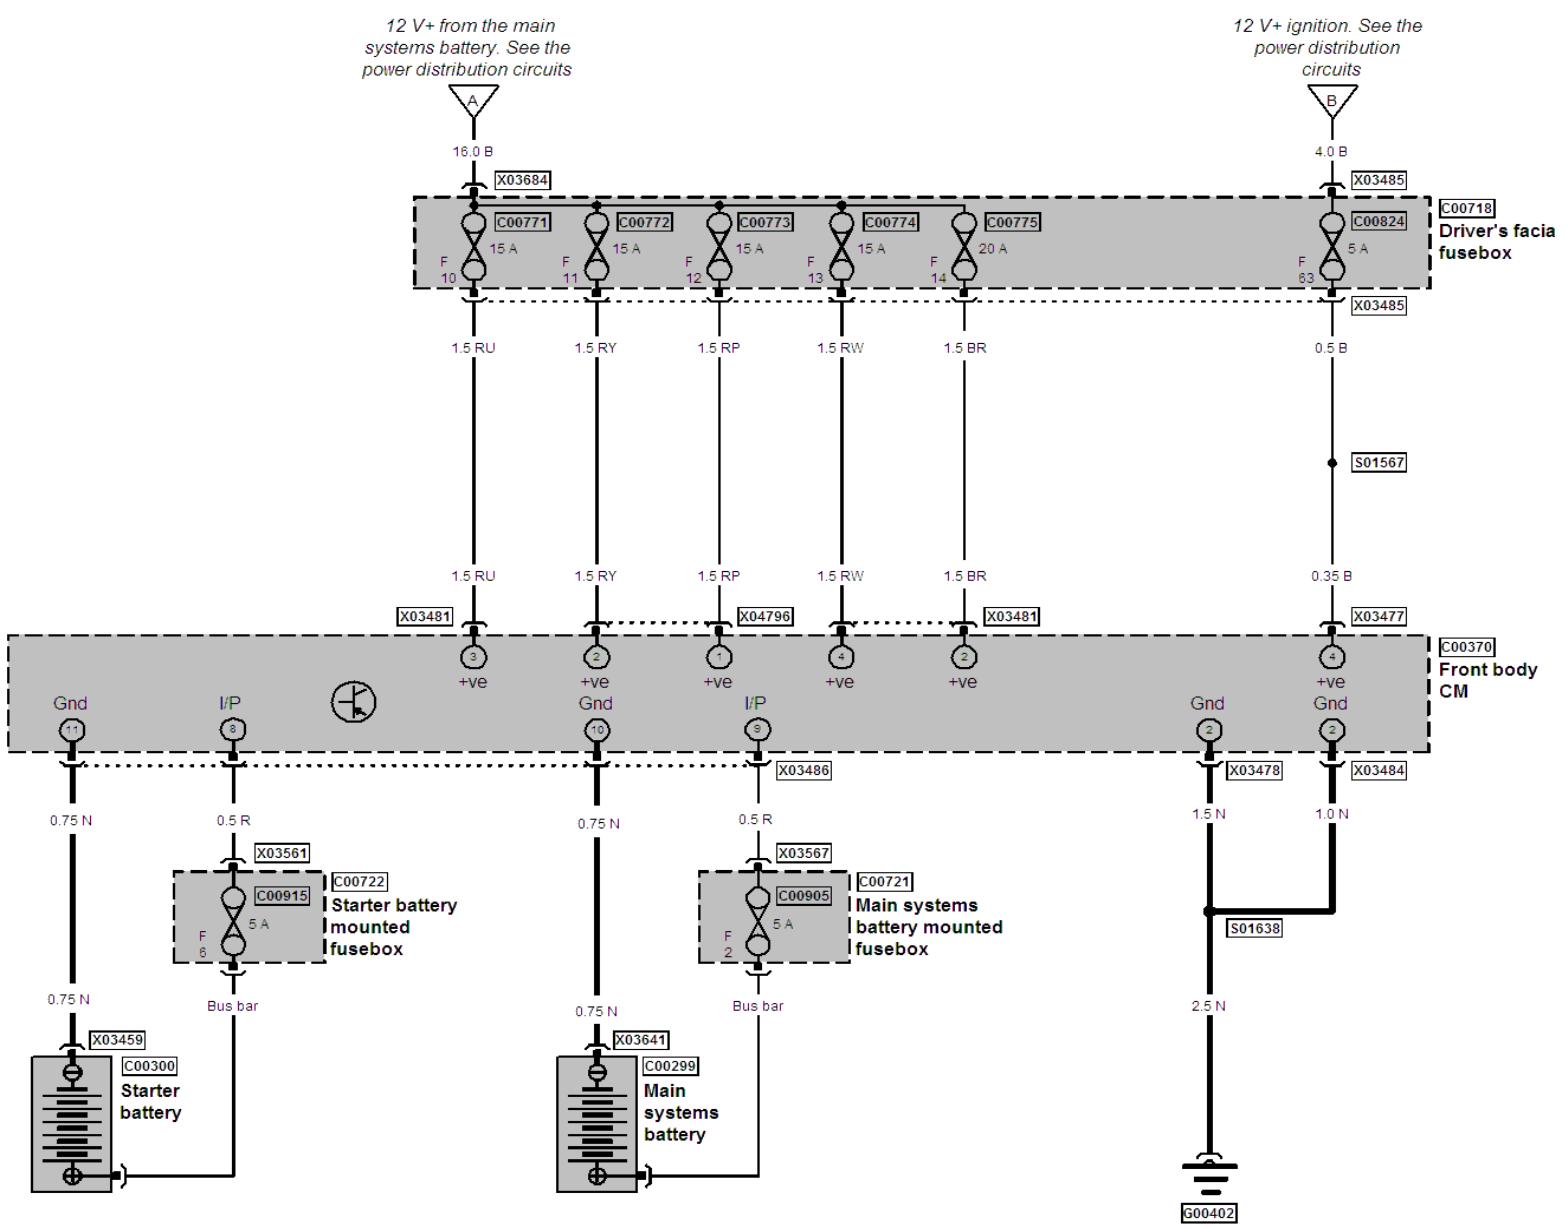


## Electrical Circuit: 01 20 17: Front body control module power supply, grounds and battery voltage sensing LHD (from VIN 63288)

No	Description
C00299	Main systems battery [A]
C00300	Starter battery [A1]
C00370	Front body control module [J519]
C00718	Driver's facia fusebox
C00721	Main systems battery mounted fusebox
C00722	Starter battery mounted fusebox
C00771	Fuse F10, 15 amp - driver's facia fusebox
C00772	Fuse F11, 15 amp - driver's facia fusebox
C00773	Fuse F12, 15 amp - driver's facia fusebox
C00774	Fuse F13, 15 amp - driver's facia fusebox
C00775	Fuse F14, 20 amp - driver's facia fusebox
C00824	Fuse F63, 5 amp - driver's facia fusebox
C00905	Fuse F2, 5 amp - main systems battery fusebox
C00915	Fuse F6, 5 amp - starter battery mounted fusebox
G00402	Ground point connector
S01567	Splice - Black - left-hand drive main body loom
S01638	Splice - Brown - left-hand drive main body loom
X03459	Starter battery negative connector
X03477	Front body control module connector 26-way
X03478	Front body control module connector 6-way
X03481	Front body control module connector 4-way
X03484	Front body control module connector 6-way
X03485	Driver's facia fusebox connector
X03486	Front body control module connector 16-way
X03561	Starter battery voltage fuse connector 3-way
X03567	Battery voltage sensing connector
X03641	Main systems battery negative connector
X03684	Driver's facia fusebox connector
X04796	Body control module connector 2-way

### Circuit Links

Description	Link	Additional Information
B	<a href="#">010329</a>	12V+ ignition. See the power distribution circuits.
A	<a href="#">010509</a>	12V+ from the main systems battery. See the power distribution circuits.

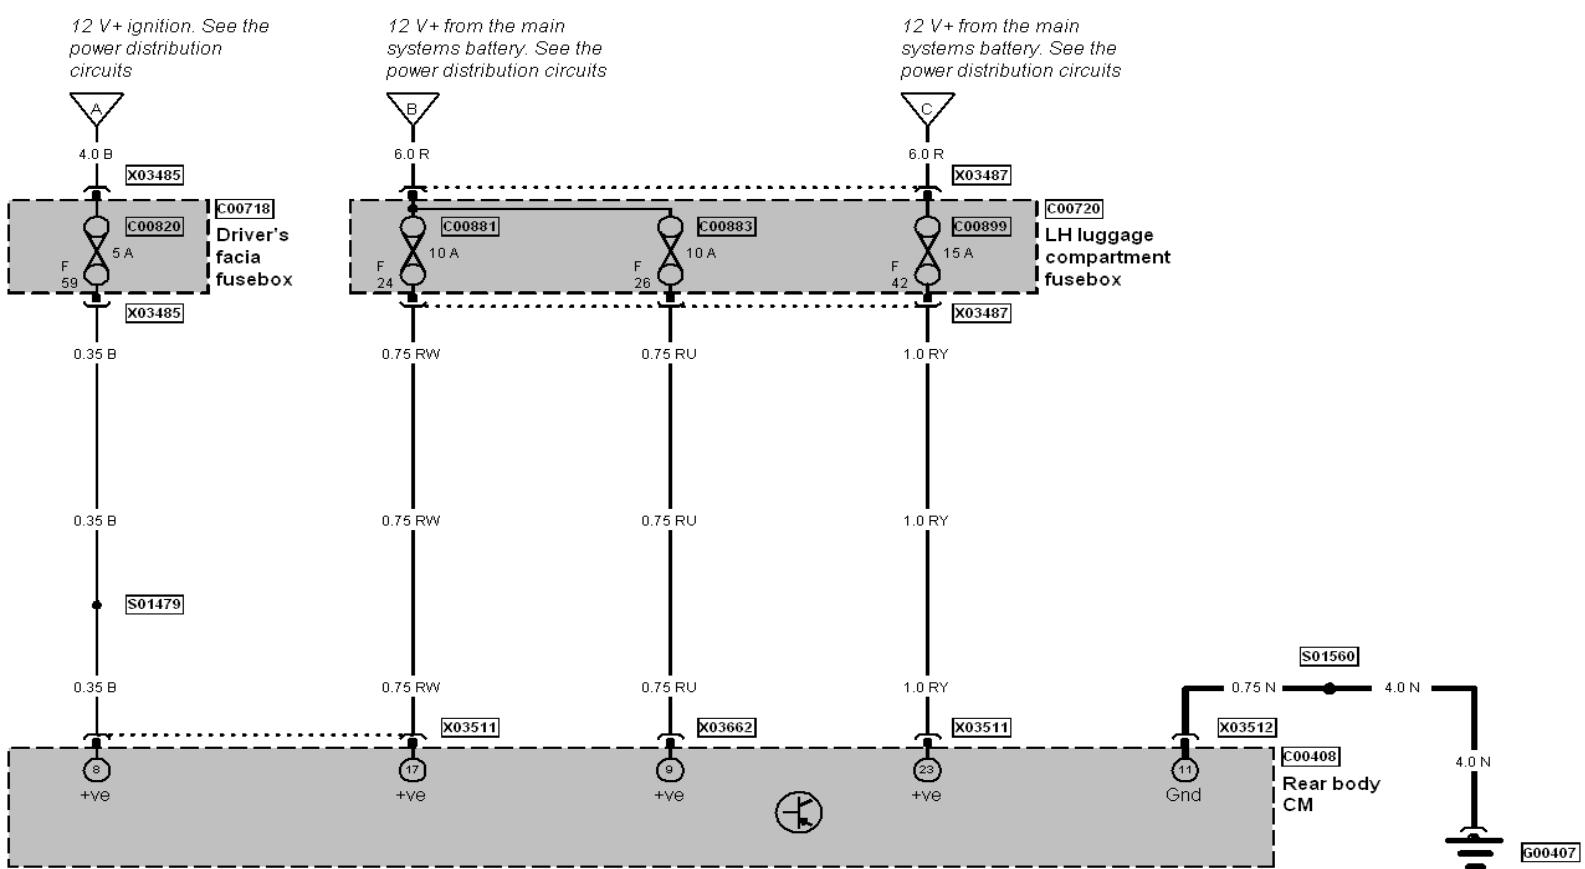


## Electrical Circuit: 01 30 07: Rear body control module power supply and grounds LHD (prior to VIN 63288)

No	Description
C00408	Rear body control module [J393]
C00718	Driver's facia fusebox
C00720	Left-hand luggage compartment fusebox
C00820	Fuse F59, 5 amp - driver's facia fusebox
C00881	Fuse F24, 10 amp - LH luggage compartment fusebox
C00883	Fuse F26, 10 amp - LH luggage compartment fusebox
C00899	Fuse F42, 15 amp - LH luggage compartment fusebox
G00407	Ground point connector
S01479	Splice - Black - left-hand drive main body loom
S01560	Splice - Brown - left-hand drive main body loom
X03485	Driver's facia fusebox connector
X03487	Left-hand luggage compartment fusebox connector
X03511	Rear body control module connector 23-way
X03512	Rear body control module connector 12-way
X03662	Rear body control module connector 12-way

### Circuit Links

Description	Link	Additional Information
A	010311	12 V+ ignition. See the power distribution circuits
B	010713	12 V+ ignition. See the power distribution circuits
C	010713	12 V+ ignition. See the power distribution circuits

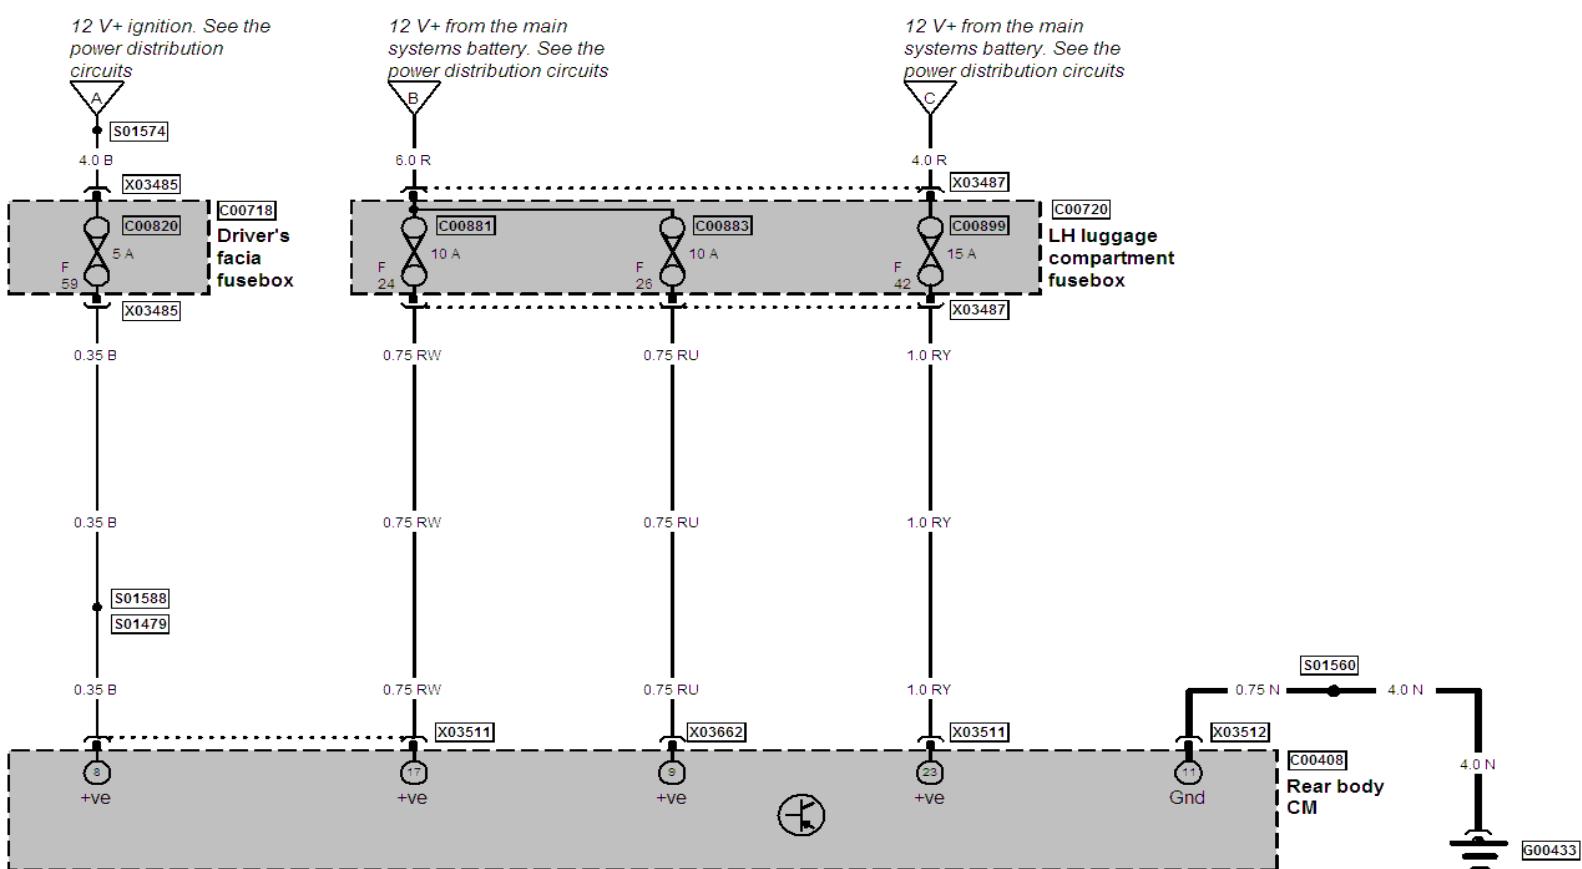

## Electrical Circuit: 01 30 15: Rear body control module power supply and grounds LHD (from VIN 63288)

No	Description
C00408	Rear body control module [J393]
C00718	Driver's facia fusebox
C00720	Left-hand luggage compartment fusebox
C00820	Fuse F59, 5 amp - driver's facia fusebox
C00881	Fuse F24, 10 amp - LH luggage compartment fusebox
C00883	Fuse F26, 10 amp - LH luggage compartment fusebox
C00899	Fuse F42, 15 amp - LH luggage compartment fusebox
G00433	Ground point connector
S01479	Splice - Black - left-hand drive main body loom
S01560	Splice - Brown - left-hand drive main body loom
S01574	Splice - Black - left-hand drive main body loom
S01588	Splice - Black - left-hand drive main body loom
X03485	Driver's facia fusebox connector
X03487	Left-hand luggage compartment fusebox connector
X03511	Rear body control module connector 23-way
X03512	Rear body control module connector 12-way
X03662	Rear body control module connector 12-way

### Circuit Links

Description	Link	Additional Information
A	<a href="#">010329</a>	12V+ ignition. See the power distribution circuits.
B	<a href="#">010727</a>	12V+ from the main systems battery. See the power distribution circuits.
C	<a href="#">010727</a>	12V+ from the main systems battery. See the power distribution circuits.