



Electrical Circuit: 12 01 05: Starter system LHD

No	Description
C00056	Battery isolation igniter [N253]
C00277	Keyless entry/start control module [J518]
C00292	Battery management control module [J367]
C00293	Starter relay [J682]
C00294	Battery parallel circuit relay [J581]
C00301	Starter [B]
C00511	Engine management control module - bank 1 [J623]
C00720	Left-hand luggage compartment fusebox
C00721	Main systems battery mounted fusebox
C00722	Starter battery mounted fusebox
C00889	Fuse F32, 5 amp - LH luggage compartment fusebox
C00909	Fuse F6, 300 amp - main systems battery fusebox
C00911	Fuse F2, 40 amp - starter battery mounted fusebox
G00300	Ground point connector
S01639	Splice - Black/red - left-hand drive main body loom
X01099	Left-hand drive main body loom to engine link loom plug and socket
X01206	Starter connector
X03451	Battery management control module connector 18-way
X03487	Left-hand luggage compartment fusebox connector
X03500	Keyless entry/start control module connector 81-way
X03562	Starter battery mounted fusebox connector
X03617	Engine management control module - bank 1 connector 81-way
X03635	Starter relay connector
X03638	Battery solenoid connector 2-way

Circuit Links

Description	Link	Additional Information
A	010609	12 V+ from the battery management relays. See the power distribution circuits
B	010107	12 V+ from the battery management relays. See the power distribution circuits
C	010205	12 V+ from the starter battery. See the power distribution circuits