


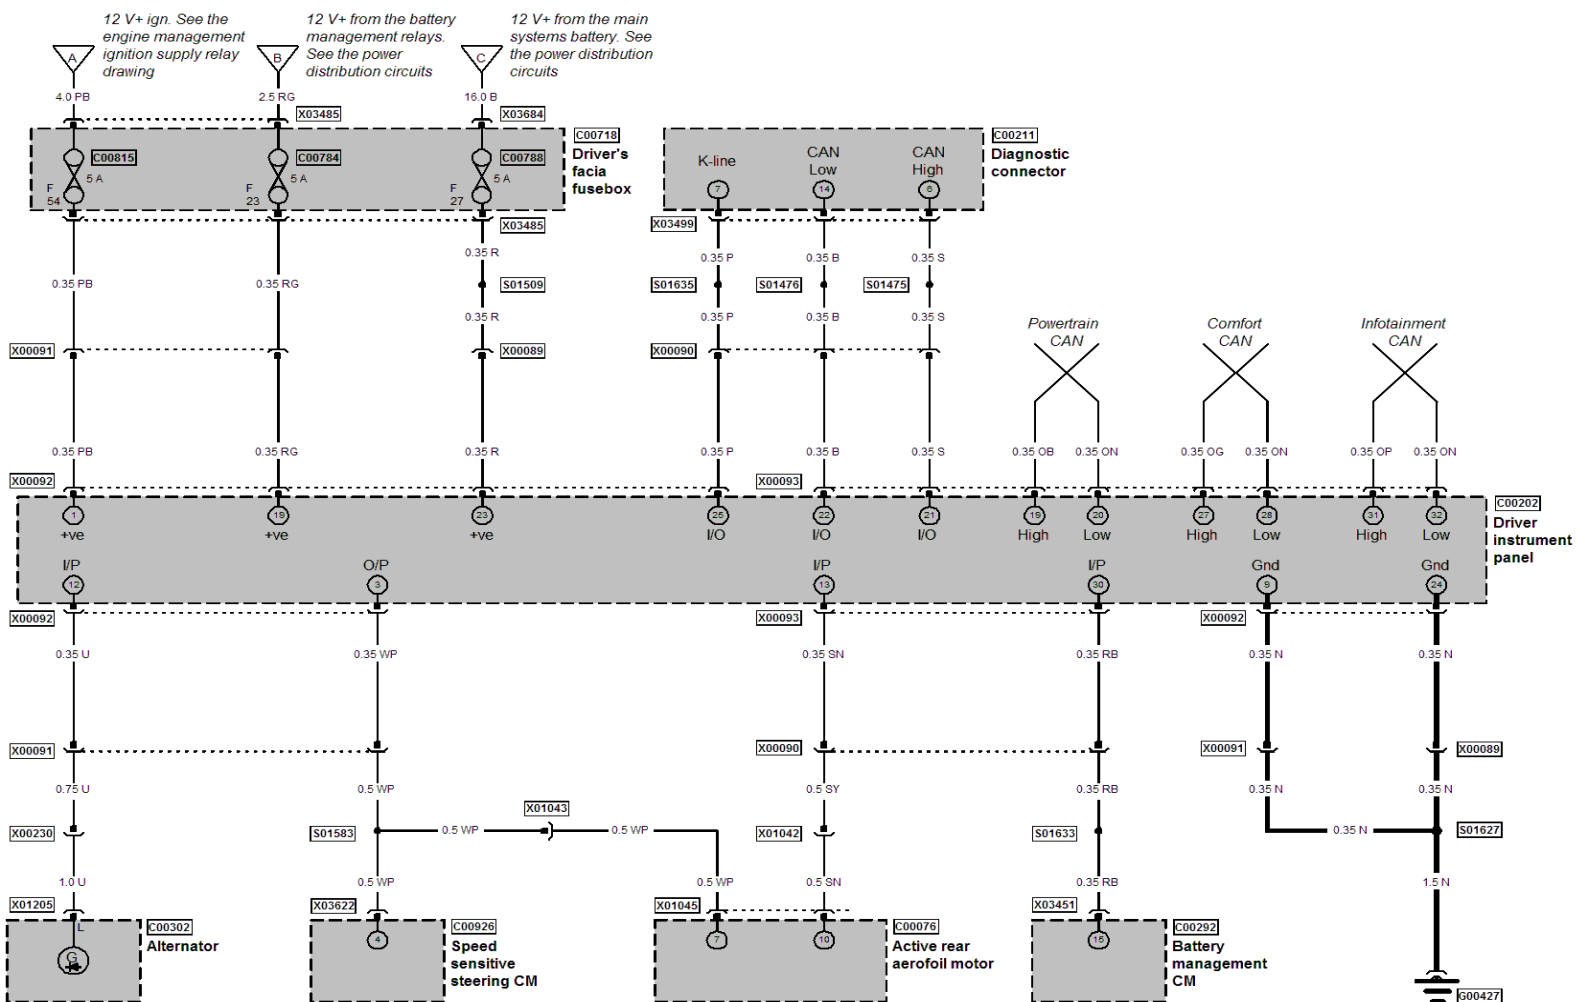


Electrical Circuit: 43 01 13: Driver instrument panel power supply, grounds, diagnostics and control module interfaces (Other than Japan market) LHD

No	Description
C00076	Active rear aerofoil motor [V52]
C00202	Driver instrument panel [J285]
C00211	Diagnostic connector
C00292	Battery management control module [J367]
C00302	Alternator [C]
C00718	Driver's facia fusebox
C00784	Fuse F23, 5 amp - driver's facia fusebox
C00788	Fuse F27, 5 amp - driver's facia fusebox
C00815	Fuse F54, 5 amp - driver's facia fusebox
C00926	Speed sensitive steering control module
G00427	Ground point connector
S01475	Splice - Slate/Green - left-hand drive main body loom
S01476	Splice - Black - left-hand drive main body loom
S01509	Splice - Red - left-hand drive main body loom
S01583	Splice - White/purple - left-hand drive main body loom
S01627	Splice - left-hand drive main body loom
S01633	Splice - Red/black - left-hand drive main body loom
S01635	Splice - Purple - left-hand drive main body loom
X00089	Left-hand drive main body loom to driver instrument panel link loom plug and socket 17-way
X00090	Left-hand drive main body loom to driver instrument panel link loom plug and socket 17-way
X00091	Left-hand drive main body loom to driver instrument panel link loom plug and socket 17-way
X00092	Driver instrument panel connector 32-way
X00093	Driver instrument panel connector 32-way
X00230	Left-hand drive main body loom to engine link loom plug and socket 10-way
X01042	Left-hand main body loom to luggage compartment lid loom plug and socket 5-way
X01043	Left-hand main body loom to luggage compartment lid loom plug and socket 5-way
X01045	Active rear aerofoil control module connector 12-way
X01205	Alternator connector 2-way
X03451	Battery management control module connector 18-way
X03485	Driver's facia fusebox connector
X03499	Diagnostics connector 16-way
X03622	Speed sensitive steering control module connector 9-way
X03684	Driver's facia fusebox connector

Circuit Links

Description	Link	Additional Information
A	100307	12 V+ ign. See the engine management ignition supply relay drawing
B	010609	12 V+ from the battery management relays. See the power distribution circuits
C	010505	12 V+ from the battery management relays. See the power distribution circuits

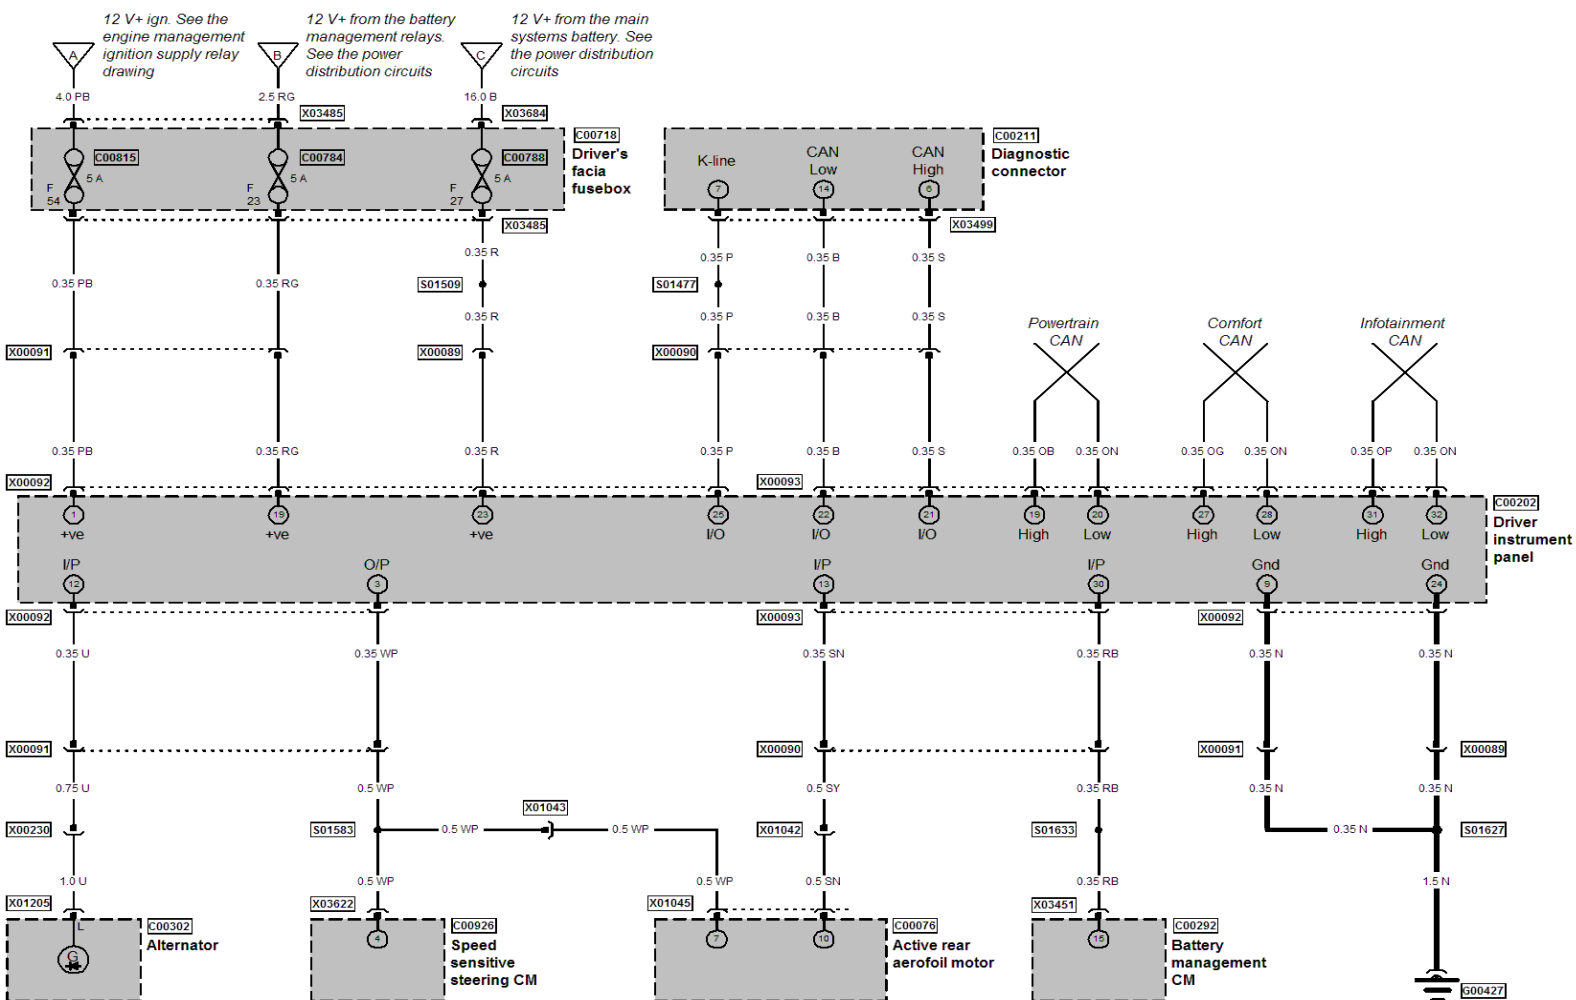


Electrical Circuit: 43 01 15: Driver instrument panel power supply, grounds, diagnostics and control module interfaces (Japan market) LHD

No	Description
C00076	Active rear aerofoil motor [V52]
C00202	Driver instrument panel [J285]
C00211	Diagnostic connector
C00292	Battery management control module [J367]
C00302	Alternator [C]
C00718	Driver's facia fusebox
C00784	Fuse F23, 5 amp - driver's facia fusebox
C00788	Fuse F27, 5 amp - driver's facia fusebox
C00815	Fuse F54, 5 amp - driver's facia fusebox
C00926	Speed sensitive steering control module
G00427	Ground point connector
S01477	Splice - Purple - left-hand drive main body loom
S01509	Splice - Red - left-hand drive main body loom
S01583	Splice - White/purple - left-hand drive main body loom
S01627	Splice - left-hand drive main body loom
S01633	Splice - Red/black - left-hand drive main body loom
X00089	Left-hand drive main body loom to driver instrument panel link loom plug and socket 17-way
X00090	Left-hand drive main body loom to driver instrument panel link loom plug and socket 17-way
X00091	Left-hand drive main body loom to driver instrument panel link loom plug and socket 17-way
X00092	Driver instrument panel connector 32-way
X00093	Driver instrument panel connector 32-way
X00230	Left-hand drive main body loom to engine link loom plug and socket 10-way
X01042	Left-hand main body loom to luggage compartment lid loom plug and socket 5-way
X01043	Left-hand main body loom to luggage compartment lid loom plug and socket 5-way
X01045	Active rear aerofoil control module connector 12-way
X01205	Alternator connector 2-way
X03451	Battery management control module connector 18-way
X03485	Driver's facia fusebox connector
X03499	Diagnostics connector 16-way
X03622	Speed sensitive steering control module connector 9-way
X03684	Driver's facia fusebox connector

Circuit Links

Description	Link	Additional Information
A	100307	12 V+ ign. See the engine management ignition supply relay drawing
B	010609	12 V+ from the battery management relays. See the power distribution circuits
C	010505	12 V+ from the battery management relays. See the power distribution circuits

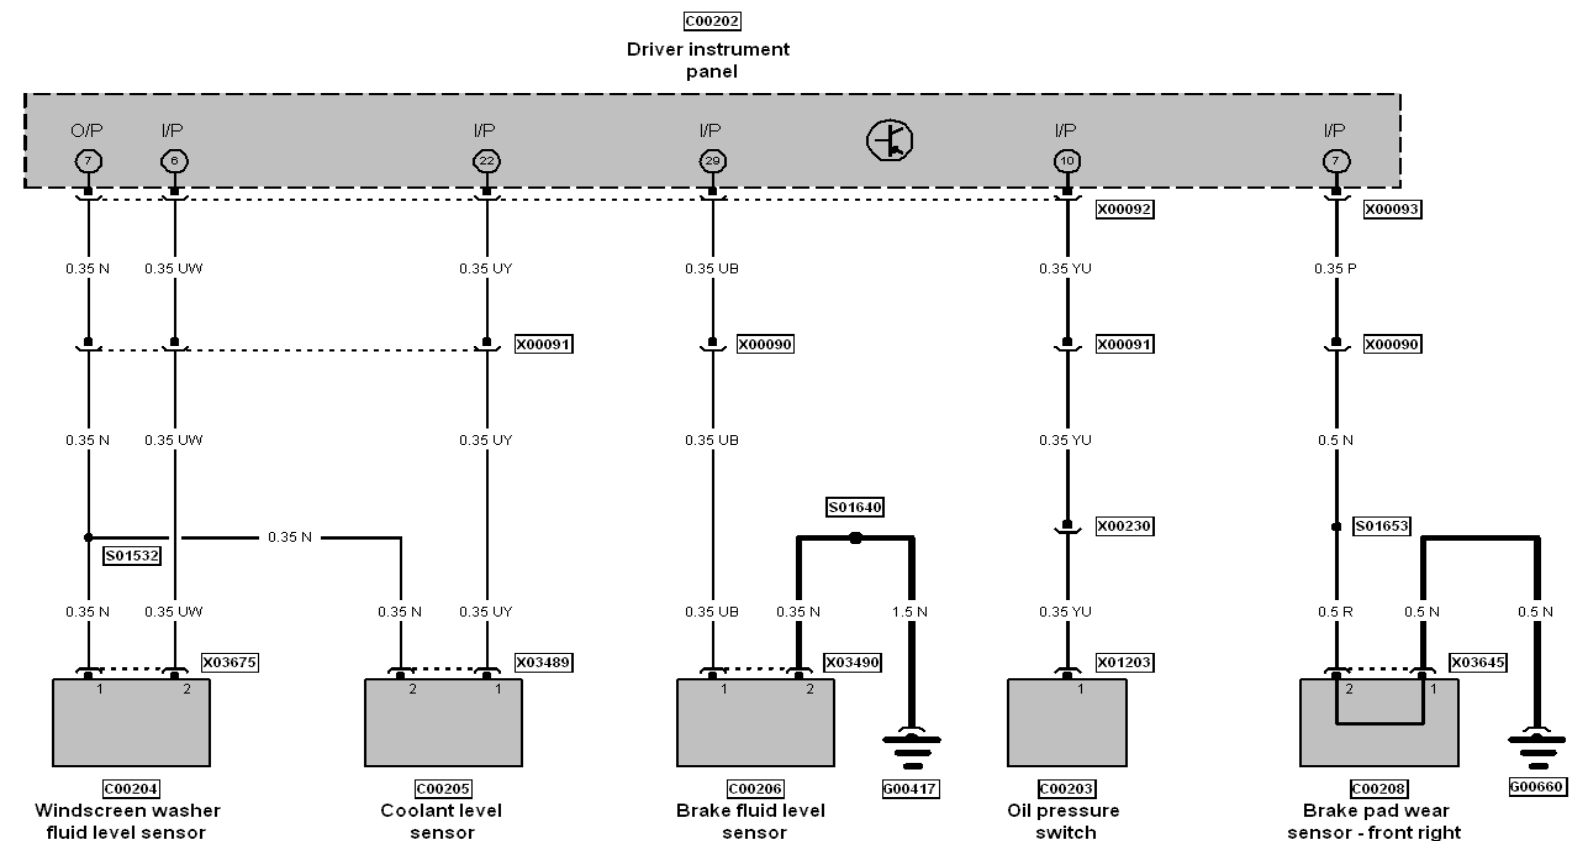


Electrical Circuit: 43 02 09: Windscreen washer fluid level sensor, coolant level sensor, brake fluid level sensor, oil pressure switch and brake pad wear sensors LHD (prior to VIN 63288)

No	Description
C00202	Driver instrument panel [J285]
C00203	Oil pressure switch [F1]
C00204	Windscreen washer fluid level sensor [G33]
C00205	Coolant level sensor [G32]
C00206	Brake fluid level sensor [F34]
C00208	Brake pad wear sensor - front right [G35]
G00417	Ground point connector
G00660	Ground point connector
S01532	Splice - Brown - left-hand drive main body loom
S01640	Splice - Brown - left-hand drive main body loom
S01653	Splice - Red / Brown - left-hand drive main body loom
X00090	Left-hand drive main body loom to driver instrument panel link loom plug and socket 17-way
X00091	Left-hand drive main body loom to driver instrument panel link loom plug and socket 17-way
X00092	Driver instrument panel connector 32-way
X00093	Driver instrument panel connector 32-way
X00230	Left-hand drive main body loom to engine link loom plug and socket 10-way
X01203	Oil pressure sensor connector
X03489	Coolant level sensor connector 2-way
X03490	Brake fluid level sensor connector 2-way
X03645	Brake pad wear sensor - front right connector 2-way
X03675	Windscreen washer fluid level sensor connector 2-way

Circuit Links

Description	Link	Additional Information
-------------	------	------------------------

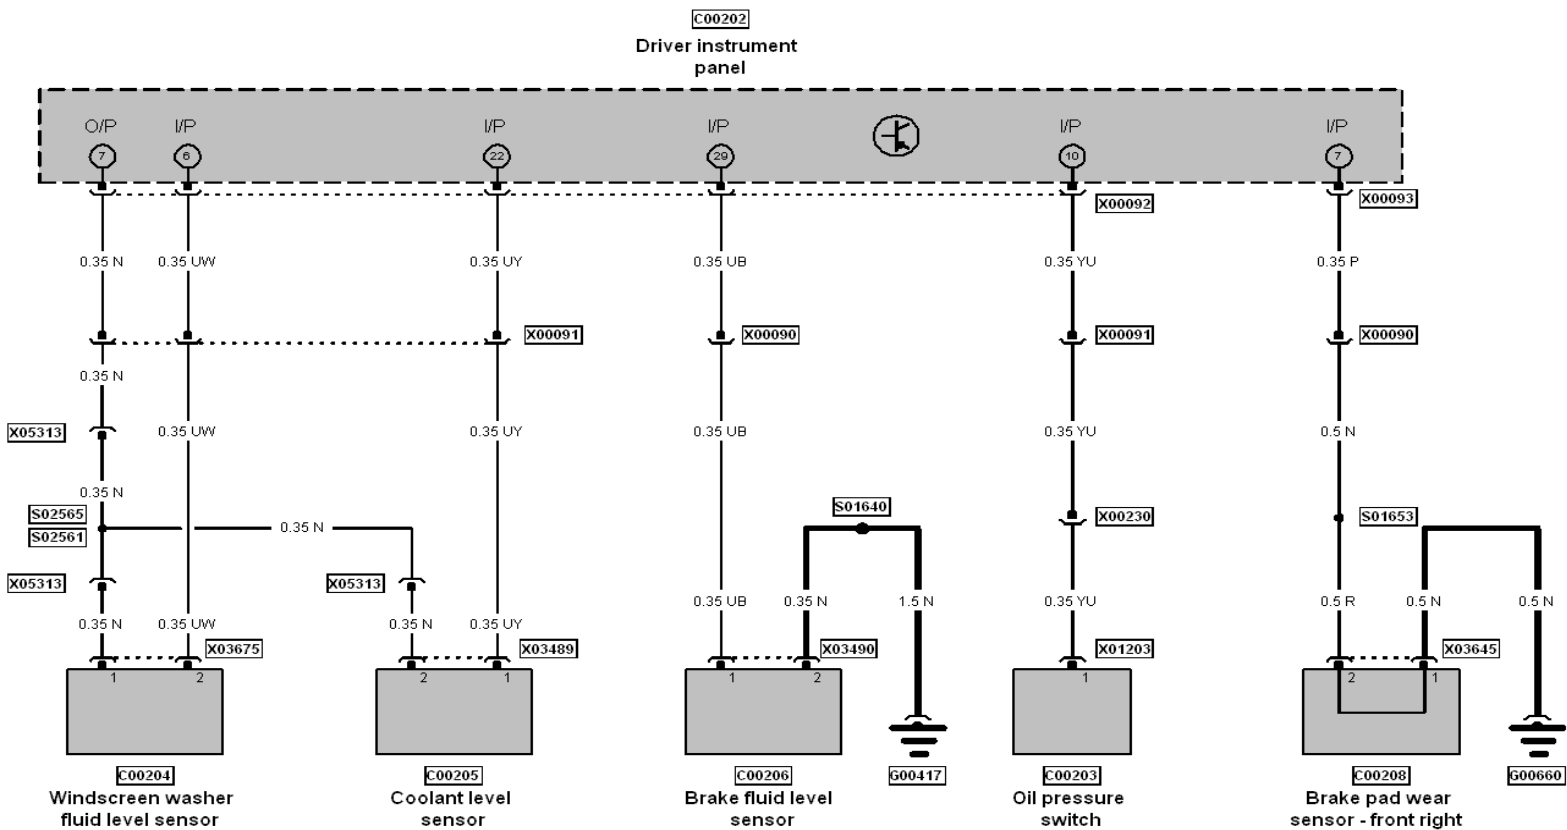


Electrical Circuit: 43 02 15: Windscreen washer fluid level sensor, coolant level sensor, brake fluid level sensor, oil pressure switch and brake pad wear sensors LHD (from VIN 63288)

No	Description
C00202	Driver instrument panel [J285]
C00203	Oil pressure switch [F1]
C00204	Windscreen washer fluid level sensor [G33]
C00205	Coolant level sensor [G32]
C00206	Brake fluid level sensor [F34]
C00208	Brake pad wear sensor - front right [G35]
G00417	Ground point connector
G00660	Ground point connector
S01640	Splice - Brown - left-hand drive main body loom
S01653	Splice - Red / Brown - left-hand drive main body loom
S02561	Splice - Brown - Flex Fuel Loom
S02565	Splice - Brown - fuel pump link
X00090	Left-hand drive main body loom to driver instrument panel link loom plug and socket 17-way
X00091	Left-hand drive main body loom to driver instrument panel link loom plug and socket 17-way
X00092	Driver instrument panel connector 32-way
X00093	Driver instrument panel connector 32-way
X00230	Left-hand drive main body loom to engine link loom plug and socket 10-way
X01203	Oil pressure sensor connector
X03489	Coolant level sensor connector 2-way
X03490	Brake fluid level sensor connector 2-way
X03645	Brake pad wear sensor - front right connector 2-way
X03675	Windscreen washer fluid level sensor connector 2-way
X05313	Mains to Fuel pump link Interconnect 17-way

Circuit Links

Description	Link	Additional Information
-------------	------	------------------------

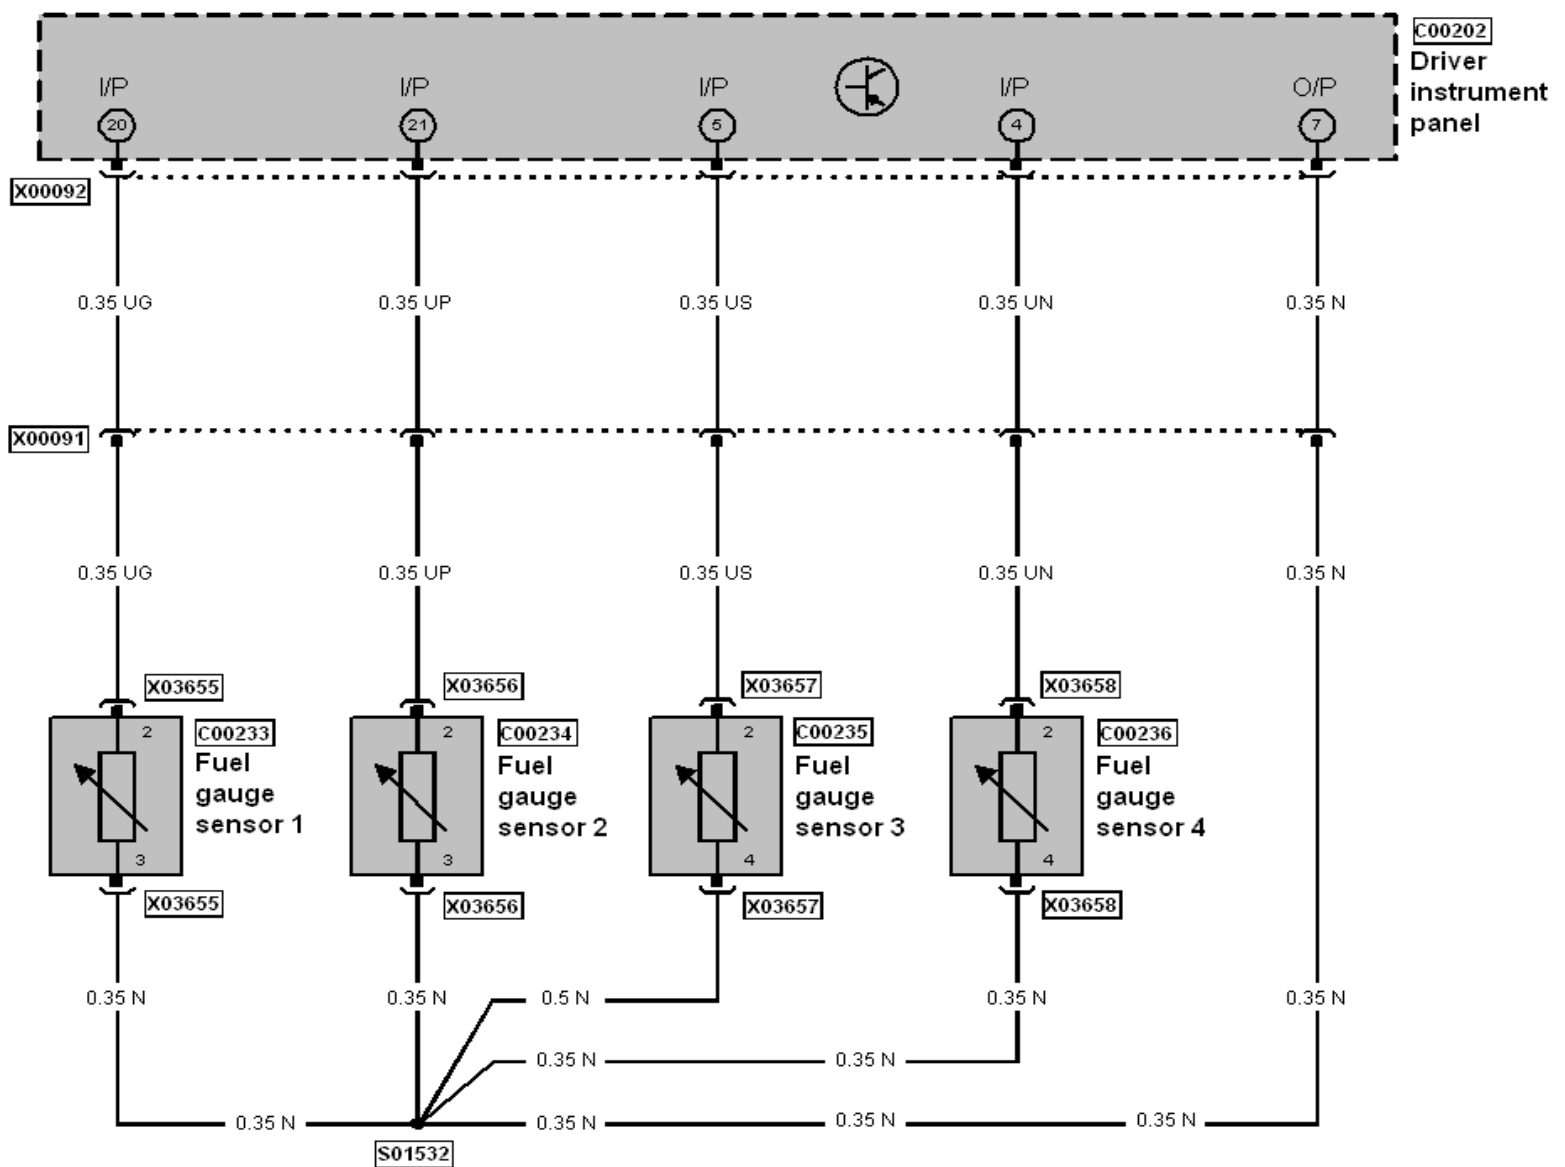


Electrical Circuit: 43 03 11: Fuel gauge sensors LHD (prior to VIN 63288)

No	Description
C00202	Driver instrument panel [J285]
C00233	Fuel gauge sensor 1 - upper [G]
C00234	Fuel gauge sensor 2 - upper [G169]
C00235	Fuel gauge sensor 3 - lower [G237]
C00236	Fuel gauge sensor 4 - lower [G393]
S01532	Splice - Brown - left-hand drive main body loom
X00091	Left-hand drive main body loom to driver instrument panel link loom plug and socket 17-way
X00092	Driver instrument panel connector 32-way
X03655	Right-hand fuel pump module connector 4-way
X03656	Left-hand fuel pump module connector 4-way
X03657	Fuel gauge sensor 3 connector 4-way
X03658	Fuel gauge sensor 4 connector 4-way

Circuit Links

Description	Link	Additional Information
-------------	------	------------------------

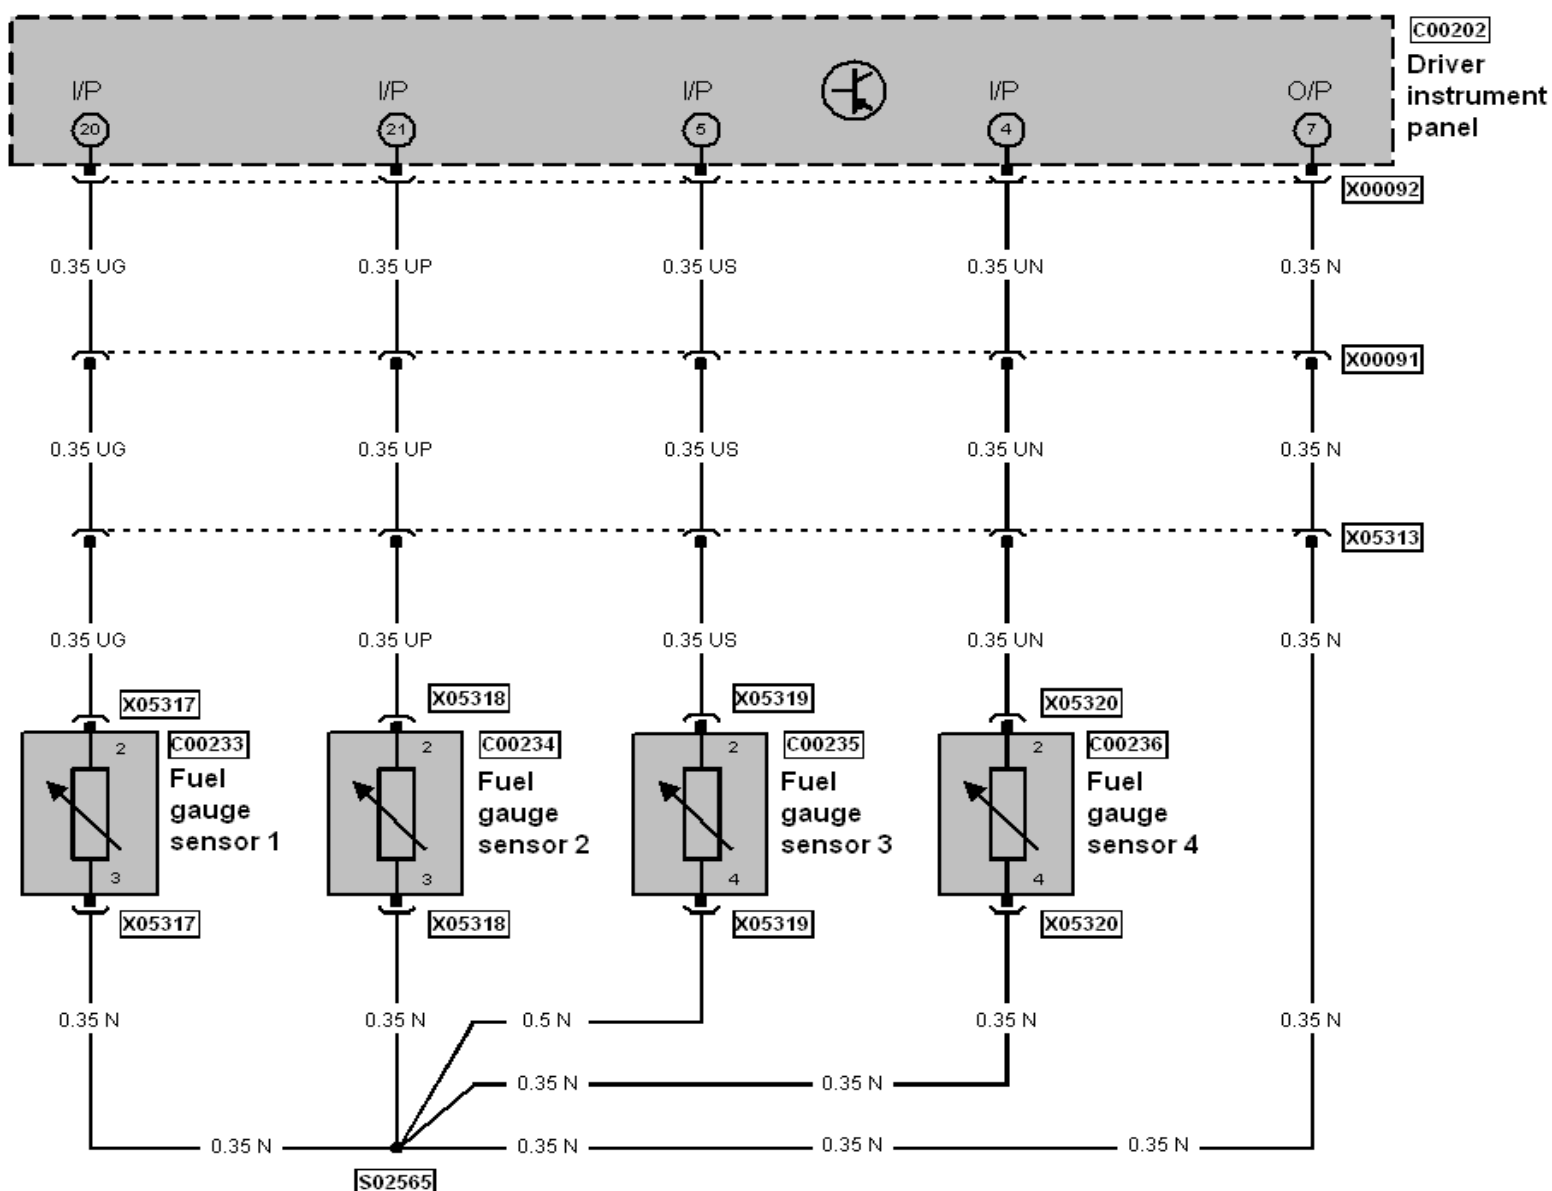


Electrical Circuit: 43 03 17: Fuel gauge sensors LHD (from VIN 63288)

No	Description
C00202	Driver instrument panel [J285]
C00233	Fuel gauge sensor 1 - upper [G]
C00234	Fuel gauge sensor 2 - upper [G169]
C00235	Fuel gauge sensor 3 - lower [G237]
C00236	Fuel gauge sensor 4 - lower [G393]
S02565	Splice - Brown - fuel pump link
X00091	Left-hand drive main body loom to driver instrument panel link loom plug and socket 17-way
X00092	Driver instrument panel connector 32-way
X05313	Mains to Fuel pump link Interconnect 17-way
X05317	Primary fuel pump connector 4-way
X05318	Secondary fuel pump connector 4-way
X05319	Right-hand fuel pump module connector 4-way
X05320	Left-hand fuel pump module connector 4-way

Circuit Links

Description	Link	Additional Information
-------------	------	------------------------

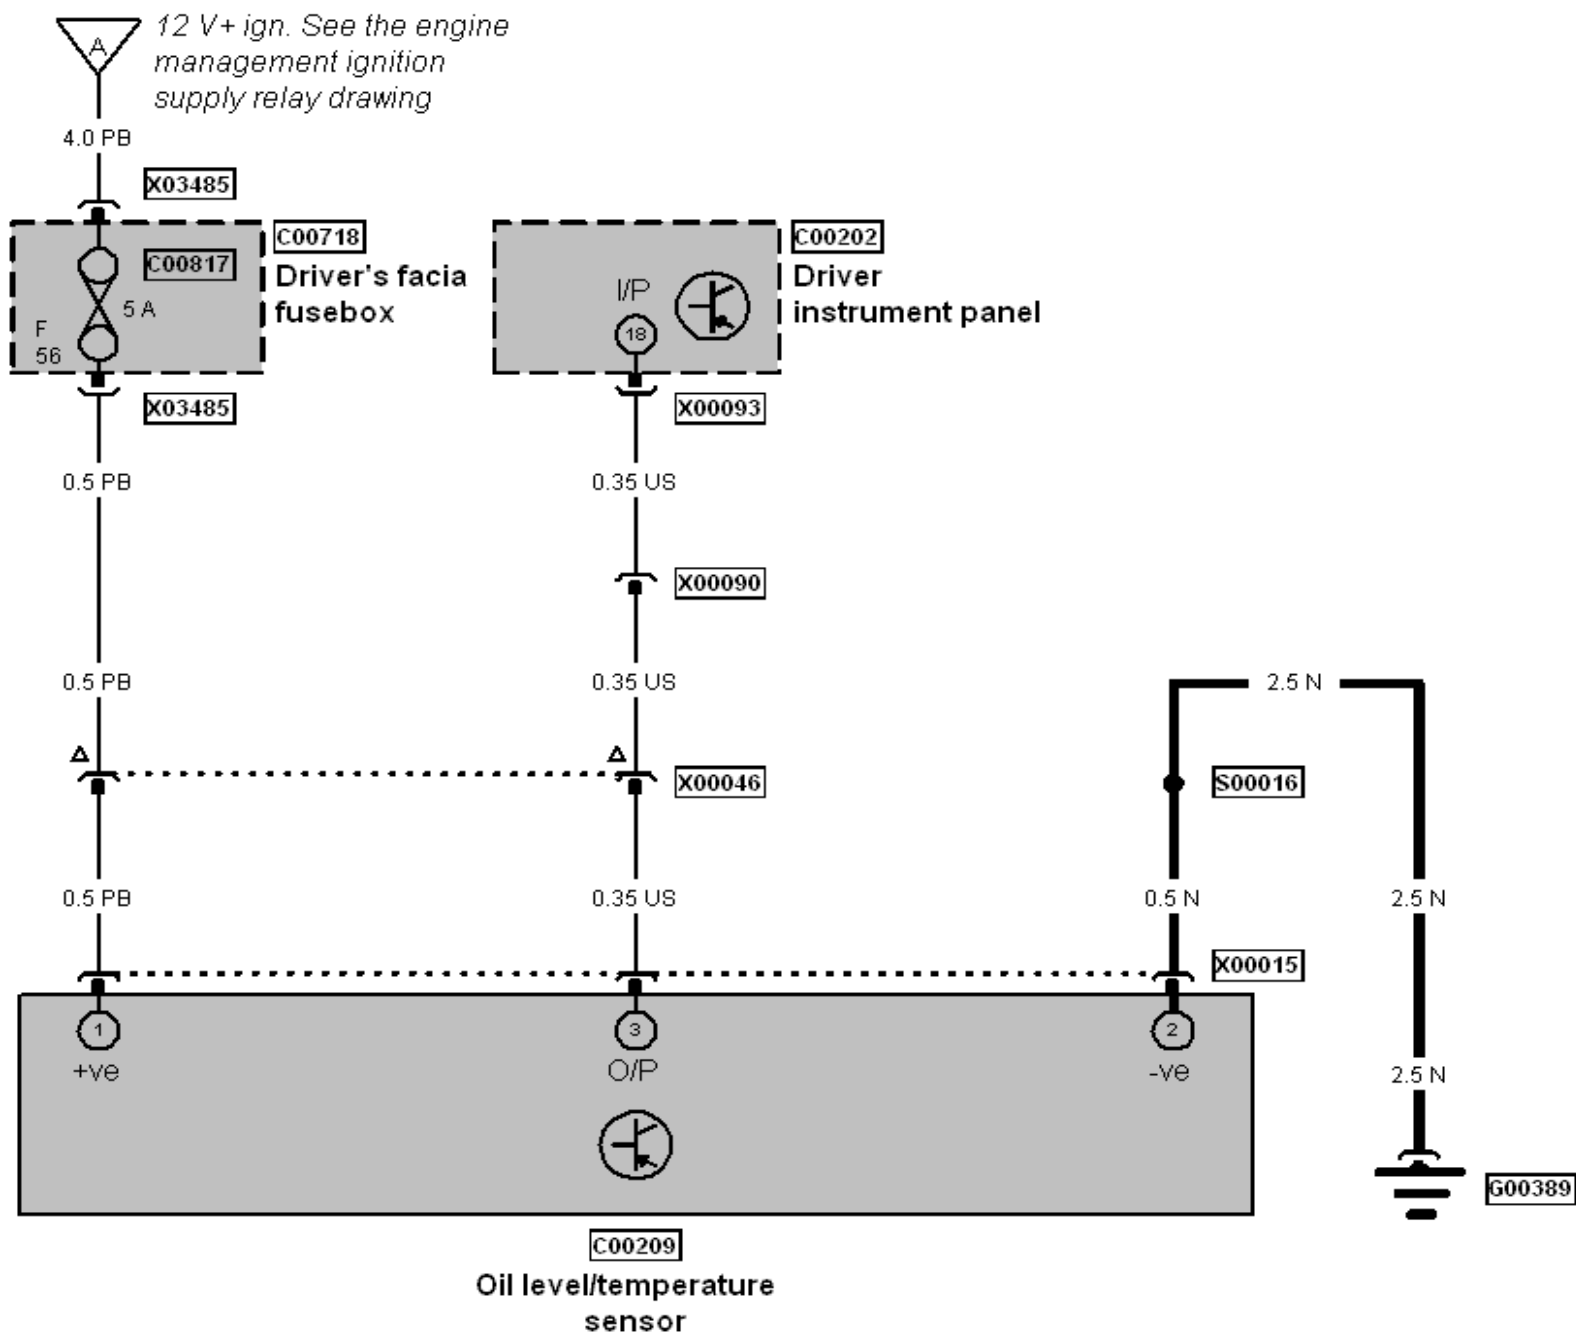


Electrical Circuit: 43 04 05: Oil level/temperature sensor LHD

No	Description
C00202	Driver instrument panel [J285]
C00209	Oil level/temperature sensor [G266]
C00718	Driver's facia fusebox
C00817	Fuse F56, 5 amp - driver's facia fusebox
G00389	Ground point connector
S00016	Splice - Brown - engine loom
X00015	Oil level/temperature sensor connector 3-way
X00046	Left-hand drive main body loom to engine loom plug and socket 14-way
X00090	Left-hand drive main body loom to driver instrument panel link loom plug and socket 17-way
X00093	Driver instrument panel connector 32-way
X03485	Driver's facia fusebox connector

Circuit Links

Description	Link	Additional Information
A	100307	12 V+ ign. See the engine management ignition supply relay drawing

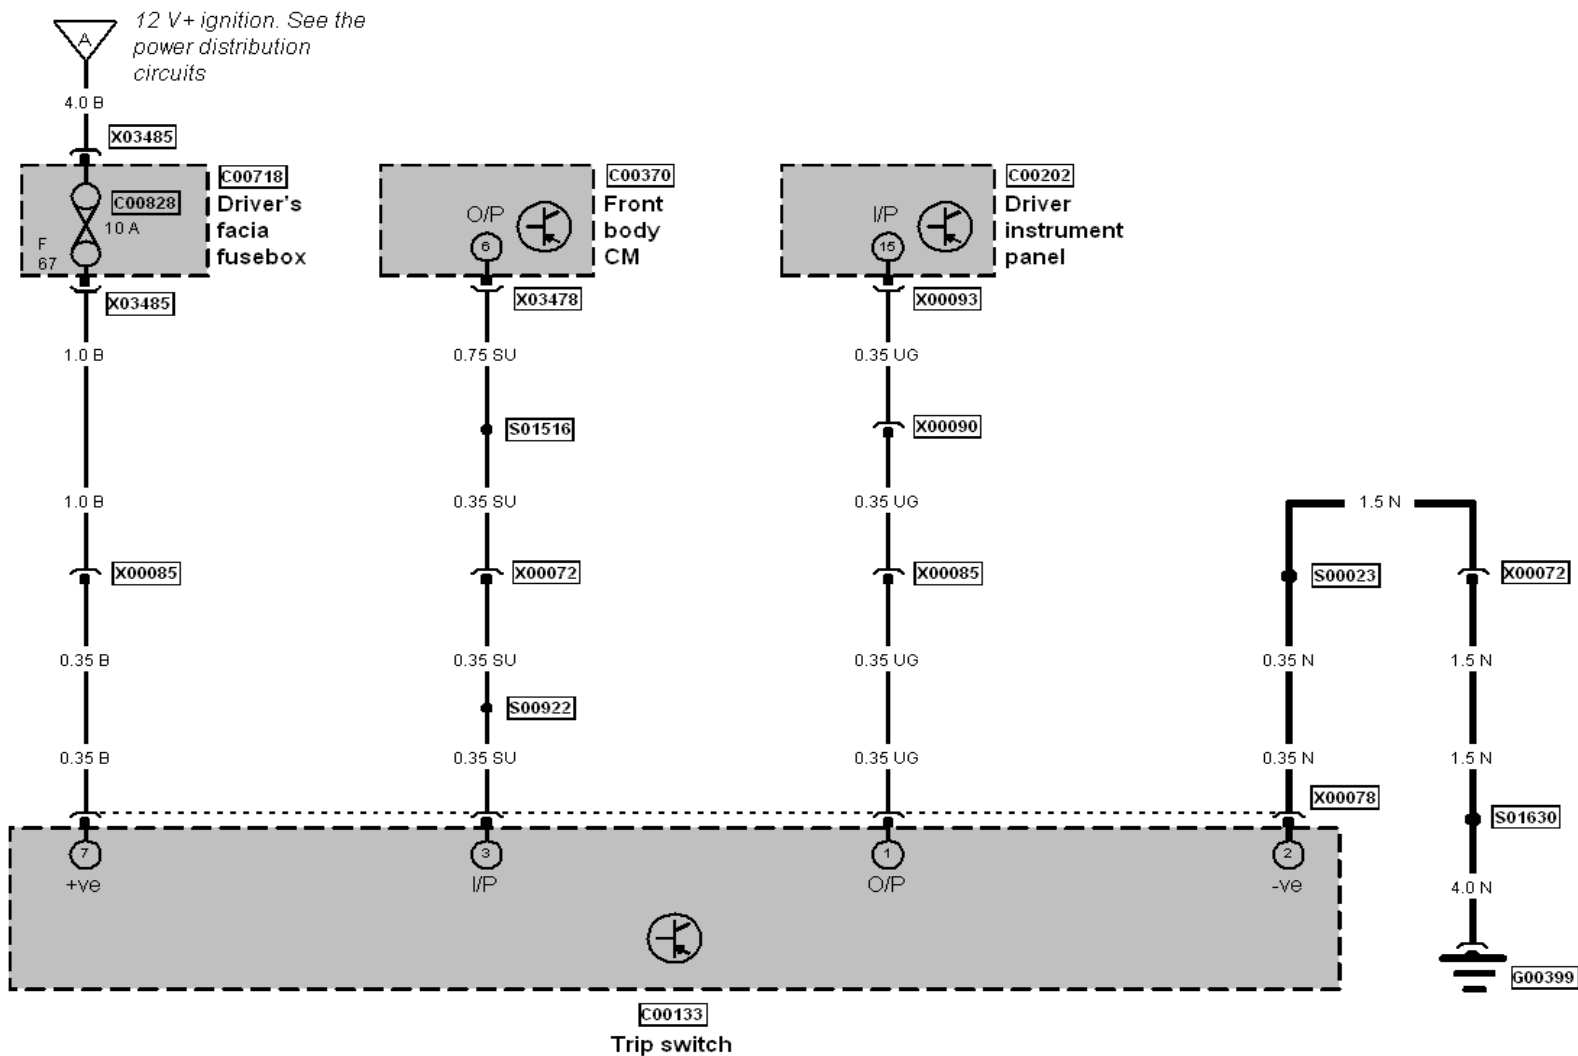


Electrical Circuit: 43 06 15: Trip switch LHD

No	Description
C00133	Trip switch [E123]
C00202	Driver instrument panel [J285]
C00370	Front body control module [J519]
C00718	Driver's facia fusebox
C00828	Fuse F67, 10 amp - driver's facia fusebox
G00399	Ground point connector
S00023	Splice - Brown - left-hand drive facia loom
S00922	Splice - right-hand drive main body loom
S01516	Splice - Slate/blue - left-hand drive main body loom
S01630	Splice - Brown - left-hand drive main body loom
X00072	Left-hand drive main body loom to left-hand drive facia loom plug and socket 17-way
X00078	Driver instrument panel switch pack connector 10-way
X00085	Left-hand drive main body loom to left-hand drive facia loom plug and socket 17-way
X00090	Left-hand drive main body loom to driver instrument panel link loom plug and socket 17-way
X00093	Driver instrument panel connector 32-way
X03478	Front body control module connector 6-way
X03485	Driver's facia fusebox connector

Circuit Links

Description	Link	Additional Information
A	010317	12 V+ ignition. See the power distribution circuits

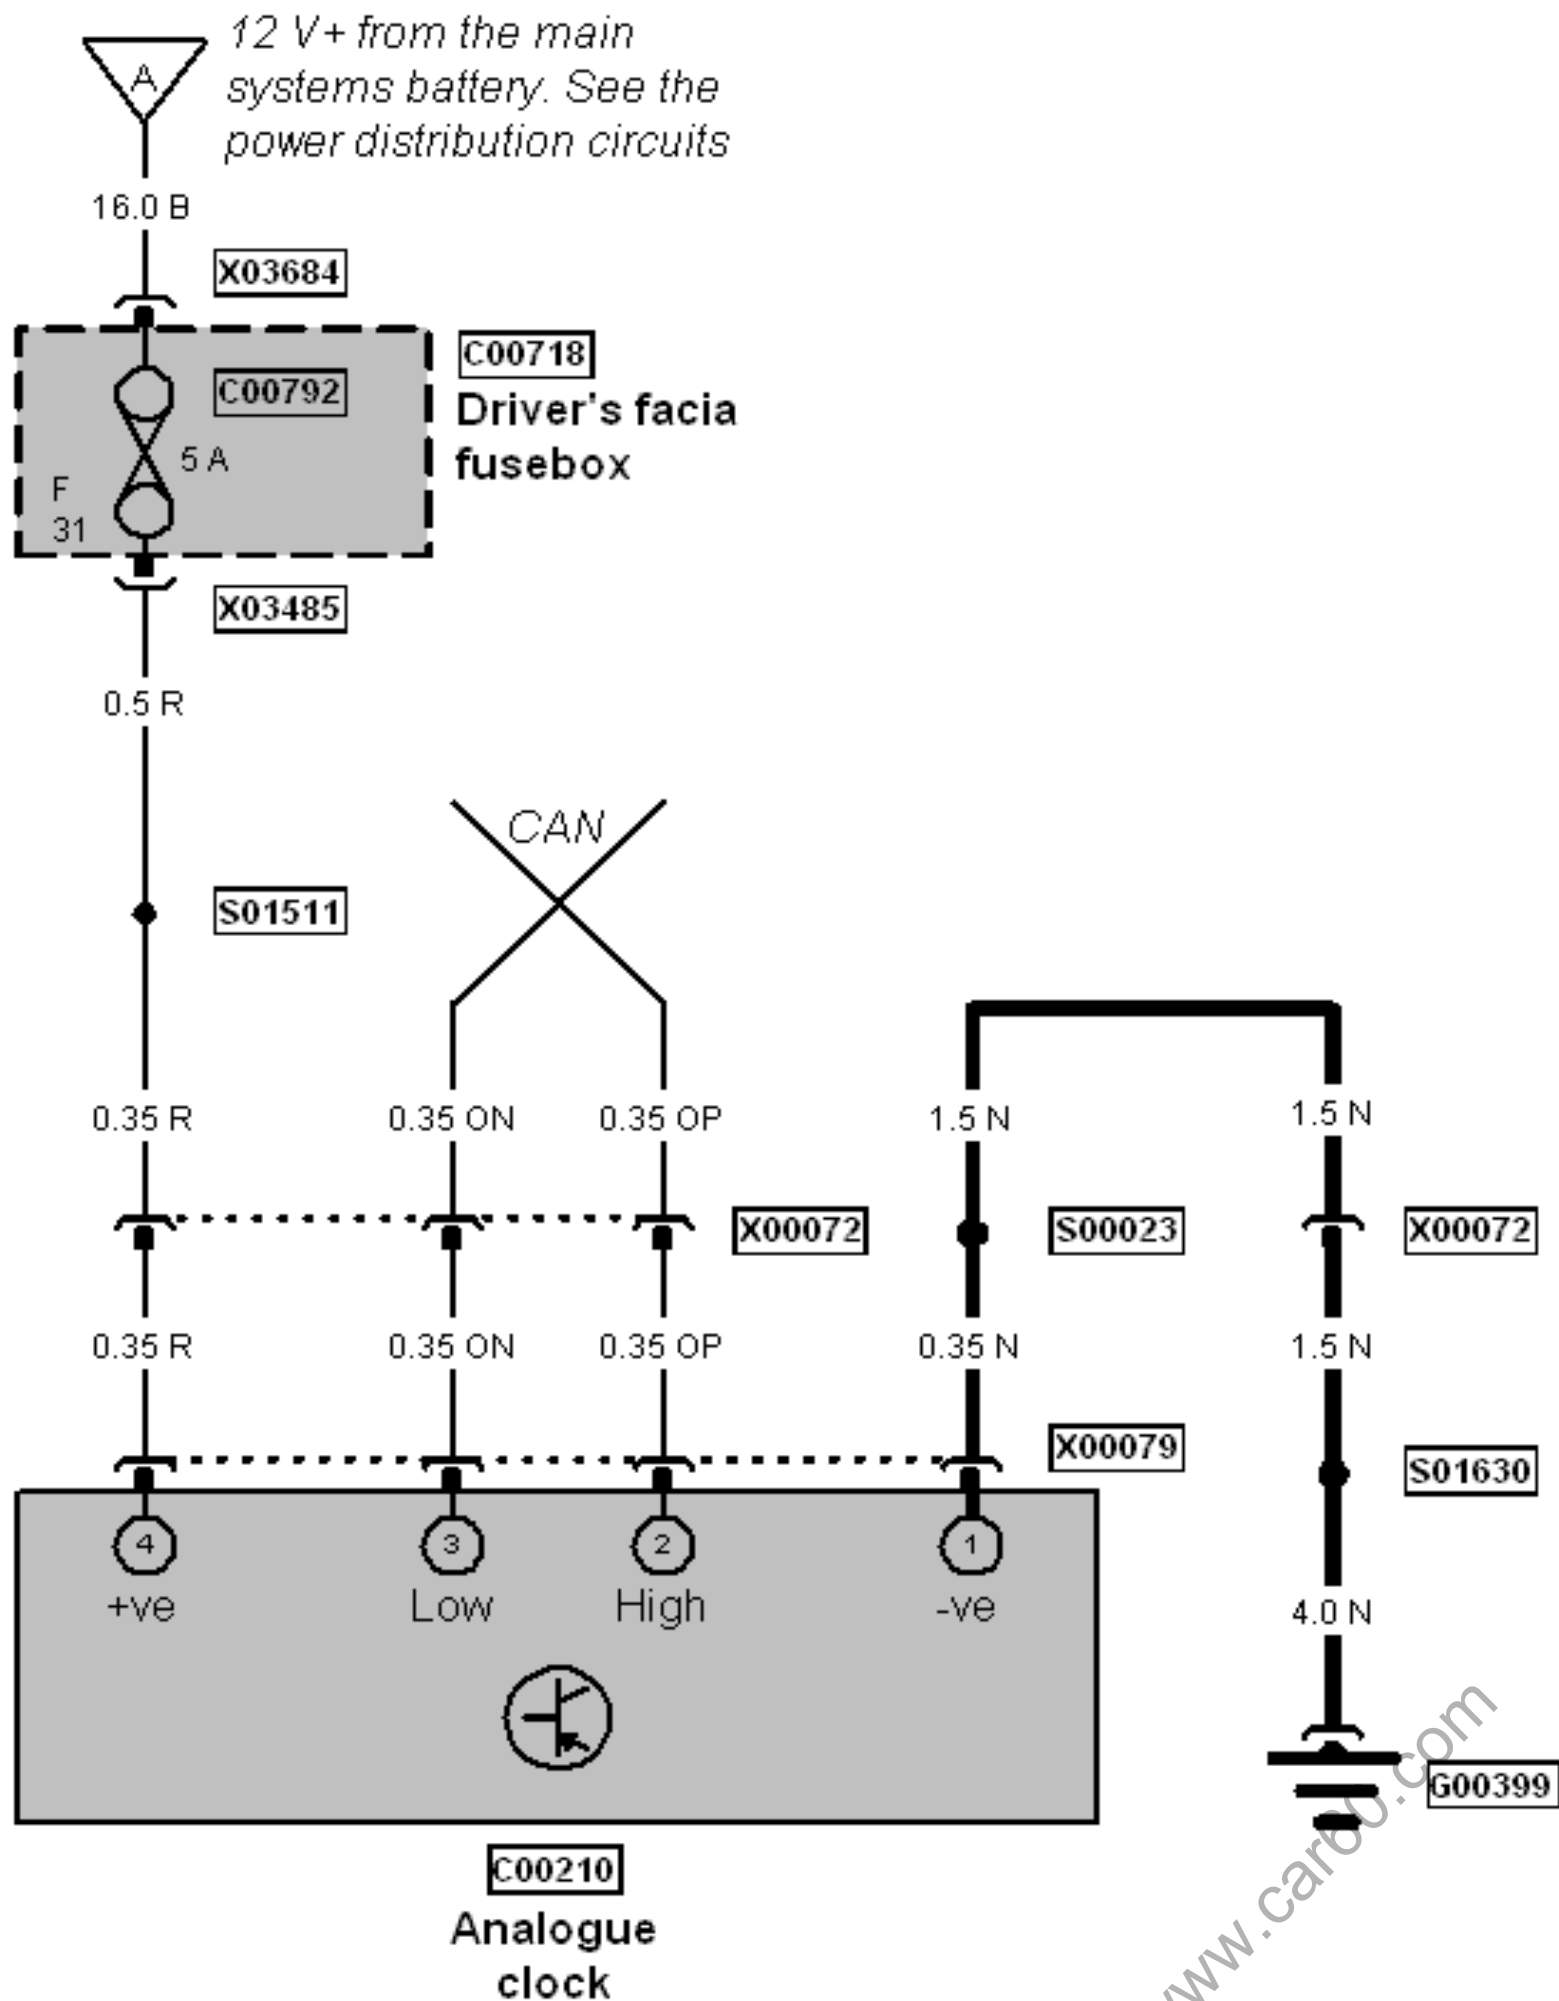

Electrical Circuit: 43 07 05: Analogue clock LHD

No	Description
C00210	Analogue clock [Y]
C00718	Driver's facia fusebox
C00792	Fuse F31, 5 amp - driver's facia fusebox
G00399	Ground point connector
S00023	Splice - Brown - left-hand drive facia loom
S01511	Splice - Red - left-hand drive main body loom
S01630	Splice - Brown - left-hand drive main body loom
X00072	Left-hand drive main body loom to left-hand drive facia loom plug and socket 17-way
X00079	Analogue clock connector 6-way
X03485	Driver's facia fusebox connector
X03684	Driver's facia fusebox connector

Circuit Links

Description	Link	Additional Information
A	010505	12 V+ from the main systems battery. See the power distribution circuits