

Electrical Circuit: 49 01 01: Driver's window lift switches and motor, child lock switch, fuel filler door remote release switch and luggage compartment lid remote release switch LHD

No	Description
C00439	Door control module - driver's [J386]
C00440	Window lift motor - driver's [V147]
C00448	Window lift switch - driver's [E40]
C00449	Window lift switch - front pass - driver's sw [E81]
C00450	Window lift switch - rear left - driver's sw [E53]
C00451	Window lift switch - rear right - driver's sw [E55]
C00452	CDL warning lamp - rear left [K176]
C00453	CDL warning lamp - rear right [K177]
C00454	Fuel filler door remote release switch [E319]
C00455	Luggage compartment lid remote release switch [E233]
C00456	Child lock switch - driver's [E318]
C00643	Window lift switch - driver's door [E41]
X00179	Driver's door switches connector 16-way
X00180	Driver's door control module connector 32-way

Circuit Links


Description	Link	Additional Information
-------------	------	------------------------

C00478

C00477

Window lift motor -
front passenger's

Door control module -
front passenger's

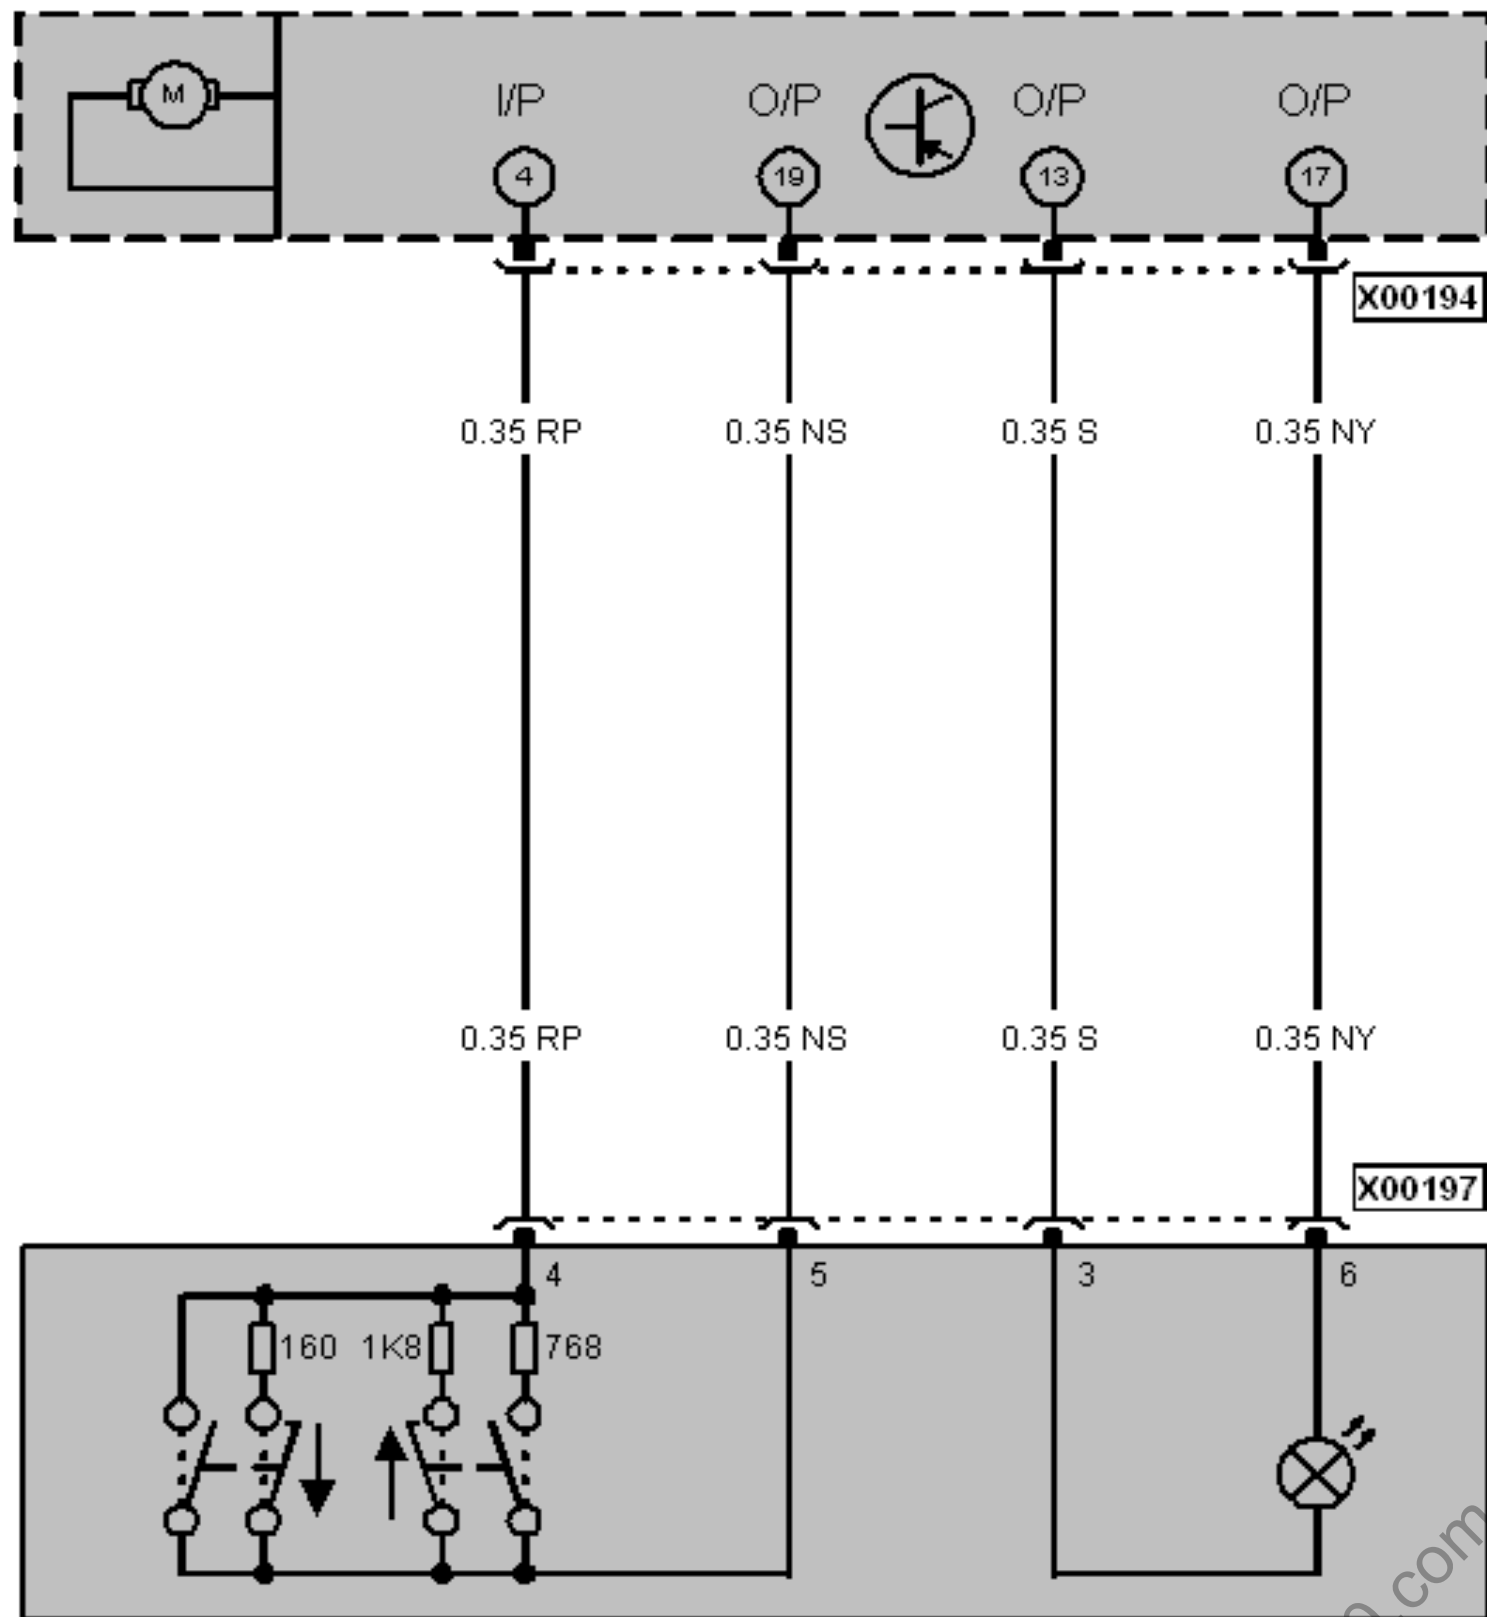

C00484

Window lift switch -
front passenger's

C00485

Window lift switch
lamp


Electrical Circuit: 49 02 01: Front passenger's window lift switch and motor LHD

No	Description
C00477	Door control module - front passenger's [J387]
C00478	Window lift motor - front passenger's [V148]
C00484	Window lift switch - front passenger's [E107]
C00485	Window lift switch lamp [L53]
X00194	Front passenger's door control module connector 32-way
X00197	Front passenger's door switches connector 6-way

Circuit Links

Description	Link	Additional Information
-------------	------	------------------------

12 V+ from the main systems battery. See the power distribution circuits

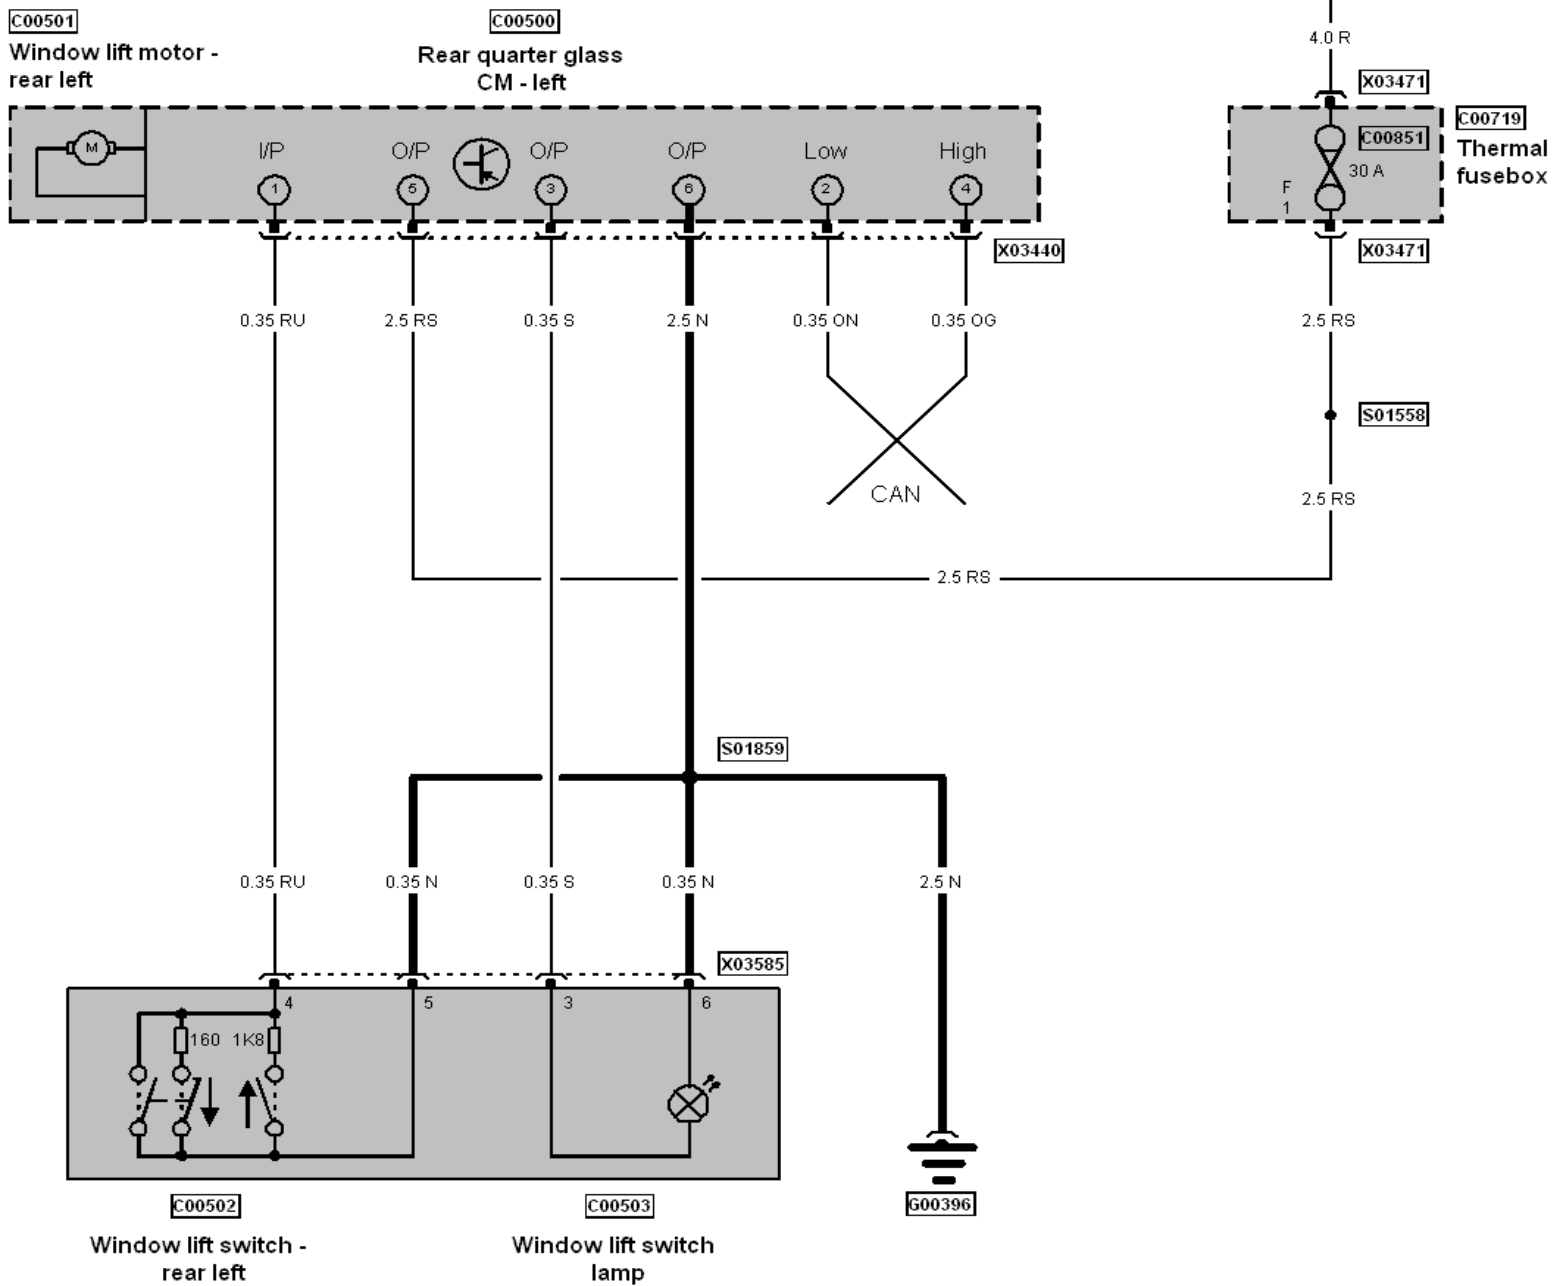


Electrical Circuit: 49 03 06: Left-hand rear window lift switch and motor LHD

No	Description
C00500	Rear quarter glass control module - left [J388]
C00501	Window lift motor - rear left [V26]
C00502	Window lift switch - rear left [E52]
C00503	Window lift switch lamp [L53]
C00719	Thermal fusebox
C00851	Fuse F1, 30 amp - thermal fusebox
G00396	Ground point connector
S01558	Splice - Red/slate - left-hand drive main body loom
S01859	Splice - Brown - left-hand drive main body loom
X03440	Left-hand rear quarter glass control module connector 6-way
X03471	Thermal fusebox connector 2-way
X03585	Left-hand rear window lift switch connector 6-way

Circuit Links

Description	Link	Additional Information
A	010409	12 V+ from the main systems battery. See the power distribution circuits

12 V+ from the main systems battery. See the power distribution circuits

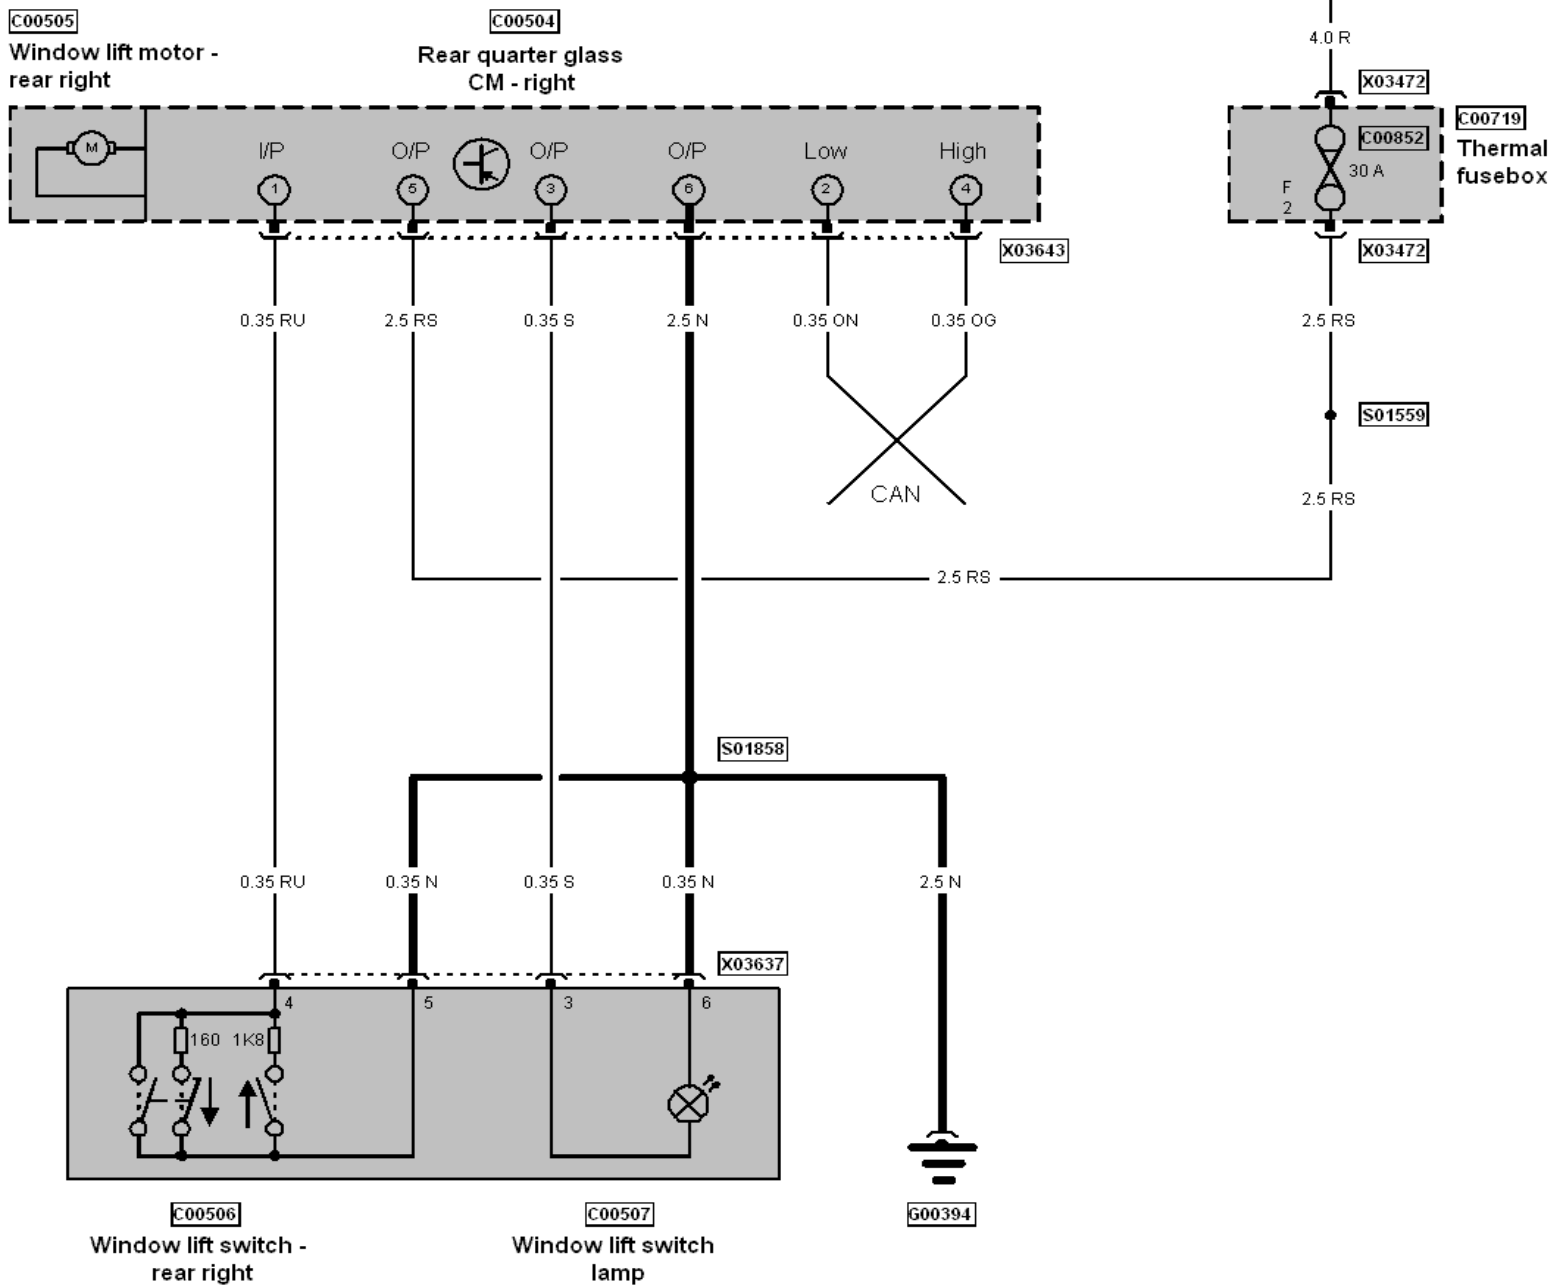


Electrical Circuit: 49 04 06: Right-hand rear window lift switch and motor LHD

No	Description
C00504	Rear quarter glass control module - right [J389]
C00505	Window lift motor - rear right [V27]
C00506	Window lift switch - rear right [E54]
C00507	Window lift switch lamp [L53]
C00719	Thermal fusebox
C00852	Fuse F2, 30 amp - thermal fusebox
G00394	Ground point connector
S01559	Splice - Red/slate - left-hand drive main body loom
S01858	Splice - Brown - left-hand drive main body loom
X03472	Thermal fusebox connector 2-way
X03637	Right-hand rear window lift switch connector 6-way
X03643	Right-hand rear quarter glass control module connector 6-way

Circuit Links

Description	Link	Additional Information
A	010409	12 V+ from the main systems battery. See the power distribution circuits

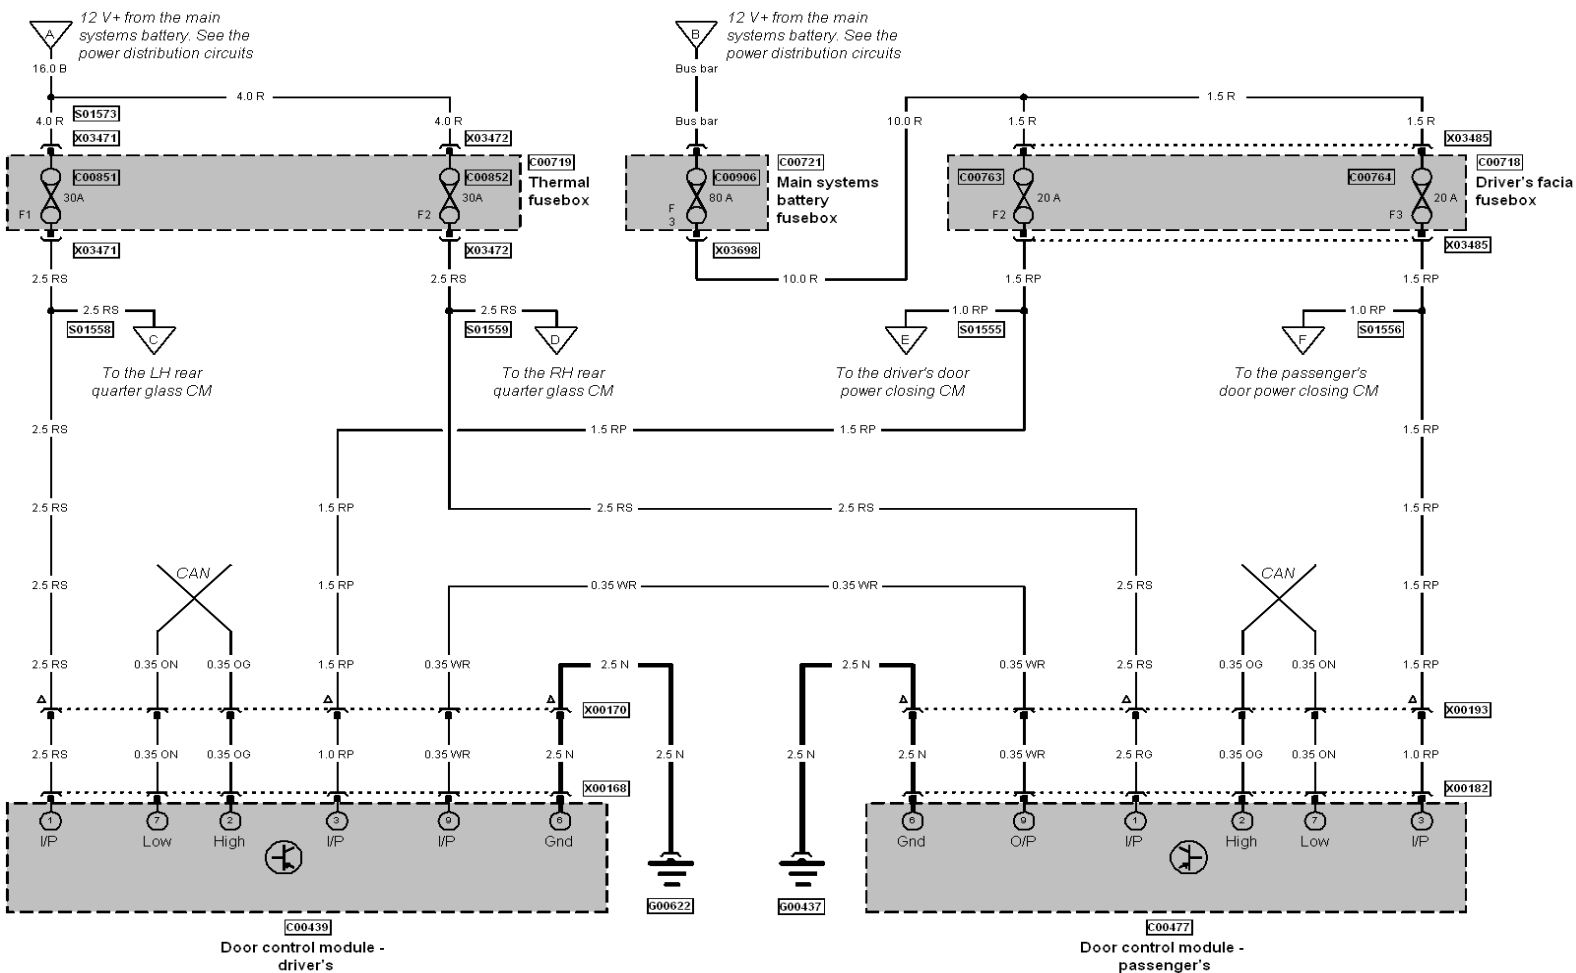

Electrical Circuit: 49 05 07: Driver's and passenger's door control modules power supply and grounds LHD

No	Description
C00439	Door control module - driver's [J386]
C00477	Door control module - front passenger's [J387]
C00718	Driver's facia fusebox
C00719	Thermal fusebox
C00721	Main systems battery mounted fusebox
C00763	Fuse F2, 20 amp - driver's facia fusebox
C00764	Fuse F3, 20 amp - driver's facia fusebox
C00851	Fuse F1, 30 amp - thermal fusebox
C00852	Fuse F2, 30 amp - thermal fusebox
C00906	Fuse F3, 80/100 amp - main systems battery fusebox
G00437	Ground point connector
G00622	Ground point connector
S01555	Splice - Red/purple - left-hand drive main body loom
S01556	Splice - Red/purple - left-hand drive main body loom
S01558	Splice - Red/slate - left-hand drive main body loom
S01559	Splice - Red/slate - left-hand drive main body loom
S01573	Splice - left-hand drive main body loom
X00168	Driver's door control module connector 10-way
X00170	Left-hand drive main body loom to driver's door loom plug and socket 10-way
X00182	Front passenger's door control module connector 10-way
X00193	Left-hand drive main body loom to front passenger's door loom plug and socket 10-way
X03471	Thermal fusebox connector 2-way
X03472	Thermal fusebox connector 2-way
X03485	Driver's facia fusebox connector
X03698	Main systems battery mounted fusebox connector

Circuit Links

Description	Link	Additional Information
C		To the left-hand rear quarter glass control module
D		To the right-hand rear quarter glass control module
A	010409	12 V+ from the main systems battery. See the power distribution circuits
B	010107	12 V+ from the main systems battery. See the power distribution circuits
E		To the driver's door power closing CM
F		To the passenger's door power closing CM