


C0237
**Drivers seat
control module**

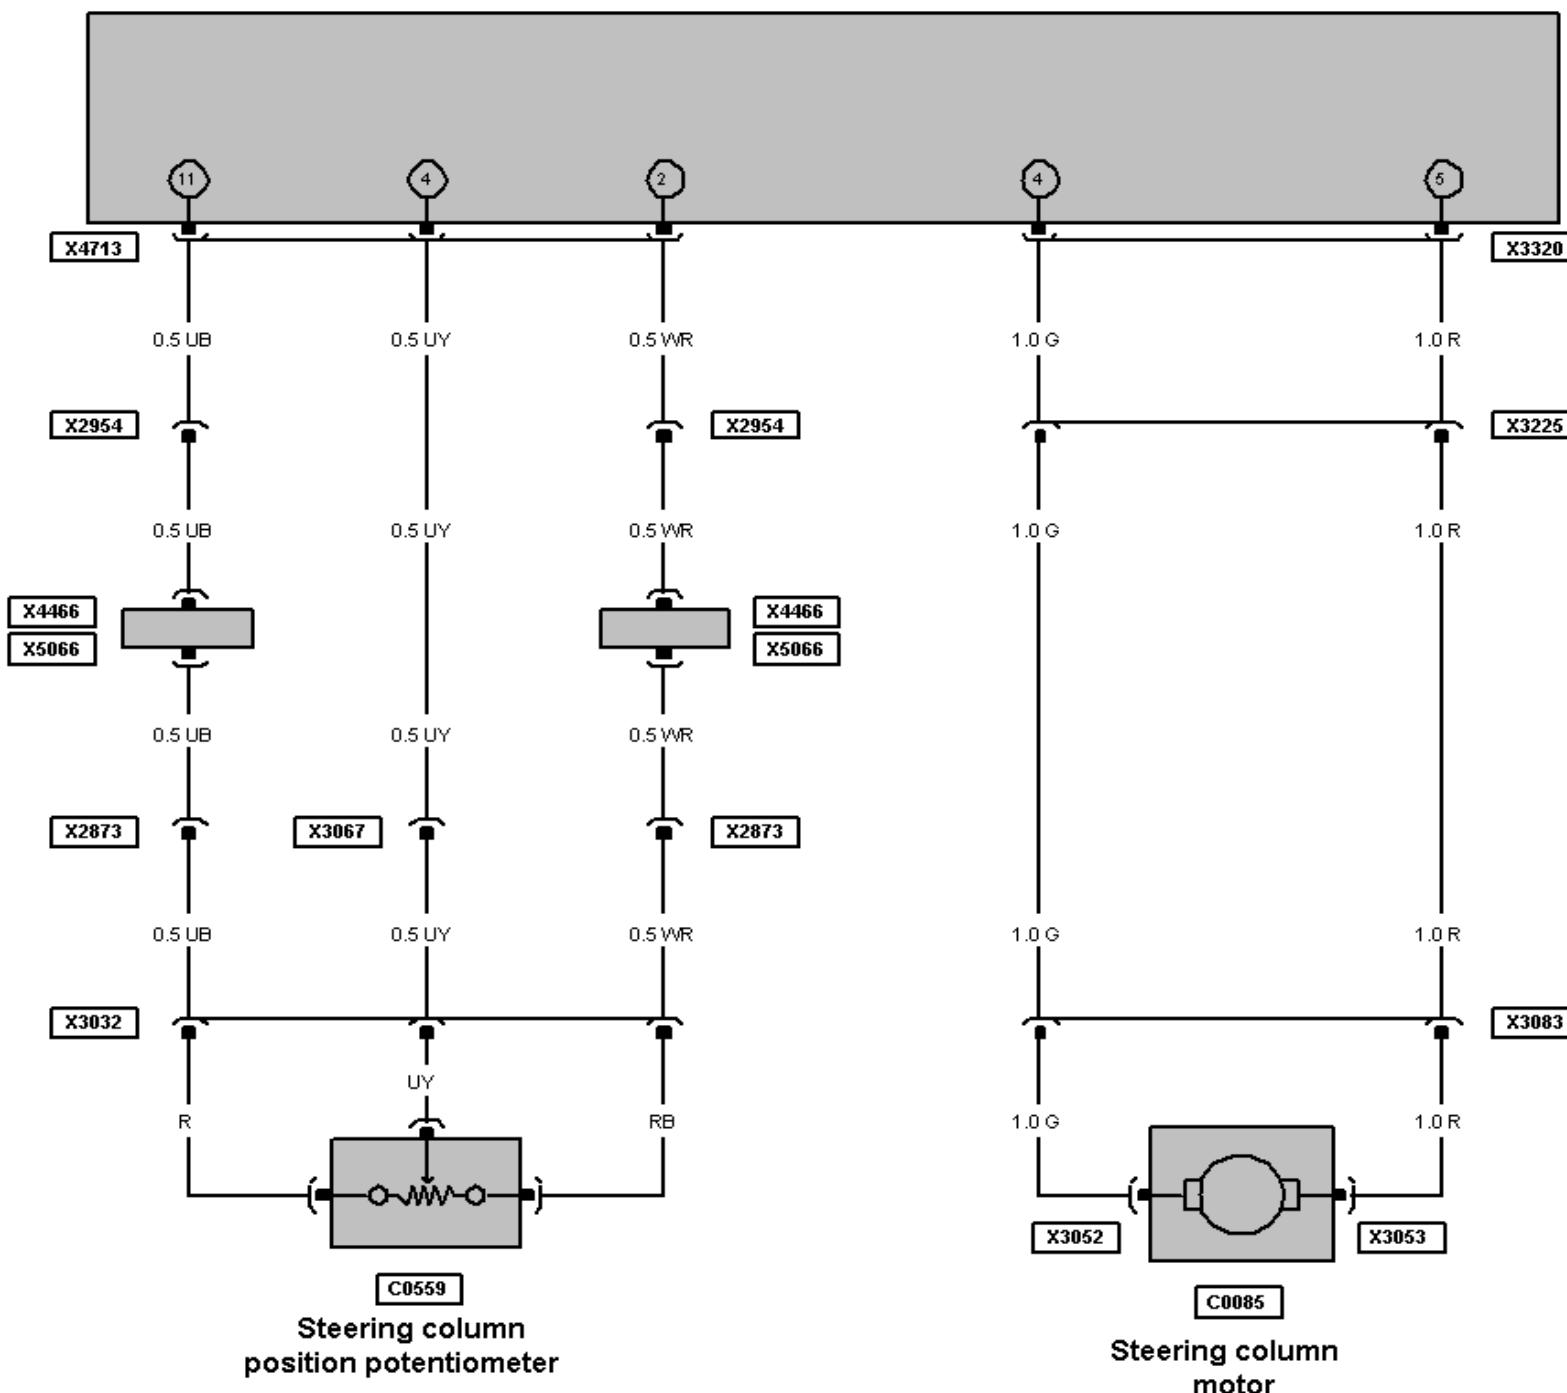


Electrical Circuit: 22 01 09: Adjustable steering column (LHD)

No	Description
C0085	Adjustable steering column motor
C0237	Driver's seat control module
C0559	Adjustable steering column potentiometer
X2873	Rear main loom to left-hand drive facia loom plug and socket 18-way
X2954	Rear main loom to left-hand drive console loom plug and socket 18-way
X3032	Adjustable steering column position potentiometer connector 3-way
X3052	Adjustable steering column motor connector
X3053	Adjustable steering column motor connector
X3067	Left-hand drive facia loom to console loom plug and socket 18-way
X3083	Left-hand drive facia loom to console loom plug and socket 20-way
X3225	Left-hand drive console loom to driver's seat loom plug and socket 20-way
X3320	Driver's seat control module connector 12-way
X4466	Header connector 20-way
X4713	Driver's seat control module connector 22-way
X5066	Header connector 20-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

C0237

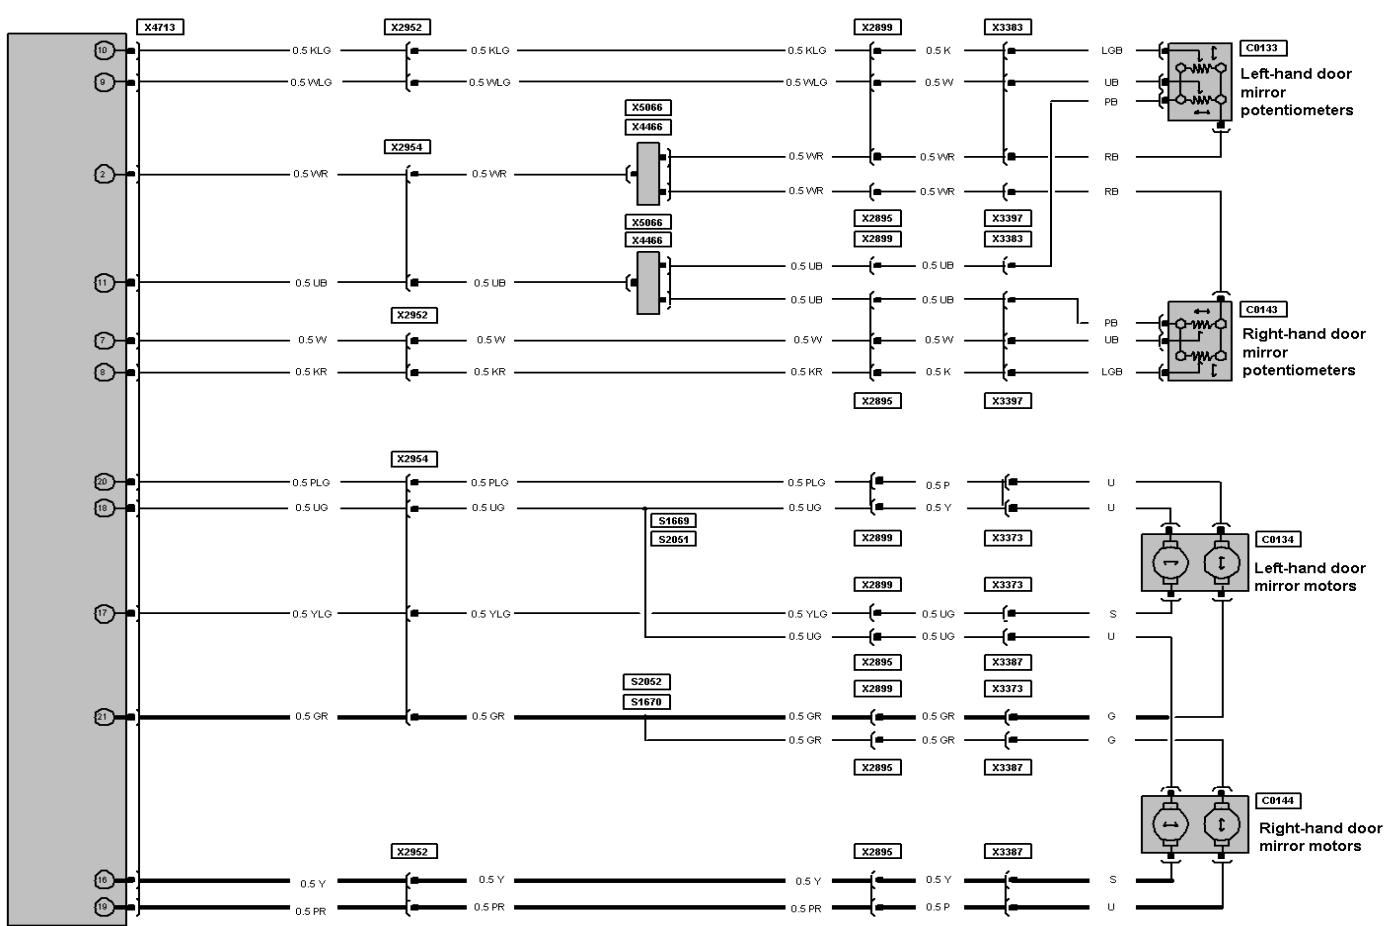


Electrical Circuit: 22 02 08: Door mirrors (LHD)

No	Description
C0133	Left-hand door mirror potentiometers
C0134	Left-hand door mirror motors
C0143	Right-hand door mirror potentiometers
C0144	Right-hand door mirror motors
C0237	Driver's seat control module
S1669	Splice - Blue/green - rear main loom
S1670	Splice - Green/red - rear main loom
S2051	Splice - Blue/green - rear main loom
S2052	Splice - Green/red - rear main loom
X2895	Right-hand front door plug and socket 30-way
X2899	Left-hand front door plug and socket 30-way
X2952	Rear main loom to left-hand drive console loom plug and socket 20-way
X2954	Rear main loom to left-hand drive console loom plug and socket 18-way
X3373	Left-hand door mirror plug and socket 8-way
X3383	Left-hand door mirror plug and socket 8-way
X3387	Right-hand door mirror plug and socket 8-way
X3397	Right-hand door mirror plug and socket 8-way
X4466	Header connector 20-way
X4713	Driver's seat control module connector 22-way
X5066	Header connector 20-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

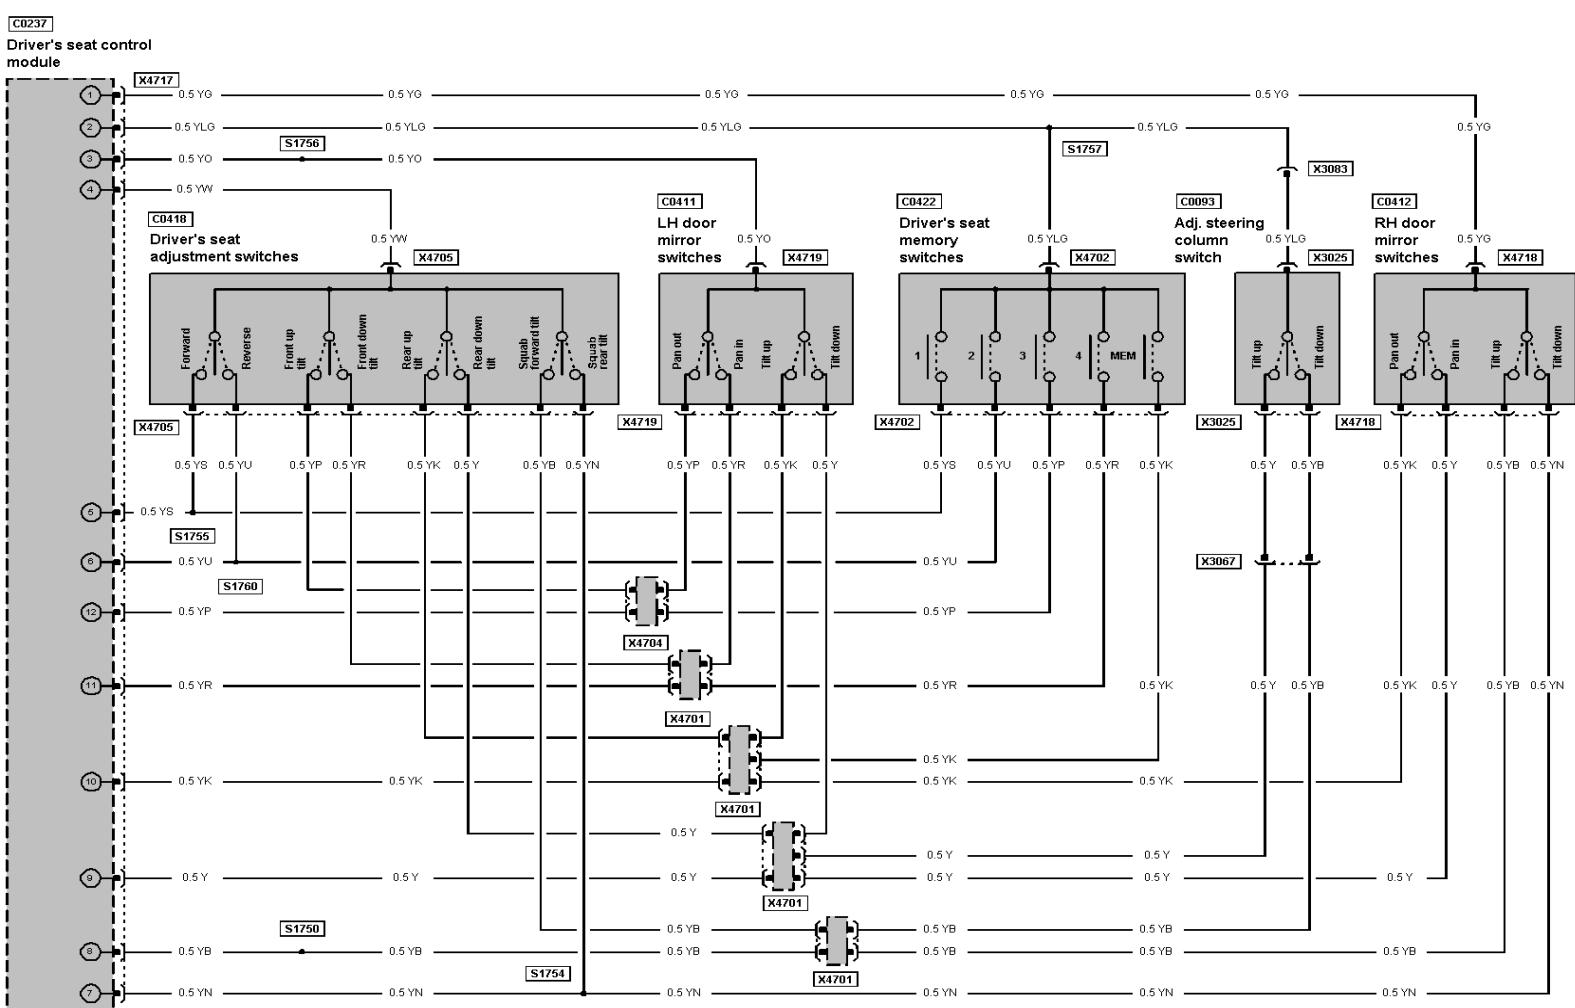


Electrical Circuit: 22 03 11: Driver's seat switches (LHD)

No	Description
C0093	Adjustable steering column switch
C0237	Driver's seat control module
C0411	Left-hand door mirror switches
C0412	Right-hand door mirror switches
C0418	Driver's seat adjustment switches
C0422	Driver's seat memory switches
S1750	Splice - Yellow/black - console loom
S1754	Splice - Yellow/brown - console loom
S1755	Splice - Yellow/slate - console loom
S1756	Splice - Yellow/orange - console loom
S1757	Splice - Yellow/light green - console loom
S1760	Splice - Yellow/blue - console loom
X3025	Adjustable steering column switch connector 6-way
X3067	Left-hand drive facia loom to console loom plug and socket 18-way
X3083	Left-hand drive facia loom to console loom plug and socket 20-way
X4701	Header connector 20-way
X4702	Driver's seat memory switches connector 8-way
X4704	Header connector 20-way
X4705	Driver's seat adjustment switch connector 12-way
X4717	Driver's seat control module connector 12-way
X4718	Right-hand door mirror switches connector 12-way
X4719	Left-hand door mirror switches connector 12-way

Circuit Links

Description	Circuit	Additional Information

C0236
Passenger's seat
control module

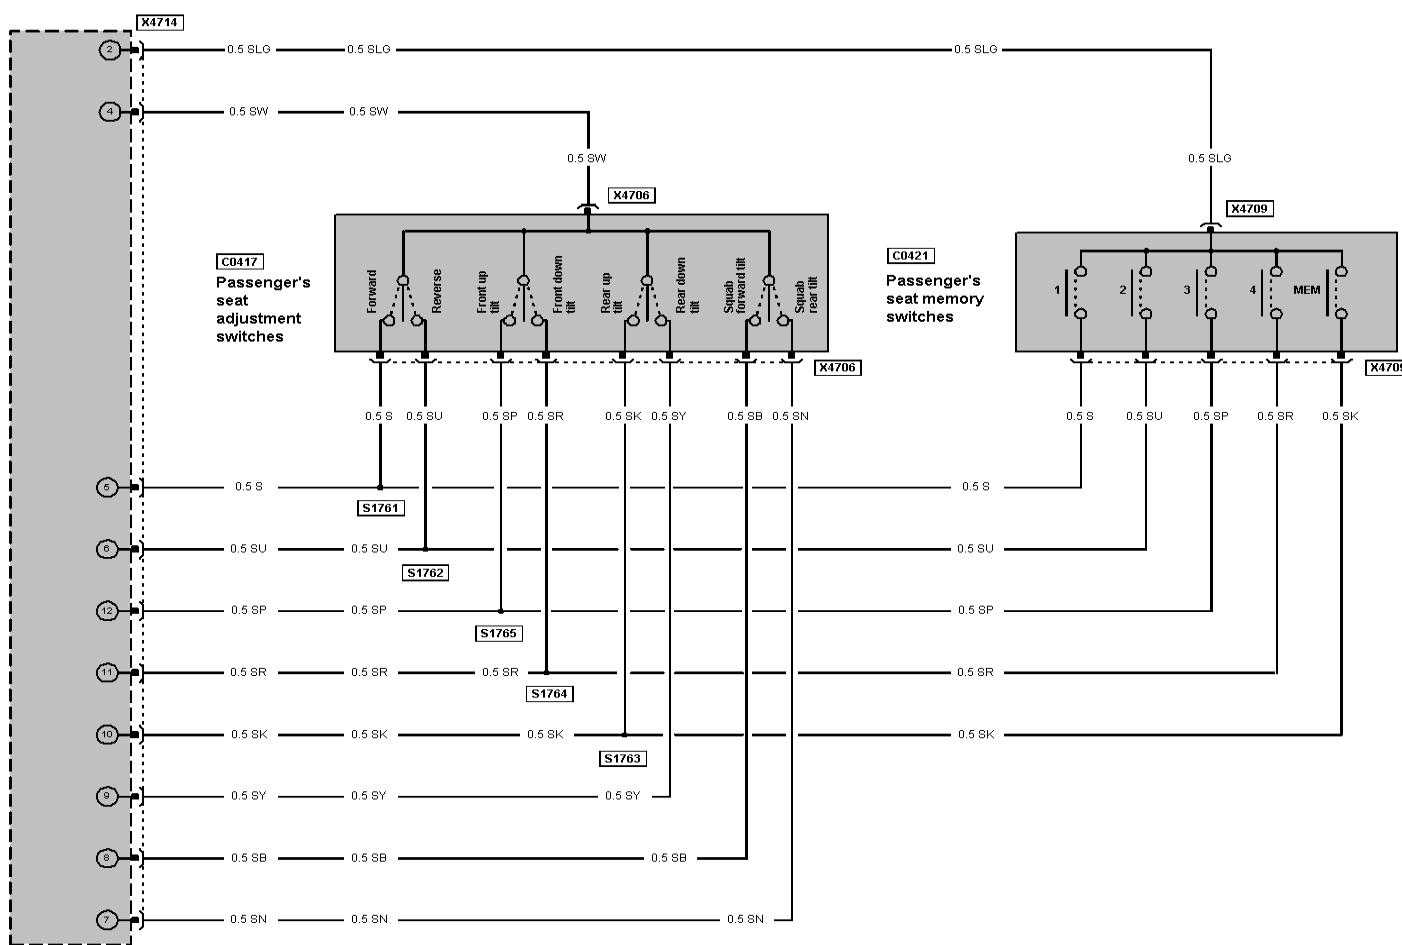


Electrical Circuit: 22 04 09: Front passenger's seat switches (LHD)

No	Description
C0236	Passenger's seat control module
C0417	Passenger's seat adjustment switches
C0421	Passenger's seat memory switches
S1761	Splice - Slate - console loom
S1762	Splice - Slate/blue - console loom
S1763	Splice - Slate/pink - console loom
S1764	Splice - Slate/red - console loom
S1765	Splice - Slate/purple - console loom
X4706	Passenger's seat adjustment switch connector 12-way
X4709	Passenger's seat memory switch connector 8-way
X4714	Passenger's seat control module connector 12-way

Circuit Links

Description	Circuit	Additional Information

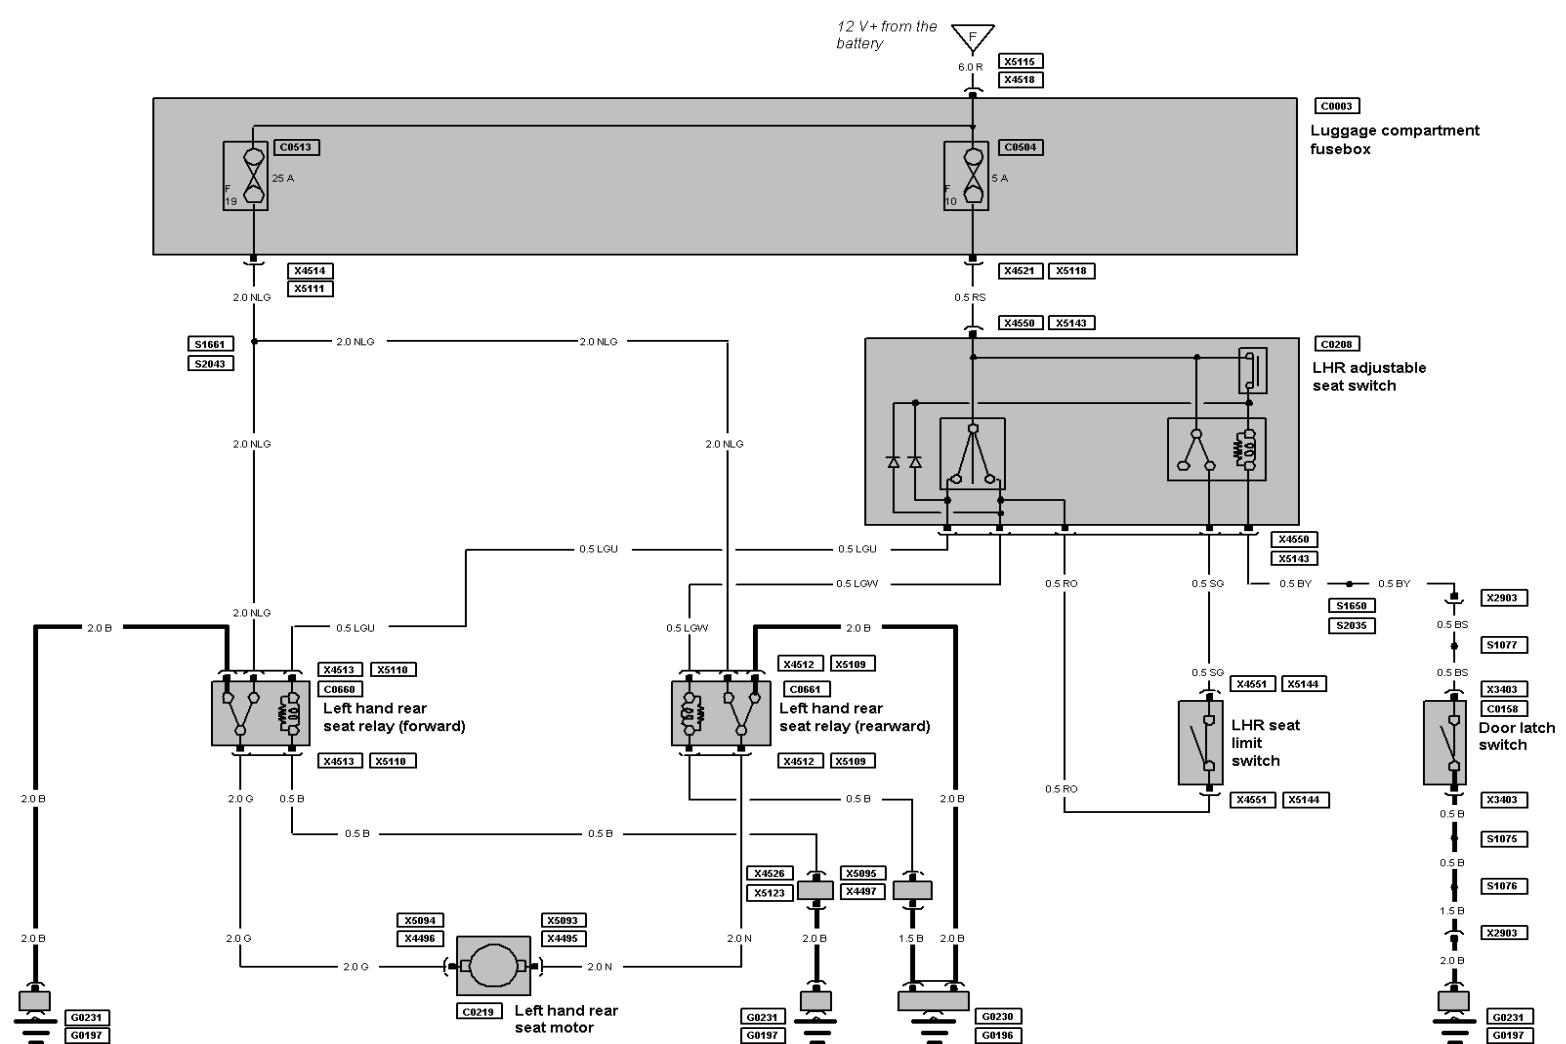


Electrical Circuit: 22 07 11: Left-hand rear seat movement

No	Description
C0003	Luggage compartment fusebox
C0158	Left-hand rear door latch switch
C0208	Left-hand adjustable rear seat switch
C0219	Left-hand adjustable rear seat motor
C0504	Fuse F10, 5 amp - luggage compartment fusebox
C0513	Fuse F19, 25 amp - luggage compartment fusebox
C0660	Left-hand rear seat relay - controlling forward travel
C0661	Left-hand rear seat relay - controlling rearward travel
G0196	Ground point header connector 10-way
G0197	Ground point header connector 10-way
G0230	Ground point header connector 10-way
G0231	Ground point header connector 10-way
S1075	Splice - Black - left-hand rear door loom
S1076	Splice - Black - left-hand rear door loom
S1077	Splice - Black/slate - left-hand rear door loom
S1650	Splice - Black/yellow - rear main loom
S1661	Splice - Brown/light green - rear main loom
S2035	Splice - Black/yellow - rear main loom
S2043	Splice - Brown/light green - rear main loom
X2903	Left-hand rear door plug and socket 30-way
X3403	Left-hand rear door latch connector 6-way
X4495	Left-hand rear seat motor connector 1-way
X4496	Left-hand rear seat motor connector 1-way
X4497	Header connector 20-way
X4512	Left-hand rear seat relay connector 9-way - controlling rearward travel
X4513	Left-hand rear seat relay connector 9-way - controlling forward travel
X4514	Luggage compartment fusebox connector 21-way
X4518	Luggage compartment fusebox connector 2-way
X4521	Luggage compartment fusebox connector 13-way
X4526	Header connector 20-way
X4550	Rear seat switches connector 26-way
X4551	Left-hand rear seat limit switch connector 2-way
X5093	Left-hand rear seat motor connector 1-way
X5094	Left-hand rear seat motor connector 1-way
X5095	Header connector 20-way
X5109	Left-hand rear seat relay connector 9-way - controlling rearward travel
X5110	Left-hand rear seat relay connector 9-way - controlling forward travel
X5111	Luggage compartment fusebox connector 21-way
X5115	Luggage compartment fusebox connector 2-way
X5118	Luggage compartment fusebox connector 13-way
X5123	Header connector 20-way
X5143	Rear seat switches connector 26-way
X5144	Left-hand rear seat limit switch connector 2-way

Circuit Links

Description	Circuit	Additional Information
F	050105	12 V+ from the battery

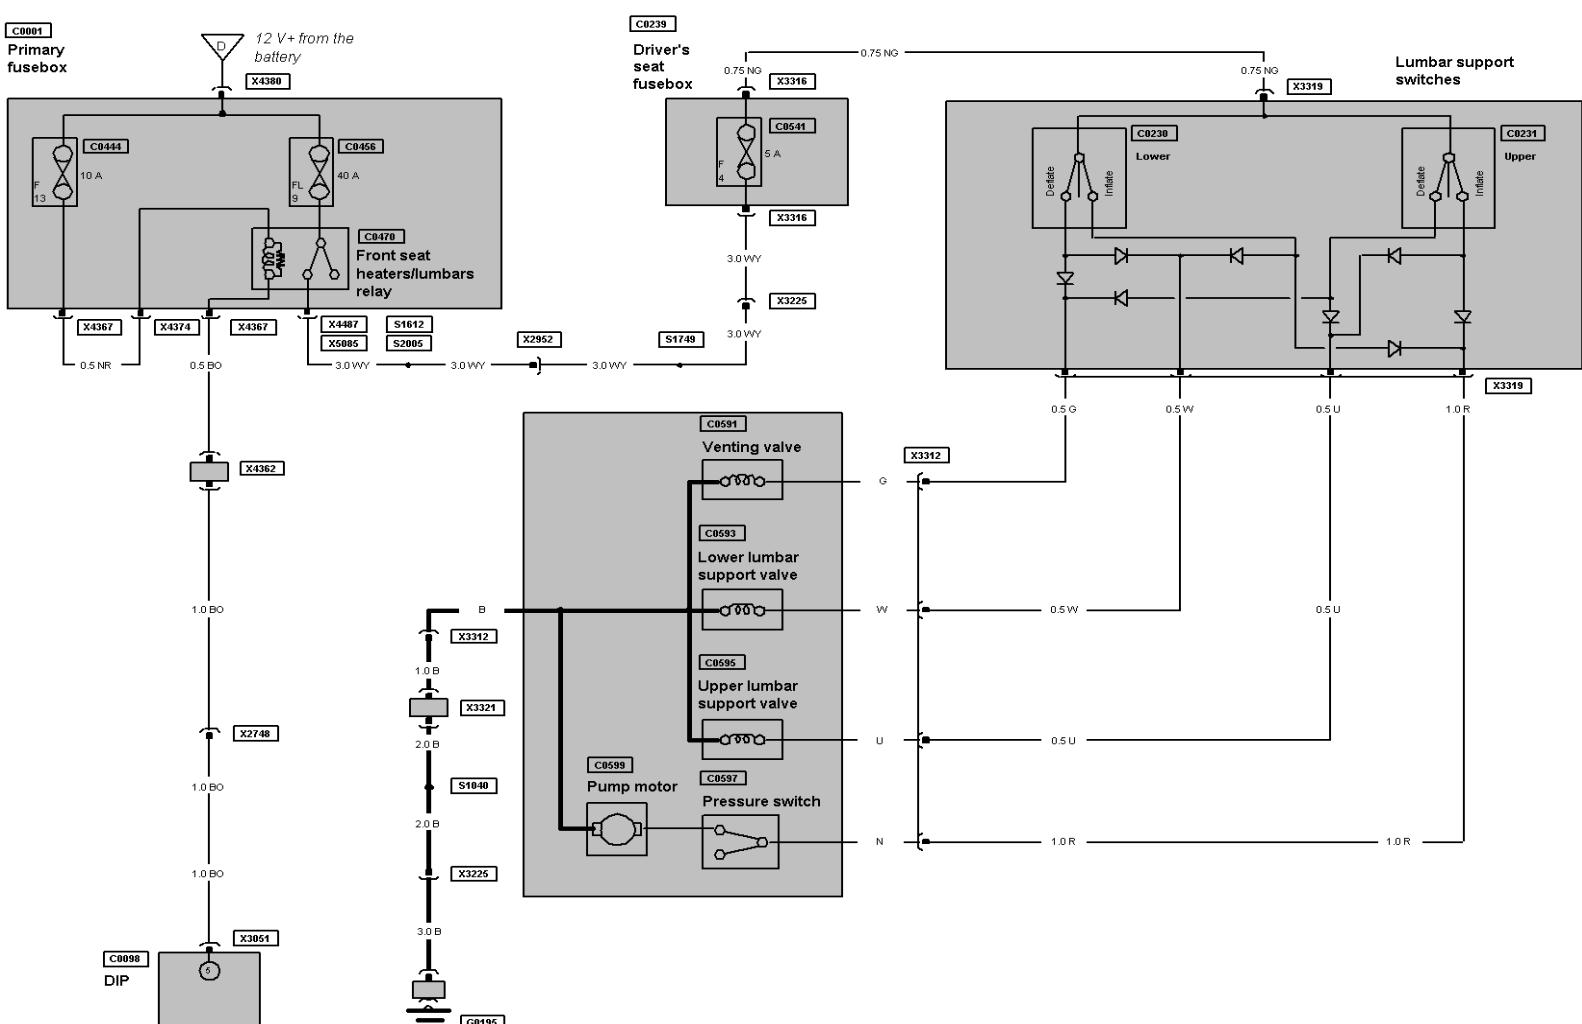


Electrical Circuit: 22 08 27: Driver's seat lumbar support (LHD)

No	Description
C0001	Primary fusebox
C0098	Driver's information panel
C0230	Driver's seat lower lumbar support switch
C0231	Driver's seat upper lumbar support switch
C0239	Driver's seat fuseblock
C0444	Fuse F13, 10 amp - primary fusebox
C0456	Fuse FL9, 40 amp - primary fusebox
C0470	Seat heaters/lumbar relay - primary fusebox
C0541	Fuse F4, 5 amp - driver's seat fusebox
C0591	Driver's seat lumbar support venting solenoid valve
C0593	Driver's seat lower lumbar support valve
C0595	Driver's seat upper lumbar support valve
C0597	Driver's seat lumbar support pressure switch
C0599	Driver's seat lumbar support pump motor
G0195	Ground point header connector 6-way
S1040	Splice - Black - driver's seat loom
S1612	Splice - White/yellow - rear main loom
S1749	Splice - White/yellow - console loom
S2005	Splice - White/yellow - rear main loom
X2748	Front main loom to left-hand drive facia loom plug and socket 22-way
X2952	Rear main loom to left-hand drive console loom plug and socket 20-way
X3051	Driver's information panel connector 12-way
X3225	Left-hand drive console loom to driver's seat loom plug and socket 20-way
X3312	Driver's seat lumbar support connector 6-way
X3316	Driver's seat fusebox connector 12-way
X3319	Driver's seat lumbar support switches connector 6-way
X3321	Header connector 20-way
X4362	Header connector 20-way
X4367	Primary fusebox connector 12-way
X4374	Primary fusebox connector 18-way
X4380	Primary fusebox connector 2-way
X4487	Primary fusebox connector 1-way
X5085	Primary fusebox connector 1-way

Circuit Links

Description	Circuit	Additional Information
D	050105	12 V+ from the battery

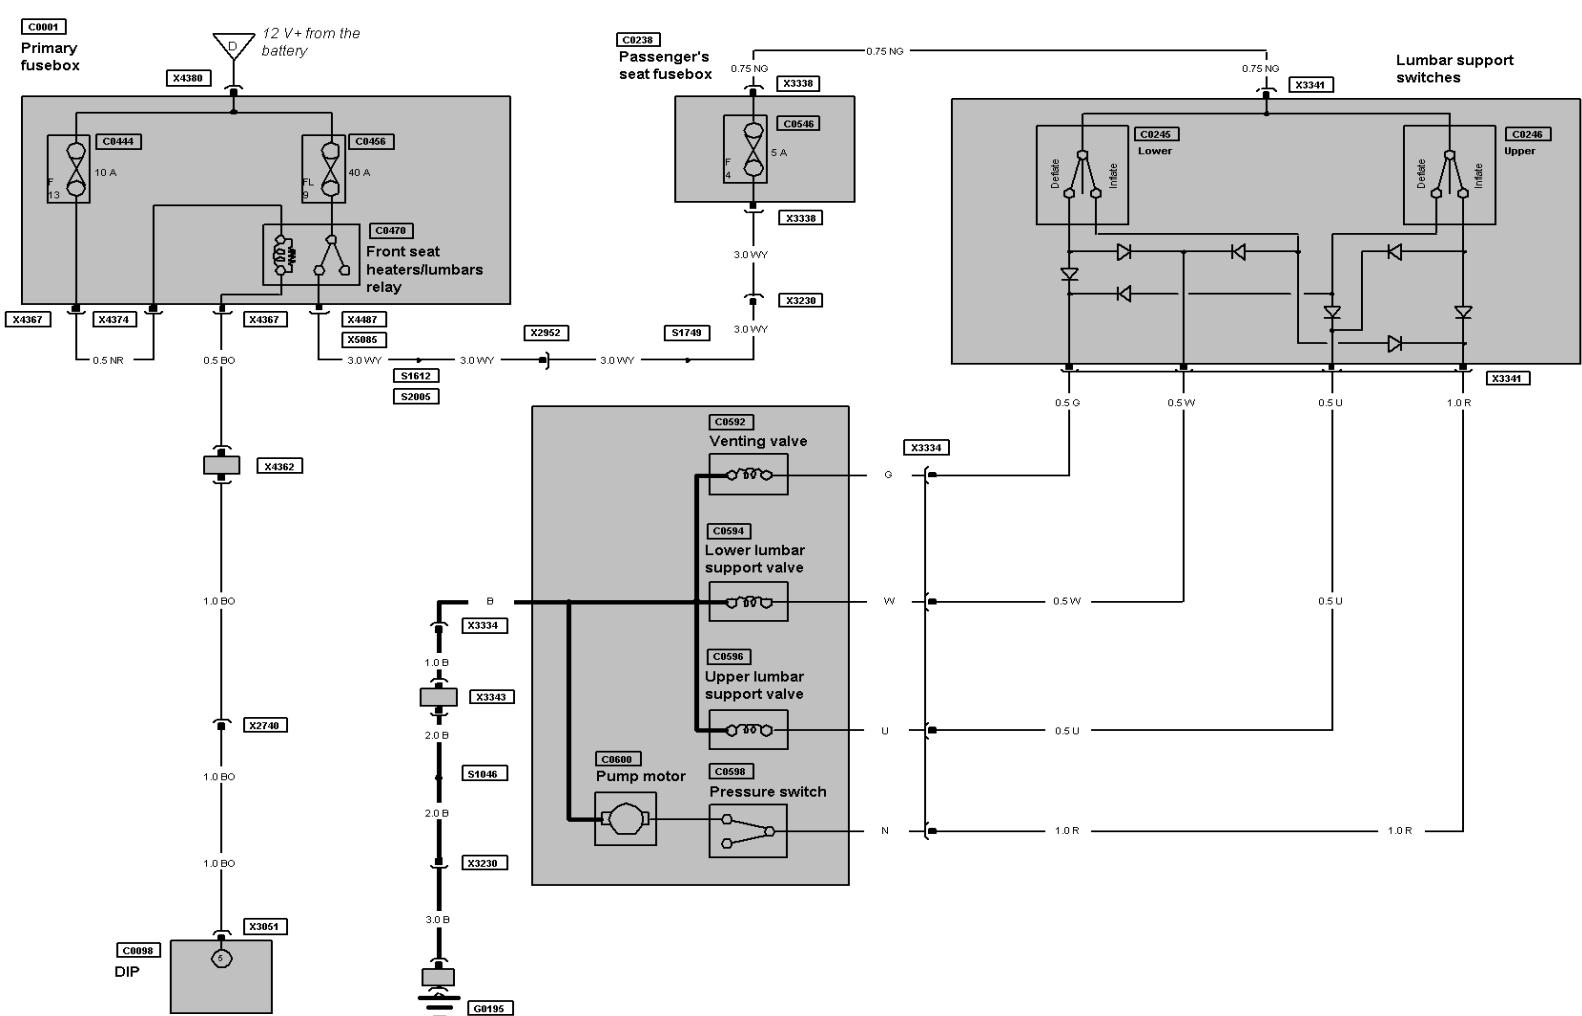


Electrical Circuit: 22 08 29: Front passenger's seat lumbar support (LHD)

No	Description
C0001	Primary fusebox
C0098	Driver's information panel
C0238	Front passenger's seat fuseblock
C0245	Front passenger's seat lower lumbar support switch
C0246	Front passenger's seat upper lumbar support switch
C0444	Fuse F13, 10 amp - primary fusebox
C0456	Fuse FL9, 40 amp - primary fusebox
C0470	Seat heaters/lumbar relay - primary fusebox
C0546	Fuse F4, 5 amp - front passenger's seat fusebox
C0592	Front passenger's seat lumbar support venting solenoid valve
C0594	Front passenger's seat lower lumbar support valve
C0596	Front passenger's seat upper lumbar support valve
C0598	Front passenger's seat lumbar support pressure switch
C0600	Front passenger's seat lumbar support pump motor
G0195	Ground point header connector 6-way
S1046	Splice - Black - passenger's seat loom
S1612	Splice - White/yellow - rear main loom
S1749	Splice - White/yellow - console loom
S2005	Splice - White/yellow - rear main loom
X2740	Front main loom to left-hand drive facia loom plug and socket 23-way
X2952	Rear main loom to left-hand drive console loom plug and socket 20-way
X3051	Driver's information panel connector 12-way
X3230	Left-hand drive console loom to passenger's seat loom plug and socket 20-way
X3334	Passenger's seat lumbar support connector 6-way
X3338	Passenger's seat fusebox connector 12-way
X3341	Passenger's seat lumbar support switches connector 6-way
X3343	Header connector 20-way
X4362	Header connector 20-way
X4367	Primary fusebox connector 12-way
X4374	Primary fusebox connector 18-way
X4380	Primary fusebox connector 2-way
X4487	Primary fusebox connector 1-way
X5085	Primary fusebox connector 1-way

Circuit Links

Description	Circuit	Additional Information
D	050105	12 V+ from the battery

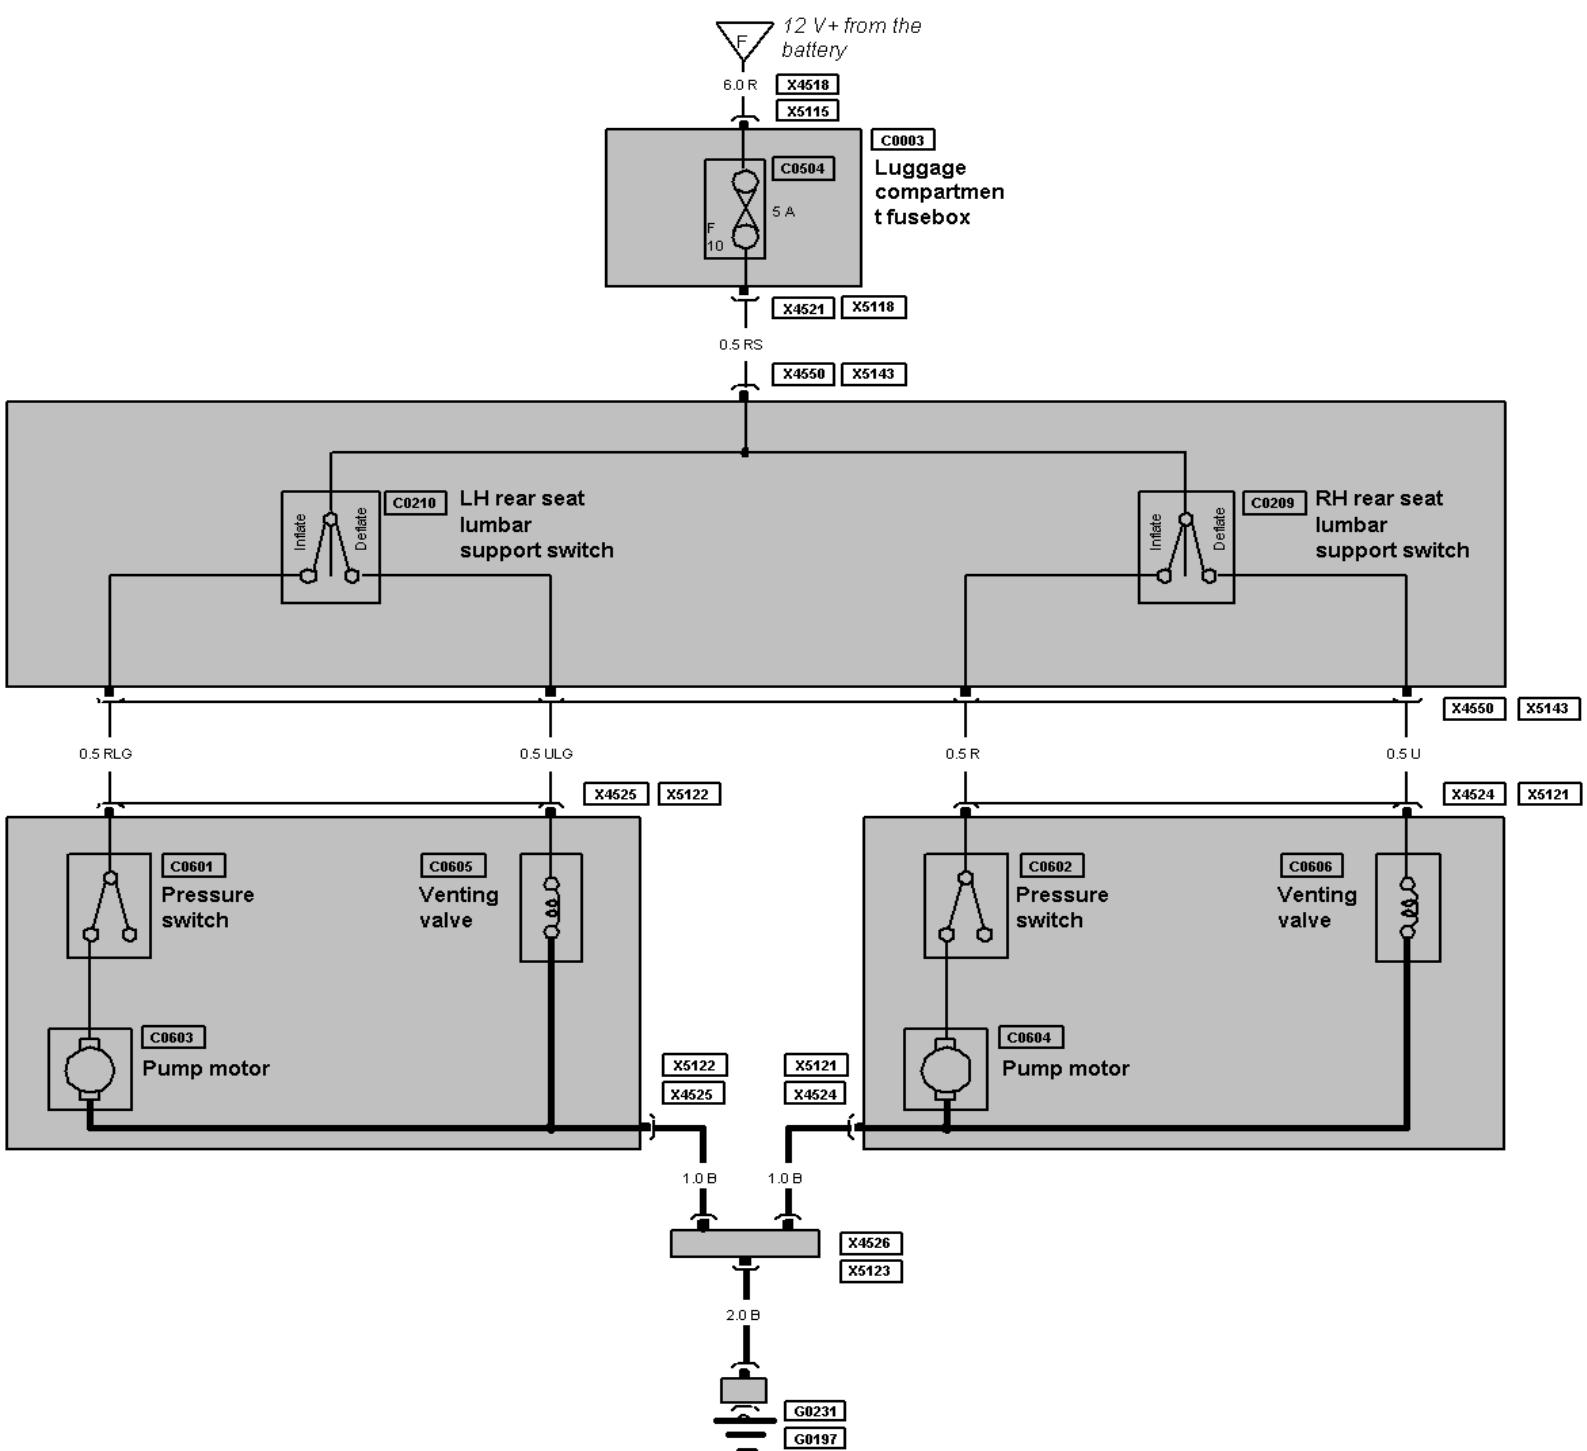


Electrical Circuit: 22 08 31: Rear seat lumbar supports

No	Description
C0003	Luggage compartment fusebox
C0209	Right-hand rear lumbar support seat switch
C0210	Left-hand rear lumbar support seat switch
C0504	Fuse F10, 5 amp - luggage compartment fusebox
C0601	Left-hand rear seat lumbar support pressure switch
C0602	Right-hand rear seat lumbar support pressure switch
C0603	Left-hand rear seat lumbar support pump motor
C0604	Right-hand rear seat lumbar support pump motor
C0605	Left-hand rear seat lumbar support venting solenoid valve
C0606	Right-hand rear seat lumbar support venting solenoid valve
G0197	Ground point header connector 10-way
G0231	Ground point header connector 10-way
X4518	Luggage compartment fusebox connector 2-way
X4521	Luggage compartment fusebox connector 13-way
X4524	Right-hand rear lumbar support connector 6-way
X4525	Left-hand rear lumbar support connector 6-way
X4526	Header connector 20-way
X4550	Rear seat switches connector 26-way
X5115	Luggage compartment fusebox connector 2-way
X5118	Luggage compartment fusebox connector 13-way
X5121	Right-hand rear lumbar support connector 6-way
X5122	Left-hand rear lumbar support connector 6-way
X5123	Header connector 20-way
X5143	Rear seat switches connector 26-way

Circuit Links

Description	Circuit	Additional Information
F	050105	12 V+ from the battery

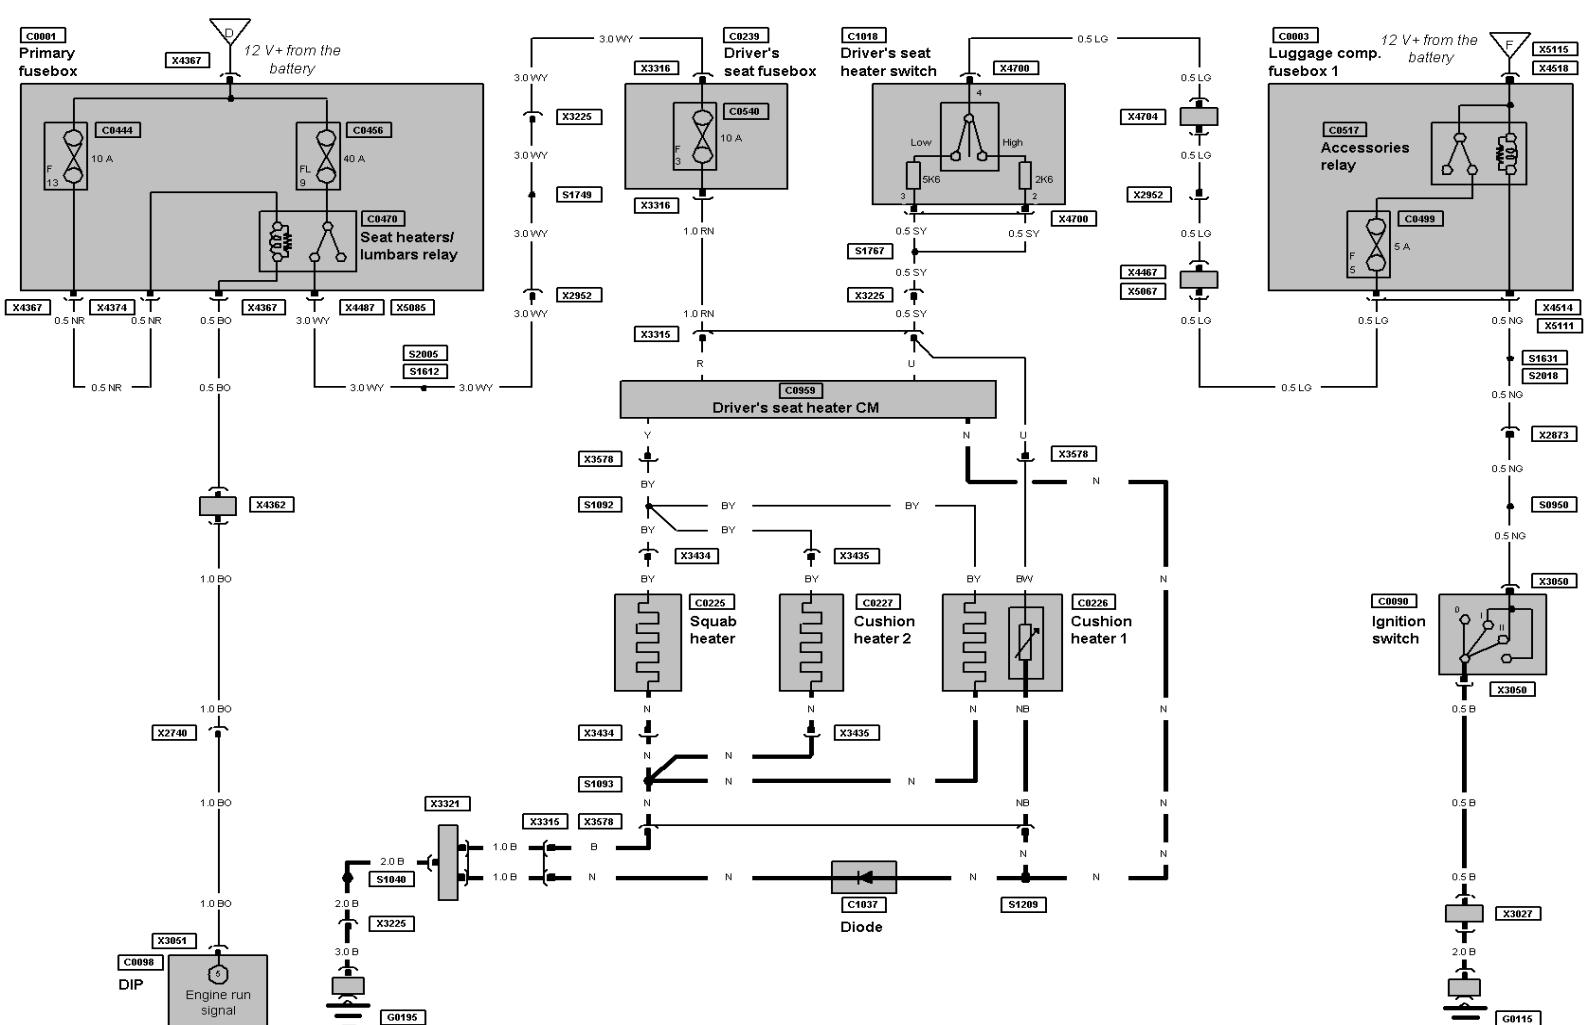


Electrical Circuit: 22 09 27: Driver's seat heaters (LHD)

No	Description
C0001	Primary fusebox
C0003	Luggage compartment fusebox
C0090	Ignition switch
C0098	Driver's information panel
C0225	Driver's seat squab heater
C0226	Driver's seat cushion heater 1
C0227	Driver's seat cushion heater 2
C0239	Driver's seat fuseblock
C0444	Fuse F13, 10 amp - primary fusebox
C0456	Fuse FL9, 40 amp - primary fusebox
C0470	Seat heaters/lumbar relay - primary fusebox
C0499	Fuse F5, 5 amp - luggage compartment fusebox
C0517	Accessories relay - luggage compartment fusebox
C0540	Fuse F3, 10 amp - driver's seat fusebox
C0959	Driver's seat heater control module
C1018	Driver's seat heater switch
C1037	Diode - driver's seat heater control module assembly
G0115	Ground point header connector 6-way
G0195	Ground point header connector 6-way
S0950	Splice - Brown/green - left-hand drive facia loom
S1040	Splice - Black - driver's seat loom
S1092	Splice - Black/yellow - driver's seat heaters loom
S1093	Splice - Brown - driver's seat heaters loom
S1209	Splice - Brown - driver's seat heater control module assembly
S1612	Splice - White/yellow - rear main loom
S1631	Splice - Brown/green - rear main loom
S1749	Splice - White/yellow - console loom
S1767	Splice - Slate/yellow - console loom
S2005	Splice - White/yellow - rear main loom
S2018	Splice - Brown/green - rear main loom
X2740	Front main loom to left-hand drive facia loom plug and socket 23-way
X2873	Rear main loom to left-hand drive facia loom plug and socket 18-way
X2952	Rear main loom to left-hand drive console loom plug and socket 20-way
X3027	Header connector 20-way
X3050	Switchbox connector 26-way
X3051	Driver's information panel connector 12-way
X3225	Left-hand drive console loom to driver's seat loom plug and socket 20-way
X3315	Driver's seat loom to seat heater control module assembly plug and socket 6-way
X3316	Driver's seat fusebox connector 12-way
X3321	Header connector 20-way
X3434	Driver's seat squab heater connector 2-way
X3435	Driver's seat cushion heater 2 connector 2-way
X3578	Driver's seat heaters assembly connector 4-way
X4362	Header connector 20-way
X4367	Primary fusebox connector 12-way
X4374	Primary fusebox connector 18-way
X4467	Header connector 20-way
X4487	Primary fusebox connector 1-way
X4514	Luggage compartment fusebox connector 21-way
X4518	Luggage compartment fusebox connector 2-way
X4700	Driver's seat heater switch connector 6-way

X4704	Header connector 20-way
X5067	Header connector 20-way
X5085	Primary fusebox connector 1-way
X5111	Luggage compartment fusebox connector 21-way
X5115	Luggage compartment fusebox connector 2-way

Circuit Links

Description	Circuit	Additional Information
D	050105	12 V+ from the battery
F	050105	12 V+ from the battery

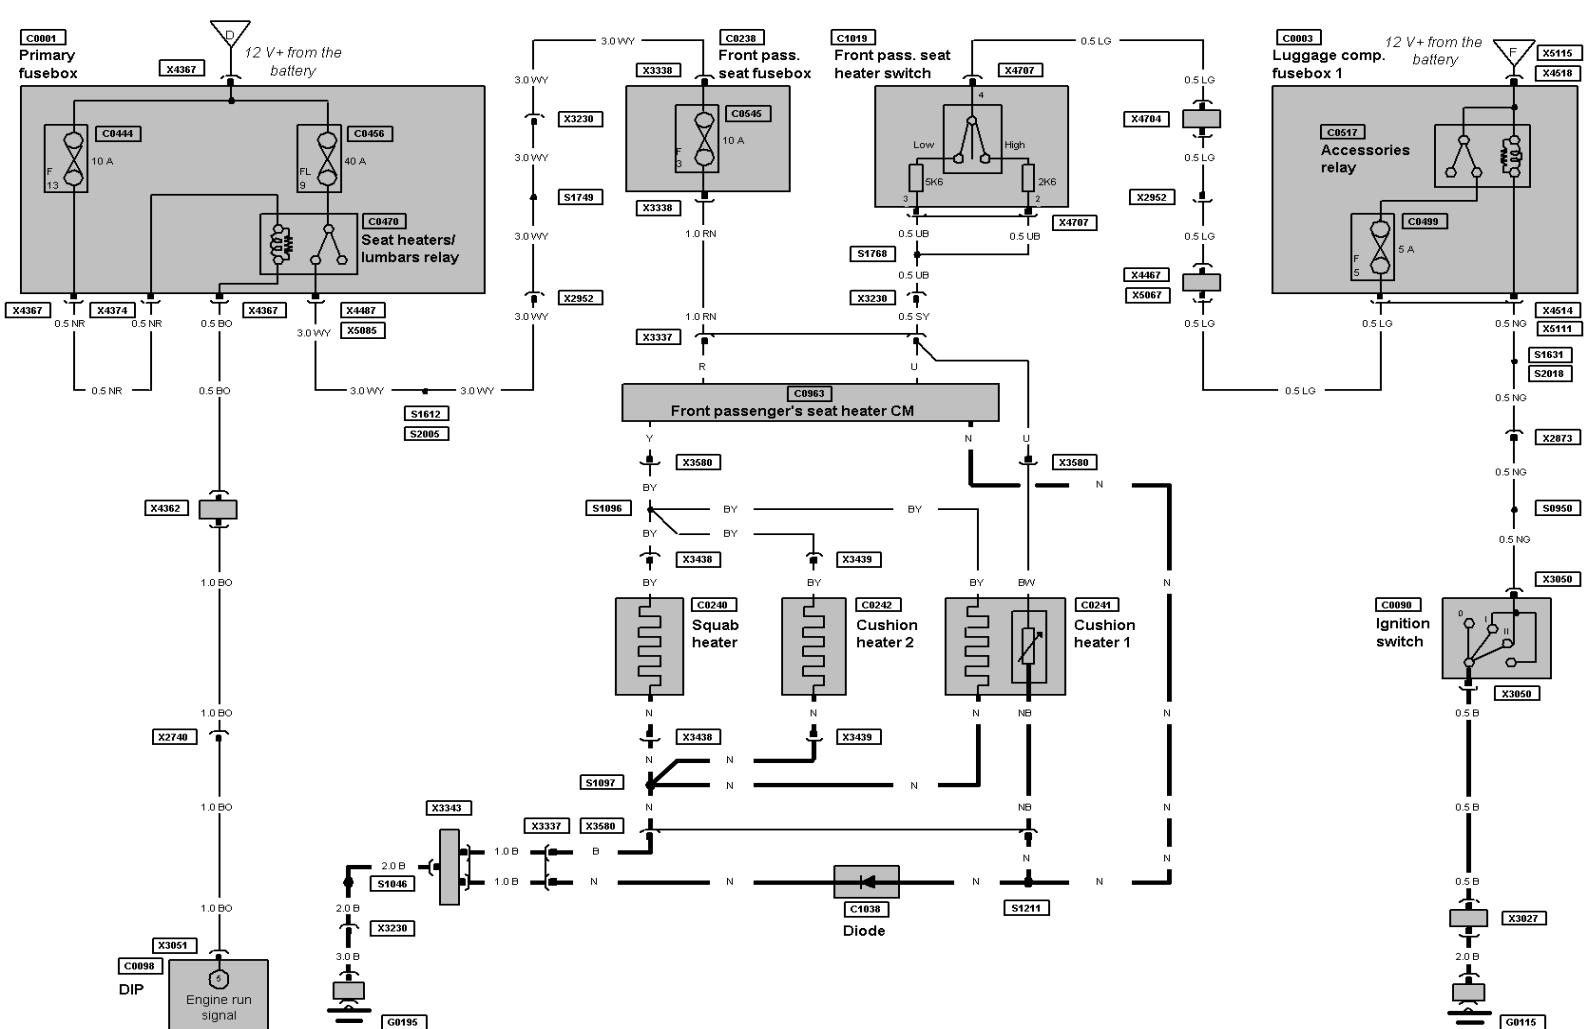


Electrical Circuit: 22 09 29: Front passenger's seat heaters (LHD)

No	Description
C0001	Primary fusebox
C0003	Luggage compartment fusebox
C0090	Ignition switch
C0098	Driver's information panel
C0238	Front passenger's seat fuseblock
C0240	Front passenger's seat squab heater
C0241	Front passenger's seat cushion heater 1
C0242	Front passenger's seat cushion heater 2
C0444	Fuse F13, 10 amp - primary fusebox
C0456	Fuse FL9, 40 amp - primary fusebox
C0470	Seat heaters/lumbar relay - primary fusebox
C0499	Fuse F5, 5 amp - luggage compartment fusebox
C0517	Accessories relay - luggage compartment fusebox
C0545	Fuse F3, 10 amp - front passenger's seat fusebox
C0963	Front passenger's seat heater control module
C1019	Front passenger's seat heater switch
C1038	Diode - front passenger's seat heater control module assembly
G0115	Ground point header connector 6-way
G0195	Ground point header connector 6-way
S0950	Splice - Brown/green - left-hand drive facia loom
S1046	Splice - Black - passenger's seat loom
S1096	Splice - Black/yellow - front passenger's seat heaters loom
S1097	Splice - Brown - front passenger's seat heaters loom
S1211	Splice - Brown - front passenger's seat heater control module assembly
S1612	Splice - White/yellow - rear main loom
S1631	Splice - Brown/green - rear main loom
S1749	Splice - White/yellow - console loom
S1768	Splice - Blue/black - console loom
S2005	Splice - White/yellow - rear main loom
S2018	Splice - Brown/green - rear main loom
X2740	Front main loom to left-hand drive facia loom plug and socket 23-way
X2873	Rear main loom to left-hand drive facia loom plug and socket 18-way
X2952	Rear main loom to left-hand drive console loom plug and socket 20-way
X3027	Header connector 20-way
X3050	Switchbox connector 26-way
X3051	Driver's information panel connector 12-way
X3230	Left-hand drive console loom to passenger's seat loom plug and socket 20-way
X3337	Front passenger's seat loom to seat heater control module assembly plug and socket 6-way
X3338	Passenger's seat fusebox connector 12-way
X3343	Header connector 20-way
X3438	Front passenger's seat squab heater connector 2-way
X3439	Front passenger's seat cushion heater 2 connector 2-way
X3580	Front passenger's seat heaters assembly connector 4-way
X4362	Header connector 20-way
X4367	Primary fusebox connector 12-way
X4374	Primary fusebox connector 18-way
X4467	Header connector 20-way
X4487	Primary fusebox connector 1-way
X4514	Luggage compartment fusebox connector 21-way
X4518	Luggage compartment fusebox connector 2-way
X4704	Header connector 20-way

X4707	Passenger's seat heater switch connector 6-way
X5067	Header connector 20-way
X5085	Primary fusebox connector 1-way
X5111	Luggage compartment fusebox connector 21-way
X5115	Luggage compartment fusebox connector 2-way

Circuit Links

Description	Circuit	Additional Information
D	050105	12 V+ from the battery
F	050105	12 V+ from the battery

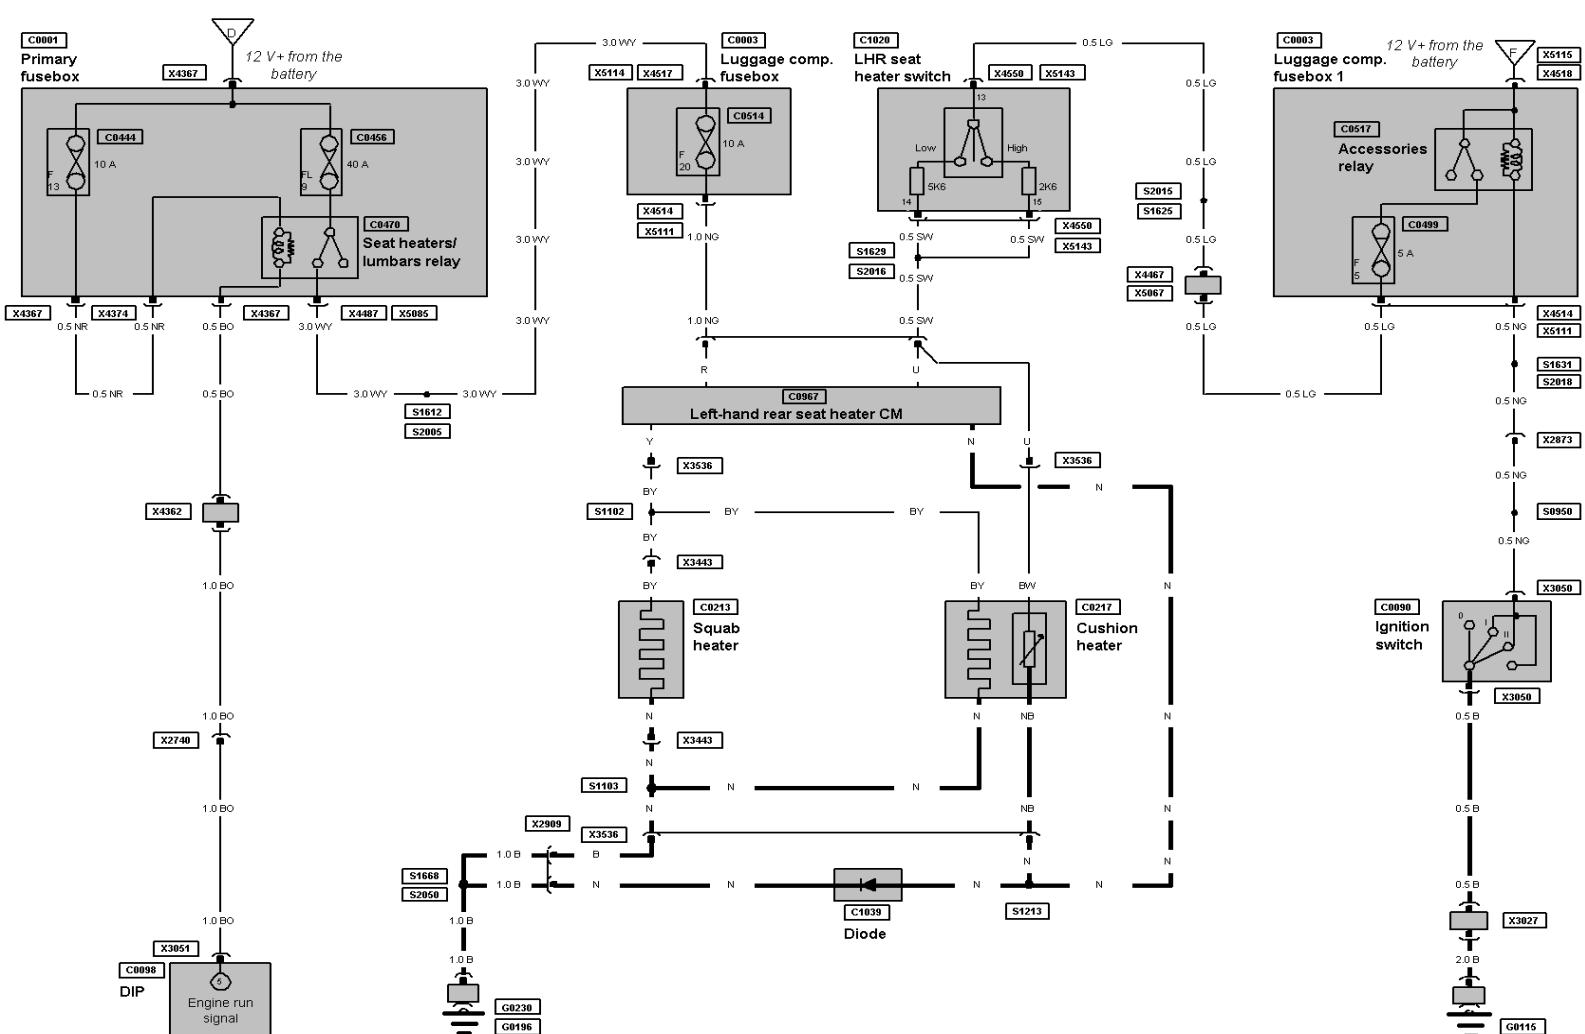


Electrical Circuit: 22 09 31: Left-hand rear seat heaters (LHD)

No	Description
C0001	Primary fusebox
C0003	Luggage compartment fusebox
C0090	Ignition switch
C0098	Driver's information panel
C0213	Left-hand rear seat squab heater
C0217	Left-hand rear seat cushion heater
C0444	Fuse F13, 10 amp - primary fusebox
C0456	Fuse FL9, 40 amp - primary fusebox
C0470	Seat heaters/lumbar relay - primary fusebox
C0499	Fuse F5, 5 amp - luggage compartment fusebox
C0514	Fuse F20, 10 amp - luggage compartment fusebox
C0517	Accessories relay - luggage compartment fusebox
C0967	Left-hand rear seat heater control module
C1020	Left-hand rear seat heater switch
C1039	Diode - left-hand rear seat heater control module assembly
G0115	Ground point header connector 6-way
G0196	Ground point header connector 10-way
G0230	Ground point header connector 10-way
S0950	Splice - Brown/green - left-hand drive facia loom
S1102	Splice - Black/yellow - left-hand rear seat heaters loom
S1103	Splice - Brown - left-hand rear seat heaters loom
S1213	Splice - Brown - left-hand rear seat heater control module assembly
S1612	Splice - White/yellow - rear main loom
S1625	Splice - Light green - rear main loom
S1629	Splice - Slate/white - rear main loom
S1631	Splice - Brown/green - rear main loom
S1668	Splice - Black - rear main loom
S2005	Splice - White/yellow - rear main loom
S2015	Splice - Light green - rear main loom
S2016	Splice - Slate/white - rear main loom
S2018	Splice - Brown/green - rear main loom
S2050	Splice - Black - rear main loom
X2740	Front main loom to left-hand drive facia loom plug and socket 23-way
X2873	Rear main loom to left-hand drive facia loom plug and socket 18-way
X2909	Rear main loom to left-hand rear seat heater control module assembly plug and socket 6-way
X3027	Header connector 20-way
X3050	Switchbox connector 26-way
X3051	Driver's information panel connector 12-way
X3443	Left-hand rear seat squab heater connector 2-way
X3536	Left-hand rear seat heaters assembly connector 4-way
X4362	Header connector 20-way
X4367	Primary fusebox connector 12-way
X4374	Primary fusebox connector 18-way
X4467	Header connector 20-way
X4487	Primary fusebox connector 1-way
X4514	Luggage compartment fusebox connector 21-way
X4517	Luggage compartment fusebox connector 4-way
X4518	Luggage compartment fusebox connector 2-way
X4550	Rear seat switches connector 26-way
X5067	Header connector 20-way
X5085	Primary fusebox connector 1-way

X5111	Luggage compartment fusebox connector 21-way
X5114	Luggage compartment fusebox connector 4-way
X5115	Luggage compartment fusebox connector 2-way
X5143	Rear seat switches connector 26-way

Circuit Links

Description	Circuit	Additional Information
D	050105	12 V+ from the battery
F	050105	12 V+ from the battery

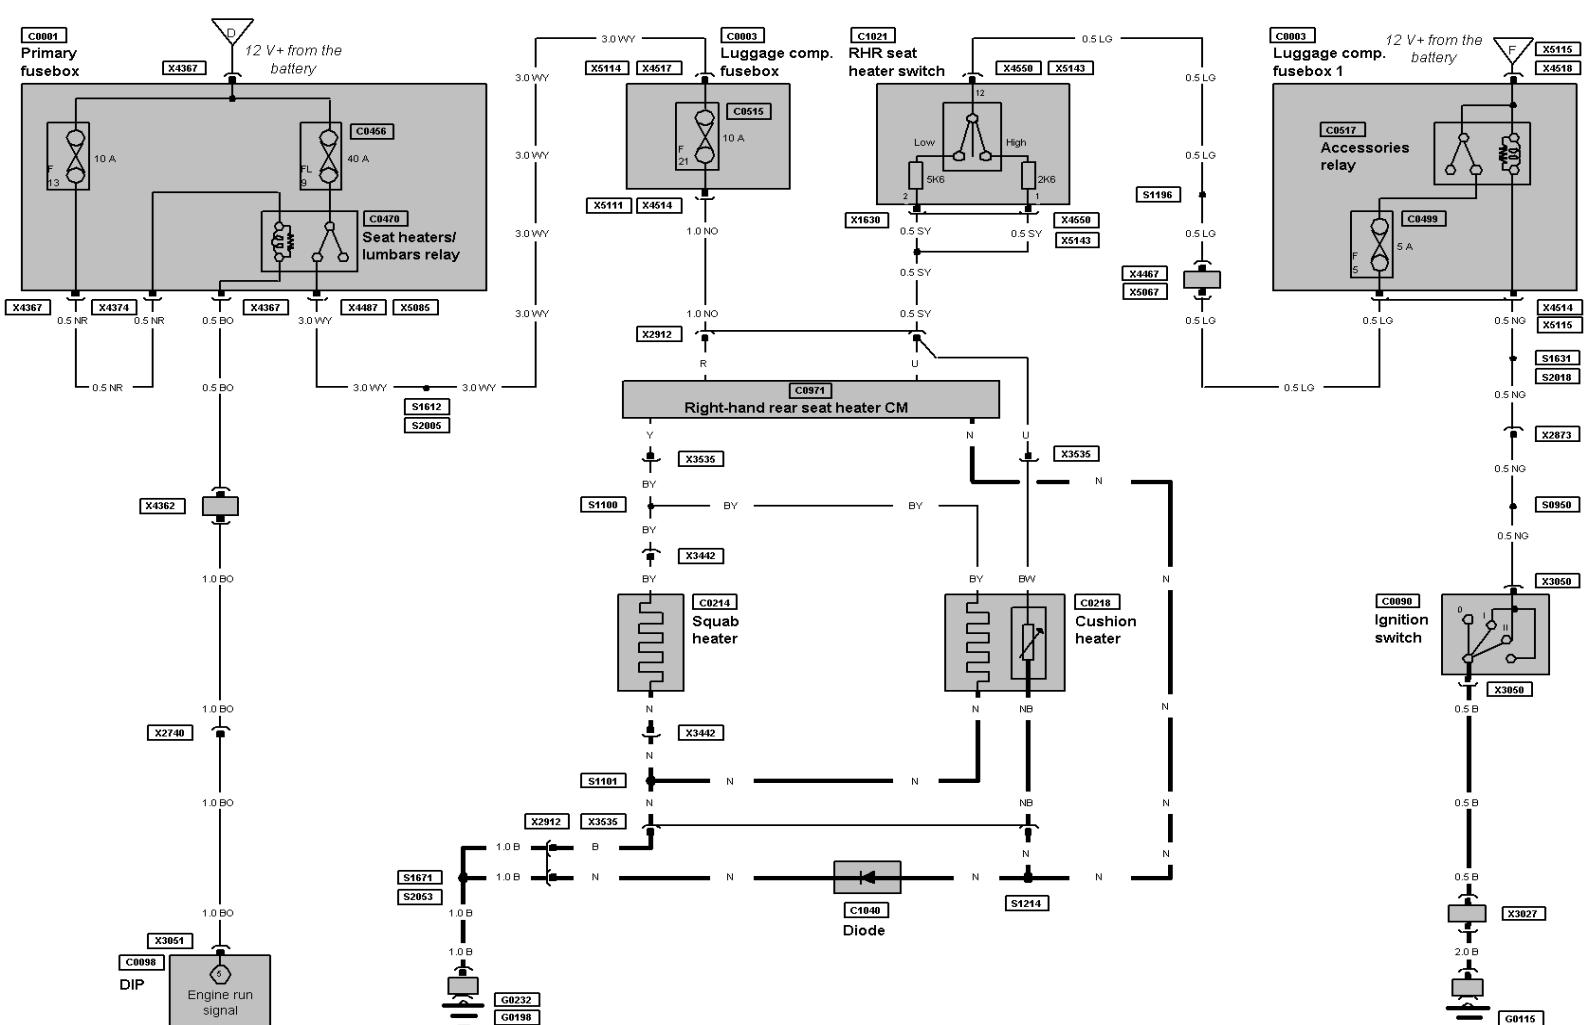


Electrical Circuit: 22 09 33: Right-hand rear seat heaters (LHD)

No	Description
C0001	Primary fusebox
C0003	Luggage compartment fusebox
C0090	Ignition switch
C0098	Driver's information panel
C0214	Right-hand rear seat squab heater
C0218	Right-hand rear seat cushion heater
C0456	Fuse FL9, 40 amp - primary fusebox
C0470	Seat heaters/lumbar relay - primary fusebox
C0499	Fuse F5, 5 amp - luggage compartment fusebox
C0515	Fuse F21, 10 amp - luggage compartment fusebox
C0517	Accessories relay - luggage compartment fusebox
C0971	Right-hand rear seat heater control module
C1021	Right-hand rear seat heater switch
C1040	Diode - right-hand rear seat heater control module assembly
G0115	Ground point header connector 6-way
G0198	Ground point header connector 10-way
G0232	Ground point header connector 10-way
S0950	Splice - Brown/green - left-hand drive facia loom
S1100	Splice - Black/yellow - right-hand rear seat heaters loom
S1101	Splice - Brown - right-hand rear seat heaters loom
S1196	Splice - Light green - rear main loom
S1214	Splice - Brown - right-hand rear seat heater control module assembly
S1612	Splice - White/yellow - rear main loom
S1631	Splice - Brown/green - rear main loom
S1671	Splice - Black - rear main loom
S2005	Splice - White/yellow - rear main loom
S2018	Splice - Brown/green - rear main loom
S2053	1
X1630	Brake fluid level switch connector
X2740	Front main loom to left-hand drive facia loom plug and socket 23-way
X2873	Rear main loom to left-hand drive facia loom plug and socket 18-way
X2912	Rear main loom to right-hand rear seat heater control module assembly plug and socket 6-way
X3027	Header connector 20-way
X3050	Switchbox connector 26-way
X3051	Driver's information panel connector 12-way
X3442	Right-hand rear seat squab heater connector 2-way
X3535	Right-hand rear seat heaters assembly connector 4-way
X4362	Header connector 20-way
X4367	Primary fusebox connector 12-way
X4374	Primary fusebox connector 18-way
X4467	Header connector 20-way
X4487	Primary fusebox connector 1-way
X4514	Luggage compartment fusebox connector 21-way
X4517	Luggage compartment fusebox connector 4-way
X4518	Luggage compartment fusebox connector 2-way
X4550	Rear seat switches connector 26-way
X5067	Header connector 20-way
X5085	Primary fusebox connector 1-way
X5111	Luggage compartment fusebox connector 21-way
X5114	Luggage compartment fusebox connector 4-way
X5115	Luggage compartment fusebox connector 2-way

X5143 Rear seat switches connector 26-way

Circuit Links


Description	Circuit	Additional Information
D	050105	12 V+ from the battery
F	050105	12 V+ from the battery

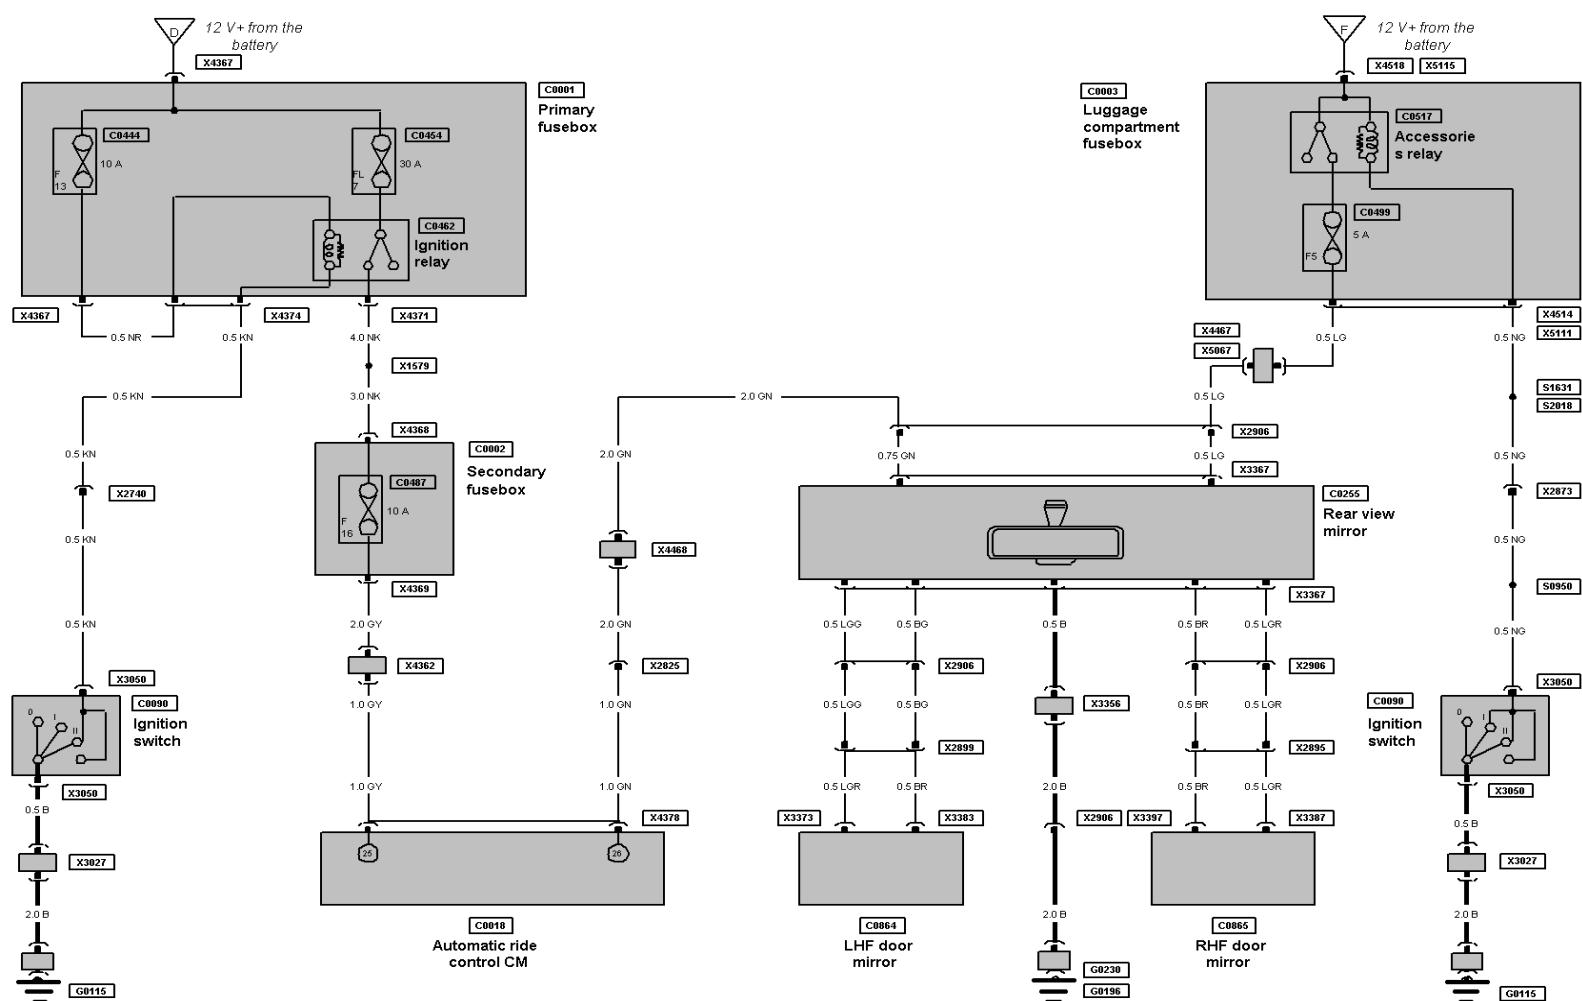

Electrical Circuit: 22 10 11: Rear view mirror (LHD)

No	Description
C0001	Primary fusebox
C0002	Secondary fusebox
C0003	Luggage compartment fusebox
C0018	Automatic ride control control module
C0090	Ignition switch
C0255	Electrochromic rear view mirror
C0444	Fuse F13, 10 amp - primary fusebox
C0454	Fuse FL7, 30 amp - primary fusebox
C0462	Ignition relay - primary fusebox
C0487	Fuse F16, 10 amp - secondary fusebox
C0499	Fuse F5, 5 amp - luggage compartment fusebox
C0517	Accessories relay - luggage compartment fusebox
C0864	Left-hand electrochromic door mirror
C0865	Right-hand electrochromic door mirror
G0115	Ground point header connector 6-way
G0196	Ground point header connector 10-way
G0230	Ground point header connector 10-way
S0950	Splice - Brown/green - left-hand drive facia loom
S1631	Splice - Brown/green - rear main loom
S2018	Splice - Brown/green - rear main loom
X1579	Right-hand seat monitor phono connector
X2740	Front main loom to left-hand drive facia loom plug and socket 23-way
X2825	Front main loom to rear main loom plug and socket 22-way
X2873	Rear main loom to left-hand drive facia loom plug and socket 18-way
X2895	Right-hand front door plug and socket 30-way
X2899	Left-hand front door plug and socket 30-way
X2906	Rear main loom to roof loom plug and socket 20-way
X3027	Header connector 20-way
X3050	Switchbox connector 26-way
X3356	Header connector 20-way
X3367	Rear view mirror connector 10-way
X3373	Left-hand door mirror plug and socket 8-way
X3383	Left-hand door mirror plug and socket 8-way
X3387	Right-hand door mirror plug and socket 8-way
X3397	Right-hand door mirror plug and socket 8-way
X4362	Header connector 20-way
X4367	Primary fusebox connector 12-way
X4368	Secondary fusebox connector 4-way
X4369	Secondary fusebox connector 21-way
X4371	Primary fusebox connector 3-way
X4374	Primary fusebox connector 18-way
X4378	Automatic ride control control module connector 26-way
X4467	Header connector 20-way
X4468	Header connector 20-way
X4514	Luggage compartment fusebox connector 21-way
X4518	Luggage compartment fusebox connector 2-way
X5067	Header connector 20-way
X5111	Luggage compartment fusebox connector 21-way
X5115	Luggage compartment fusebox connector 2-way

Description	Circuit	Additional Information
D	050105	12 V+ from the battery
F	050105	12 V+ from the battery

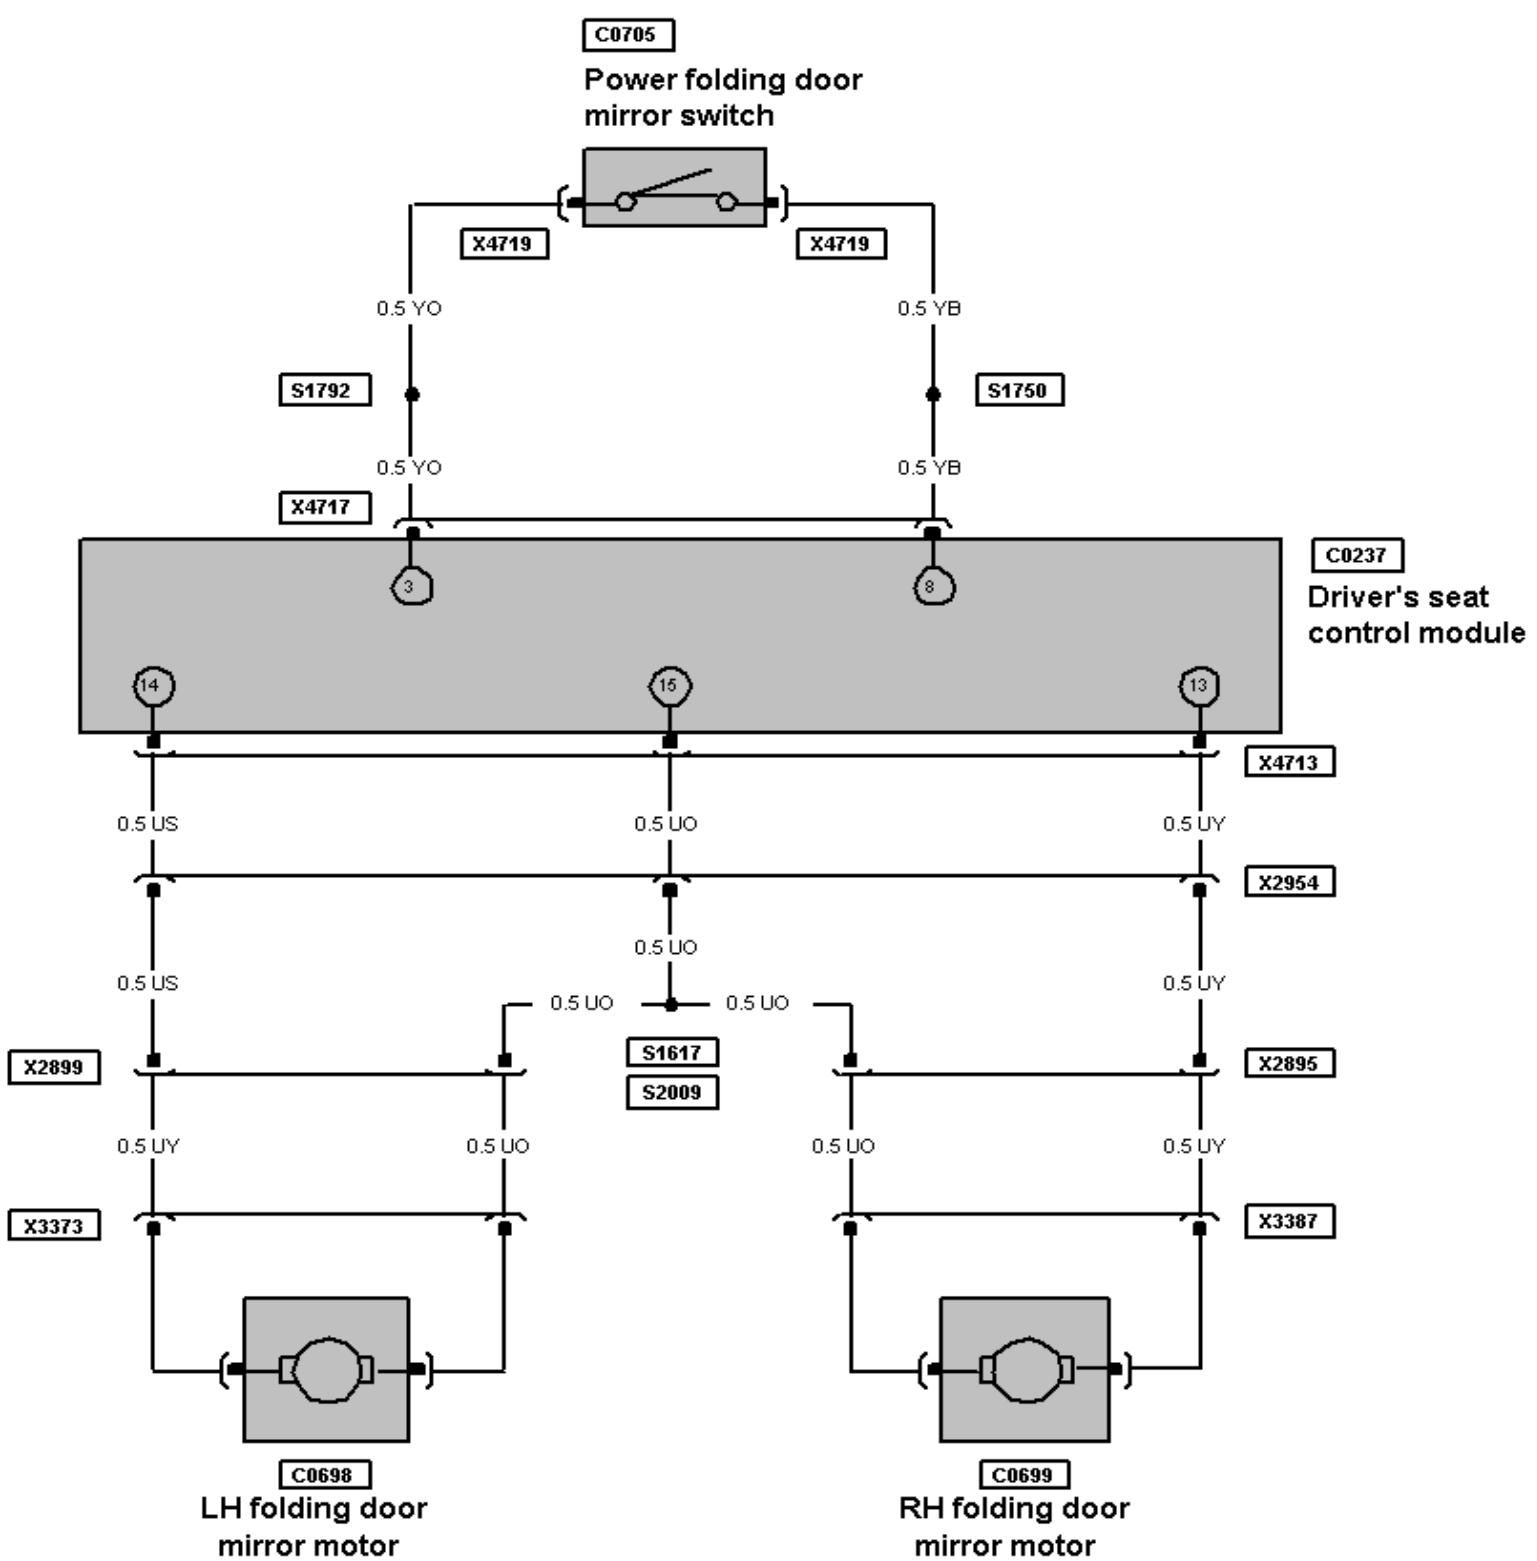


Electrical Circuit: 22 11 07: Power folding door mirrors (LHD)

No	Description
C0237	Driver's seat control module
C0698	Left-hand folding door mirror motor
C0699	Right-hand folding door mirror motor
C0705	Folding door mirror switch
S1617	Splice - Blue/orange - rear main loom
S1750	Splice - Yellow/black - console loom
S1792	Splice - Yellow/orange - console loom
S2009	Splice - Blue/orange - rear main loom
X2895	Right-hand front door plug and socket 30-way
X2899	Left-hand front door plug and socket 30-way
X2954	Rear main loom to left-hand drive console loom plug and socket 18-way
X3373	Left-hand door mirror plug and socket 8-way
X3387	Right-hand door mirror plug and socket 8-way
X4713	Driver's seat control module connector 22-way
X4717	Driver's seat control module connector 12-way
X4719	Left-hand door mirror switches connector 12-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

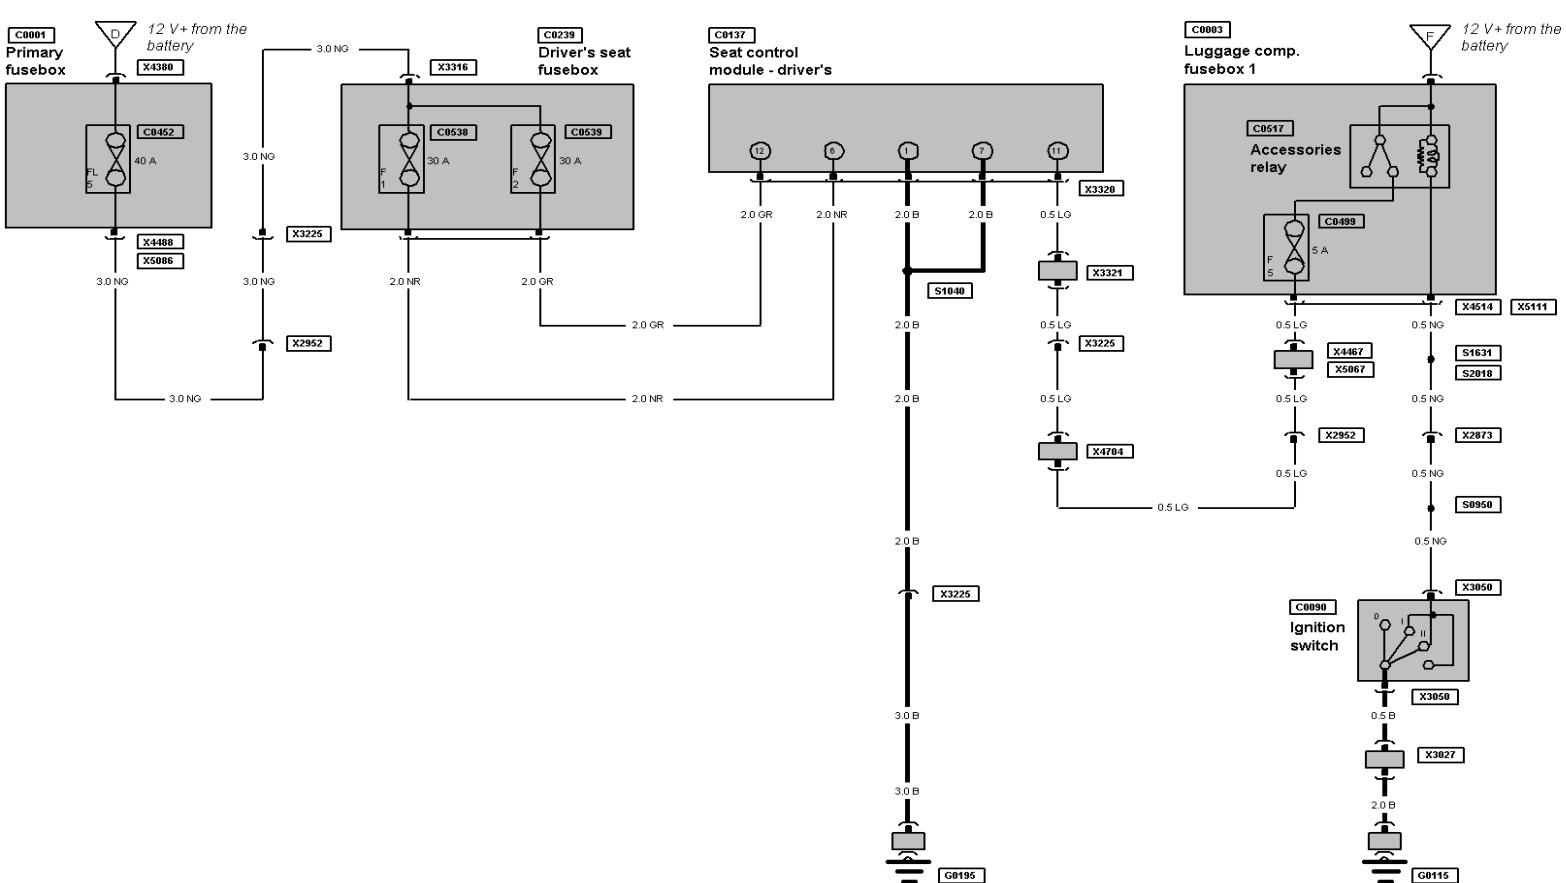


Electrical Circuit: 22 20 05: Driver's seat control module power supply and grounds (LHD)

No	Description
C0001	Primary fusebox
C0003	Luggage compartment fusebox
C0090	Ignition switch
C0137	Left-hand front door step lamp
C0239	Driver's seat fuseblock
C0452	Fuse FL5, 40 amp - primary fusebox
C0499	Fuse F5, 5 amp - luggage compartment fusebox
C0517	Accessories relay - luggage compartment fusebox
C0538	Fuse F1, 30 amp - driver's seat fusebox
C0539	Fuse F2, 30 amp - driver's seat fusebox
G0115	Ground point header connector 6-way
G0195	Ground point header connector 6-way
S0950	Splice - Brown/green - left-hand drive facia loom
S1040	Splice - Black - driver's seat loom
S1631	Splice - Brown/green - rear main loom
S2018	Splice - Brown/green - rear main loom
X2873	Rear main loom to left-hand drive facia loom plug and socket 18-way
X2952	Rear main loom to left-hand drive console loom plug and socket 20-way
X3027	Header connector 20-way
X3050	Switchbox connector 26-way
X3225	Left-hand drive console loom to driver's seat loom plug and socket 20-way
X3316	Driver's seat fusebox connector 12-way
X3320	Driver's seat control module connector 12-way
X3321	Header connector 20-way
X4380	Primary fusebox connector 2-way
X4467	Header connector 20-way
X4488	Primary fusebox connector 5-way
X4514	Luggage compartment fusebox connector 21-way
X4704	Header connector 20-way
X5067	Header connector 20-way
X5086	Primary fusebox connector 5-way
X5111	Luggage compartment fusebox connector 21-way

Circuit Links

Description	Circuit	Additional Information
D	050105	12 V+ from the battery
F	050105	12 V+ from the battery

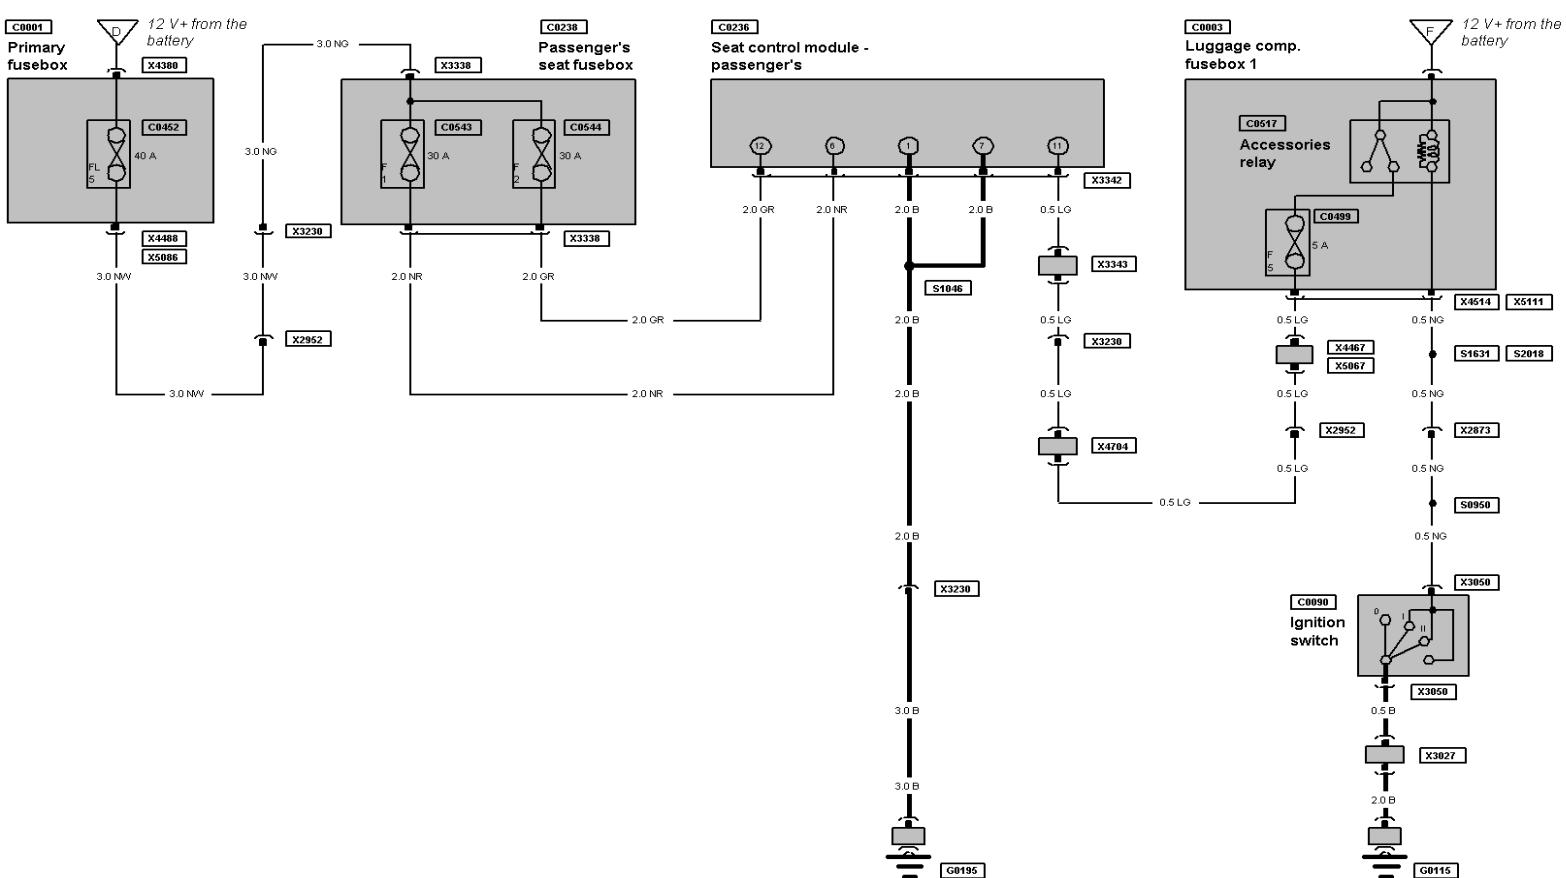

Electrical Circuit: 22 21 05: Front passenger's seat control module power supply and grounds (LHD)

No	Description
C0001	Primary fusebox
C0003	Luggage compartment fusebox
C0090	Ignition switch
C0236	Passenger's seat control module
C0238	Front passenger's seat fuseblock
C0452	Fuse FL5, 40 amp - primary fusebox
C0499	Fuse F5, 5 amp - luggage compartment fusebox
C0517	Accessories relay - luggage compartment fusebox
C0543	Fuse F1, 30 amp - front passenger's seat fusebox
C0544	Fuse F2, 30 amp - front passenger's seat fusebox
G0115	Ground point header connector 6-way
G0195	Ground point header connector 6-way
S0950	Splice - Brown/green - left-hand drive facia loom
S1046	Splice - Black - passenger's seat loom
S1631	Splice - Brown/green - rear main loom
S2018	Splice - Brown/green - rear main loom
X2873	Rear main loom to left-hand drive facia loom plug and socket 18-way
X2952	Rear main loom to left-hand drive console loom plug and socket 20-way
X3027	Header connector 20-way
X3050	Switchbox connector 26-way
X3230	Left-hand drive console loom to passenger's seat loom plug and socket 20-way
X3338	Passenger's seat fusebox connector 12-way
X3342	Passenger's seat control module connector 12-way
X3343	Header connector 20-way
X4380	Primary fusebox connector 2-way
X4467	Header connector 20-way
X4488	Primary fusebox connector 5-way
X4514	Luggage compartment fusebox connector 21-way
X4704	Header connector 20-way
X5067	Header connector 20-way
X5086	Primary fusebox connector 5-way
X5111	Luggage compartment fusebox connector 21-way

Circuit Links

Description	Circuit	Additional Information
D	050105	12 V+ from the battery
F	050105	12 V+ from the battery