


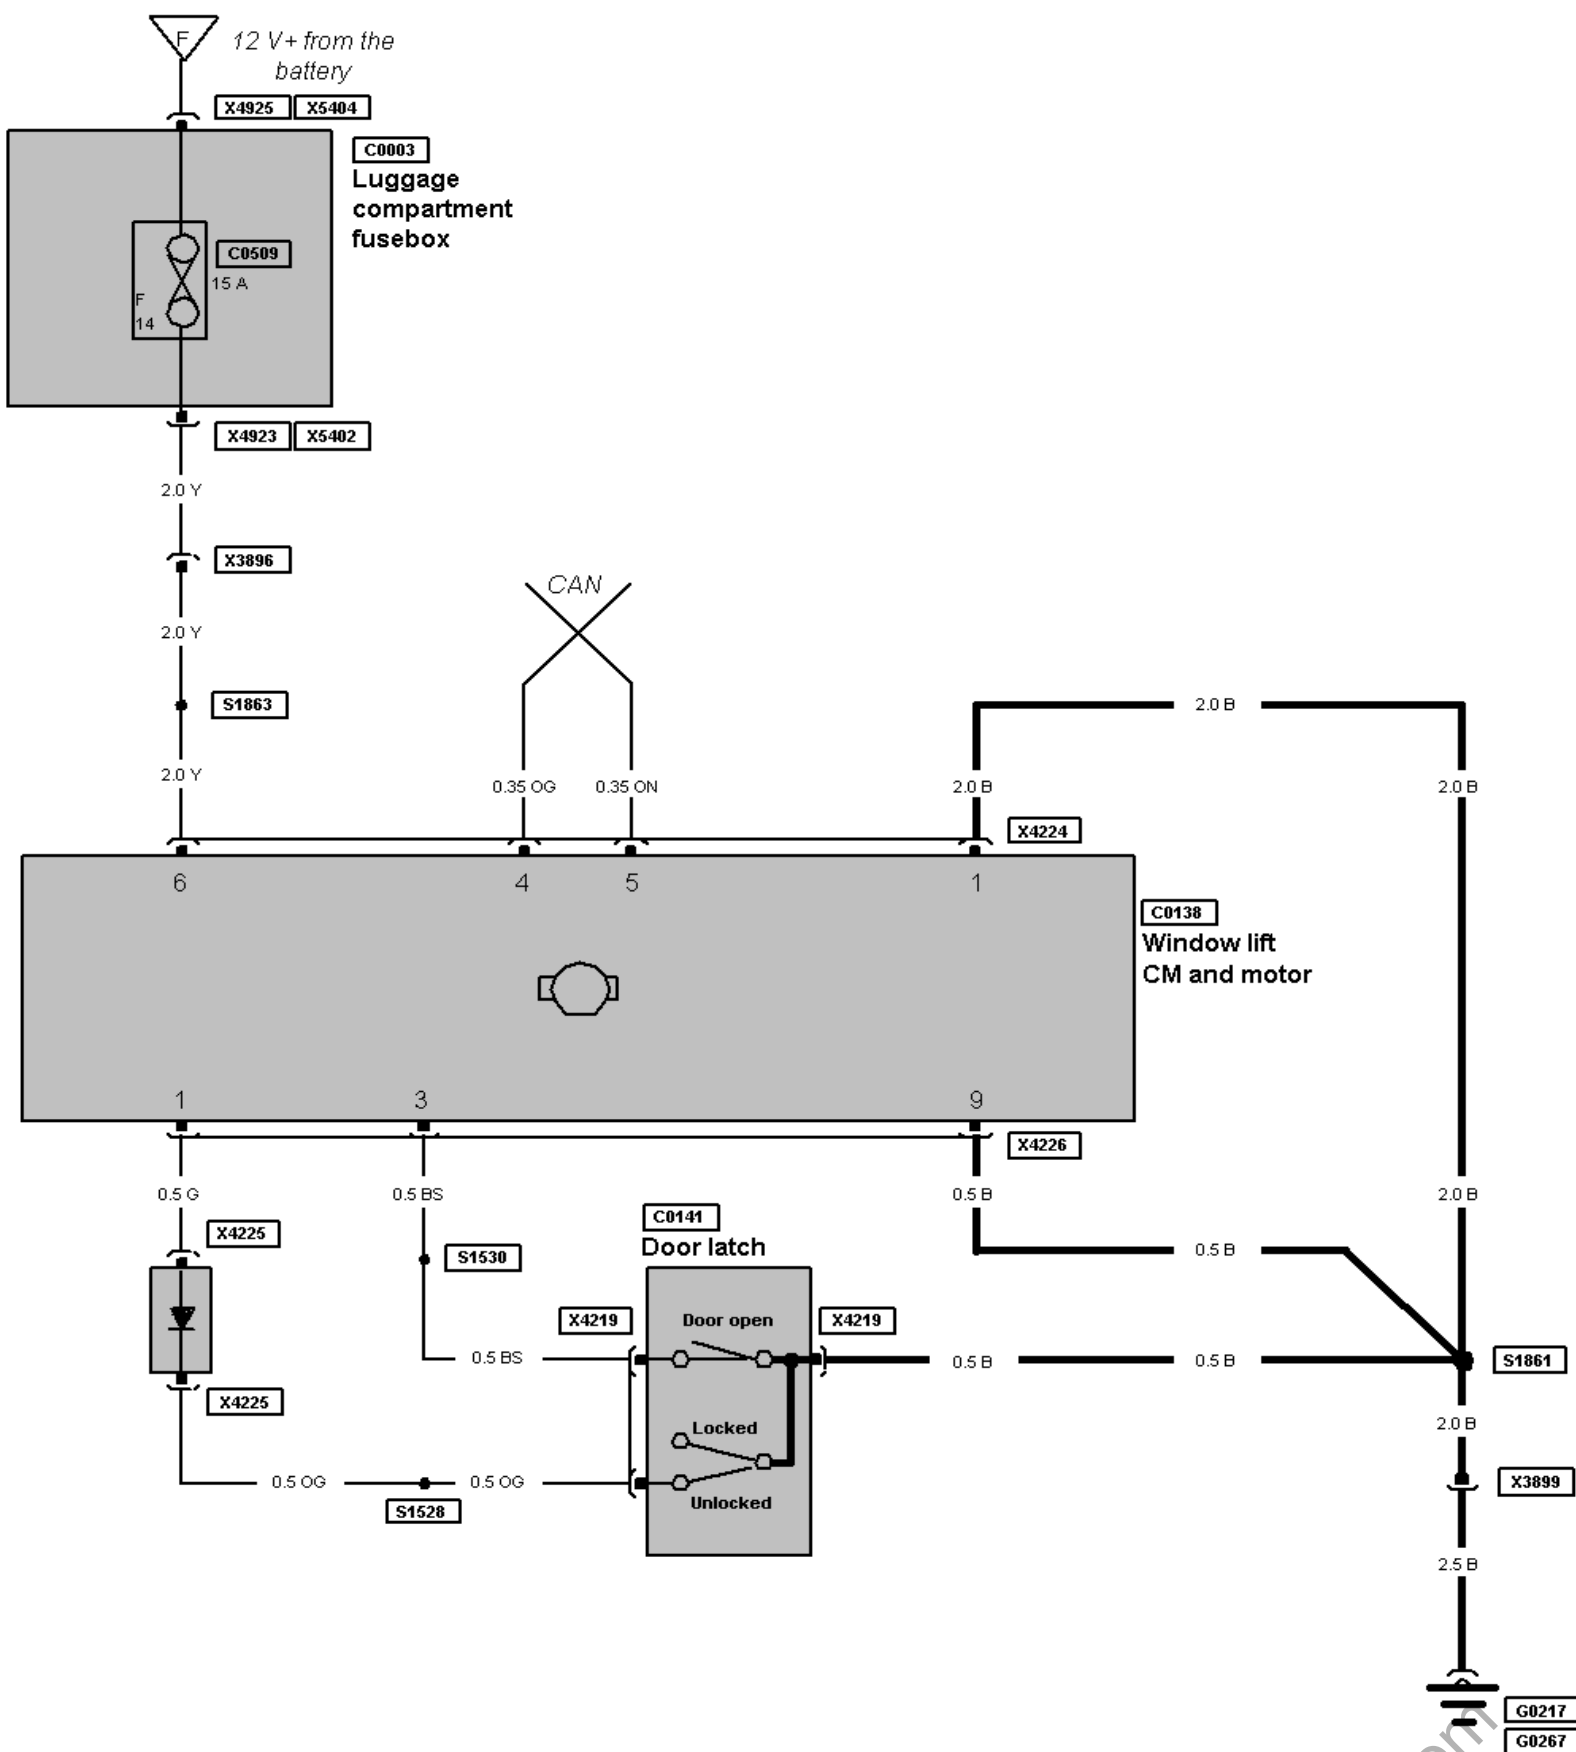


Electrical Circuit: 21 01 15: Left-hand front window lift control module and motor

No	Description
C0003	Luggage compartment fusebox
C0138	Left-hand front door window lift motor and control module
C0141	Left-hand front door latch switch
C0509	Fuse F15, 15 amp - luggage compartment fusebox
G0217	Ground point connector
G0267	Ground point connector
S1528	Splice - Orange/green - left-hand door loom
S1530	Splice - Black/slate - left-hand door loom
S1861	Splice - Black - right-hand door loom
S1863	Splice - left-hand door loom
X3896	Rear main loom to left-hand door loom plug and socket 10-way
X3899	Rear main loom to left-hand door loom plug and socket 10-way
X4219	Left-hand door latch connector 6-way
X4224	Left-hand front window lift control module connector 10-way
X4225	Diode connector 2-way
X4226	Left-hand front window lift control module connector 12-way
X4923	Luggage compartment fusebox connector 21-way
X4925	Luggage compartment fusebox connector 2-way
X5402	Luggage compartment fusebox connector 21-way
X5404	Luggage compartment fusebox connector 13-way

Circuit Links

Description	Circuit	Additional Information
F	050107	12 V+ from the battery

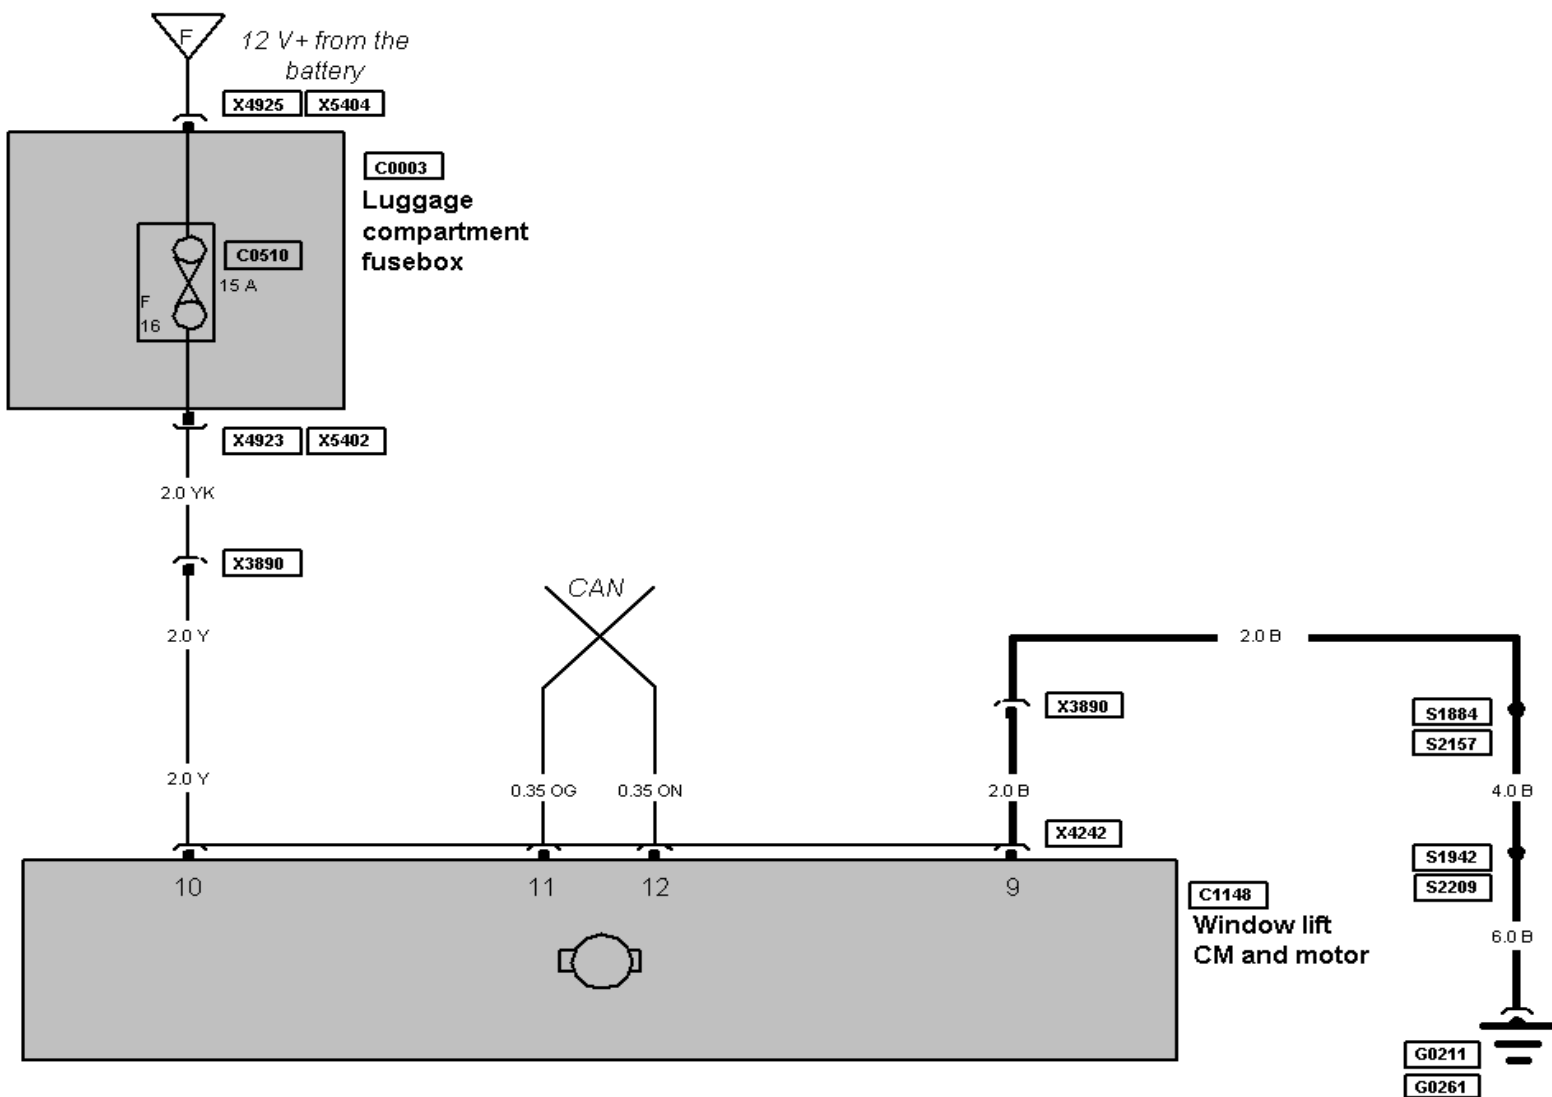

Electrical Circuit: 21 03 14: Left-hand rear window lift control module and motor

No	Description
C0003	Luggage compartment fusebox
C0510	Fuse F16, 15 amp - luggage compartment fusebox
C1148	Left-hand rear window lift motor and control module
G0211	Ground point connector
G0261	Ground point connector
S1884	Splice - Black - rear main loom
S1942	Splice - Black - rear main loom
S2157	Splice - Black - rear main loom
S2209	Splice - Black - rear main loom
X3890	Rear main loom to left-hand rear quarter loom plug and socket 10-way
X4242	Left-hand rear window lift control module connector 18-way
X4923	Luggage compartment fusebox connector 21-way
X4925	Luggage compartment fusebox connector 2-way
X5402	Luggage compartment fusebox connector 21-way
X5404	Luggage compartment fusebox connector 13-way

Circuit Links

Description	Circuit	Additional Information
F	050107	12 V+ from the battery




Electrical Circuit: 21 05 03: Window lift switches LHD

No	Description
C0413	Right-hand front door window lift switch
C0414	Right-hand rear door window lift switch - console
C0415	Left-hand rear door window lift switch - console
C0416	Left-hand front door window lift switch
C1081	Rear window lifts isolation switch
C1146	Vehicle interface (Rear body) module
C1150	Left-hand rear window lift switch - rear quarter panel
C1151	Right-hand rear window lift switch - rear quarter panel
X3795	Rear main loom to left-hand drive console loom plug and socket 20-way
X3797	Rear main loom to left-hand drive console loom plug and socket 18-way
X3889	Rear main loom to right-hand rear quarter loom plug and socket 10-way
X3891	Rear main loom to left-hand rear quarter loom plug and socket 10-way
X3935	Left-hand window lifts switches connector 6-way
X3943	Minor switch panel control module connector 20-way
X3945	Right-hand window lifts switches connector 6-way
X4244	Left-hand rear window lift switch connector 6-way
X4247	Right-hand rear window lift switch connector 6-way
X4999	Header connector 20-way
X5017	Vehicle interface module connector 81-way
X5491	Header connector 20-way
X5511	Vehicle interface module connector 81-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

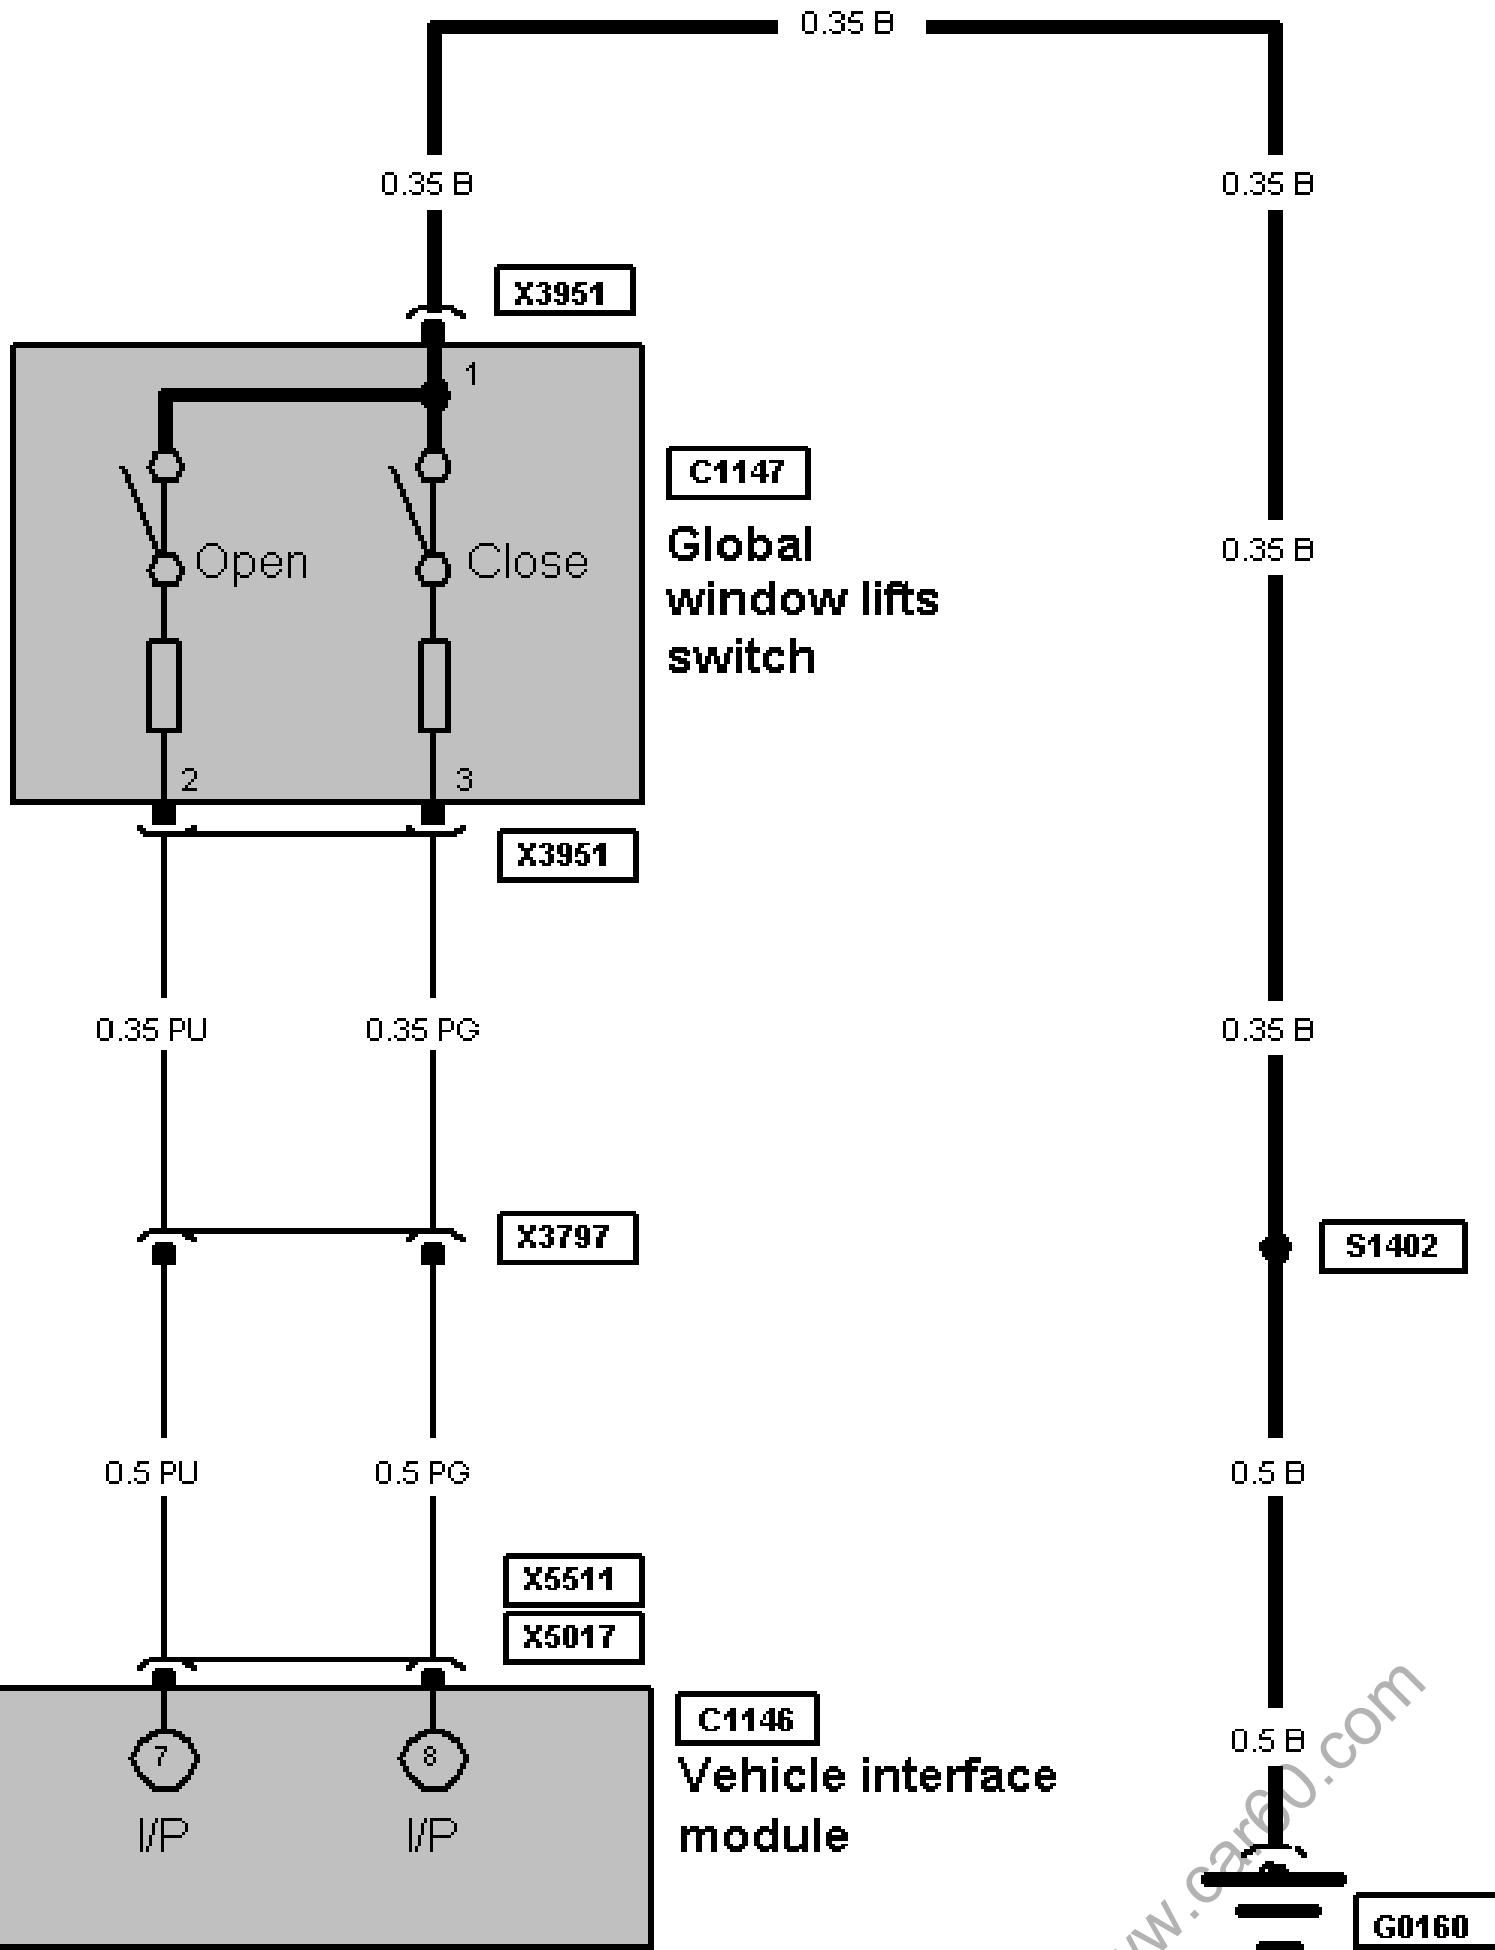

Electrical Circuit: 21 06 03: Global window lifts switch LHD

No	Description
C1146	Vehicle interface (Rear body) module
C1147	Global window lifts switch
G0160	Ground point header connector
S1402	Splice - Black - left-hand drive console loom
X3797	Rear main loom to left-hand drive console loom plug and socket 18-way
X3951	Global window lifts switch connector 6-way
X5017	Vehicle interface module connector 81-way
X5511	Vehicle interface module connector 81-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------