


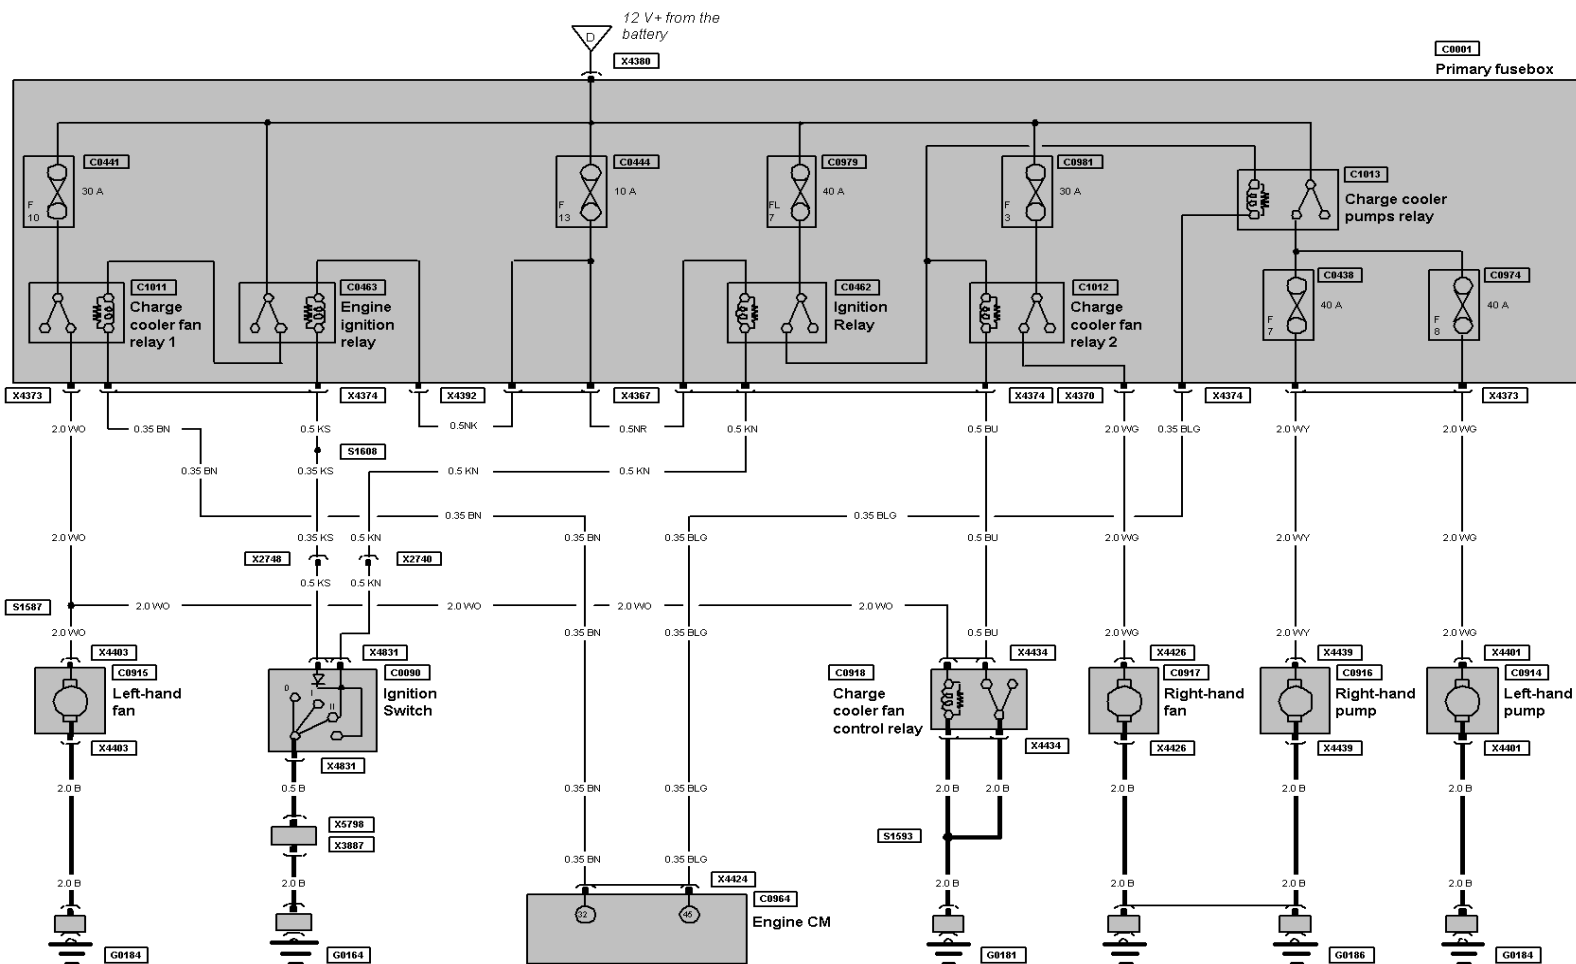


Electrical Circuit: 40 01 15: Charge cooler pumps and fans (LHD)

No	Description
C0001	Primary fusebox
C0090	Ignition switch
C0438	Fuse F7, 40 amp - primary fusebox
C0441	Fuse F10, 30 amp - primary fusebox
C0444	Fuse F13, 10 amp - primary fusebox
C0462	Ignition relay - primary fusebox
C0463	Engine ignition relay - primary fusebox
C0914	Charge cooler pump - left-hand
C0915	Charge cooler fan - left-hand
C0916	Charge cooler pump - right-hand
C0917	Charge cooler fan - right-hand
C0918	Charge cooler fan control relay
C0964	Engine control module
C0974	Fuse F8, 40 amp - primary fusebox
C0979	Fuse FL7, 40 amp - primary fusebox
C0981	Fuse F3, 30 amp - primary fusebox
C1011	Charge cooler fan relay 1
C1012	Charge cooler fan relay 2
C1013	Charge cooler pumps relay
G0164	Ground point header connector 6-way
G0181	Ground point header connector 6-way
G0184	Ground point header connector 10-way
G0186	Ground point header connector 10-way
S1587	Splice - White/orange - front main loom
S1593	Splice - Black - front main loom
S1608	Splice - Pink/slate - front main loom
X2740	Front main loom to left-hand drive facia loom plug and socket 23-way
X2748	Front main loom to left-hand drive facia loom plug and socket 22-way
X3887	Resistor connector 2-way
X4367	Primary fusebox connector 12-way
X4370	Primary fusebox connector 7-way
X4373	Primary fusebox connector 7-way
X4374	Primary fusebox connector 18-way
X4380	Primary fusebox connector 2-way
X4392	Primary fusebox connector 6-way
X4401	Left-hand charge cooler pump connector 2-way
X4403	Left-hand charge cooler fan connector 2-way
X4424	Engine control module connector 81-way
X4426	Right-hand charge cooler fan connector 2-way
X4434	Charge cooler fan control relay connector 9-way
X4439	Right-hand charge cooler pump connector 2-way
X4831	Switchbox connector 12-way
X5798	Resistor connector 2-way

Circuit Links

Description	Circuit	Additional Information
D	050106	12 V+ from the battery

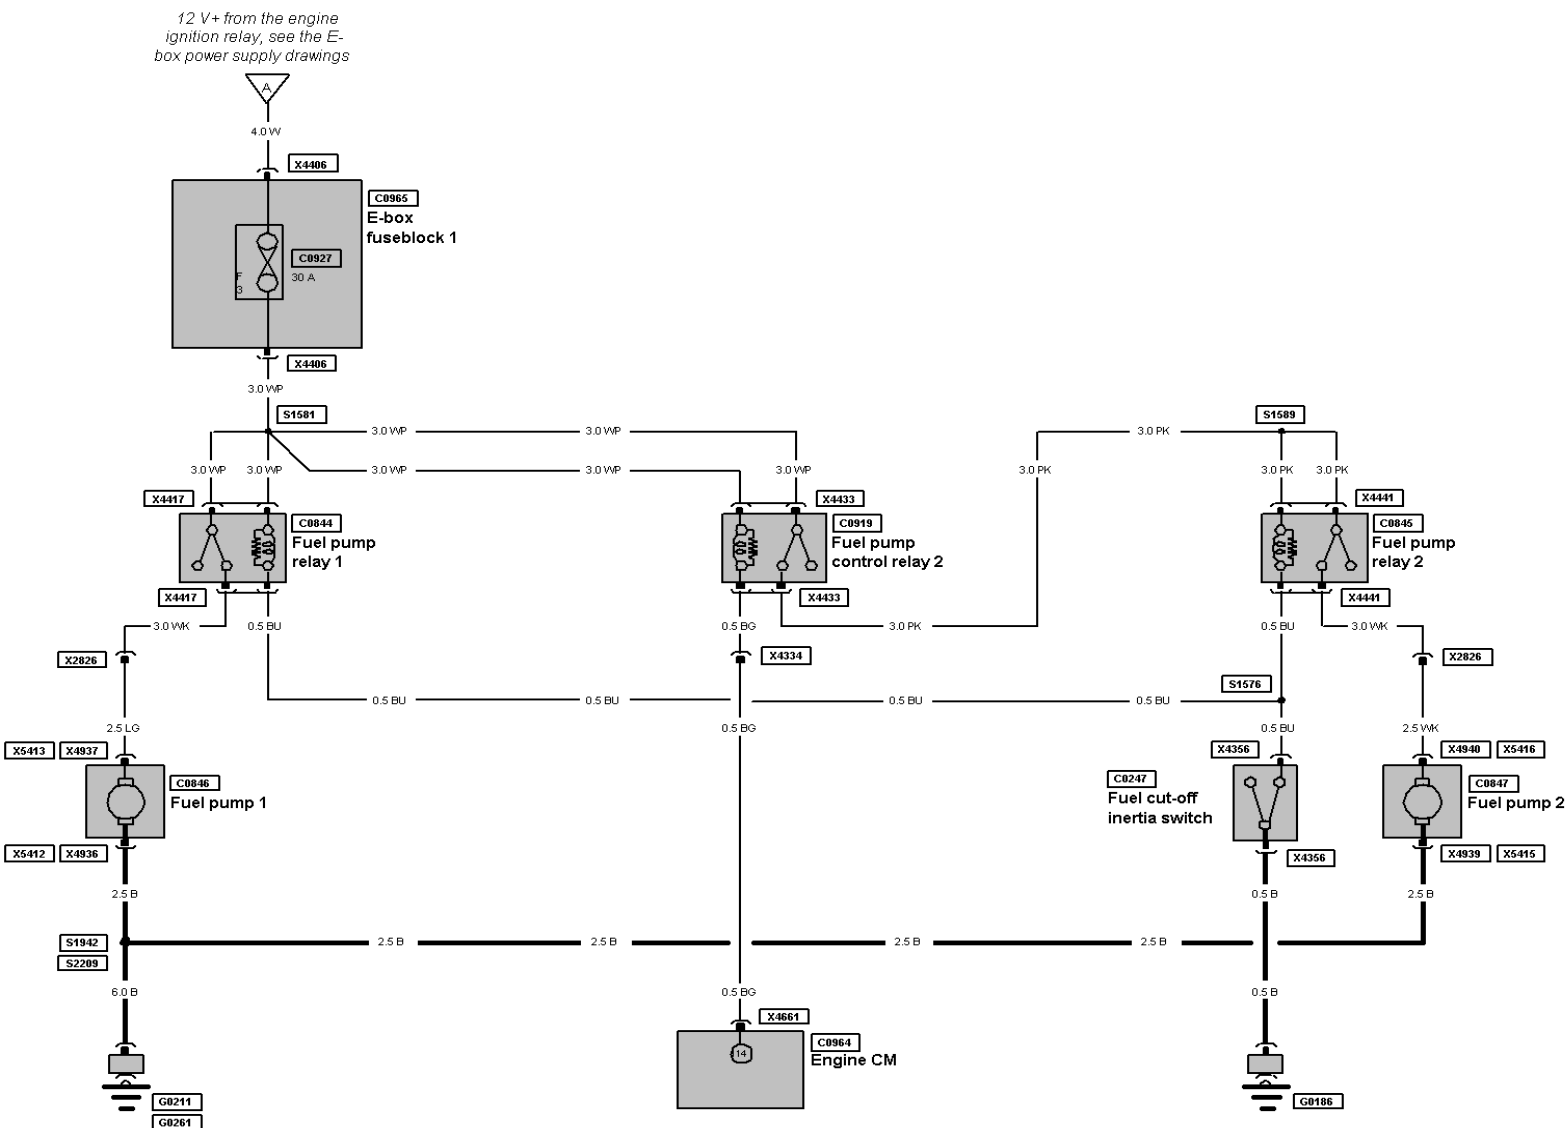

Electrical Circuit: 40 01 18: Fuel pumps

No	Description
C0247	Inertia switch
C0844	Fuel pump relay 1
C0845	Fuel pump relay 2
C0846	Fuel pump 1
C0847	Fuel pump 2
C0919	Fuel pump control relay 2
C0927	Fuse F3, 30 amp - engine fuseblock 1
C0964	Engine control module
C0965	E-box fuseblock 1
G0186	Ground point header connector 10-way
G0211	Ground point connector
G0261	Ground point connector
S1576	Splice - Black/blue - front main loom
S1581	Splice - White/purple - front main loom
S1589	Splice - Purple/pink - front main loom
S1942	Splice - Black - rear main loom
S2209	Splice - Black - rear main loom
X2826	Front main loom to rear main loom plug and socket 20-way
X4334	Front main loom to engine loom plug and socket 17-way - black
X4356	Inertia switch connector 3-way
X4406	Engine fuseblock connector 8-way
X4417	Fuel pump relay 1 connector 5-way
X4433	Fuel pump control relay 2 connector
X4441	Fuel pump relay 2 connector
X4661	Engine control module connector 40-way
X4936	Fuel pump 1 connector 1-way
X4937	Fuel pump 1 connector 1-way
X4939	Fuel pump 2 connector 1-way
X4940	Fuel pump 2 connector 1-way
X5412	Fuel pump 1 connector 1-way
X5413	Fuel pump 1 connector 1-way
X5415	Fuel pump 2 connector 1-way
X5416	Fuel pump 2 connector 1-way

Circuit Links

Description	Circuit	Additional Information
A	050107	12 V+ from the engine ignition relay, see the E-box power supply drawings