


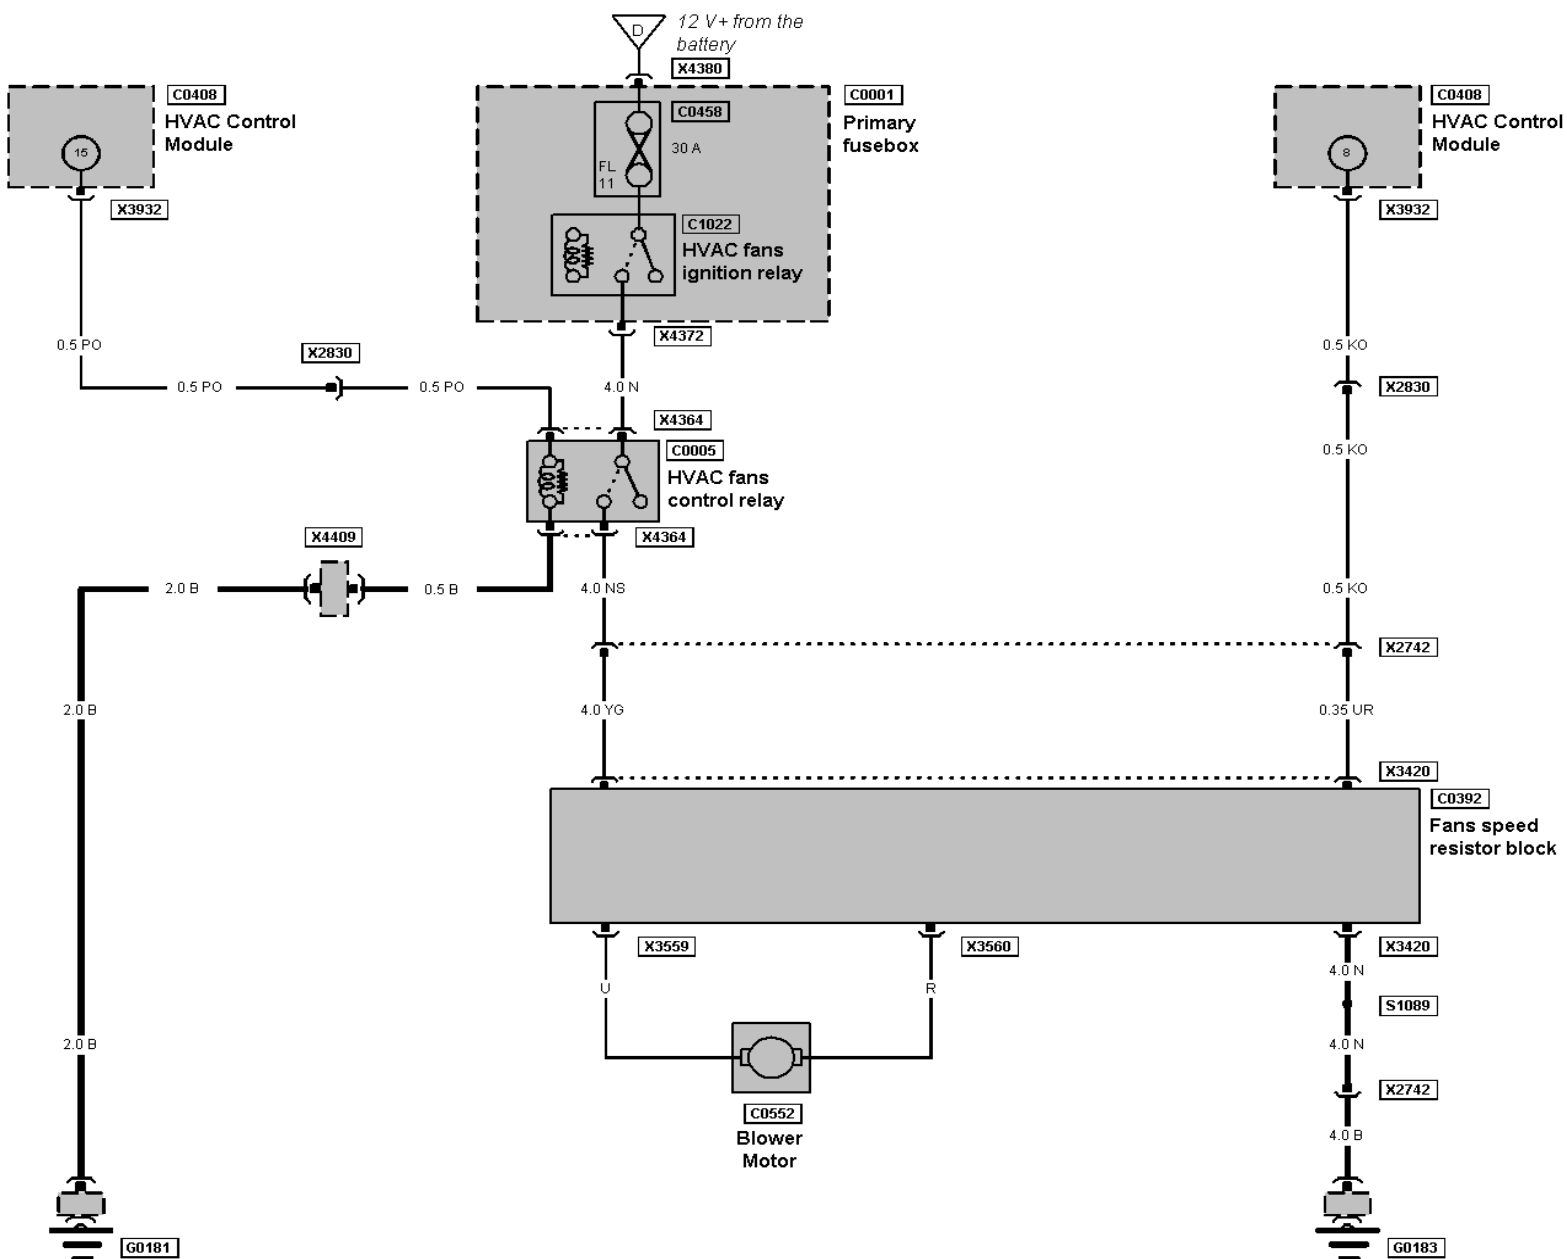


Electrical Circuit: 44 01 11: Blower control (LHD)

No	Description
C0001	Primary fusebox
C0005	HVAC fans control relay
C0392	Fans speed resistor block
C0408	HVAC control module
C0458	Fuse FL11, 30 amp/40 amp - primary fusebox
C0552	HVAC blower motor
C1022	HVAC fans ignition relay - primary fusebox
G0181	Ground point header connector 6-way
G0183	Ground point - right-hand 'A' post
S1089	Splice - Brown - HVAC loom
X2742	Front main loom to HVAC loom plug and socket 4-way
X2830	Front main loom to left-hand drive console loom plug and socket 20-way
X3420	Fans speed resistor block connector 5-way
X3559	Blower motor connector 2-way
X3560	Blower motor connector 2-way
X3932	HVAC control module connector 26-way
X4364	Heating, Ventilation and Air Conditioning fans control relay connector
X4372	Primary fusebox connector 6-way
X4380	Primary fusebox connector 2-way
X4409	Header connector 20-way

Circuit Links

Description	Circuit	Additional Information
D	050106	12 V+ from the battery

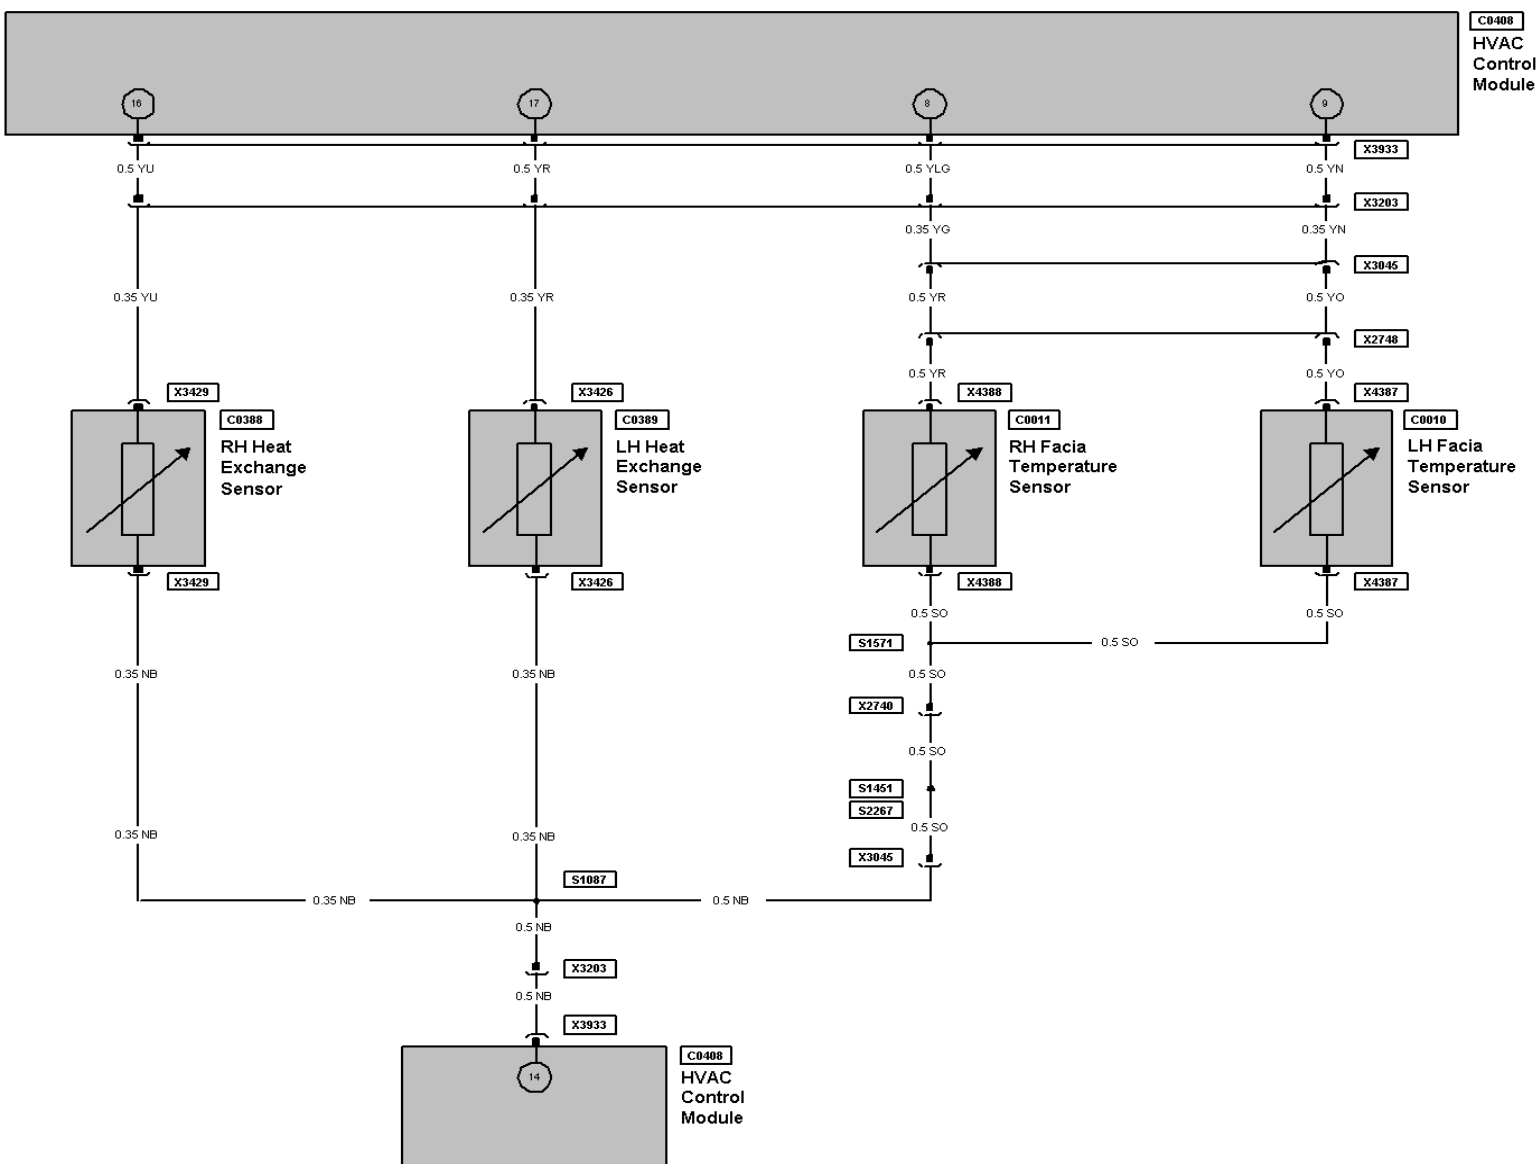


Electrical Circuit: 44 02 11: Temperature control sensors (LHD)

No	Description
C0010	Left-hand facia temperature sensor
C0011	Right-hand facia temperature sensor
C0388	Right-hand heat exchange sensor
C0389	Left-hand heat exchange sensor
C0408	HVAC control module
S1087	Splice - Brown/black - HVAC loom
S1451	Splice - Slate/orange - left-hand drive facia loom
S1571	Splice - Slate/orange - front main loom
S2267	Splice - Slate/orange - left-hand drive facia loom
X2740	Front main loom to left-hand drive facia loom plug and socket 23-way
X2748	Front main loom to left-hand drive facia loom plug and socket 22-way
X3045	Left-hand drive facia loom to HVAC loom plug and socket 10-way
X3203	Left-hand drive console loom to HVAC loom plug and socket 18-way
X3426	Left-hand heat exchange sensor connector 2-way
X3429	Right-hand heat exchange sensor connector 2-way
X3933	HVAC control module connector 18-way
X4387	Left-hand facia temperature sensor connector 2-way
X4388	Right-hand facia temperature sensor connector 2-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

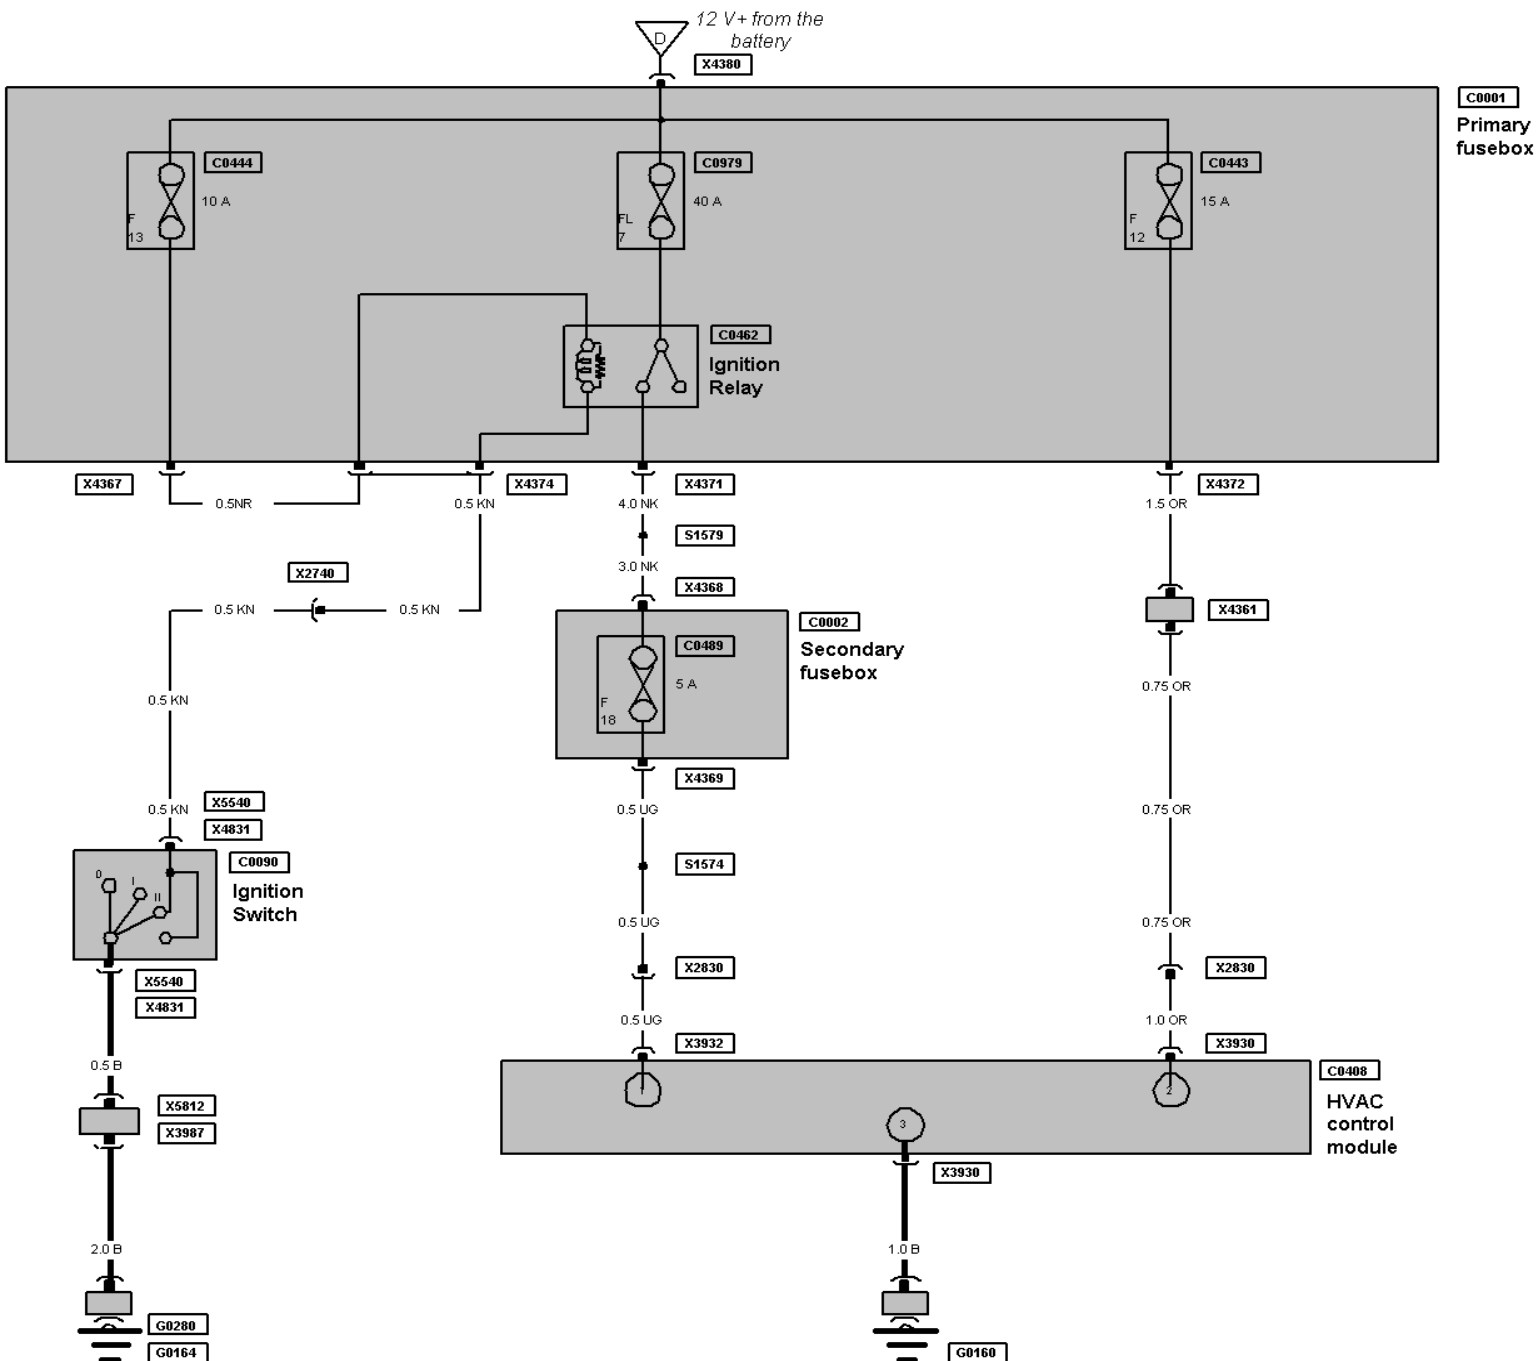


Electrical Circuit: 44 03 13: Power supplies (LHD)

No	Description
C0001	Primary fusebox
C0002	Secondary fusebox
C0090	Ignition switch
C0408	HVAC control module
C0443	Fuse F12, 15 amp - primary fusebox
C0444	Fuse F13, 10 amp - primary fusebox
C0462	Ignition relay - primary fusebox
C0489	Fuse F18, 5 amp - secondary fusebox
C0979	Fuse FL7, 40 amp - primary fusebox
G0160	Ground point header connector
G0164	Ground point header connector 6-way
G0280	Ground point connector
S1574	Splice - Blue/green - front main loom
S1579	Splice - Brown/pink - front main loom
X2740	Front main loom to left-hand drive facia loom plug and socket 23-way
X2830	Front main loom to left-hand drive console loom plug and socket 20-way
X3930	HVAC control module connector 3-way
X3932	HVAC control module connector 26-way
X3987	Header connector 20-way
X4361	Header connector 20-way
X4367	Primary fusebox connector 12-way
X4368	Secondary fusebox connector 4-way
X4369	Secondary fusebox connector 21-way
X4371	Primary fusebox connector 3-way
X4372	Primary fusebox connector 6-way
X4374	Primary fusebox connector 18-way
X4380	Primary fusebox connector 2-way
X4831	Switchbox connector 12-way
X5540	Switchbox connector 12-way
X5812	Rear view mirror connector 10-way

Circuit Links

Description	Circuit	Additional Information
D	050106	12 V+ from the battery

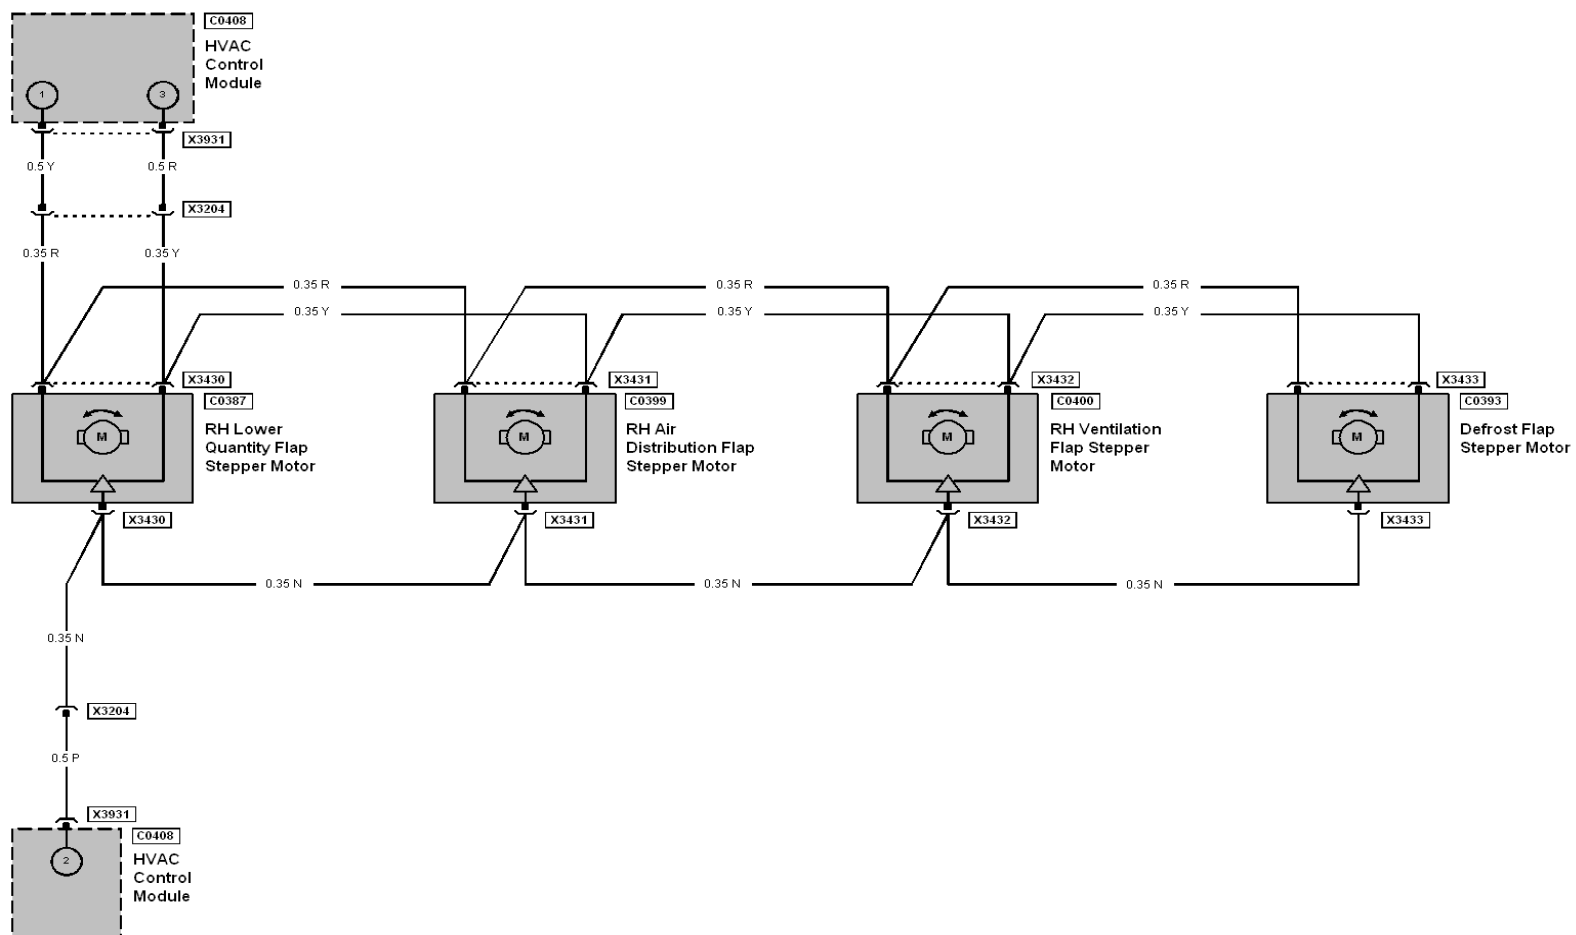


Electrical Circuit: 44 04 07: Right-hand side and defrost stepper motors (LHD)

No	Description
C0387	Right-hand lower quantity flap stepper motor
C0393	Defrost flap stepper motor
C0399	Right-hand air distribution flap stepper motor
C0400	Right-hand ventilation flap stepper motor
C0408	HVAC control module
X3204	Left-hand drive console loom to HVAC loom plug and socket 3-way - black
X3430	Right-hand lower quantity flap stepper motor CAN connector 3-way
X3431	Right-hand air distribution flap stepper motor CAN connector 3-way
X3432	Right-hand ventilation flap stepper motor CAN connector 3-way
X3433	Defrost flap stepper motor CAN connector 3-way
X3931	HVAC control module K-bus connector 3-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

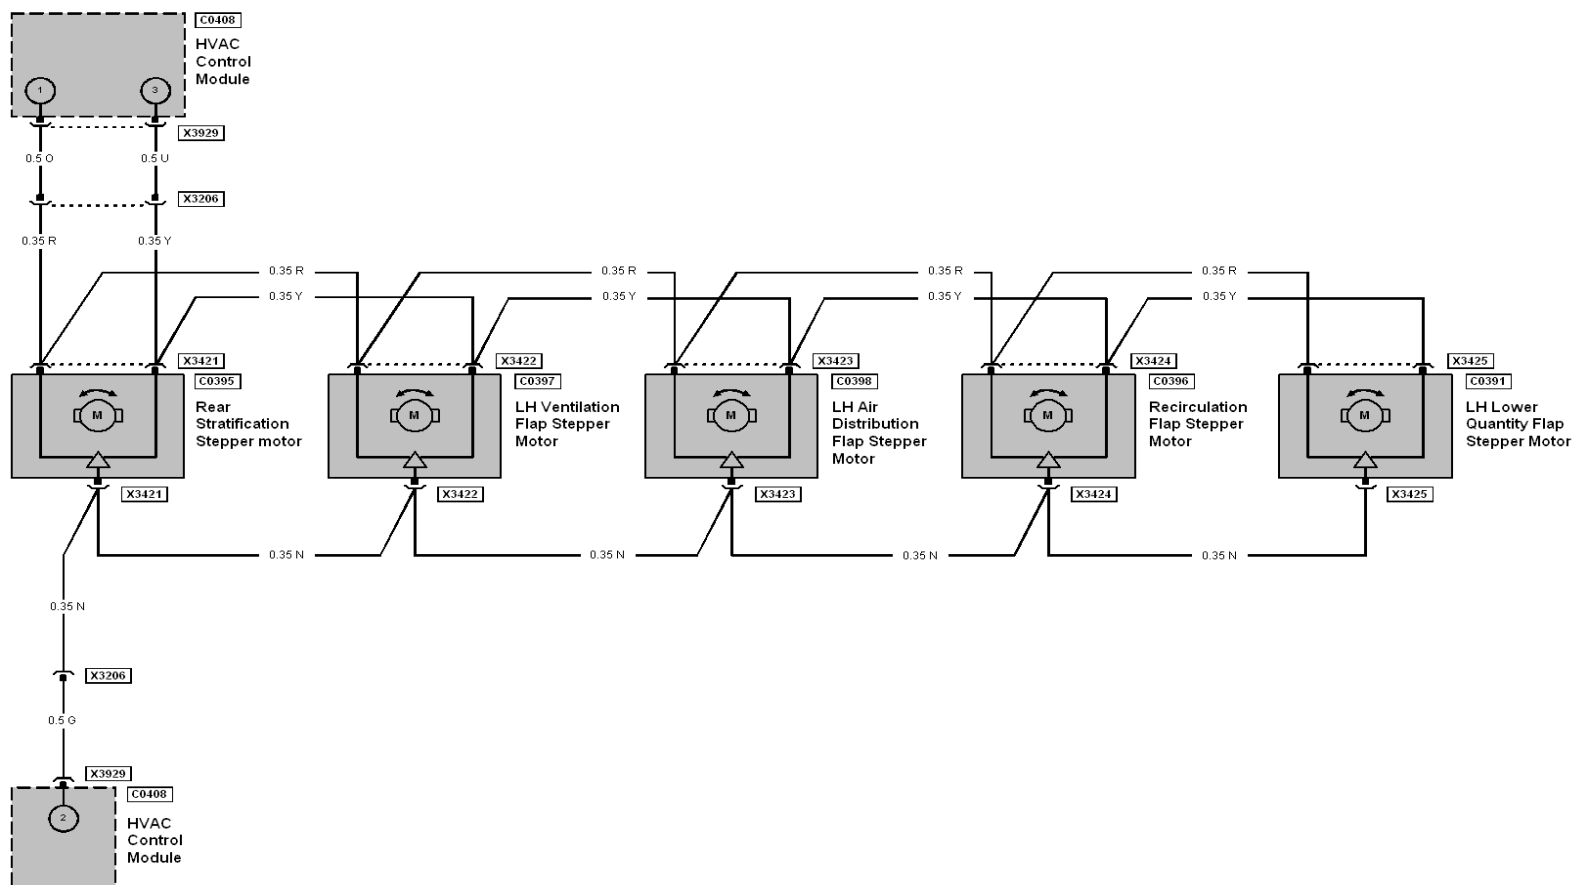


Electrical Circuit: 44 05 07: Left-hand side, rear stratification and recirculation stepper motors (LHD)

No	Description
C0391	Left-hand lower quantity flap stepper motor
C0395	Rear stratification stepper motor
C0396	Recirculation flap stepper motor
C0397	Left-hand ventilation flap stepper motor
C0398	Left-hand air distribution flap stepper motor
C0408	HVAC control module
X3206	Left-hand drive console loom to HVAC loom plug and socket 3-way - white
X3421	Rear stratification stepper motor CAN connector 3-way
X3422	Left-hand ventilation flap stepper motor CAN connector 3-way
X3423	Left-hand air distribution flap stepper motor CAN connector 3-way
X3424	Recirculation flap stepper motor CAN connector 3-way
X3425	Left-hand lower quantity flap stepper motor CAN connector 3-way
X3929	HVAC control module K-bus connector 3-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

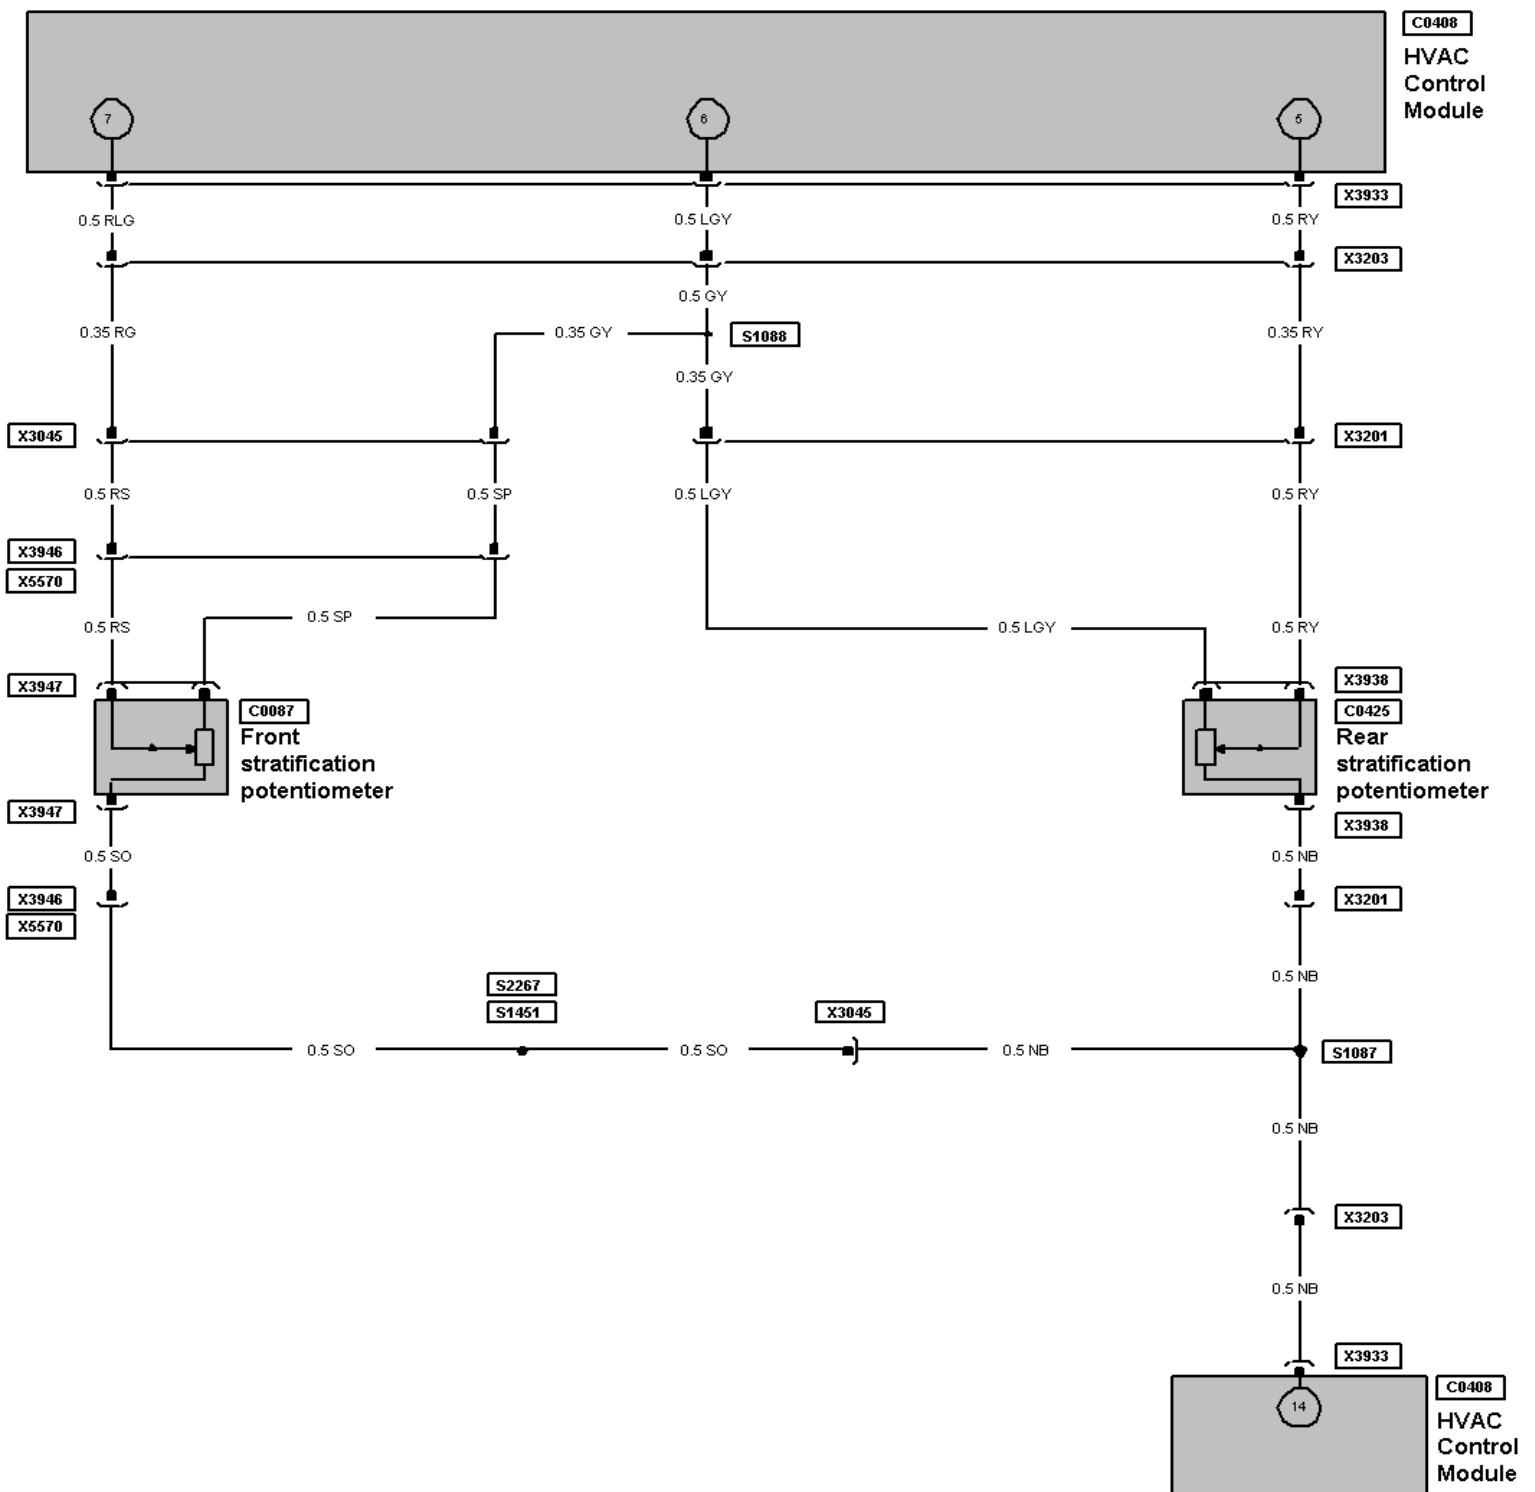


Electrical Circuit: 44 06 09: Mixing air control (LHD)

No	Description
C0087	Front stratification control potentiometer
C0408	HVAC control module
C0425	Rear stratification control potentiometer
S1087	Splice - Brown/black - HVAC loom
S1088	Splice - Green/yellow - HVAC loom
S1451	Splice - Slate/orange - left-hand drive facia loom
S2267	Splice - Slate/orange - left-hand drive facia loom
X3045	Left-hand drive facia loom to HVAC loom plug and socket 10-way
X3201	Left-hand drive console loom to HVAC loom plug and socket 3-way
X3203	Left-hand drive console loom to HVAC loom plug and socket 18-way
X3933	HVAC control module connector 18-way
X3938	HVAC rear stratification connector 3-way
X3946	Left-hand drive facia loom to console loom plug and socket 4-way
X3947	Front stratification potentiometer connector 3-way
X5570	Left-hand drive facia loom to console loom plug and socket 4-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

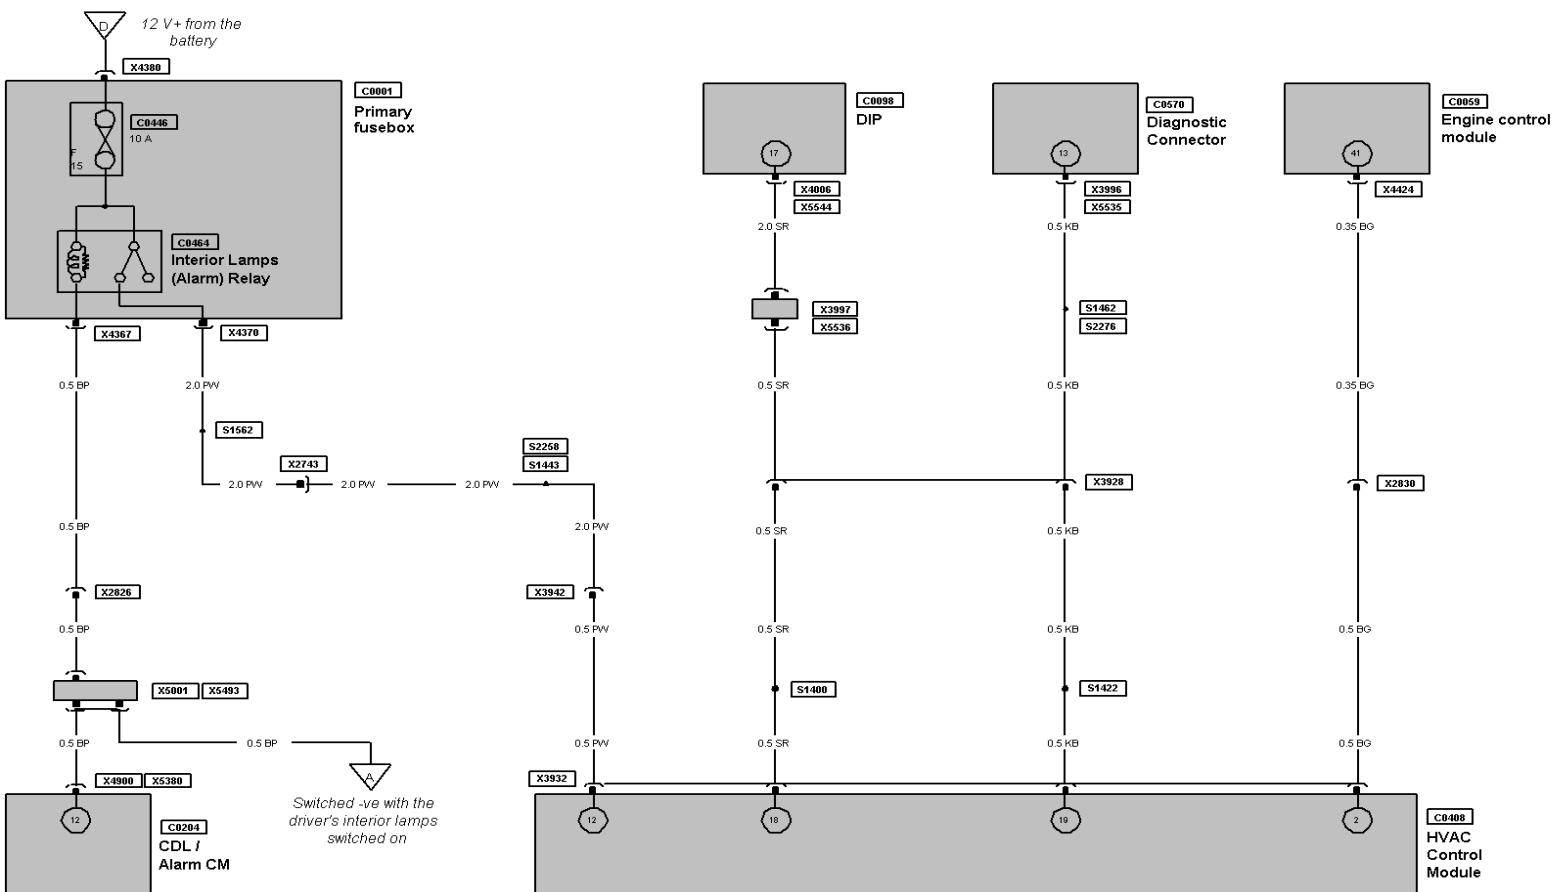


Electrical Circuit: 44 07 17: Interface signals (LHD)

No	Description
C0001	Primary fusebox
C0059	Engine control module 1
C0098	Driver's information panel
C0204	Centralised door locking/anti-theft alarm system control module
C0408	HVAC control module
C0446	Fuse F15, 10 amp - primary fusebox
C0464	Interior lamps relay - primary fusebox
C0570	Diagnostic connector
S1400	Splice - Slate/red - left-hand drive console loom
S1422	Splice - Pink/black - left-hand drive console loom
S1443	Splice - Purple/white - left-hand drive facia loom
S1462	Splice - Pink/black - left-hand drive facia loom
S1562	Splice - Purple/white - front main loom
S2258	Splice - Purple/white - left-hand drive facia loom
S2276	Splice - Pink/black - left-hand drive facia loom
X2743	Front main loom to left-hand drive facia loom plug and socket 18-way
X2826	Front main loom to rear main loom plug and socket 20-way
X2830	Front main loom to left-hand drive console loom plug and socket 20-way
X3928	Left-hand drive facia loom to console loom plug and socket 18-way
X3932	HVAC control module connector 26-way
X3942	Left-hand drive facia loom to console loom plug and socket 20-way
X3996	Diagnostic connector 16-way
X3997	Header connector 20-way
X4006	Driver's information panel connector 18-way
X4367	Primary fusebox connector 12-way
X4370	Primary fusebox connector 7-way
X4380	Primary fusebox connector 2-way
X4424	Engine control module connector 81-way
X4900	CDL/anti-theft alarm system CM connector 12-way
X5001	Header connector 20-way
X5380	Centralised door locking/anti-theft alarm system control module connector 12-way
X5493	Header connector 20-way
X5535	Diagnostic connector 16-way
X5536	Header connector 20-way
X5544	Driver's information panel connector 18-way

Circuit Links

Description	Circuit	Additional Information
D	050107	12 V+ from the battery
A	050107	Switched -ve with the driver's interior lamps switched on

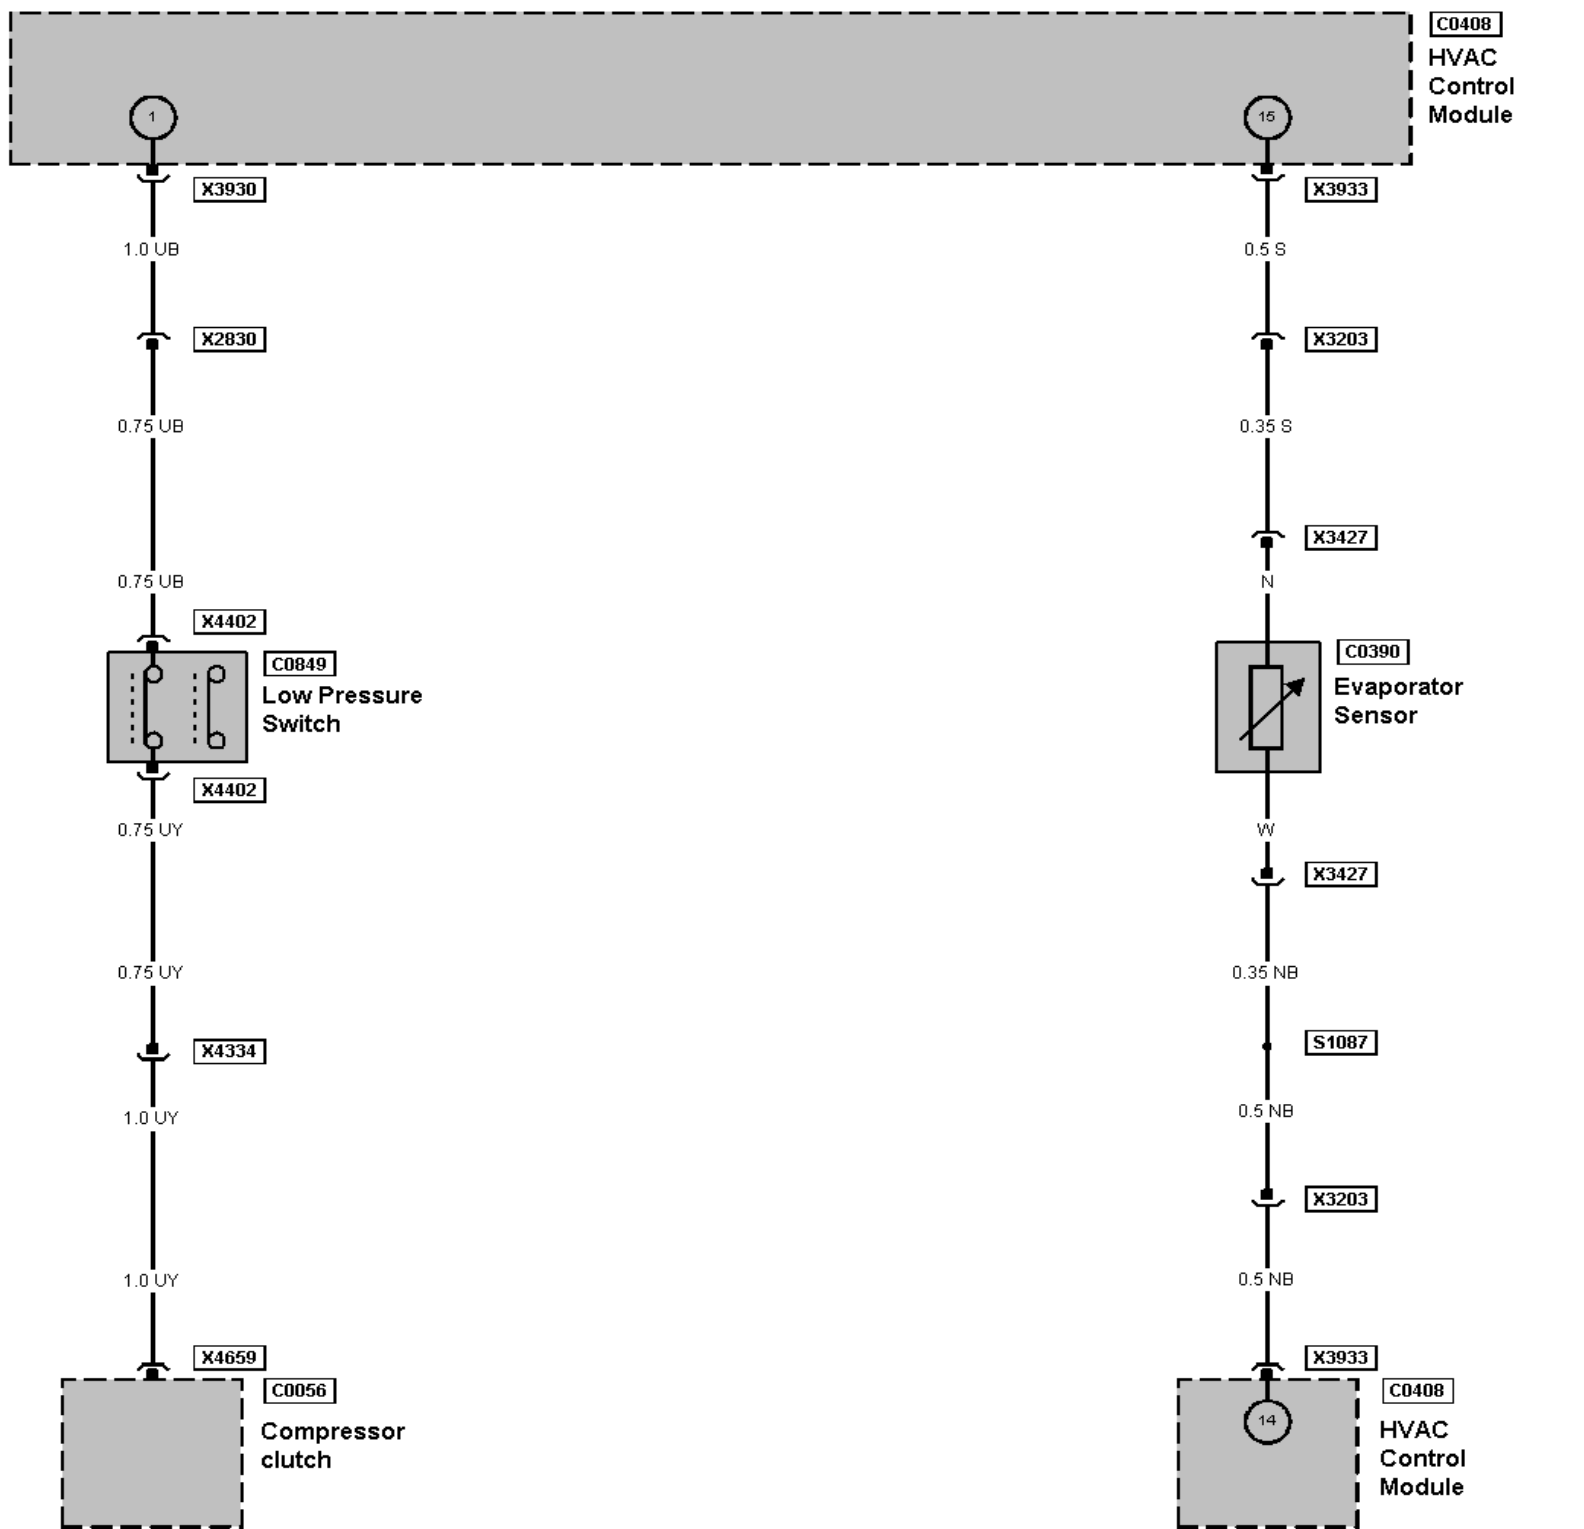


Electrical Circuit: 44 08 21: Solenoid coupling - evaporator sensor (LHD)

No	Description
C0056	Compressor clutch
C0390	Evaporator sensor
C0408	HVAC control module
C0849	Low pressure switch
S1087	Splice - Brown/black - HVAC loom
X2830	Front main loom to left-hand drive console loom plug and socket 20-way
X3203	Left-hand drive console loom to HVAC loom plug and socket 18-way
X3427	Evaporator sensor plug and socket 2-way
X3930	HVAC control module connector 3-way
X3933	HVAC control module connector 18-way
X4334	Front main loom to engine loom plug and socket 17-way - black
X4402	Low pressure switch connector 4-way
X4659	Compressor clutch connector 1-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

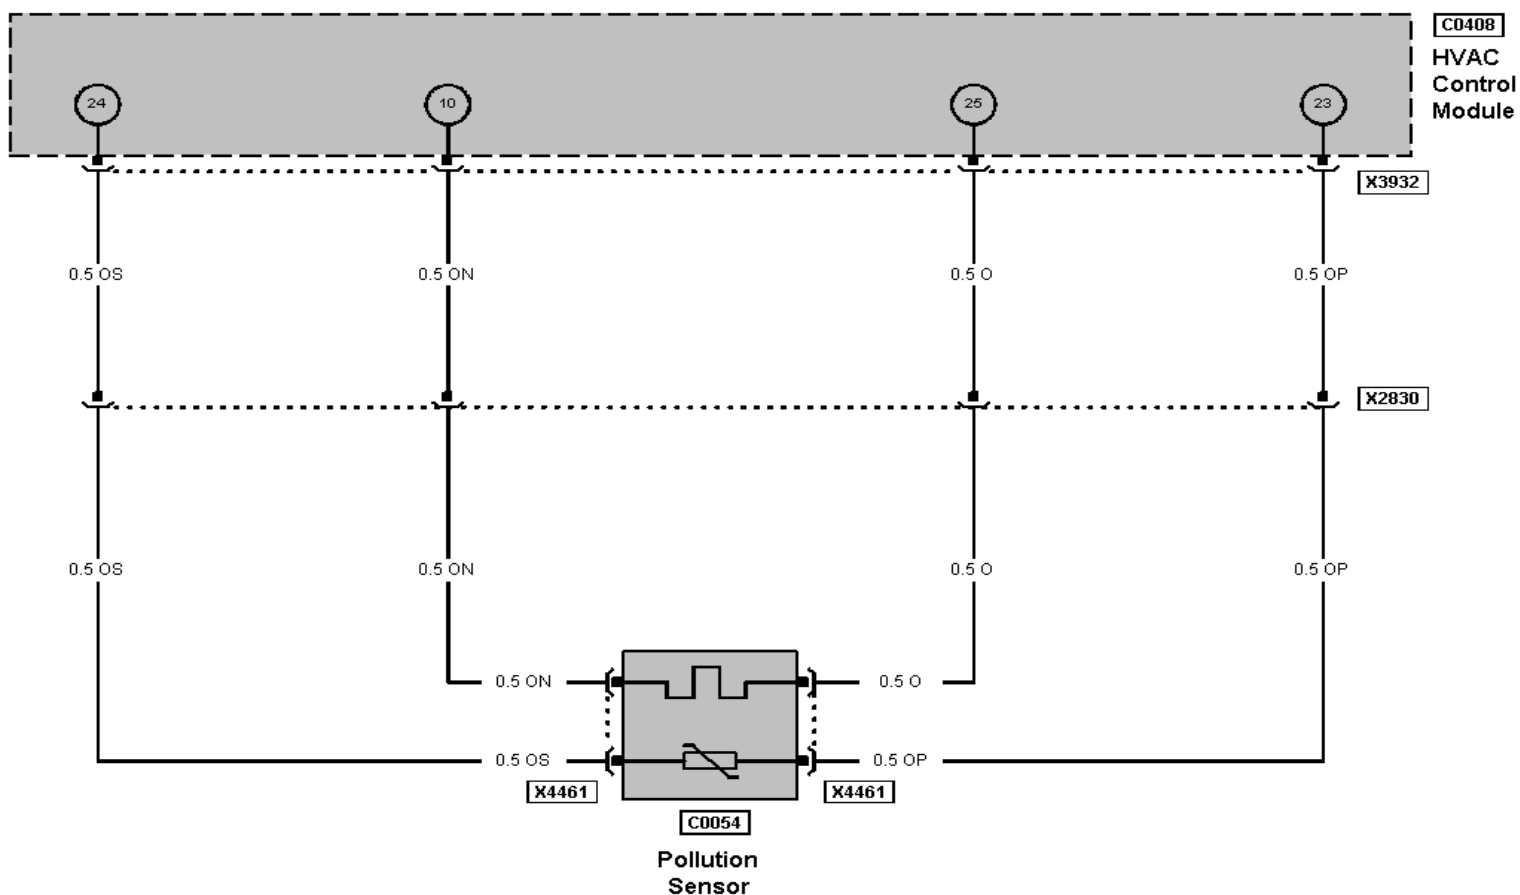


Electrical Circuit: 44 09 11: Pollution sensor (LHD)

No	Description
C0054	Pollution sensor
C0408	HVAC control module
X2830	Front main loom to left-hand drive console loom plug and socket 20-way
X3932	HVAC control module connector 26-way
X4461	Pollution sensor connector 4-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------



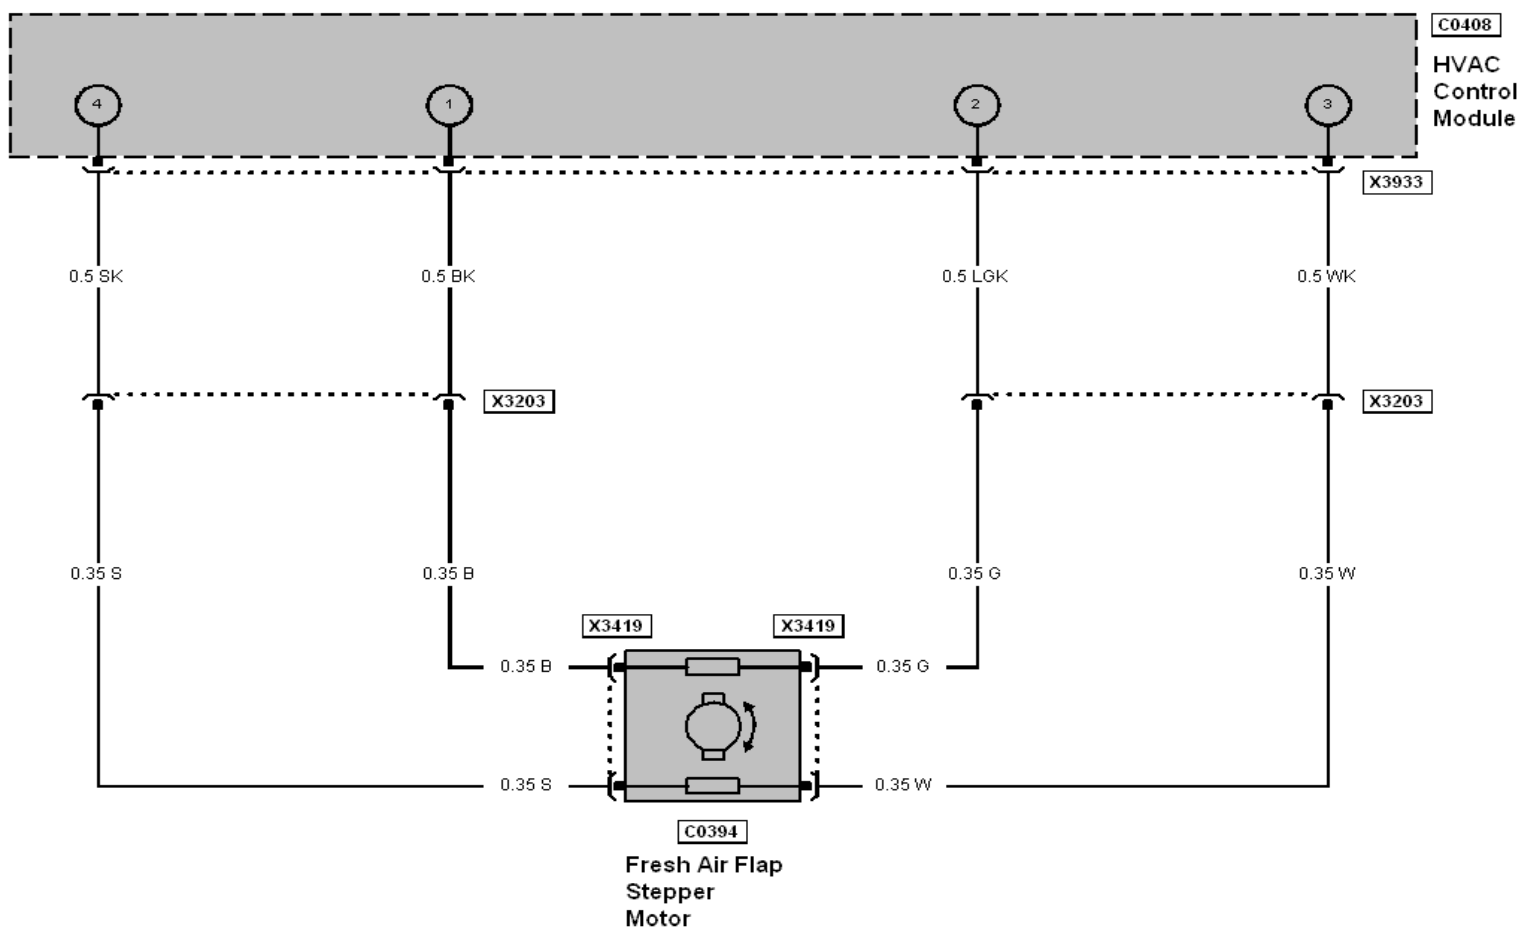


Electrical Circuit: 44 10 07: Fresh air flap stepper motor (LHD)

No	Description
C0394	Fresh air flap stepper motor
C0408	HVAC control module
X3203	Left-hand drive console loom to HVAC loom plug and socket 18-way
X3419	Fresh air flap stepper motor connector 4-way
X3933	HVAC control module connector 18-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------

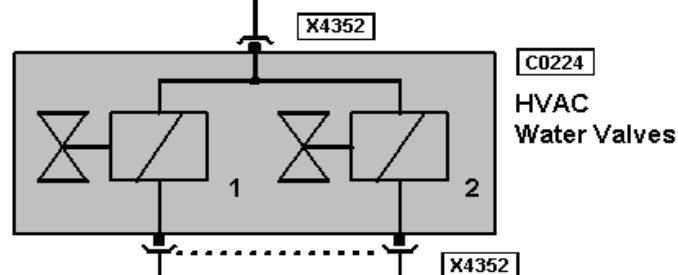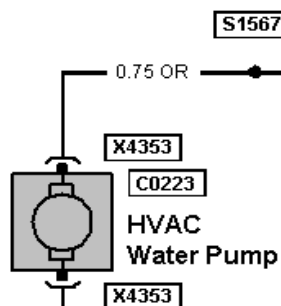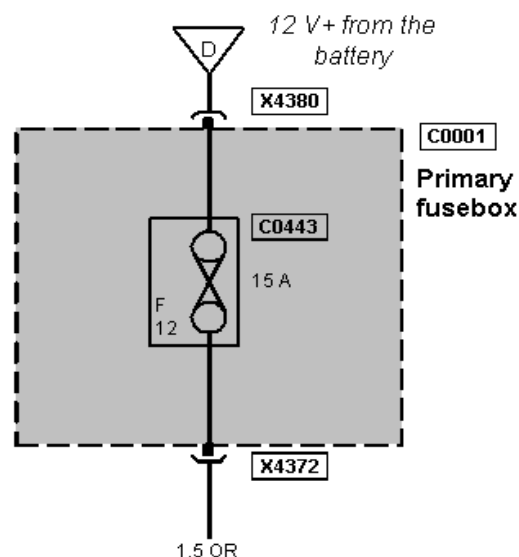


Electrical Circuit: 44 11 13: Auxiliary water pump and valves (LHD)

No	Description
C0001	Primary fusebox
C0223	HVAC water pump
C0224	HVAC solenoid valves
C0408	HVAC control module
C0443	Fuse F12, 15 amp - primary fusebox
S1567	Splice - Orange/red - front main loom
X2830	Front main loom to left-hand drive console loom plug and socket 20-way
X3932	HVAC control module connector 26-way
X4352	Heating, Ventilation and Air Conditioning solenoid valves connector 3-way
X4353	Heating, Ventilation and Air Conditioning water pump connector 2-way
X4361	Header connector 20-way
X4372	Primary fusebox connector 6-way
X4380	Primary fusebox connector 2-way

Circuit Links

Description	Circuit	Additional Information
D	050106	12 V+ from the battery

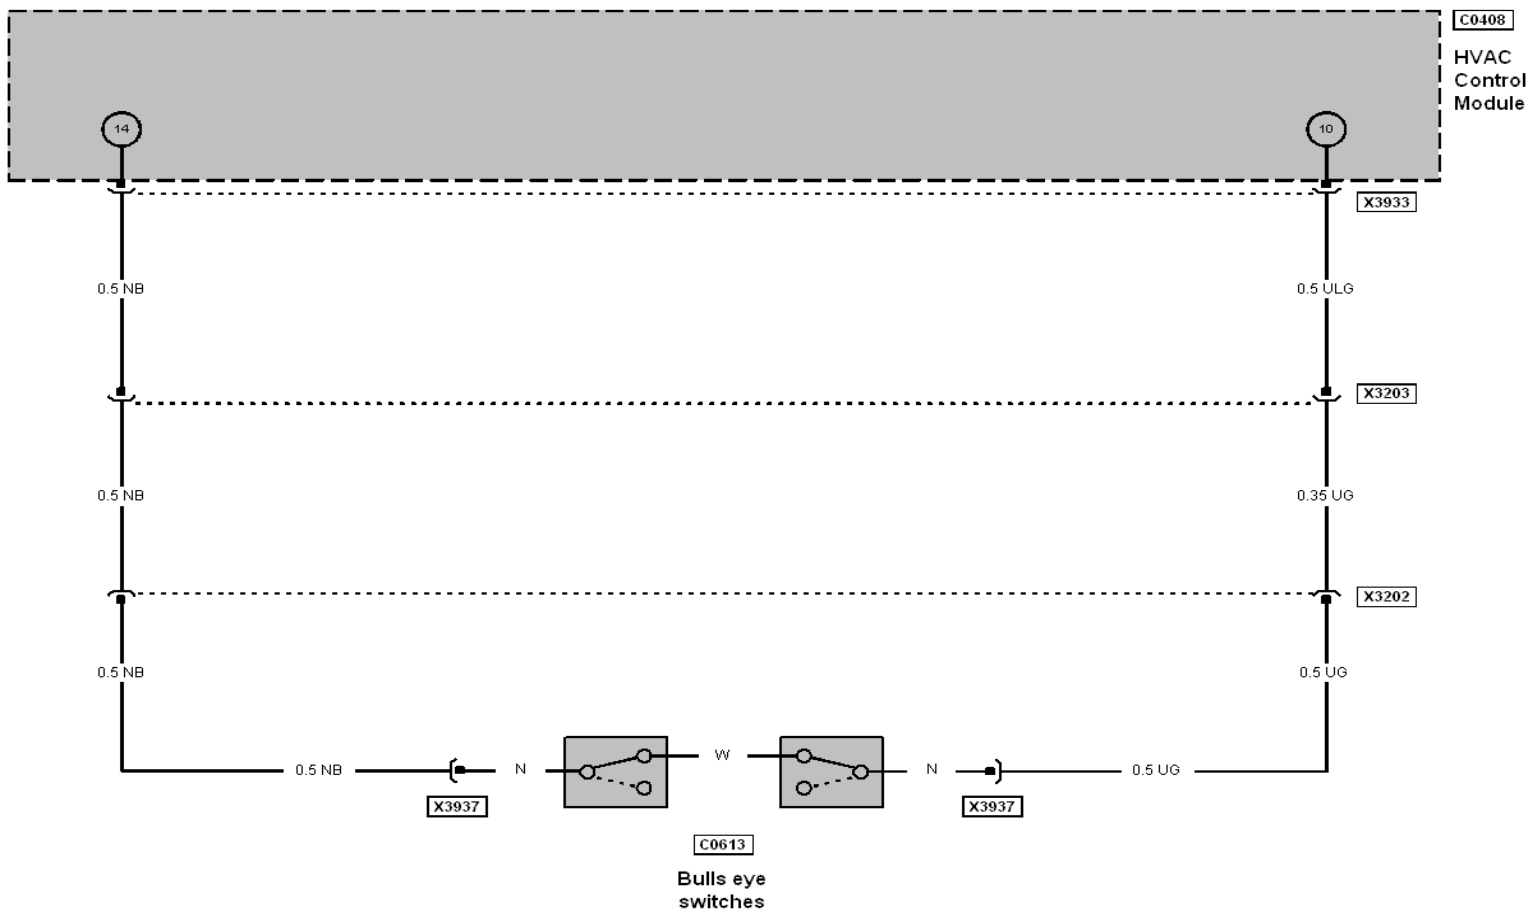

Electrical Circuit: 44 12 07: Rear bulls eye switches (LHD)

No	Description
C0408	HVAC control module
C0613	Rear bulls eye switches
X3202	Left-hand drive console loom to HVAC loom plug and socket 3-way
X3203	Left-hand drive console loom to HVAC loom plug and socket 18-way
X3933	HVAC control module connector 18-way
X3937	HVAC rear stratification ventilation switch connector 3-way

Circuit Links

Description	Circuit	Additional Information
-------------	---------	------------------------



Electrical Circuit: 44 14 05: HVAC interface module (LHD)

No	Description
C0570	Diagnostic connector
C0932	Fuse F4, 10 amp - engine fuseblock 2
C0966	E-box fuseblock 2
C1146	Vehicle interface (Rear body) module
C1239	HVAC interface module
G0160	Ground point header connector
S1422	Splice - Pink/black - left-hand drive console loom
S1462	Splice - Pink/black - left-hand drive facia loom
S1555	Splice - Red - left-hand drive facia loom
S1578	Splice - Red - front main loom
S2276	Splice - Pink/black - left-hand drive facia loom
S2289	Splice - White/purple - left-hand drive facia loom
X2748	Front main loom to left-hand drive facia loom plug and socket 22-way
X3797	Rear main loom to left-hand drive console loom plug and socket 18-way
X3928	Left-hand drive facia loom to console loom plug and socket 18-way
X3942	Left-hand drive facia loom to console loom plug and socket 20-way
X3952	HVAC interface connector 20-way
X3986	Adjustable steering column switch connector 6-way
X4390	Engine fuseblock connector 8-way
X5525	Adjustable steering column switch connector 6-way

Circuit Links

Description	Circuit	Additional Information
A	050107	12 V+ from the engine CM relay, see the E-box power supply drawings