


电源/搭铁分布电路图

保险丝列表和搭铁列表

在菜单框架中，单击“电源/搭铁/接线”。单击“保险丝列表”可获取保险丝及相应电路图和保险丝/继电器盒位置链接的列表。单击“搭铁列表”可获取搭铁及相应线束/部件位置和电路图链接的列表。

保险丝列表

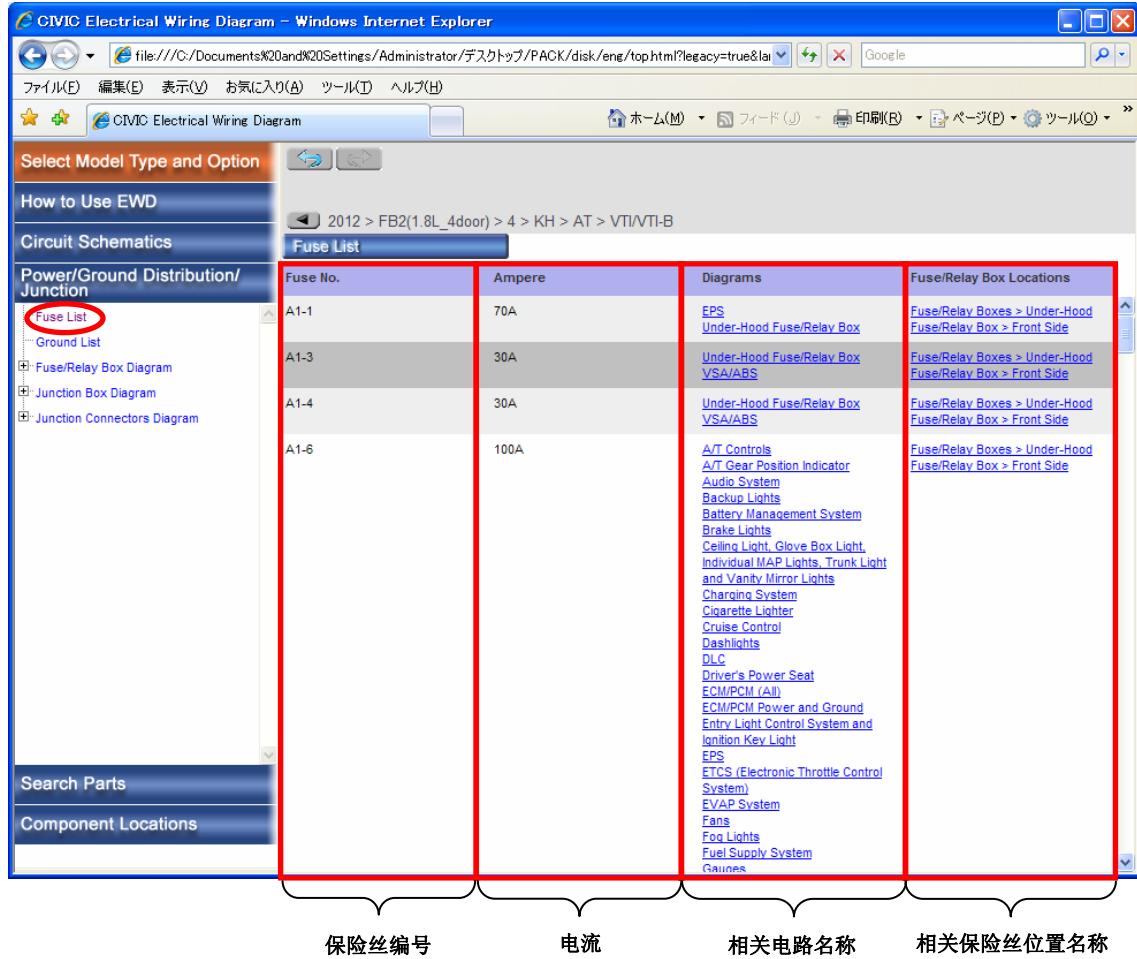

Fuse No.	Ampere	Diagrams	Fuse/Relay Box Locations
A1-1	70A	EPS Under-Hood Fuse/Relay Box	Fuse/Relay Boxes > Under-Hood Fuse/Relay Box > Front Side
A1-3	30A	Under-Hood Fuse/Relay Box VSA/ABS	Fuse/Relay Boxes > Under-Hood Fuse/Relay Box > Front Side
A1-4	30A	Under-Hood Fuse/Relay Box VSA/ABS	Fuse/Relay Boxes > Under-Hood Fuse/Relay Box > Front Side
A1-6	100A	A/T Controls A/T Gear Position Indicator Audio System Backup Lights Battery Management System Brake Lights Ceiling Light, Glove Box Light, Individual MAP Lights, Trunk Light and Vanity Mirror Lights Charging System Cigarette Lighter Cruise Control Dashlights DLC Driver's Power Seat ECM/PCM (All) ECM/PCM Power and Ground Entry Light Control System and Ignition Key Light EPS ETCS (Electronic Throttle Control System) EVAP System Fans Fog Lights Fuel Supply System Gaines	Fuse/Relay Boxes > Under-Hood Fuse/Relay Box > Front Side

保险丝编号 电流 相关电路名称 相关保险丝位置名称

搭铁列表

CIVIC Electrical Wiring Diagram – Windows Internet Explorer

file:///C:/Documents%20and%20Settings/Administrator/Desktop/PACK/disk/eng/tophtml?legacy=true&lat=

Select Model Type and Option

How to Use EWD

Circuit Schematics

Power/Ground Distribution/Junction

Fuse List

Ground List (highlighted with a red circle)

Fuse/Relay Box Diagram

Junction Box Diagram

Junction Connectors Diagram

Ground List

2012 > FB2(1.8L_4door) > 4 > KH > AT > VT1/VT1-B

Ground List

Ground No.	Harness/Component Locations	Wire Color	Diagrams	Component Name
G1	Battery Ground Cable Engine Compartment > Starter/Ground Cable	BLK	Battery Management System Charging System Ground Cable Power Supply Starting System	Battery Sensor
G2	Engine Ground Cable Engine Compartment > Starter/Ground Cable	BLK	Ground Cable	Engine
G3	Transmission Ground Cable Engine Compartment > Starter/Ground Cable	BLK	Ground Cable	Transmission Housing
T7	Cable Reel Subharness Dashboard > Steering	BLK	A/T Controls A/T Gear Position Indicator Cable Reel Hands Free Telephone System Navigation System	Cable Reel HFT Switch
G101	Engine Wire Harness Engine Compartment > Engine (Left Side)	BLK	A/T Controls A/T Gear Position Indicator Backup Lights Cruise Control ECM/PCM (All) ECM/PCM Power and Ground EGR System Idle Control System Ignition System Interlock System PGM-FI System Starting System VTEC System	A/T Clutch Pressure Control Solenoid Valve A A/T Clutch Pressure Control Solenoid Valve B A/T Clutch Pressure Control Solenoid Valve C ECM/PCM EGR Valve/EGR Valve Position Sensor Line Pressure Solenoid Valve A No. 1 Ignition Coil No. 2 Ignition Coil No. 3 Ignition Coil No. 4 Ignition Coil Rocker Arm Oil Control Solenoid

搭铁编号

相关线束和部件位置名称

连接导线的颜色

相关电路名称



部件名称

电源/搭铁分布电路图 (续)

保险丝/继电器盒图

您可以通过保险丝/继电器盒图，查看从电源经每个保险丝至各电气部件的路线。在菜单框架的“电源/搭铁分布/接线”中，单击“保险丝/继电器盒图”，然后单击要查看的图名称。您也可以使用图检查每个保险丝的负载能力。

盒图

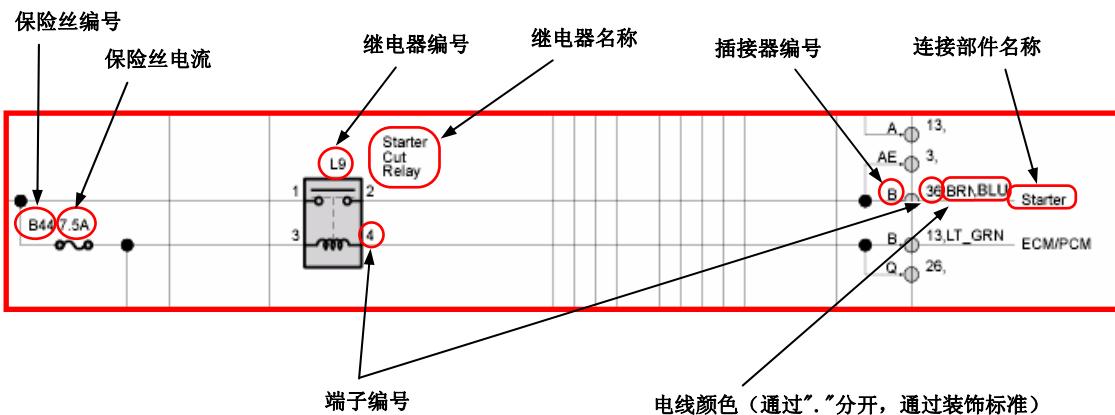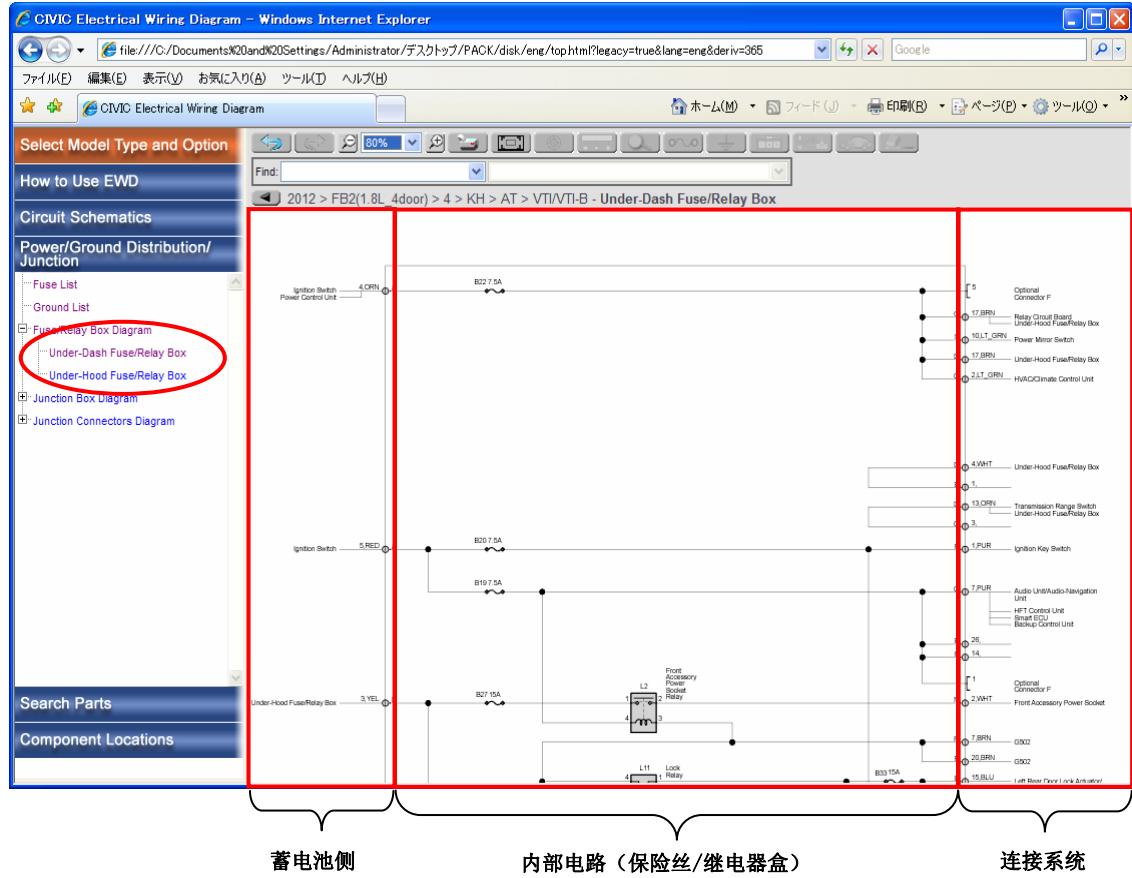

接线盒图

使用接线盒图查看接线盒内部的线路轨迹。在菜单框架的“电源/搭铁分布/接线”中，单击“接线插接器图”，然后单击“接线插接器”。

