

Wiring diagram for the 2008 Toyota Auris (E150) showing the electrical system for the interior lights. The diagram includes a power distribution block at the top with terminals A, B, C, D, and E. The main power source is the battery (G301) connected to terminal A. The diagram shows the wiring for the interior lights, including the driver's side door courtesy light (H12), the passenger side door courtesy light (H13), the front door courtesy light (H14), the rear door courtesy light (H15), and the trunk light (H16). The diagram also shows the wiring for the interior courtesy lights (H17, H18, H19, H20) and the trunk light (H21). The diagram includes a legend for the wire colors: 棕色 (Brown), 黄色 (Yellow), 灰色 (Grey), 橙色 (Orange), 黑色 (Black), 黄褐色 (Tan), 紫色 (Purple), 红色 (Red), 白色 (White), and 棕色 (Brown).

