

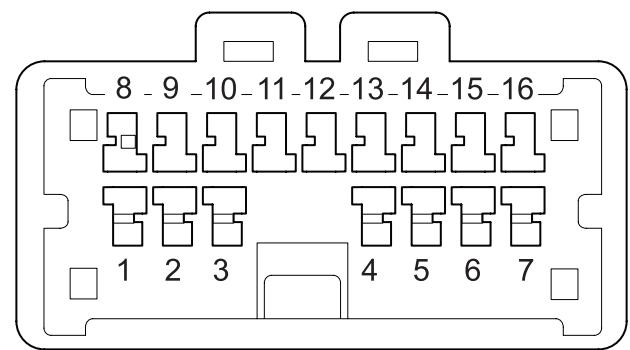
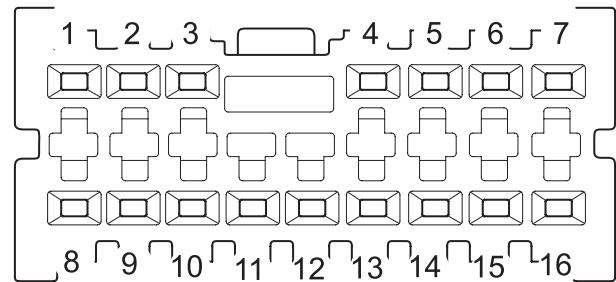


① : IP54B BD44B	② : IP54A BD44A
③ : DD07 BD46A	④ : DD07 BD46B

连接器代码	① : IP54B BD44B	颜色	
位置	仪表板电器盒旁		

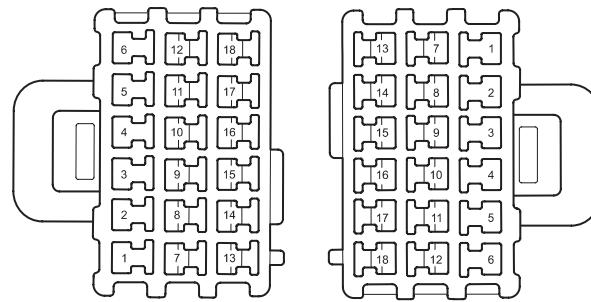


WDAC-5470

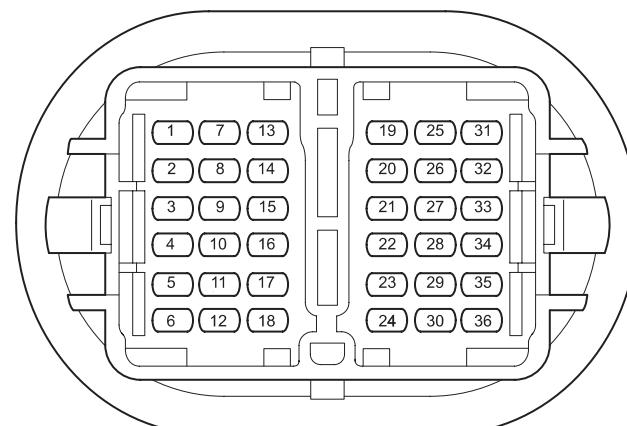


WDAC-4690

连接器代码	② : IP54A BD44A	颜色	
位置	仪表板电器盒旁		



连接器代码	③ : DD07 BD46A ④ : DD07 BD46B	颜色	
位置	仪表板电器盒旁		

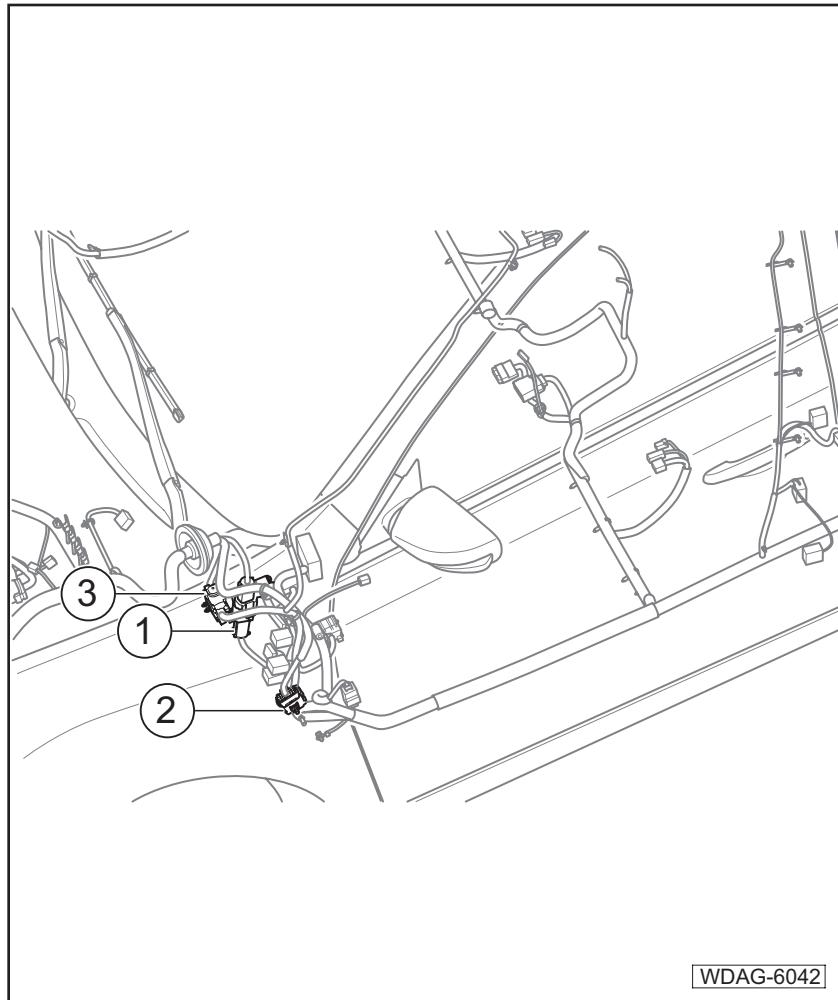

① : FB99 BD99	② : BD43 FB25
③ : FB41 BD57	

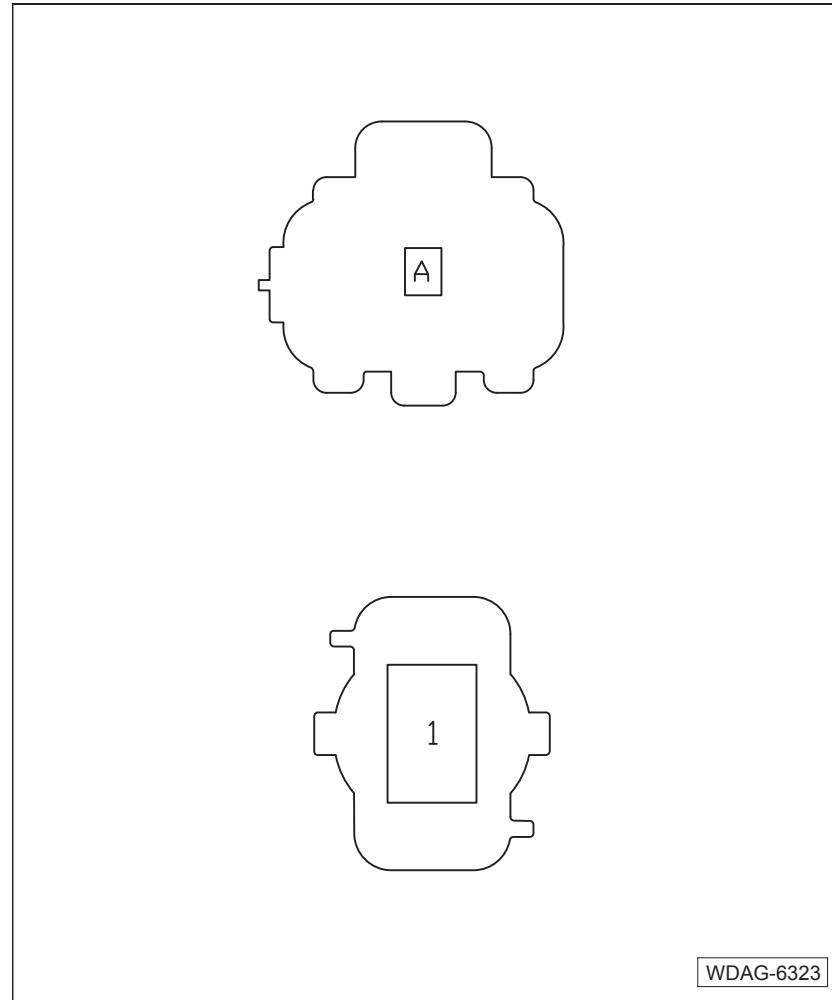


连接器代码	① : FB99 BD99	颜色	
位置	仪表板电器盒旁		

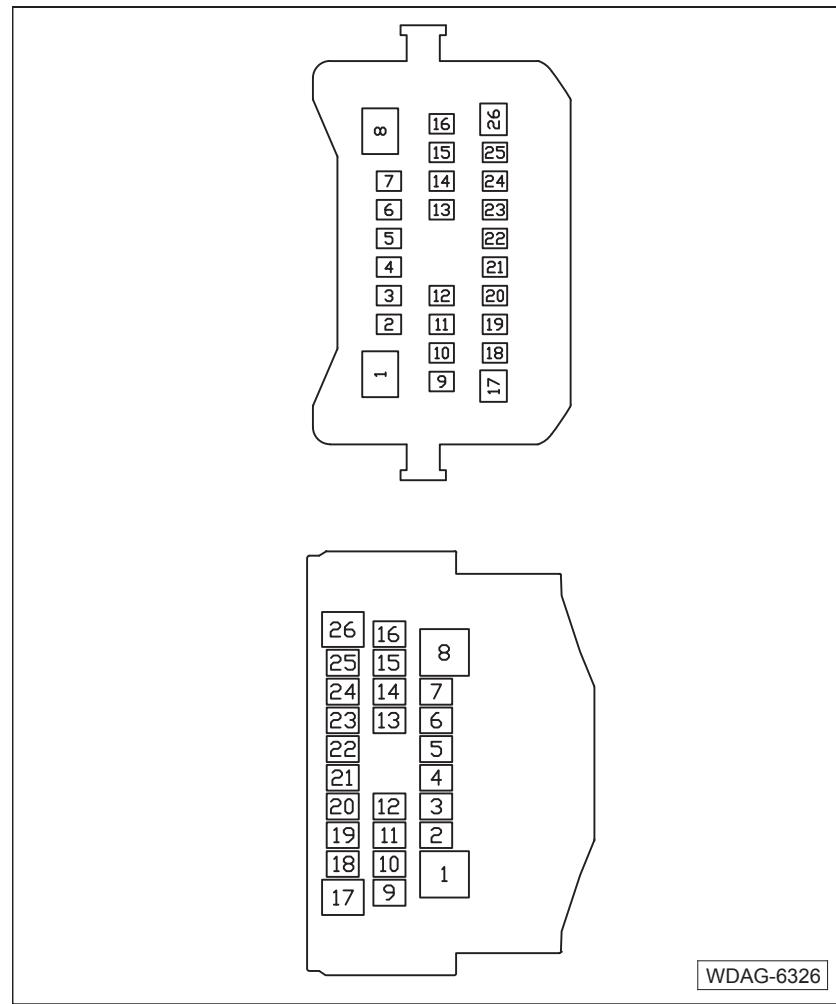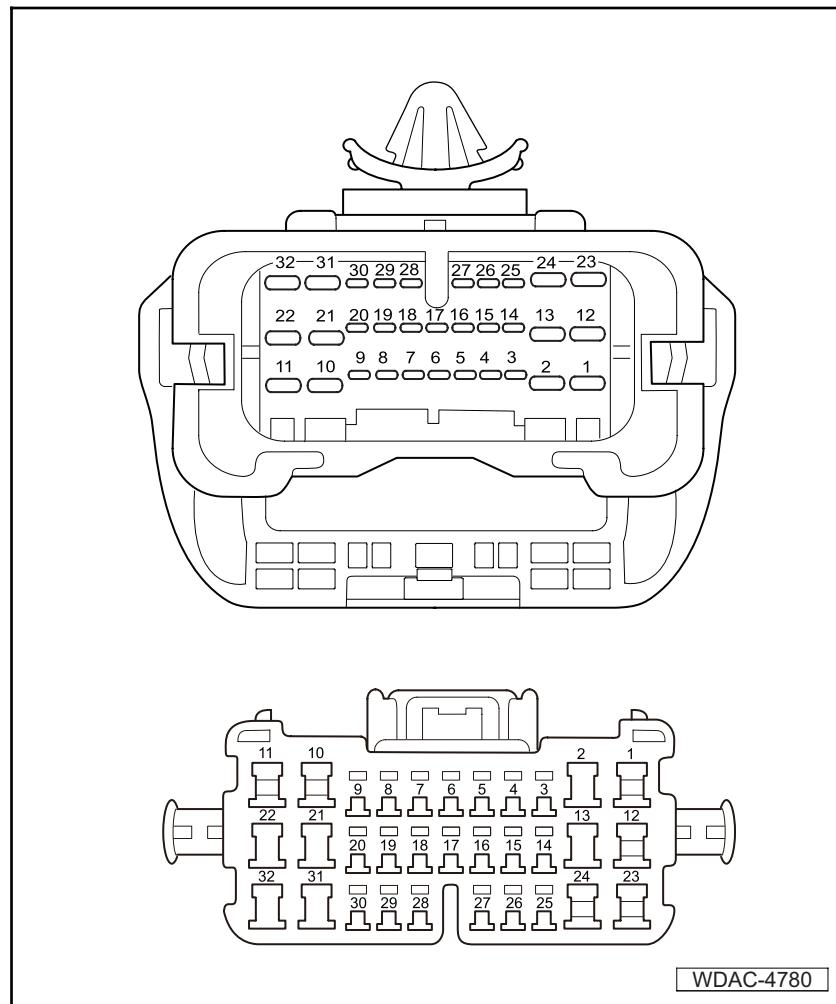


连接器代码	② : BD43 FB25	颜色	
位置	仪表板电器盒旁		


连接器代码	③ : FB41 BD57	颜色	
位置	仪表板电器盒旁		

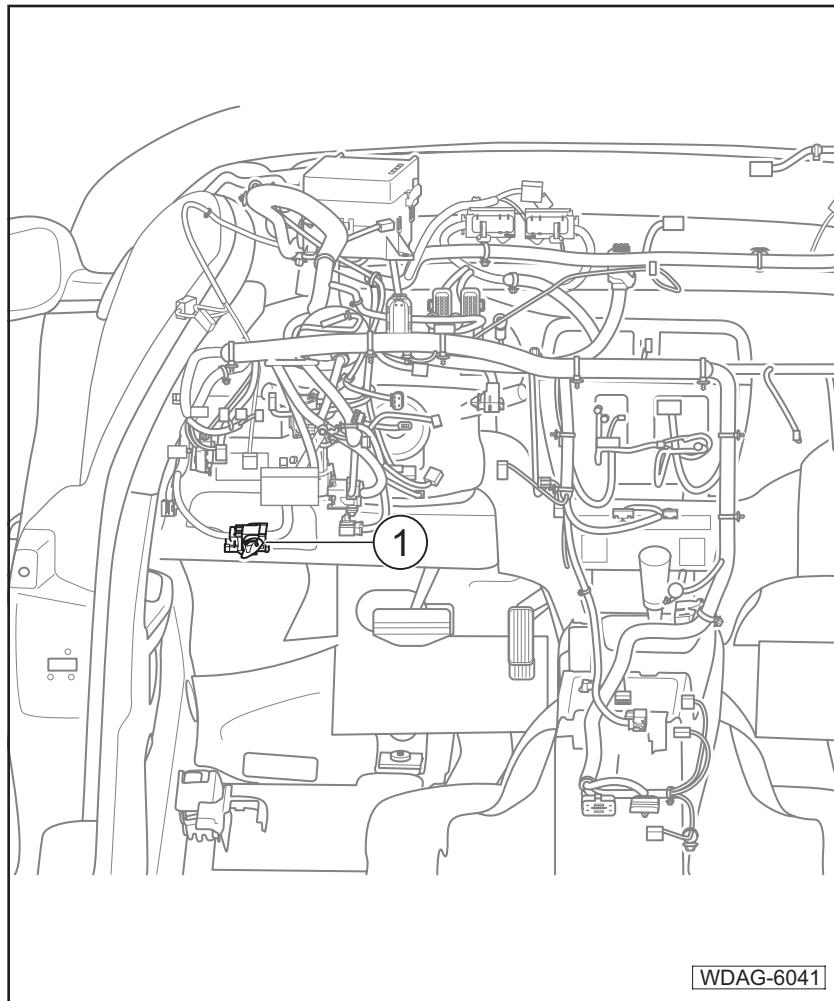


① : IP55 FB27

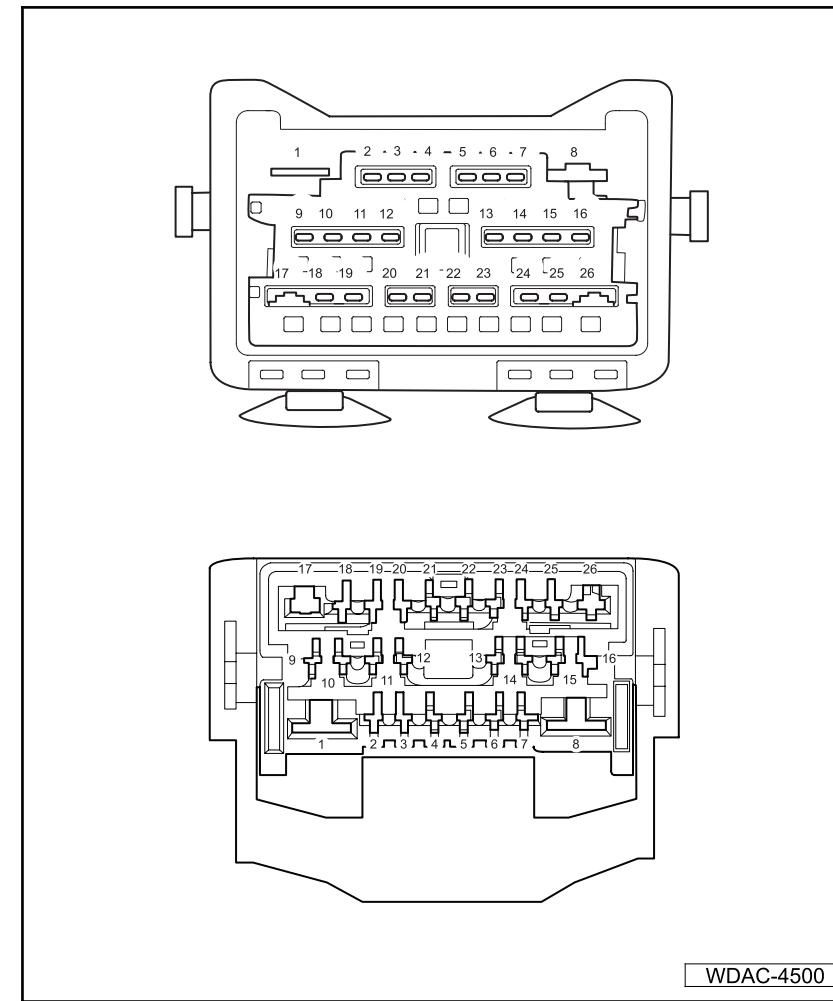

连接器代码	① : IP55 FB27	颜色	
位置	仪表板电器盒旁		

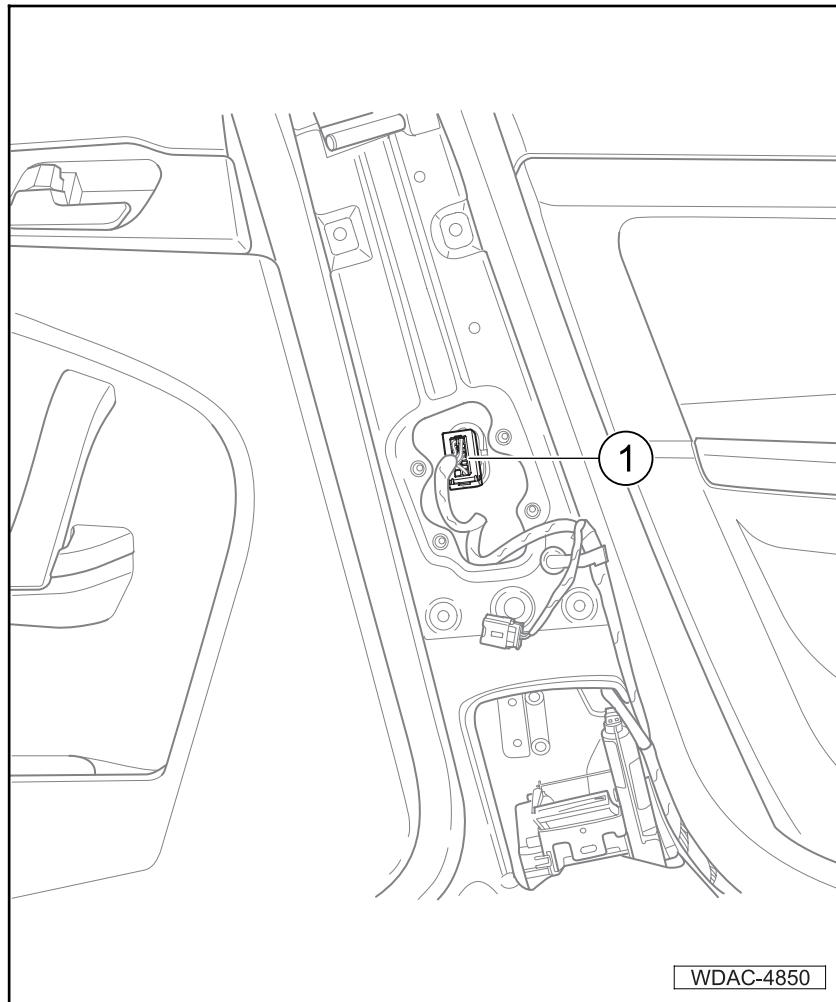


① : BD48 LD05

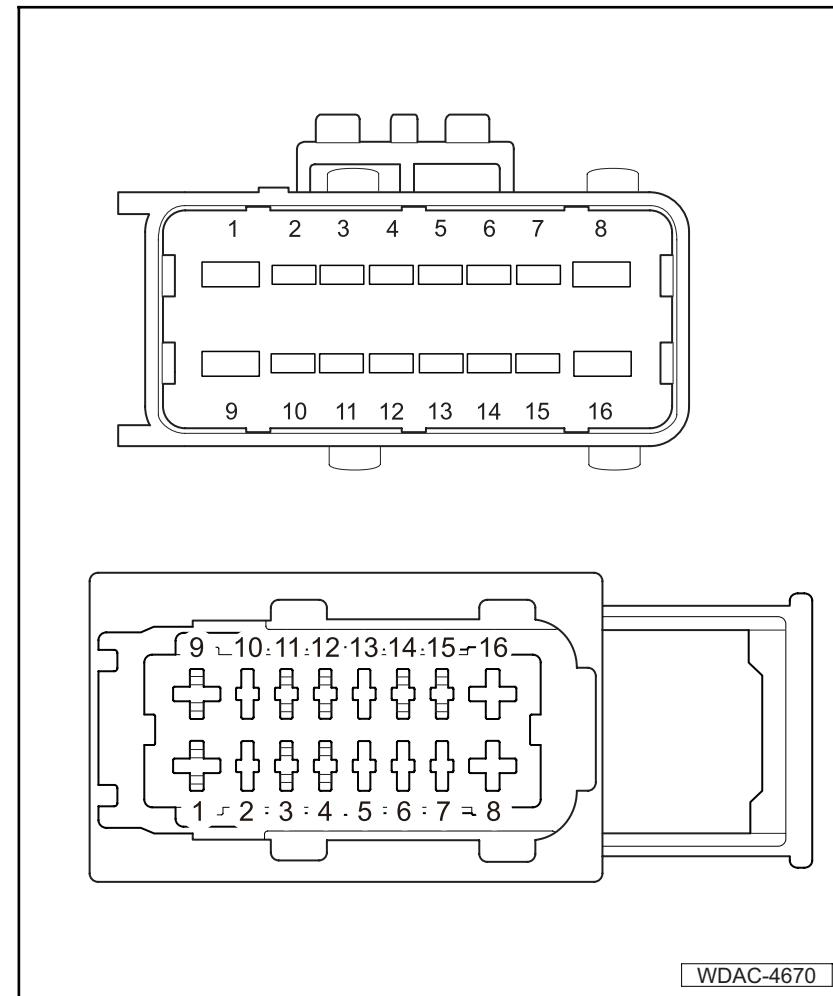


连接器代码 ① : LD05 BD48 颜色

位置 在左侧 B 柱下部

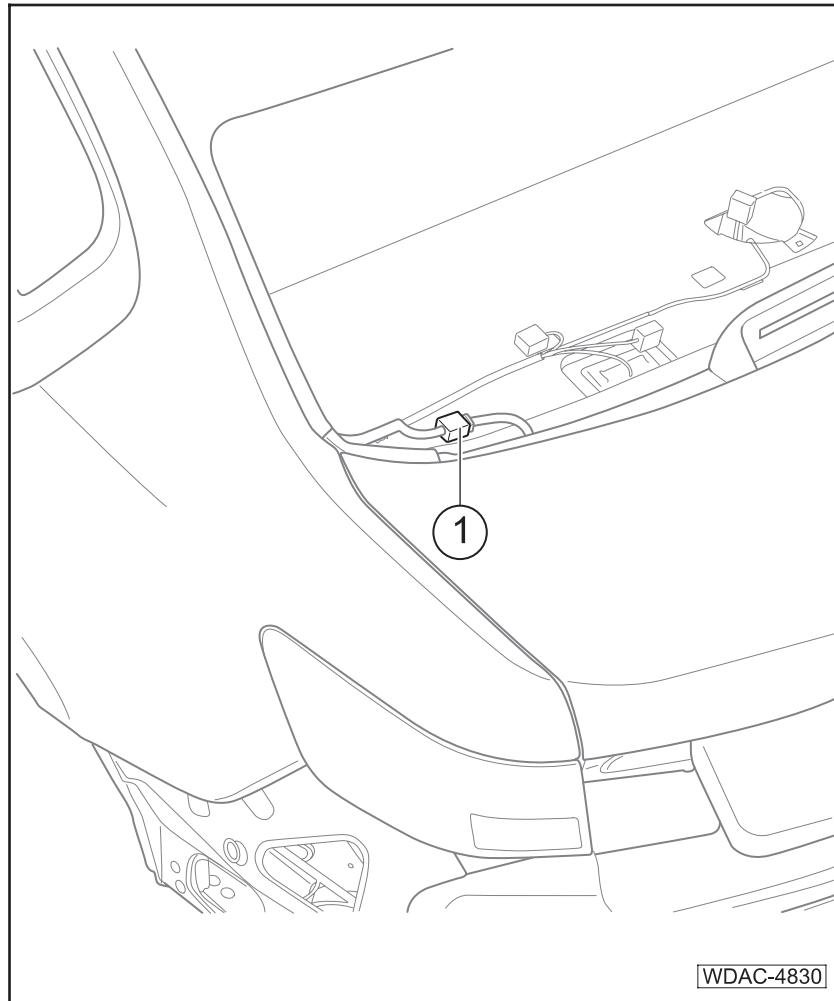


① : BD50 TK07

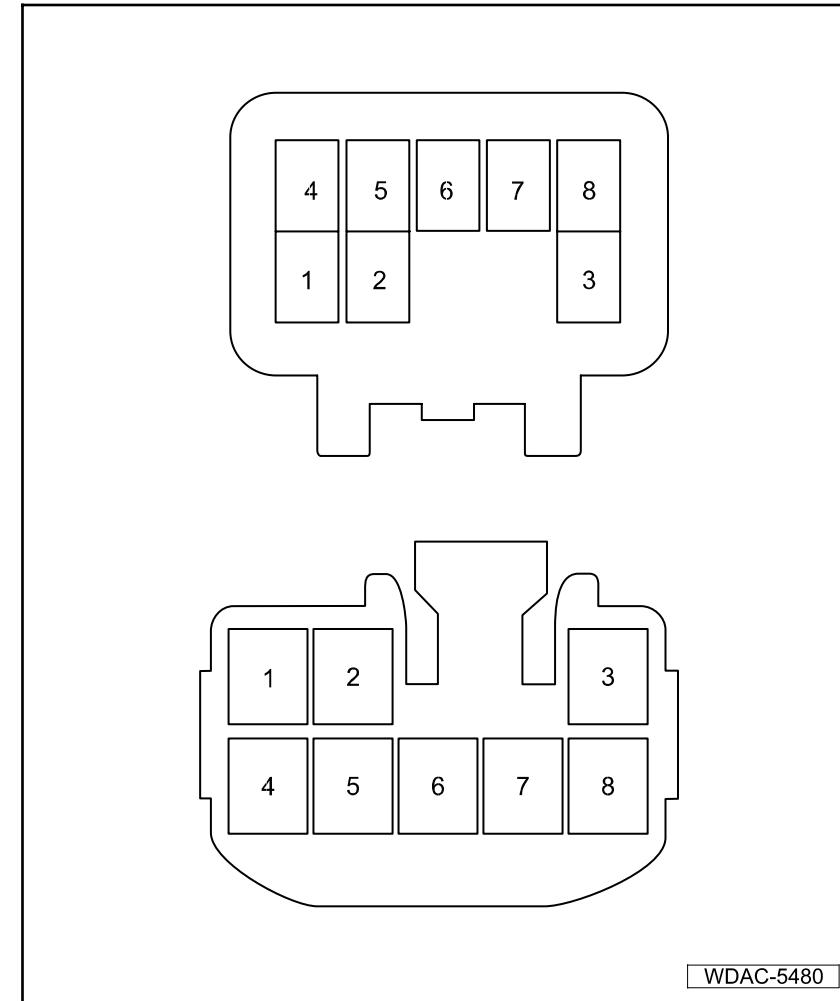


WDAC-5480

连接器代码	① : BD50 TK07	颜色	
位置	后风挡玻璃左下方		


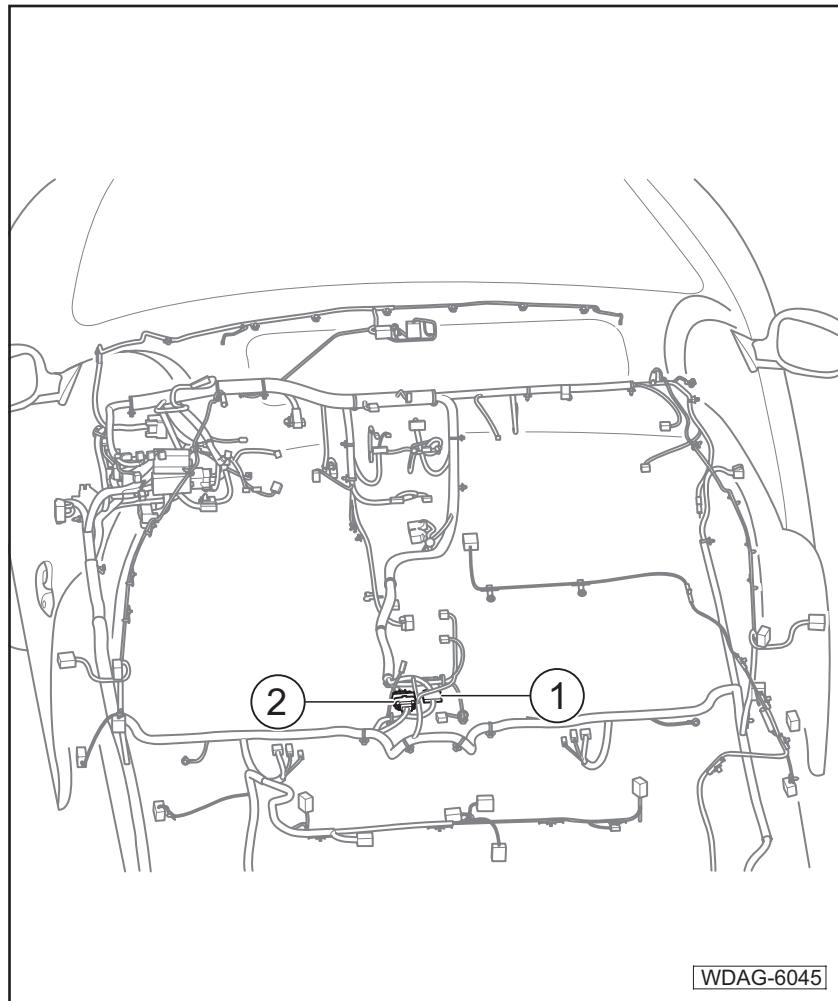


① : BD56A IP56A

② : BD53B IP57B


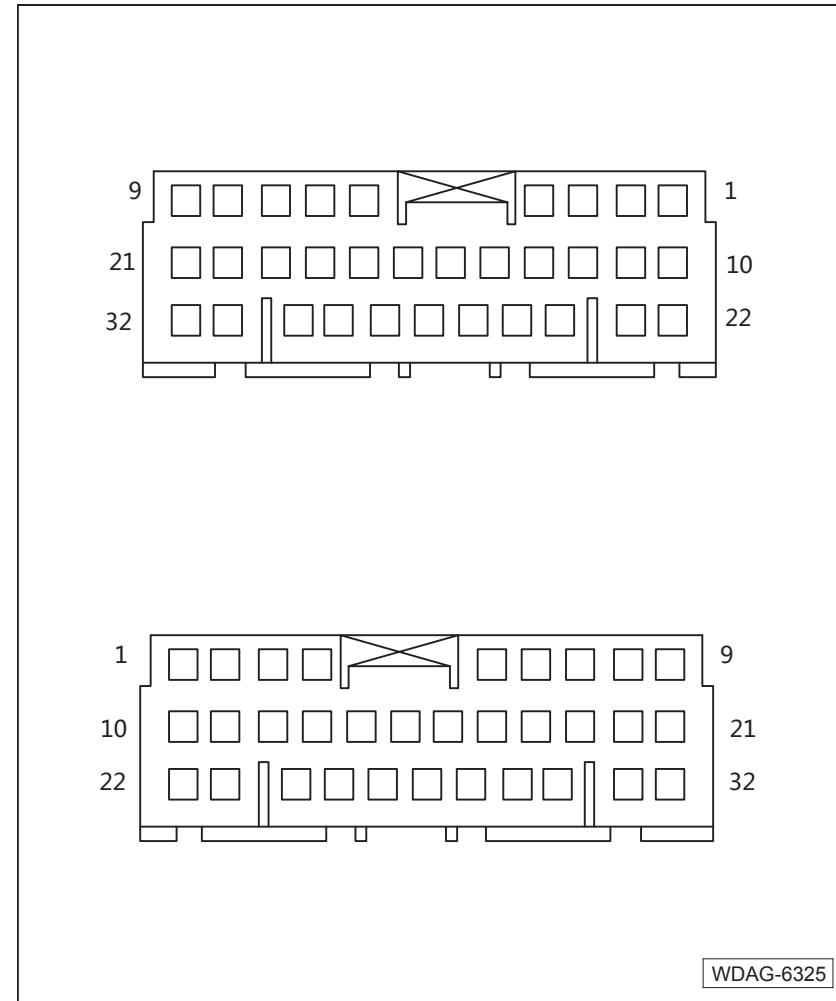


连接器代码	① : BD56A IP56A	颜色	
位置	换挡杆后方中央通道上		

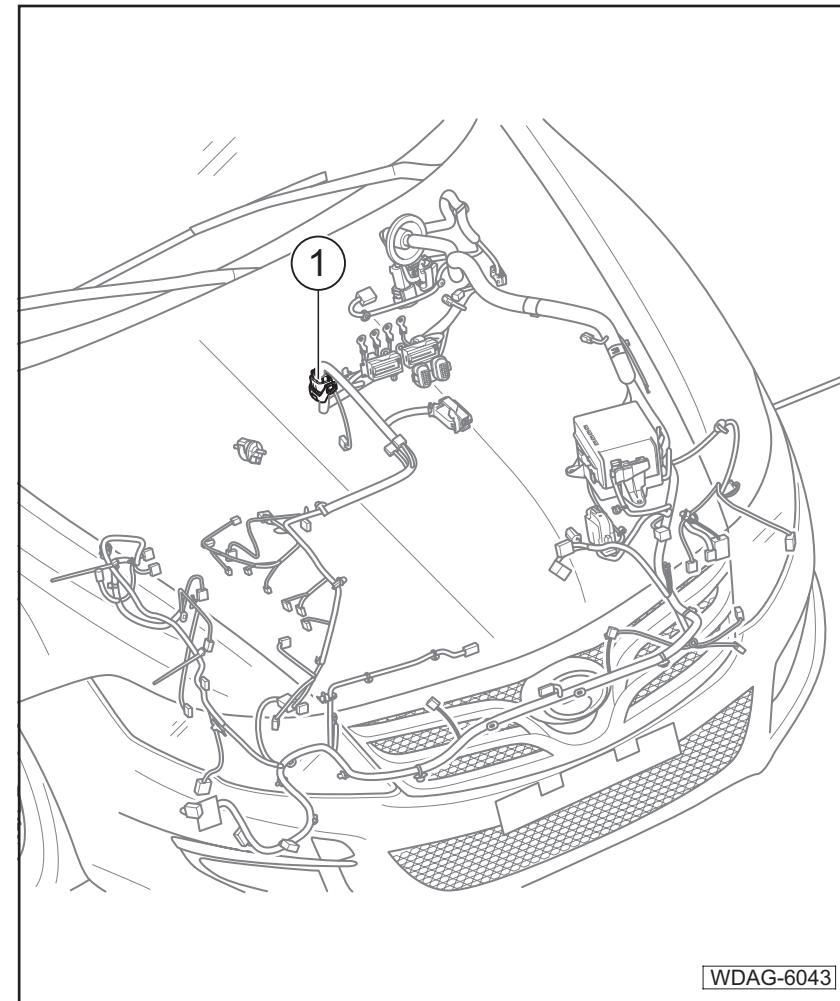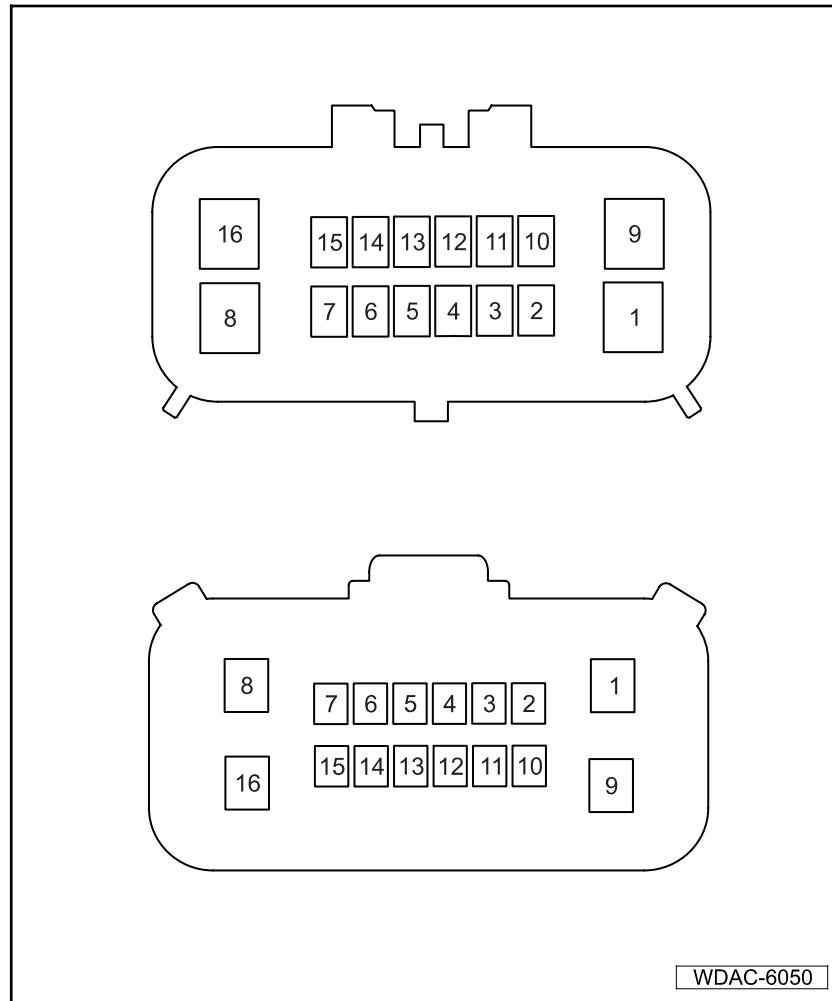


连接器代码	② : BD53B IP57B	颜色	
位置	换挡杆后方中央通道上		

① : FB26F EN31F	
-----------------	--

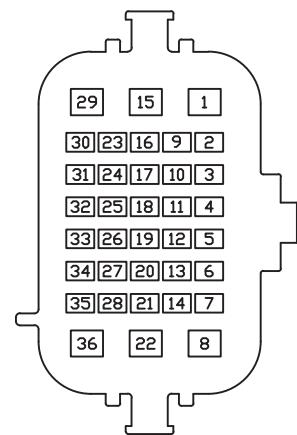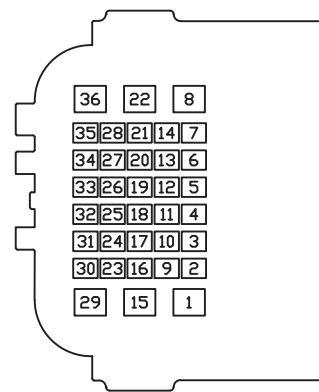



WDAG-6327

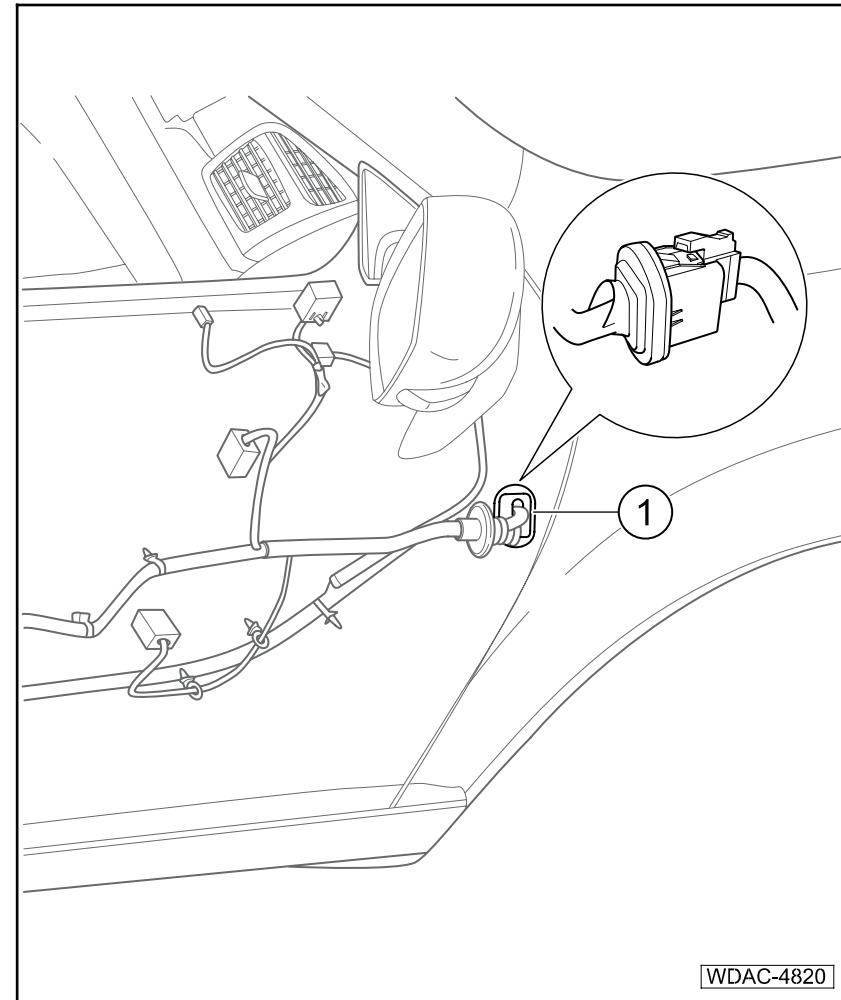

WDAC-4820


连接器代码	① : FB26F EN31F	颜色	
位置	发动机舱后横梁中部		

① : PD07 BD47	
---------------	--

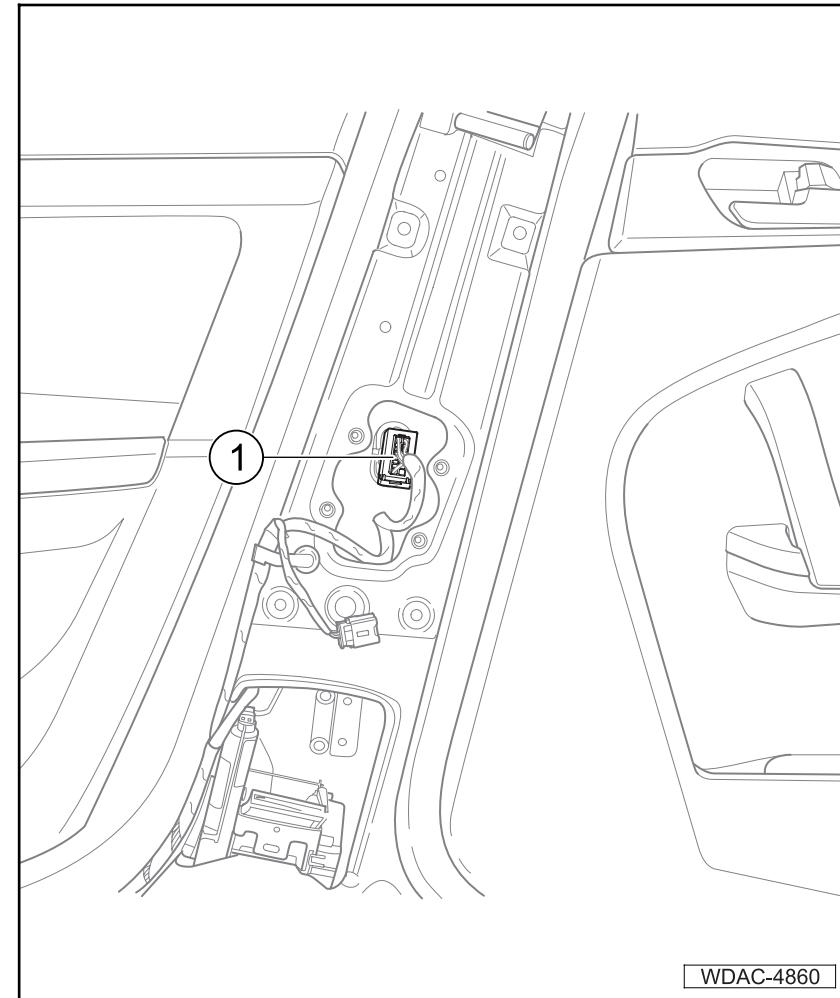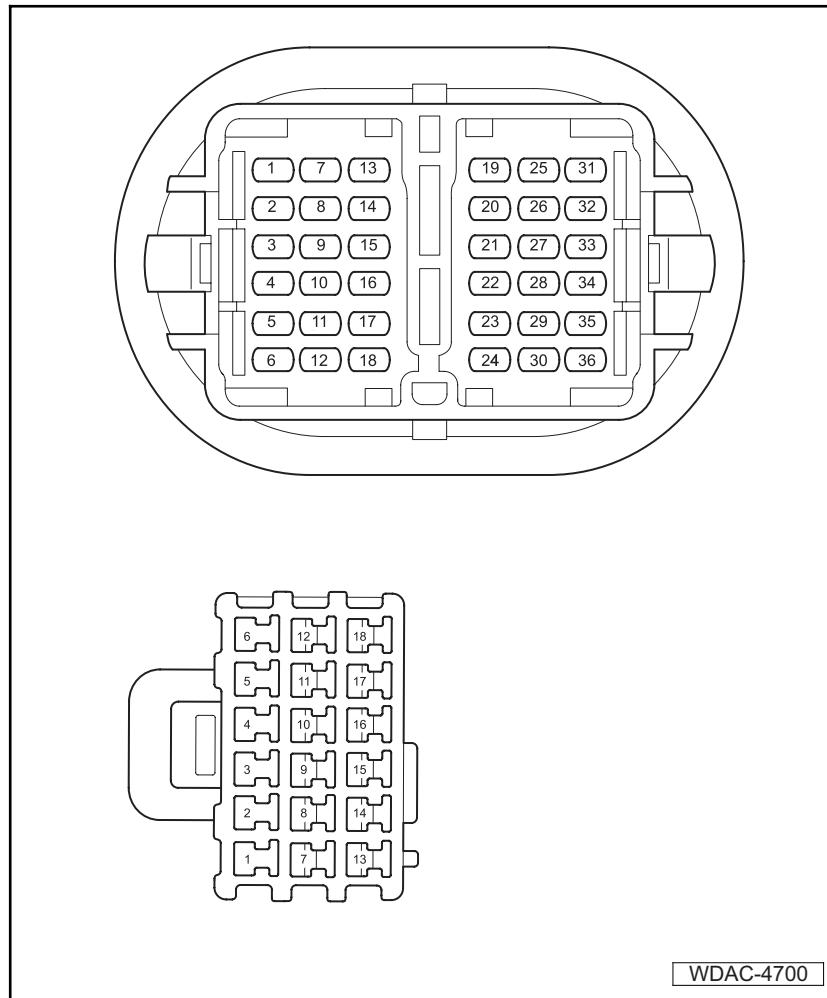

连接器代码	① : PD07 BD47	颜色	
位置	在右侧 A 柱下部		

① : RD05 BD49	
---------------	--

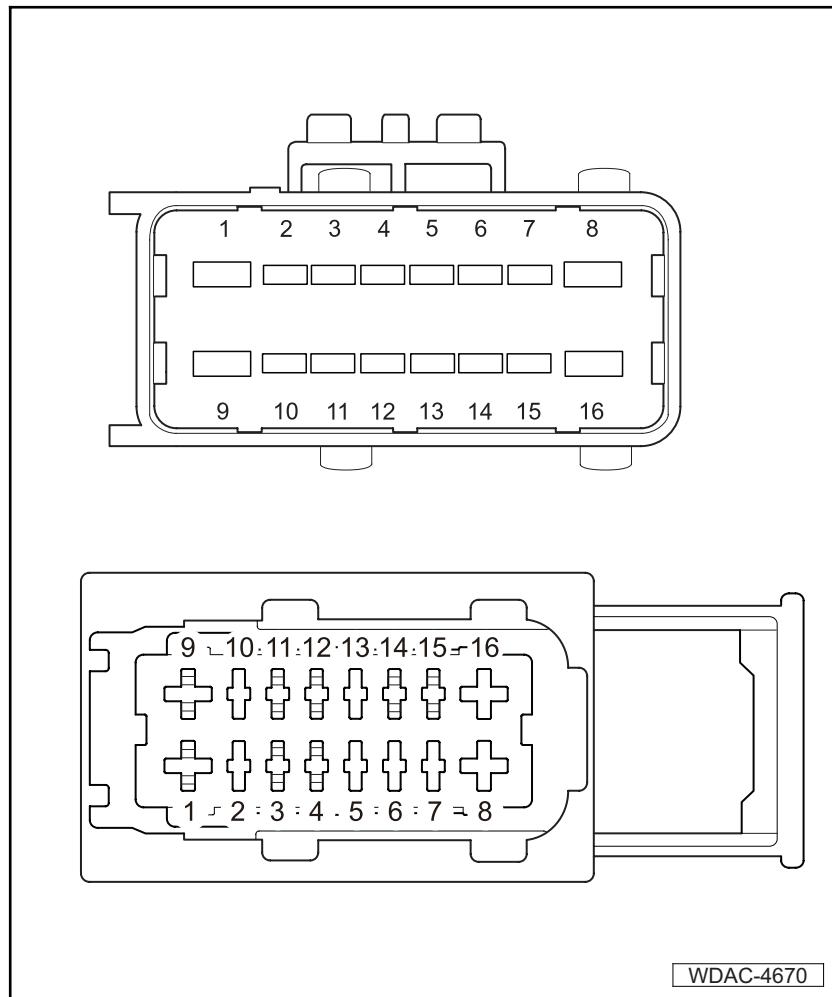

WDAC-4670

连接器代码	① : RD05 BD49	颜色	
位置	在右侧 B 柱下部		