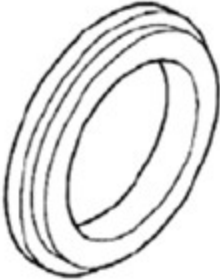
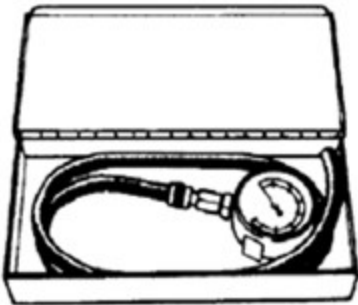
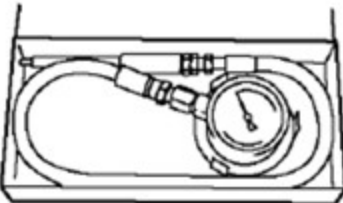
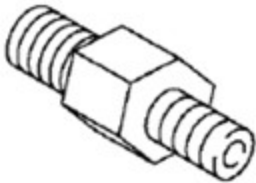
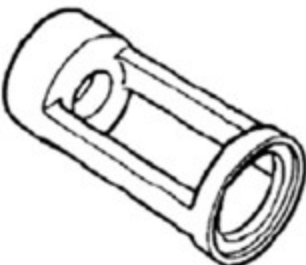
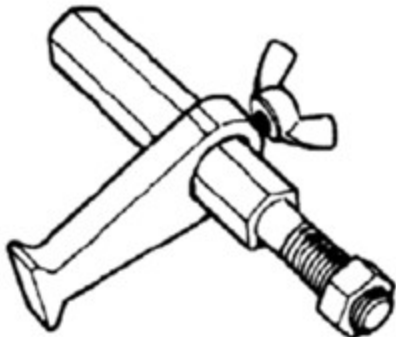


紧固部件	紧固扭矩		
	N•m	kg-m	lb-ft
连杆轴承盖螺栓	a) 拧紧 15 N•m b) 通过旋转 65° 重新拧紧	a) 拧紧 1.5 kg-m b) 通过旋转 65° 重新拧紧	a) 拧紧 11.0 lb-ft b) 通过旋转 65° 重新拧紧
主轴承盖螺栓	a) 拧紧 20 N•m b) 拧紧 40 N•m c) 通过旋转 65° 重新拧紧	a) 拧紧 2.0 kg-m b) 拧紧 4.0 kg-m c) 通过旋转 60° 重新拧紧	a) 拧紧 14.5 lb-ft b) 拧紧 29.0 lb-ft c) 通过旋转 60° 重新拧紧
飞轮或驱动板螺栓	70	7.0	51.0

专用工具

 09911-97720 油封导套	 09911-97610 油封安装器	 09913-75810 轴承安装器	 09915-64512 压缩表
 09915-64530 软管	 09915-64550 附件	 09915-67311 真空表	 09915-77311 油压表
 09915-78211 油压表附件	 09916-14510 起阀器	 09916-14521 起阀器附件	 09916-34542 铰刀手柄

 09916-34550 铰刀 (5.5 mm)	 09916-37320 铰刀 (10.5 mm)	 09916-44910 阀导承拆卸器	 09917-87010 阀导承安装器
 09916-58210 阀导承安装器手柄	 09916-67610 挺杆固定器	 09916-77310 活塞环压缩器	 09916-84511 镊子
 09917-98221 气门油封安装器	 09924-17811 飞轮固定器	 09926-58010 轴承拉出器附件	 09944-36011 方向盘拆卸器