


搭铁点信息

发动机线束(GW4B15A)

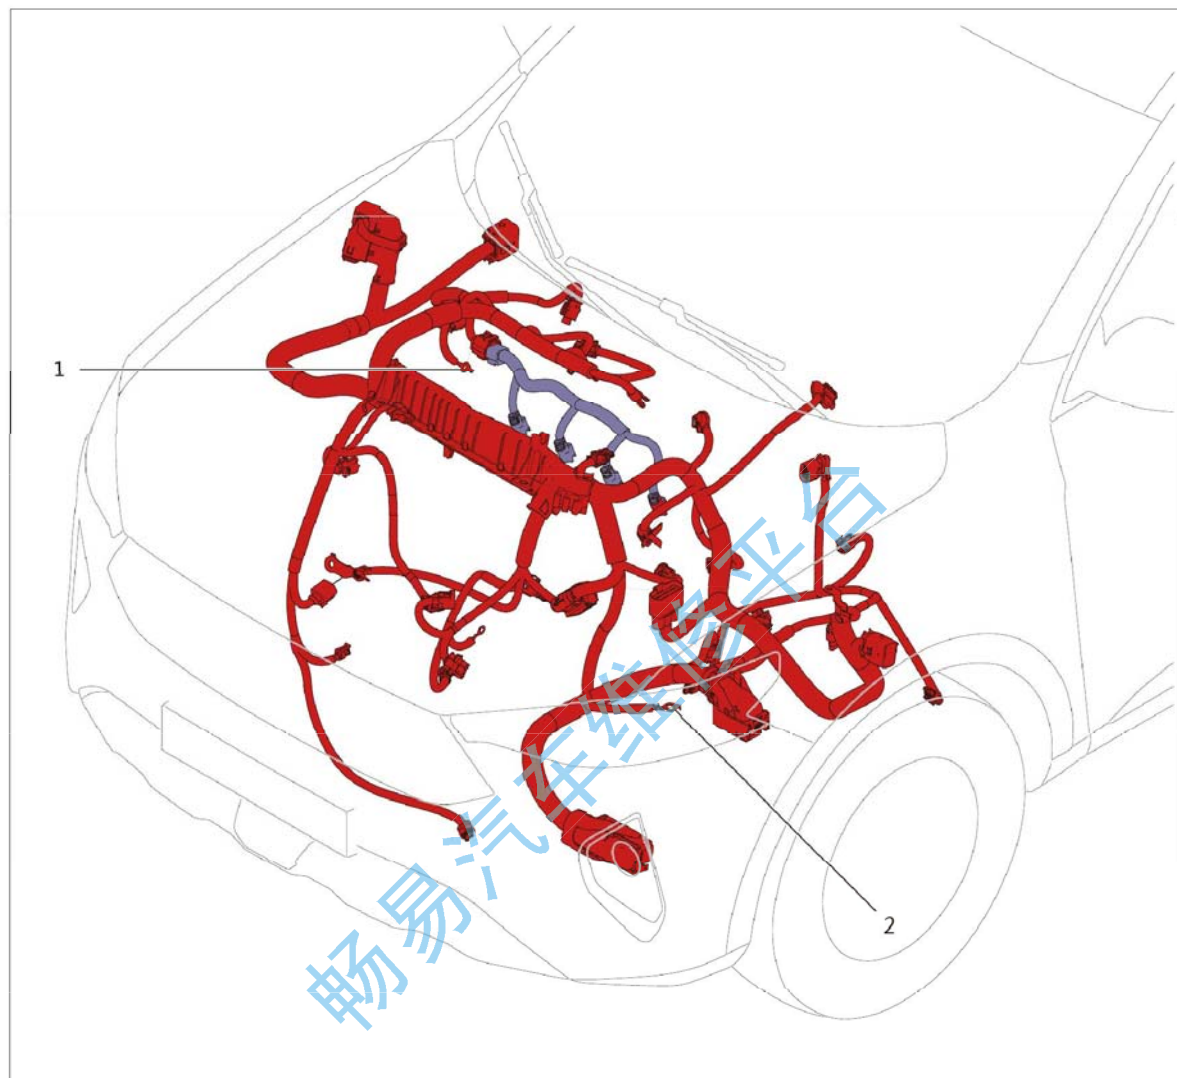


4EAB1676082F

1. GND 04

2. GND 03

发动机线束(GW4C20B)

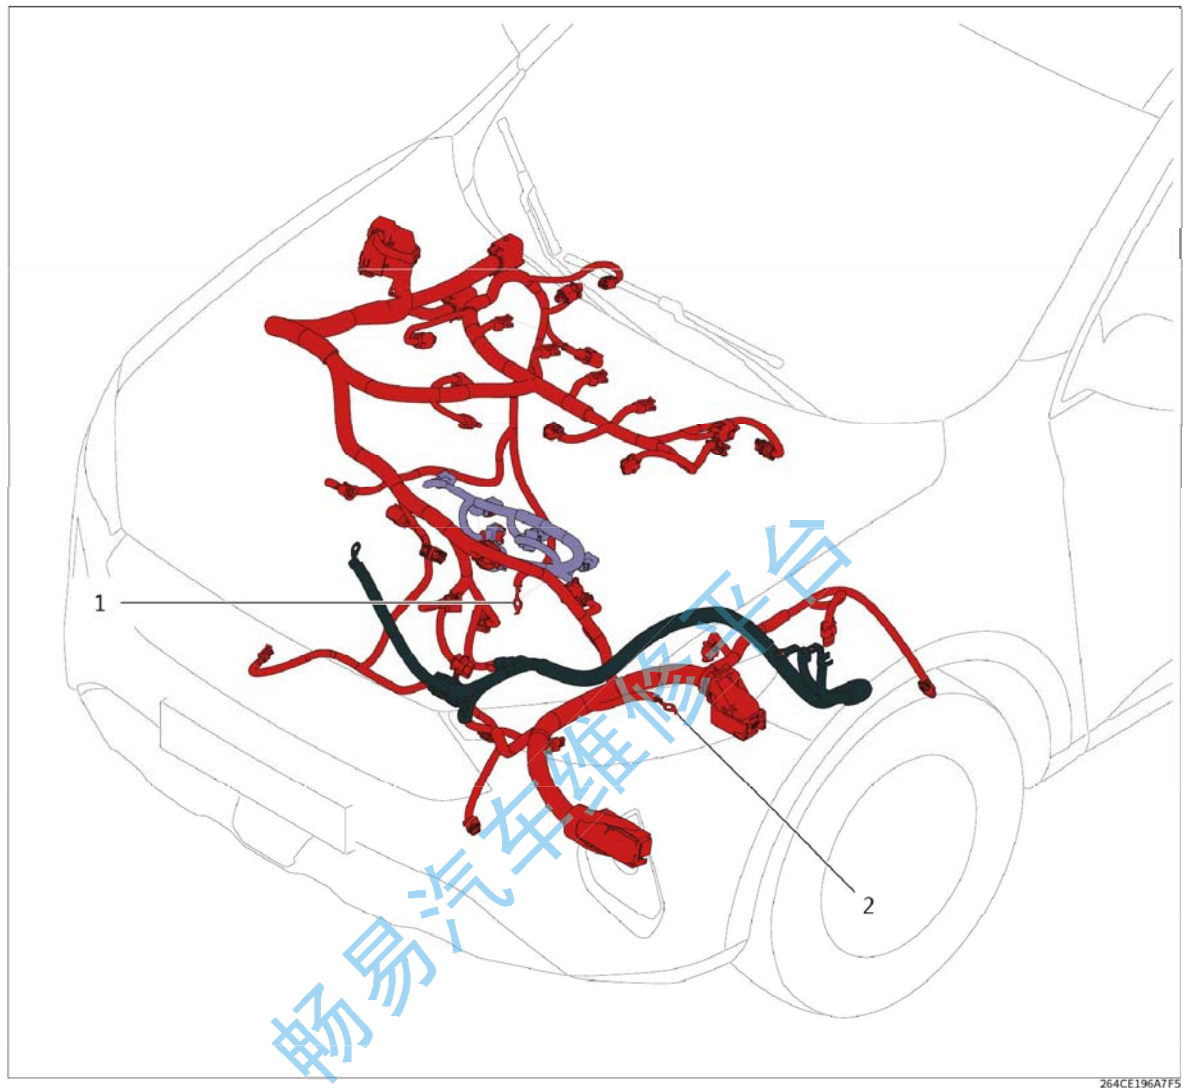


264CE196A7F5

1. GND 04

2. GND 03


机舱线束(GW4B15A)

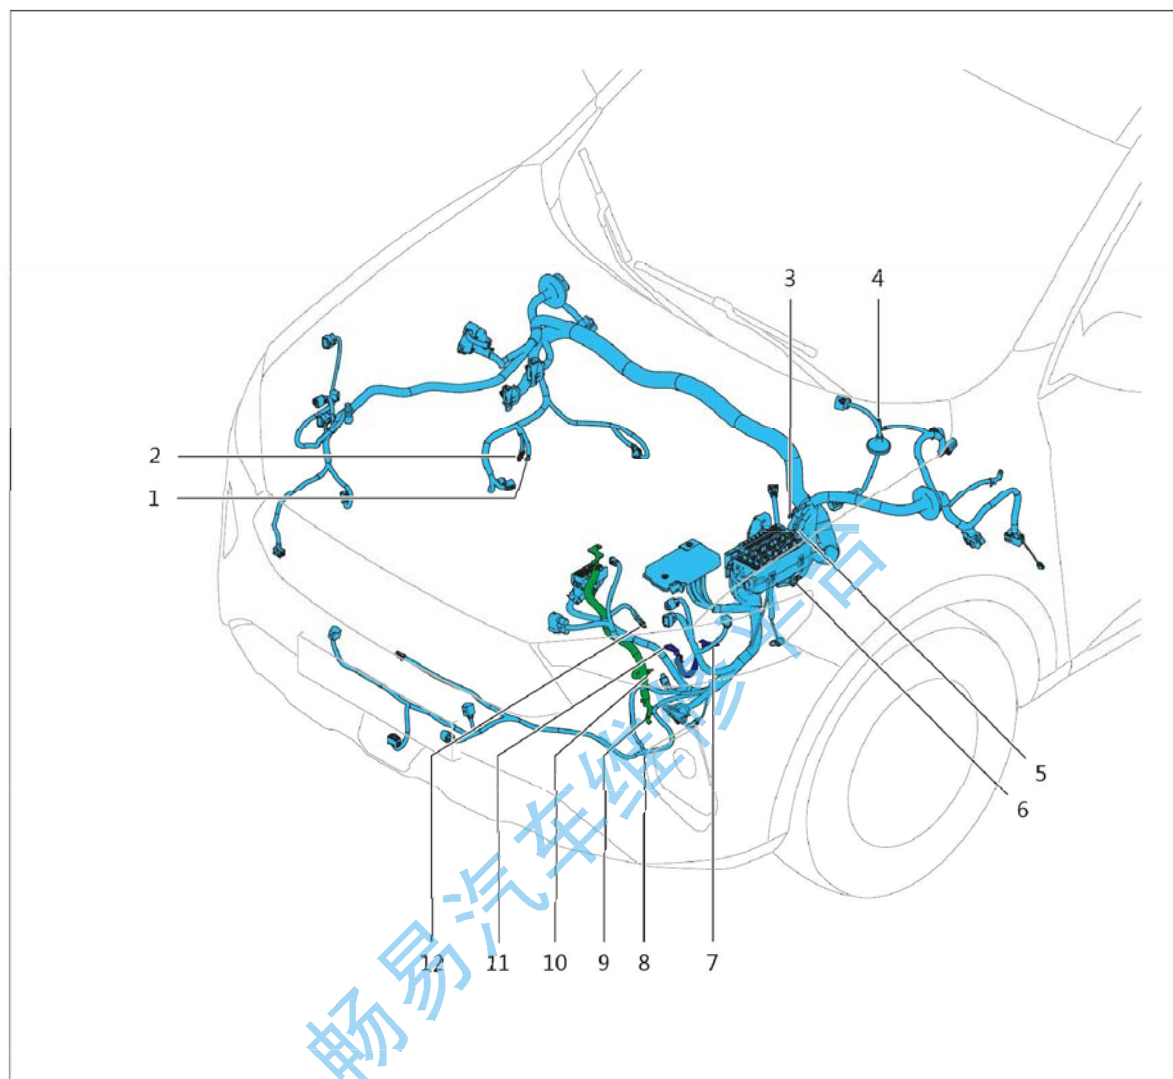

D36D9A406B77

- | | |
|-----------|------------------|
| 1. GND 11 | 7. 变速器搭铁线束—车身端 |
| 2. GND 12 | 8. GND 05 |
| 3. GND 08 | 9. 蓄电池负极线—车身端 |
| 4. GND 10 | 10. 蓄电池负极线—车身端 |
| 5. GND 09 | 11. 变速器搭铁线束—变速器端 |
| 6. GND 07 | 12. GND 06 |


机舱线束(GW4C20B)

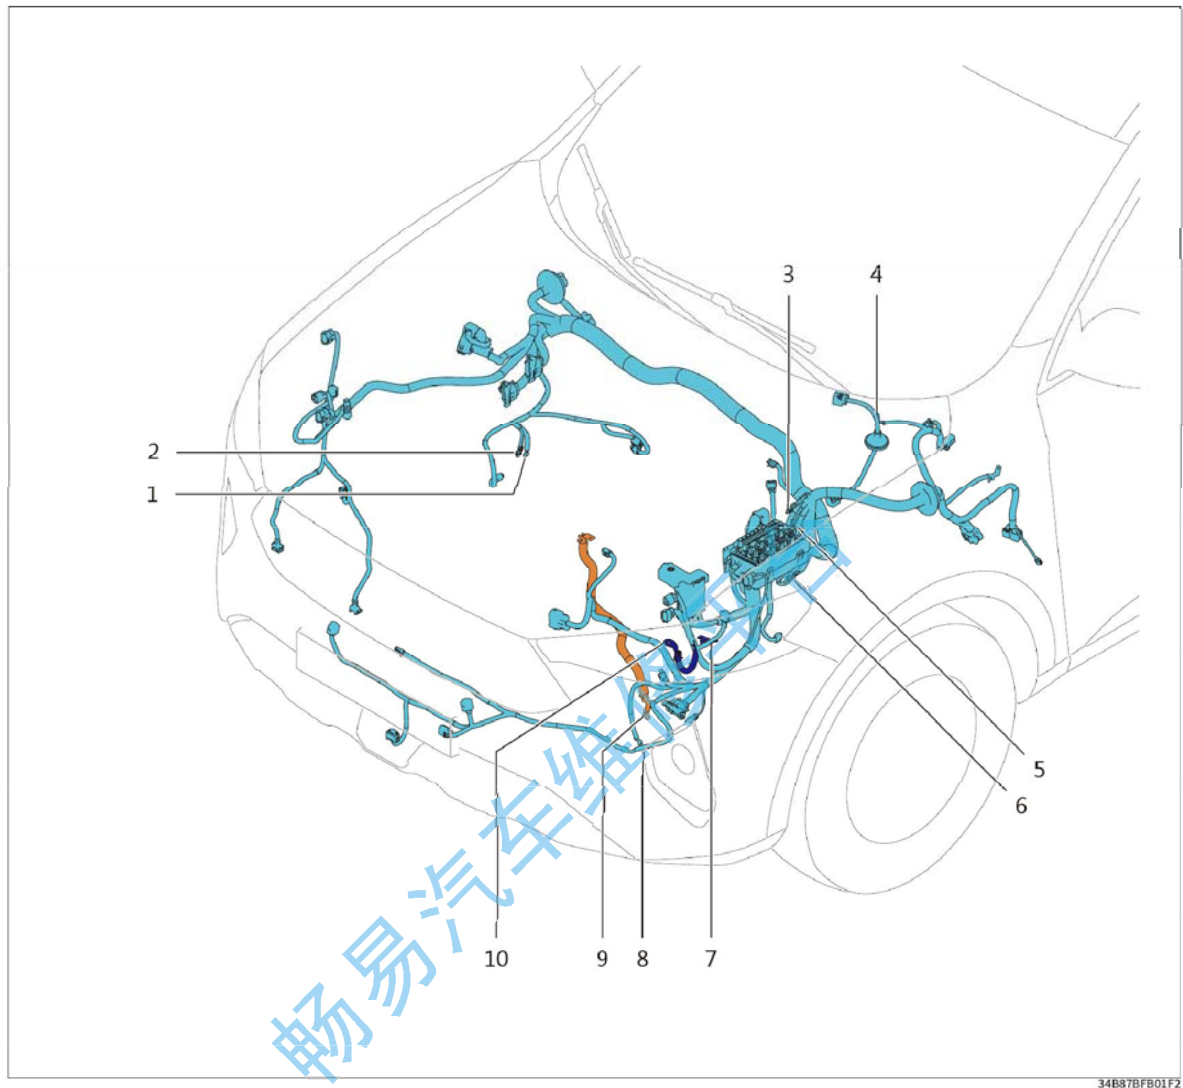


1. GND 11
2. GND 12
3. GND 08
4. GND 10
5. GND 09

6. GND 07
7. 变速器搭铁线束—车身端
8. GND 05
9. 蓄电池负极线—车身端
10. 变速器搭铁线束—变速器端

仪表板线束

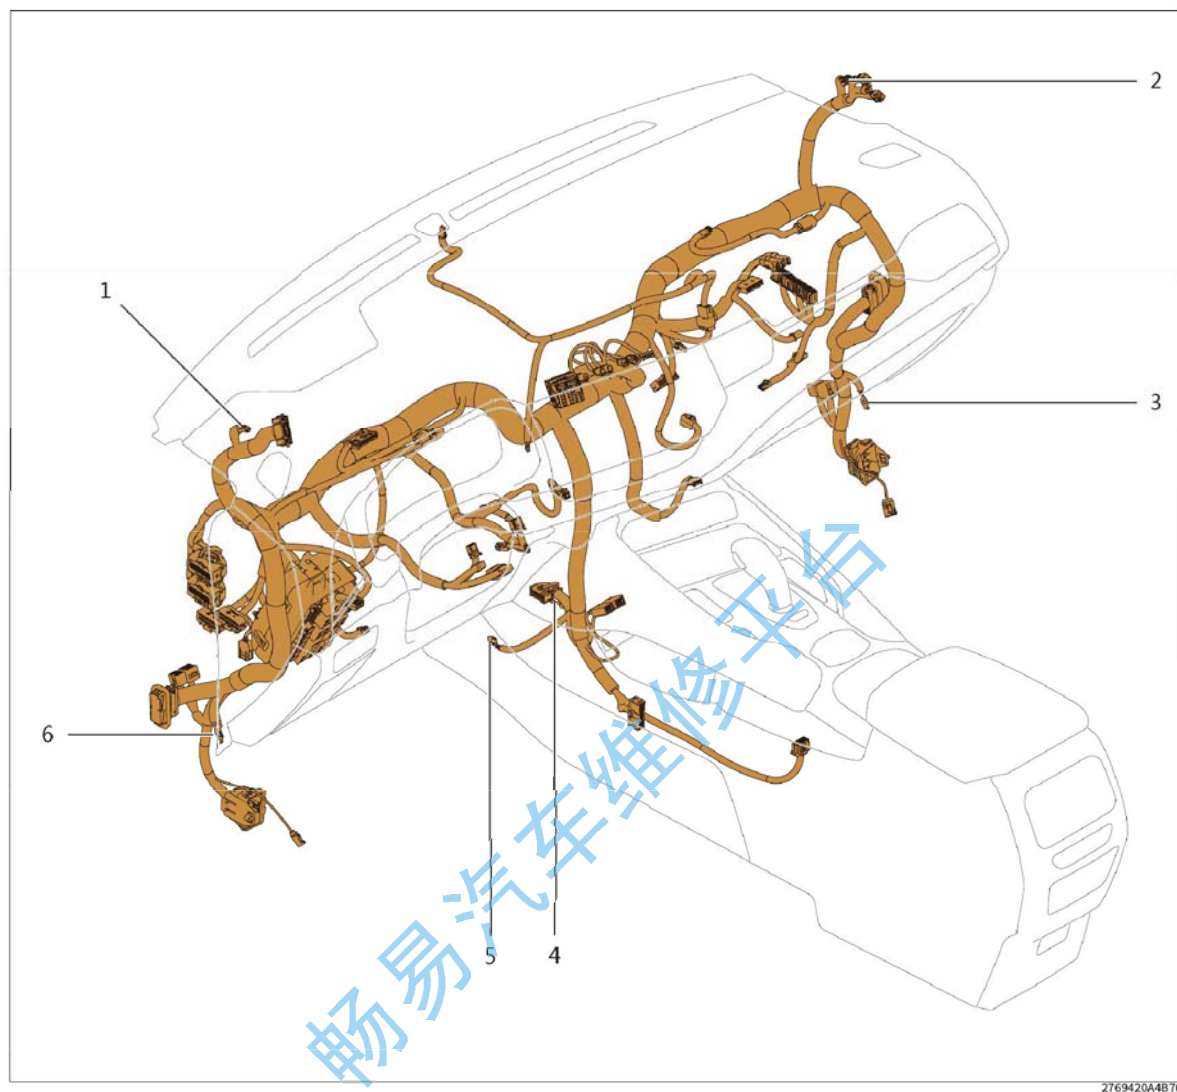

座舱线束

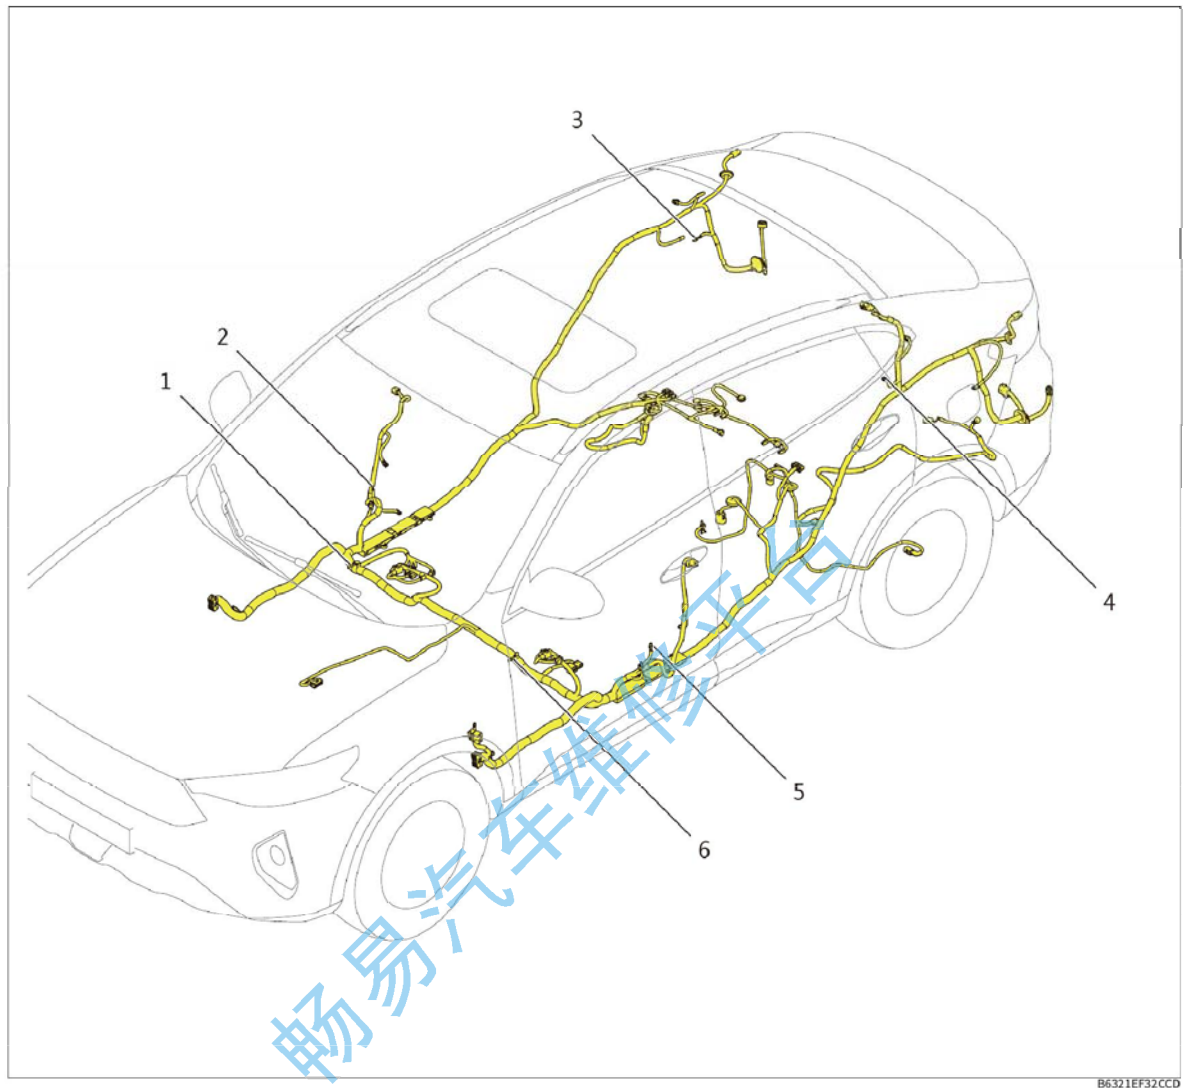


B6321EF32CCD

- 1. GND 20
- 2. GND 22
- 3. GND 23

- 4. GND 24
- 5. GND 21
- 6. GND 19

后背门线束

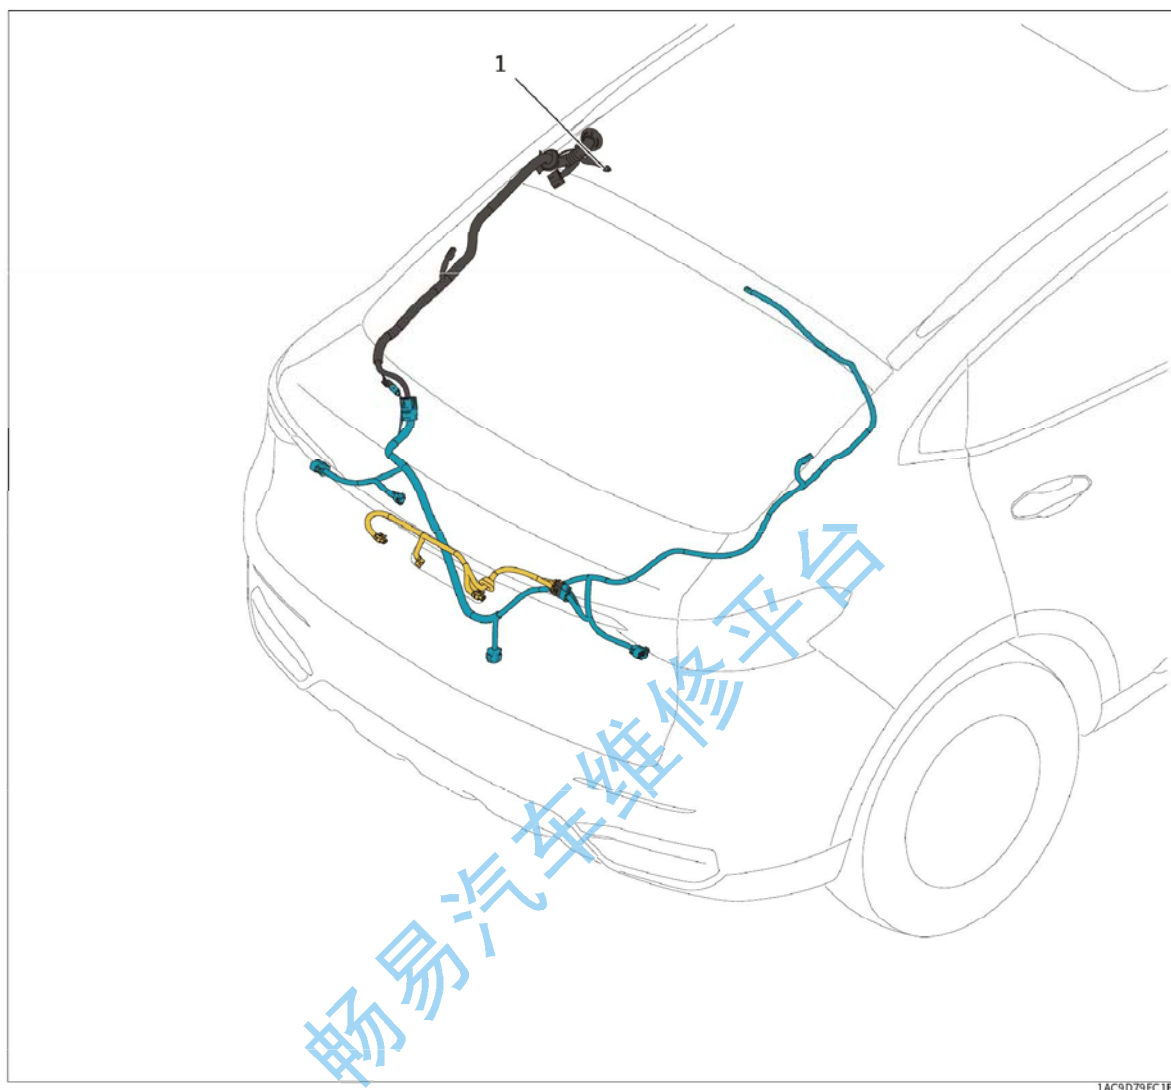

1. GND 25