

充电系统

充电系统	2-1
系统描述	2-1
系统图	2-3
规定力矩	2-4
故障症状表	2-5
检查	2-7
故障码表	2-8
P0A0813	2-10
P100002	2-11
P100004	2-12
P10001C	2-13
P100029	2-14
P10002F	2-15
P100079	2-16
P100116	2-17
P100117	2-18
P100119	2-19
P10011C	2-20
P10012F	2-21
P100179	2-22
P100203	2-23
P100204	2-24
P100216	2-25
P10022F	2-26
P100529	2-27
P100629	2-28
P100729	2-29
P100787	2-30
P100816	2-31
P100817	2-32
P100818	2-33
P100819	2-34
P10082B	2-35
P100916	2-36
P100917	2-37
P100A16	2-38
P100A19	2-39
P100B17	2-40
P100D29	2-41
P100E29	2-42
P100F98	2-43

P101098.....	2-44
P101198.....	2-45
P101298.....	2-46
P101398.....	2-47
P101498.....	2-48
P101598.....	2-49
P101698.....	2-50
P101798.....	2-51
U000188	2-52
U011087	2-53
U011187	2-54
U014687	2-55
U029387	2-56
U050387	2-57
U110017	2-58
U110116	2-59
U210002	2-60
U210003	2-61
U210004	2-62
U210101	2-63
U210201	2-64
U24BA81.....	2-65
U25BA81.....	2-66
U34BA82.....	2-67
U35BA82.....	2-68
充电电缆	2-69
规格参数	2-69
引脚定义	2-70
交流充电插座.....	2-71
位置图	2-71
规格参数	2-72
引脚定义	2-73
拆卸/安装	2-74
直流充电插座.....	2-77
位置图	2-77
规格参数	2-78
引脚定义	2-79
拆卸/安装	2-80
车载充电机.....	2-83
工作原理	2-83
位置图	2-84
规格参数	2-85
引脚定义	2-86
检查.....	2-89
拆卸/安装	2-89