

整车控制系统

整车控制系统.....	6-1
系统描述	6-1
系统图	6-5
规定力矩	6-7
故障码表	6-8
P057162.....	6-12
P057961.....	6-13
P060096.....	6-14
P060A47	6-15
P062F44.....	6-16
P064216.....	6-17
P064317.....	6-18
P065216.....	6-19
P065317.....	6-20
P069111.....	6-21
P069212.....	6-22
P069311.....	6-23
P069412.....	6-24
P0A0A11	6-25
P0A0A12	6-26
P0A0A13	6-27
P0A0B38	6-28
P0A8D21	6-29
P0A8E22	6-30
P102121.....	6-31
P102222.....	6-32
P102361.....	6-33
P102563.....	6-34
P102663.....	6-35
P105129.....	6-36
P106138.....	6-37
P106238.....	6-38
P106438.....	6-39
P109112.....	6-40
P109211.....	6-41
P109313.....	6-42
P109438.....	6-43
P109538.....	6-44
P109638.....	6-45
P109738.....	6-46
P109838.....	6-47

P109938.....	6—48
P10A113	6—49
P10A213	6—50
P10B112	6—51
P10B211	6—52
P10B313	6—53
P10C112	6—54
P10C211	6—55
P10C313	6—56
P110267.....	6—57
P110467.....	6—58
P111196.....	6—59
P112167.....	6—60
P112167.....	6—61
P112267.....	6—62
P112267.....	6—63
P112367.....	6—64
P112367.....	6—65
P114121.....	6—66
P114222.....	6—67
P212221.....	6—68
P212322.....	6—69
P212721.....	6—70
P212822.....	6—71
P213863.....	6—72
U000188	6—73
U010387	6—74
U011087	6—75
U011187	6—76
U011287	6—77
U012287	6—78
U012687	6—79
U013187	6—80
U014687	6—81
U015087	6—82
U015587	6—83
U016387	6—84
U016487	6—85
U019887	6—86
U031283	6—87
U040483	6—88
U041183	6—89
U041383	6—90
U041683	6—91
U042083	6—92

U042283	6-93
U042383	6-94
U042483	6-95
U042883	6-96
U044783	6-97
U045182	6-98
U045183	6-99
U046483	6-100
U049983	6-101
U050287	6-102
U059783	6-103
U100087	6-104
U100287	6-105
U100287	6-106
U10F187	6-107
U10F282	6-108
U10F382	6-109
U10F582	6-110
U10F682	6-111
U10F782	6-112
U10F882	6-113
U10F982	6-114
U10FA82	6-115
U10FB82	6-116
U10FC82	6-117
U10FE82	6-118
U10FE82	6-119
U10FF83	6-120
U11F182	6-121
U11F282	6-122
U11F482	6-123
U11F583	6-124
U11F782	6-125
整车控制器.....	6-126
结构图	6-126
引脚定义	6-127
拆卸/安装	6-130
油门踏板	6-131
结构图	6-131
引脚定义	6-132
拆卸/安装	6-132
换挡器.....	6-133
结构图	6-133
引脚定义	6-134
故障代码表	6-135

拆卸/安装	6-136
驾驶模式切换开关	6-138
引脚定义	6-138
拆卸/安装	6-138

www.qxkjz.com