

动力电池包总成(PE389152A)

动力电池系统.....	4-1
系统描述	4-1
绝缘性测试.....	4-2
规定力矩	4-3
专用工具	4-4
故障码表	4-6
P0A7D06.....	4-11
P0A8092	4-12
P0A9B01	4-13
P0AA072	4-14
P0AA073	4-15
P0AA092~P0AA192.....	4-16
P0AA372	4-18
P0AA373	4-19
P0AA492~P0AA592.....	4-20
P0ABF01	4-21
P0ABF28	4-22
P0AD901.....	4-23
P0ADD01	4-24
P0AE411	4-25
P0AE412	4-26
P0AF716	4-27
P0AF816	4-28
P0AF817	4-29
P0AF916	4-30
P0AF917	4-31
P0C3006	4-32
P0C4112	4-33
P0C4211	4-34
P0C7800	4-35
P0C8000	4-36
P0D4112	4-37
P0D4211	4-38
P0DAC9E.....	4-39
P101A01~P101A02	4-40
P101A11	4-41
P101A13	4-42
P101A21	4-43
P101A23	4-44
P101A24	4-45
P103201~P103203	4-46

P105101 ~ P105103	4-47
P105201 ~ P105203	4-48
P105300	4-49
P105400	4-50
P10B401	4-51
P10B402	4-52
P10B403	4-53
P10B404	4-54
P10B501	4-55
P10D002	4-56
P10D011	4-57
P10DCC1	4-58
P10DCC2	4-59
P10DCC3	4-60
P191044	4-61
P191046	4-62
P191045	4-63
P191225	4-64
P191226	4-65
P191245	4-66
P191311	4-67
P191312	4-68
P191422	4-69
P191464	4-70
P19191C	4-71
P191994	4-72
P191C47	4-73
P191E47	4-74
P19200C	4-75
P19201C	4-76
P192100	4-77
P19301A~P19311A	4-78
P19321A~P19331A	4-79
P19341C	4-80
P193694~P193695	4-81
P193696	4-82
P193794	4-83
P194064	4-84
P194292	4-85
P19541D	4-86
P195512	4-87
P195514	4-88
P19551C	4-89
P19551D	4-90
P19551E	4-91

P195528.....	4-92
P195552.....	4-93
P195764.....	4-94
P196013.....	4-95
P196215.....	4-96
P196216.....	4-97
P196217.....	4-98
P196315.....	4-99
P196316.....	4-100
P196317.....	4-101
P19641C	4-102
P196444~P196464	4-103
P19651C	4-104
P19681C	4-105
P19691C	4-106
P19701B、P19711B、P19721B、P19731B.....	4-107
P19731A	4-108
P198216.....	4-109
P198217.....	4-110
P19821C	4-111
P198352.....	4-112
P198464.....	4-113
P198500.....	4-114
P198564.....	4-115
P19871C	4-116
P19881C	4-117
P19891C	4-118
P199017.....	4-119
P199117.....	4-120
P199118.....	4-121
P199217.....	4-122
P199316.....	4-123
P199317.....	4-124
P199416.....	4-125
P199516.....	4-126
P199616.....	4-127
U007388	4-128
U011087	4-129
U012287	4-130
U014687	4-131
U015587	4-132
U016487	4-133
U01BB87	4-134
U024587	4-135
U100087	4-136

U102687	4-137
U10C000	4-138
U110017	4-139
U110116	4-140
U182441	4-141
U182641	4-142
动力电池包总成	4-143
位置图	4-143
规格参数	4-144
规定力矩	4-145
拆卸/安装	4-146
检测	4-149
电池安全开关	4-151
结构图	4-151
断开/连接	4-152
电池包上壳体	4-154
结构图	4-154
拆卸/安装	4-155
防爆阀	4-157
结构图	4-157
拆卸/安装	4-158
壳体密封条	4-159
结构图	4-159
拆卸/安装	4-160
电池管理系统主控板	4-162
位置图	4-162
引脚定义	4-163
拆卸/安装	4-169
电池管理系统从控板	4-171
位置图	4-171
引脚定义	4-172
拆卸/安装	4-185
电池配电箱	4-188
位置图	4-188
引脚定义	4-189
拆卸/安装	4-190
第一排电池模组	4-195
位置图	4-195
拆卸/安装	4-196
第二、三排电池模组	4-201
位置图	4-201
拆卸/安装	4-202
第四、五排电池模组	4-207
位置图	4-207
拆卸/安装	4-208

铜排	4-213
结构图	4-213
拆卸/安装	4-214
冷却板	4-218
位置图	4-218
拆卸/安装	4-219
电池包下壳体	4-223
结构图	4-223
拆卸/安装	4-224

www.qxkjz.com

www.qxkjz.com