

动力电池包(PE328100B)

动力电池系统.....	3-1
系统描述	3-1
系统图	3-3
规定力矩	3-4
专用工具	3-5
故障码表	3-7
C29387.....	3-12
D0C000	3-13
D0C387	3-14
P100A00	3-15
P100AAA	3-16
P100C00	3-17
P100C01	3-18
P101001~P101004	3-19
P101010.....	3-20
P101011.....	3-21
P101101~P101104.....	3-22
P101201.....	3-23
P101202.....	3-24
P101301~P101302.....	3-25
P101400.....	3-26
P101411~P101413.....	3-27
P101A01~P101A02	3-28
P101A11、 P101A22	3-29
P102400.....	3-30
P102401.....	3-31
P102402.....	3-32
P103002~P103003.....	3-33
P103010~P10301E	3-34
P103101~P103103.....	3-35
P103201~P103203	3-36
P103401~P10341E.....	3-37
P104100.....	3-38
P104401~P104402.....	3-39
P105102~P105103.....	3-40
P105202~P105203.....	3-41
P105300.....	3-42
P105400.....	3-43
P105500~P105509	3-44
P106101.....	3-45
P106102.....	3-46

P106400.....	3-47
P107101.....	3-48
P107102.....	3-49
P107103.....	3-50
P108101.....	3-51
P10B001	3-52
P10B002	3-53
P10B003	3-54
P10B101	3-55
P10B102	3-56
P10B103	3-57
P10B201	3-58
P10B202	3-59
P10B203	3-60
P10B301	3-61
P10B302	3-62
P10B303	3-63
P10B401	3-64
P10B402	3-65
P10B403	3-66
P10D000	3-67
P10D002	3-68
P10D003	3-69
P10DCC1.....	3-70
P10DCC2.....	3-71
P10DCC3~P10DCC7	3-72
P10E002	3-73
P10EE01	3-74
P10FF12.....	3-75
P10FF13.....	3-76
U110017	3-77
U110116	3-78
绝缘性测试.....	3-79
电池安全开关.....	3-80
结构图.....	3-80
断开/连接.....	3-81
动力电池包总成	3-83
位置图.....	3-83
规格参数	3-84
引脚定义	3-85
拆卸/安装.....	3-87
检测.....	3-89
电池包上壳体	3-91
结构图.....	3-91
拆卸/安装.....	3-92

防爆阀.....	3-93
结构图.....	3-93
拆卸/安装.....	3-94
壳体密封条.....	3-95
结构图.....	3-95
拆卸/安装.....	3-96
电池管理系统主控板.....	3-98
位置图.....	3-98
引脚定义.....	3-99
拆卸/安装.....	3-108
电池配电盒.....	3-110
结构图.....	3-110
引脚定义.....	3-111
拆卸/安装.....	3-112
电池主保险盒.....	3-117
结构图.....	3-117
拆卸/安装.....	3-118
前排电池模组.....	3-120
位置图.....	3-120
拆卸/安装.....	3-121
上层电池模组.....	3-127
位置图.....	3-127
拆卸/安装.....	3-128
下层电池模组.....	3-132
位置图.....	3-132
拆卸/安装.....	3-133
铜排.....	3-137
结构图.....	3-137
拆卸/安装.....	3-138
加热膜.....	3-141
结构图.....	3-141
拆卸/安装.....	3-142
阻值测试.....	3-151
绝缘性测试.....	3-151
电池包下壳体.....	3-153
结构图.....	3-153
拆卸/安装.....	3-154

www.qxkjz.com