

动力电池包(PE282102A)

动力电池系统.....	3-1
系统描述	3-1
系统图	3-3
规定力矩	3-4
专用工具	3-5
绝缘性测试.....	3-7
故障代码表.....	3-8
P0AA072	3-12
P0AA073	3-13
P0AA092	3-14
P0AA192	3-15
P0AA292	3-16
P0AA372	3-17
P0AA373	3-18
P0AA392	3-19
P0AA492	3-20
P0AA592	3-21
P0ABF01.....	3-22
P0ABF28.....	3-23
P0AF716	3-24
P0AF816	3-25
P0AF817	3-26
P0AF916	3-27
P0AF917	3-28
P0C7700	3-29
P0C7800	3-30
P0C8000	3-31
P0DAC9E.....	3-32
P101A01	3-33
P101A02	3-34
P101A11	3-35
P101A12	3-36
P101A13	3-37
P103201~P103203	3-38
P105102~P105103	3-39
P105202~P105203.....	3-40
P105300.....	3-41
P105400.....	3-42
P10B401	3-43
P10B402	3-44
P10B403	3-45

P10B511	3-46
P10B512	3-47
P10D001	3-48
P10D002	3-49
P10D011	3-50
P10DCC1.....	3-51
P10DCC2.....	3-52
P10DCC3.....	3-53
P10E010~P10E012	3-54
P10E013	3-55
P191245.....	3-56
P191994.....	3-57
P191C47	3-58
P191D47	3-59
P191E47	3-60
P192100.....	3-61
P19301A	3-62
P19311A	3-63
P19321A	3-64
P19331A	3-65
P19341C	3-66
P193693.....	3-67
P193694.....	3-68
P193695.....	3-69
P193696.....	3-70
P194064.....	3-71
P194119.....	3-72
P194219.....	3-73
P194292.....	3-74
P194392.....	3-75
P0A8092	3-76
P19541D	3-77
P19551E	3-78
P195552.....	3-79
P196211.....	3-80
P196215.....	3-81
P19621C	3-82
P196311.....	3-83
P196315.....	3-84
P19641C	3-85
P196464.....	3-86
P19651C	3-87
P19681C	3-88
P19691C	3-89
P19711B	3-90

P19721B	3-91
P19731A	3-92
P19731B	3-93
P19741A	3-94
P198216.....	3-95
P198217.....	3-96
P19821C	3-97
P198352.....	3-98
P198500.....	3-99
P198564.....	3-100
P19871C	3-101
P198852.....	3-102
P199017.....	3-103
P199117.....	3-104
P199118.....	3-105
P199217.....	3-106
P199316.....	3-107
P199317.....	3-108
P199416.....	3-109
P199516.....	3-110
P199616.....	3-111
U007488	3-112
U011087	3-113
U014687	3-114
U01BB87	3-115
U100087	3-116
U102687	3-117
U10C000.....	3-118
U110116	3-119
U110017	3-120
U182441	3-121
U182641	3-122
电池安全开关.....	3-123
结构图.....	3-123
断开/连接.....	3-124
动力电池包总成	3-126
位置图.....	3-126
规格参数	3-127
引脚定义	3-128
拆卸/安装.....	3-130
检测.....	3-132
电池包上壳体.....	3-134
结构图.....	3-134
拆卸/安装.....	3-135
防爆阀.....	3-136

结构图.....	3-136
拆卸/安装.....	3-137
壳体密封条.....	3-138
结构图.....	3-138
拆卸/安装.....	3-139
电池管理系统主控板.....	3-141
位置图.....	3-141
引脚定义.....	3-142
拆卸/安装.....	3-152
电池主保险盒.....	3-154
位置图.....	3-154
拆卸/安装.....	3-155
电池配电盒.....	3-157
结构图.....	3-157
引脚定义.....	3-158
拆卸/安装.....	3-159
前排电池模组.....	3-164
位置图.....	3-164
拆卸/安装.....	3-165
上层电池模组.....	3-171
位置图.....	3-171
拆卸/安装.....	3-172
下层电池模组.....	3-176
位置图.....	3-176
拆卸/安装.....	3-177
铜排.....	3-181
结构图.....	3-181
拆卸/安装.....	3-182
加热膜.....	3-185
结构图.....	3-185
阻值测试.....	3-186
绝缘性测试.....	3-186
拆卸/安装.....	3-187
电池包下壳体.....	3-195
结构图.....	3-195
拆卸/安装.....	3-196