


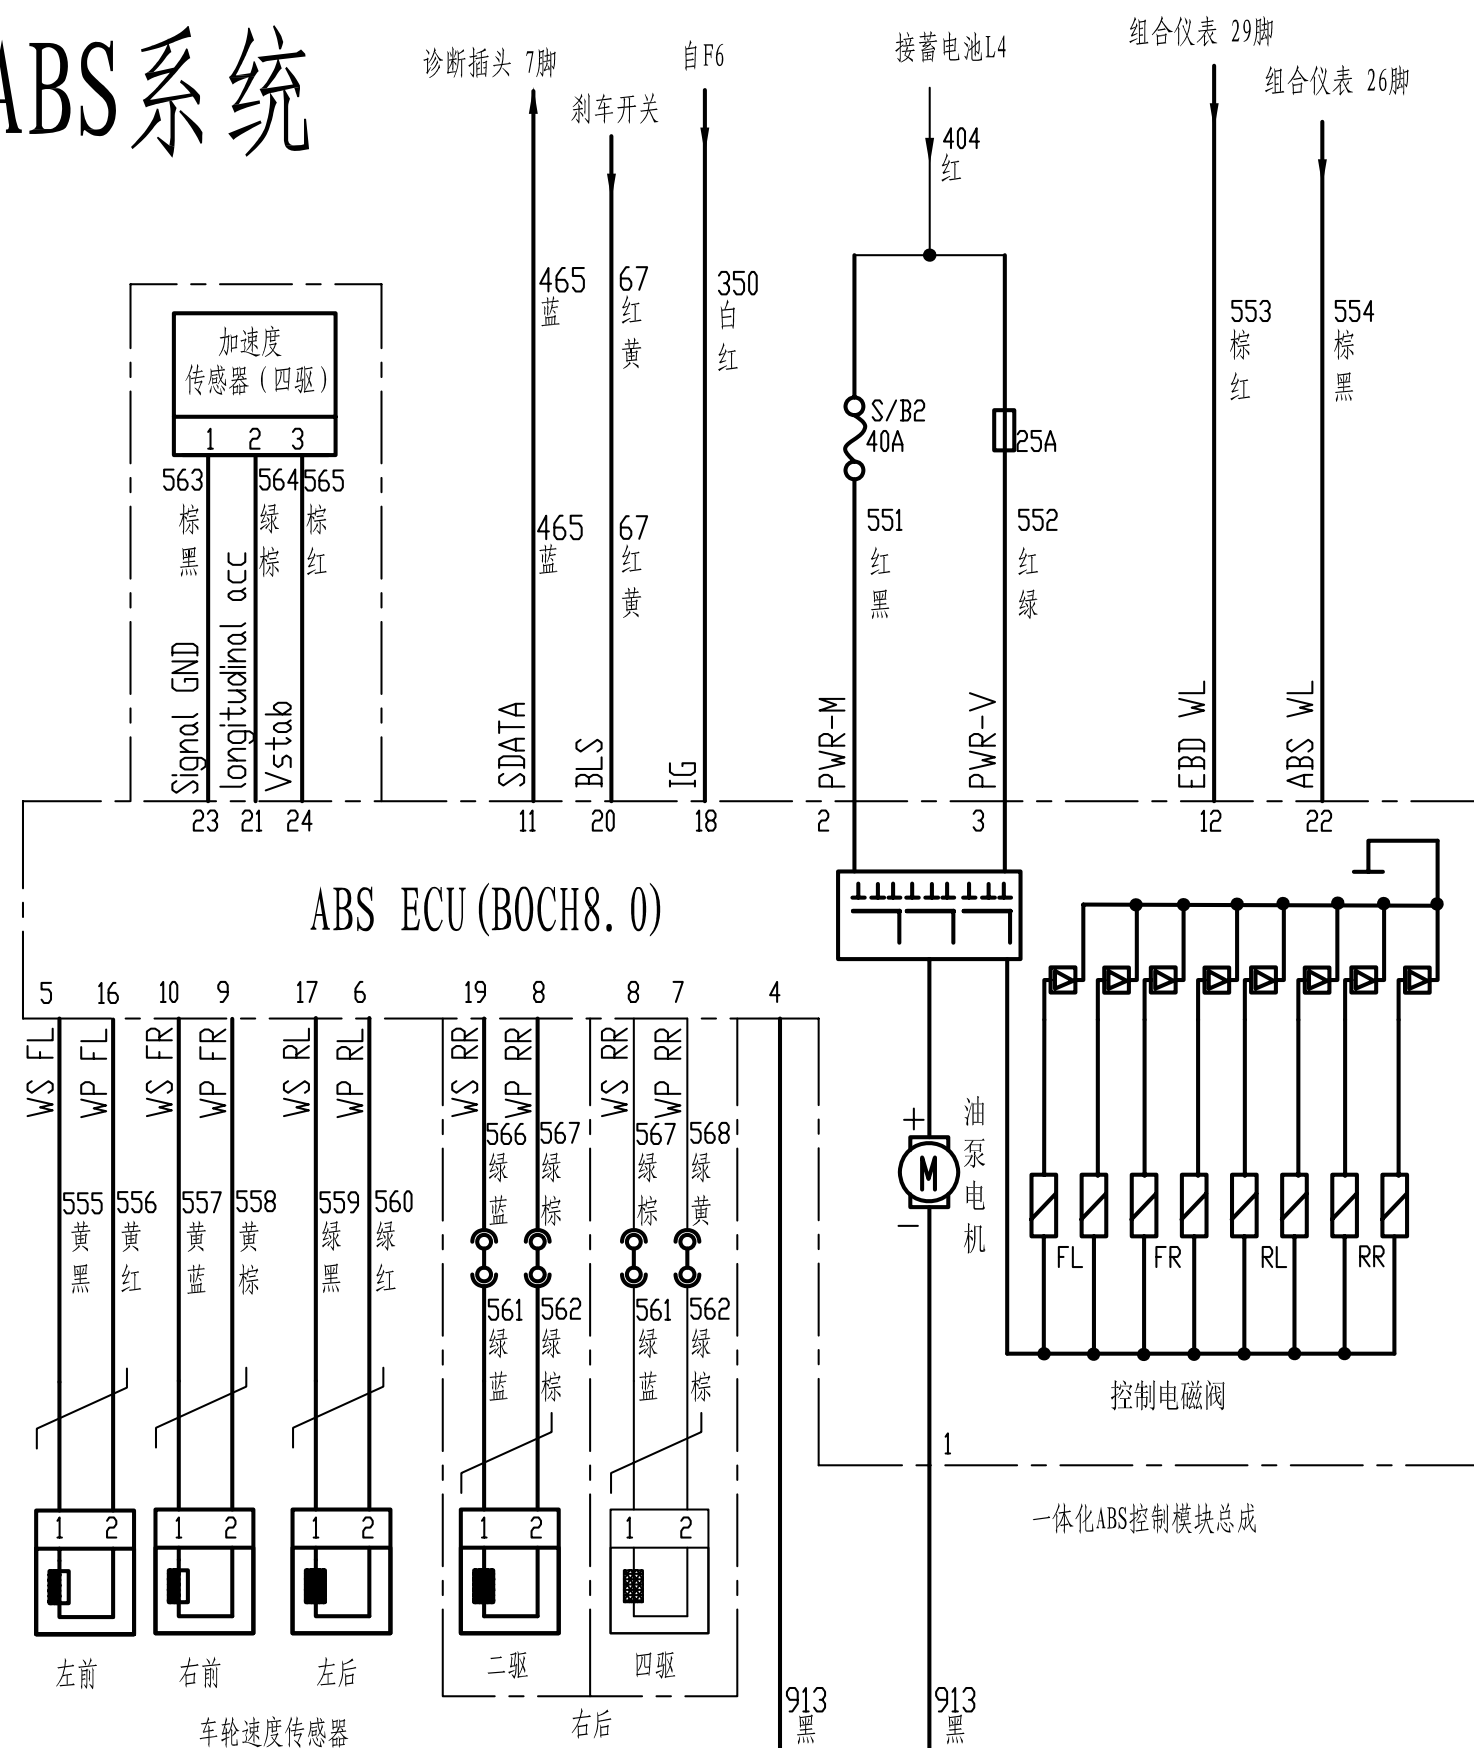


ABS系统



ABS系统


ABS-ECU

A928 000 607 TOP

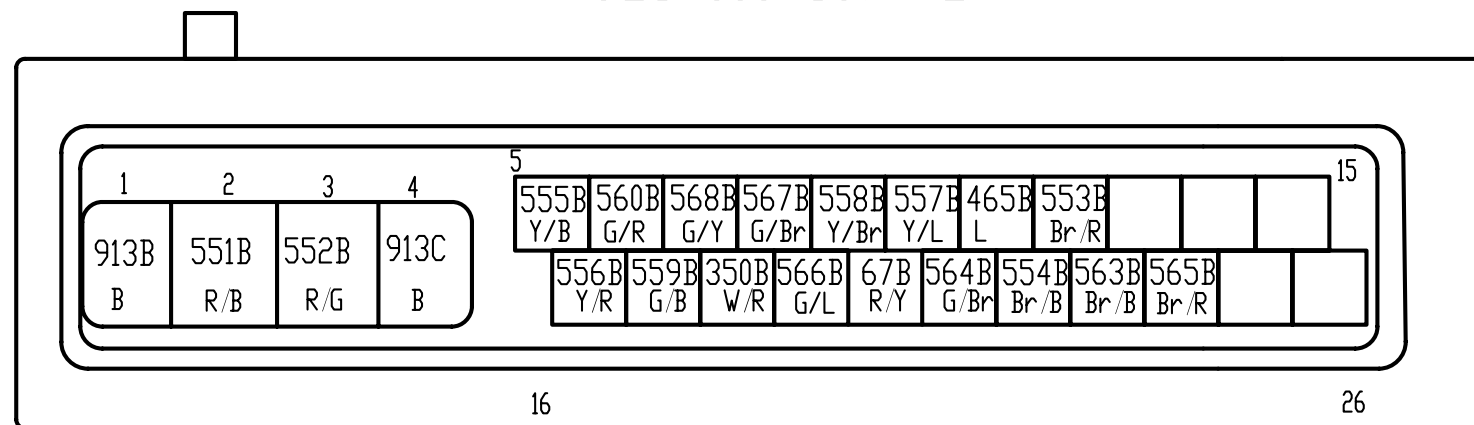


2驱/4驱转换插座

AMP1318774-1

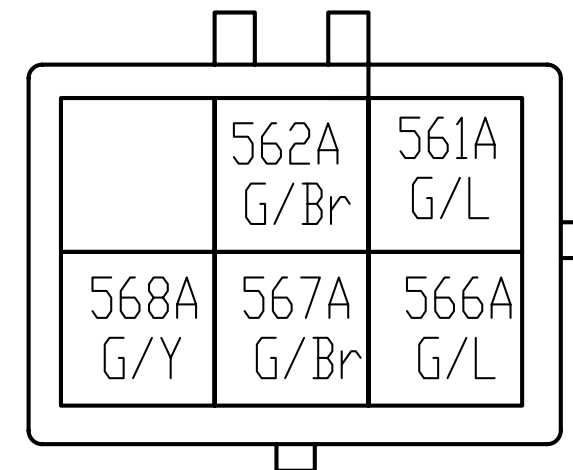


ABS右后传感器

AMP A1-967644-1

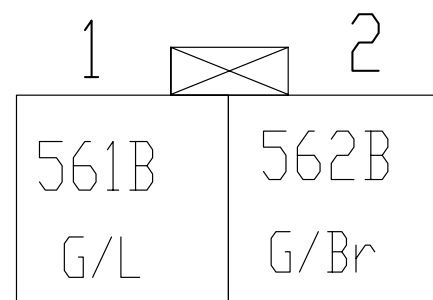


ABS-右前传感器

AMP A1-967644-1

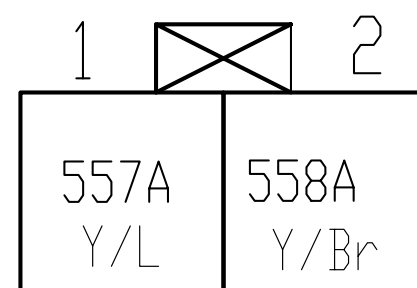


ABS-左前传感器

AMP A1-967644-1

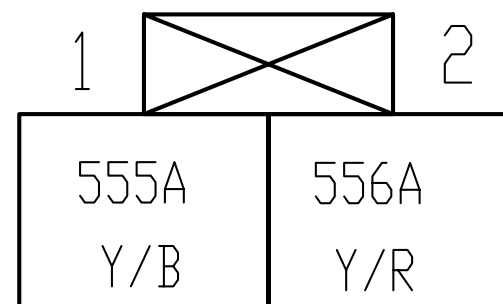

ABS左后传感器

AMP A1-967644-1

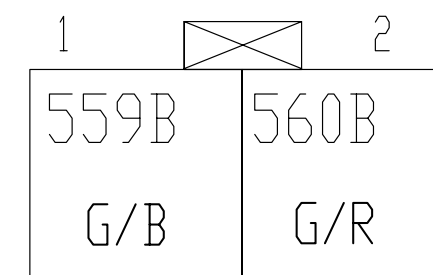

接加速度传感器
护套AMP828904-1
端子929939-3

