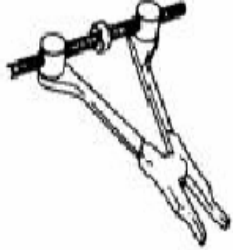
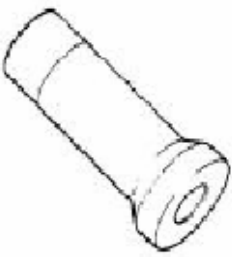
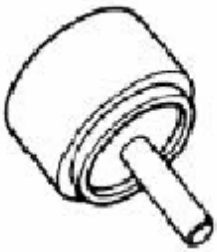
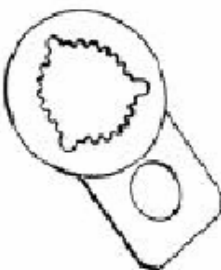
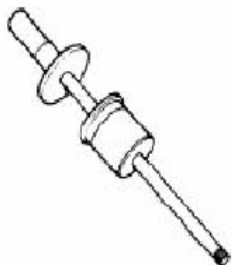
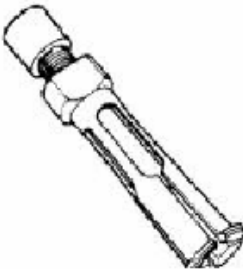
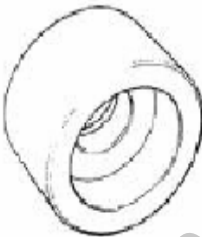


3.2.4操作与说明

专用工具

			
卡圈钳	千分表	磁性座	箱体分离器
			
轴承取拔器	油封安装器 1	油封安装器 2	轴承安装器 1
			
轴承安装器 2	弹簧销拆卸器 (4.5mm)	油封拆卸器	轴承安装器 3
			
安装连接棒	密封圈安装器	轴承外圈安装器	弹簧销拆卸器 (6.0mm)

			
轴承取拔器附件	轴承安装器 4	齿轮固定器	滑动轴
			
轴承安装器 5	轴承拆卸器	衬套拆卸器	轴承安装器 6

变速器螺栓拧紧力矩参考表

序号	名称	数量	拧紧力矩 (N·m)
1	换档锁紧螺栓	1	20~25
2	换档止动螺栓	1	10~15
3	倒档换档拨叉螺栓	2	15~20
4	空挡位置传感器螺栓	1	7~10
5	倒档齿轮轴螺栓	1	18~28
6	分离轴承安装螺栓	2	7~10
7	合箱螺栓	14	18~28
8	倒车灯开关总成	1	15~20
9	进油螺塞	1	12~18
10	观察螺塞	1	12~18
11	放油螺塞	1	12~18
12	换档箱螺栓	4	10~15
13	起吊环螺栓	1	10~15
14	拉索支架螺栓	3	19~25

15	输油槽螺栓	1	7~10
16	差速器螺栓	8	80~100

www.car60.com