




电动空调 - 鼓风机控制 2 / 鼓风机控制 1 / 控制器 (MT)

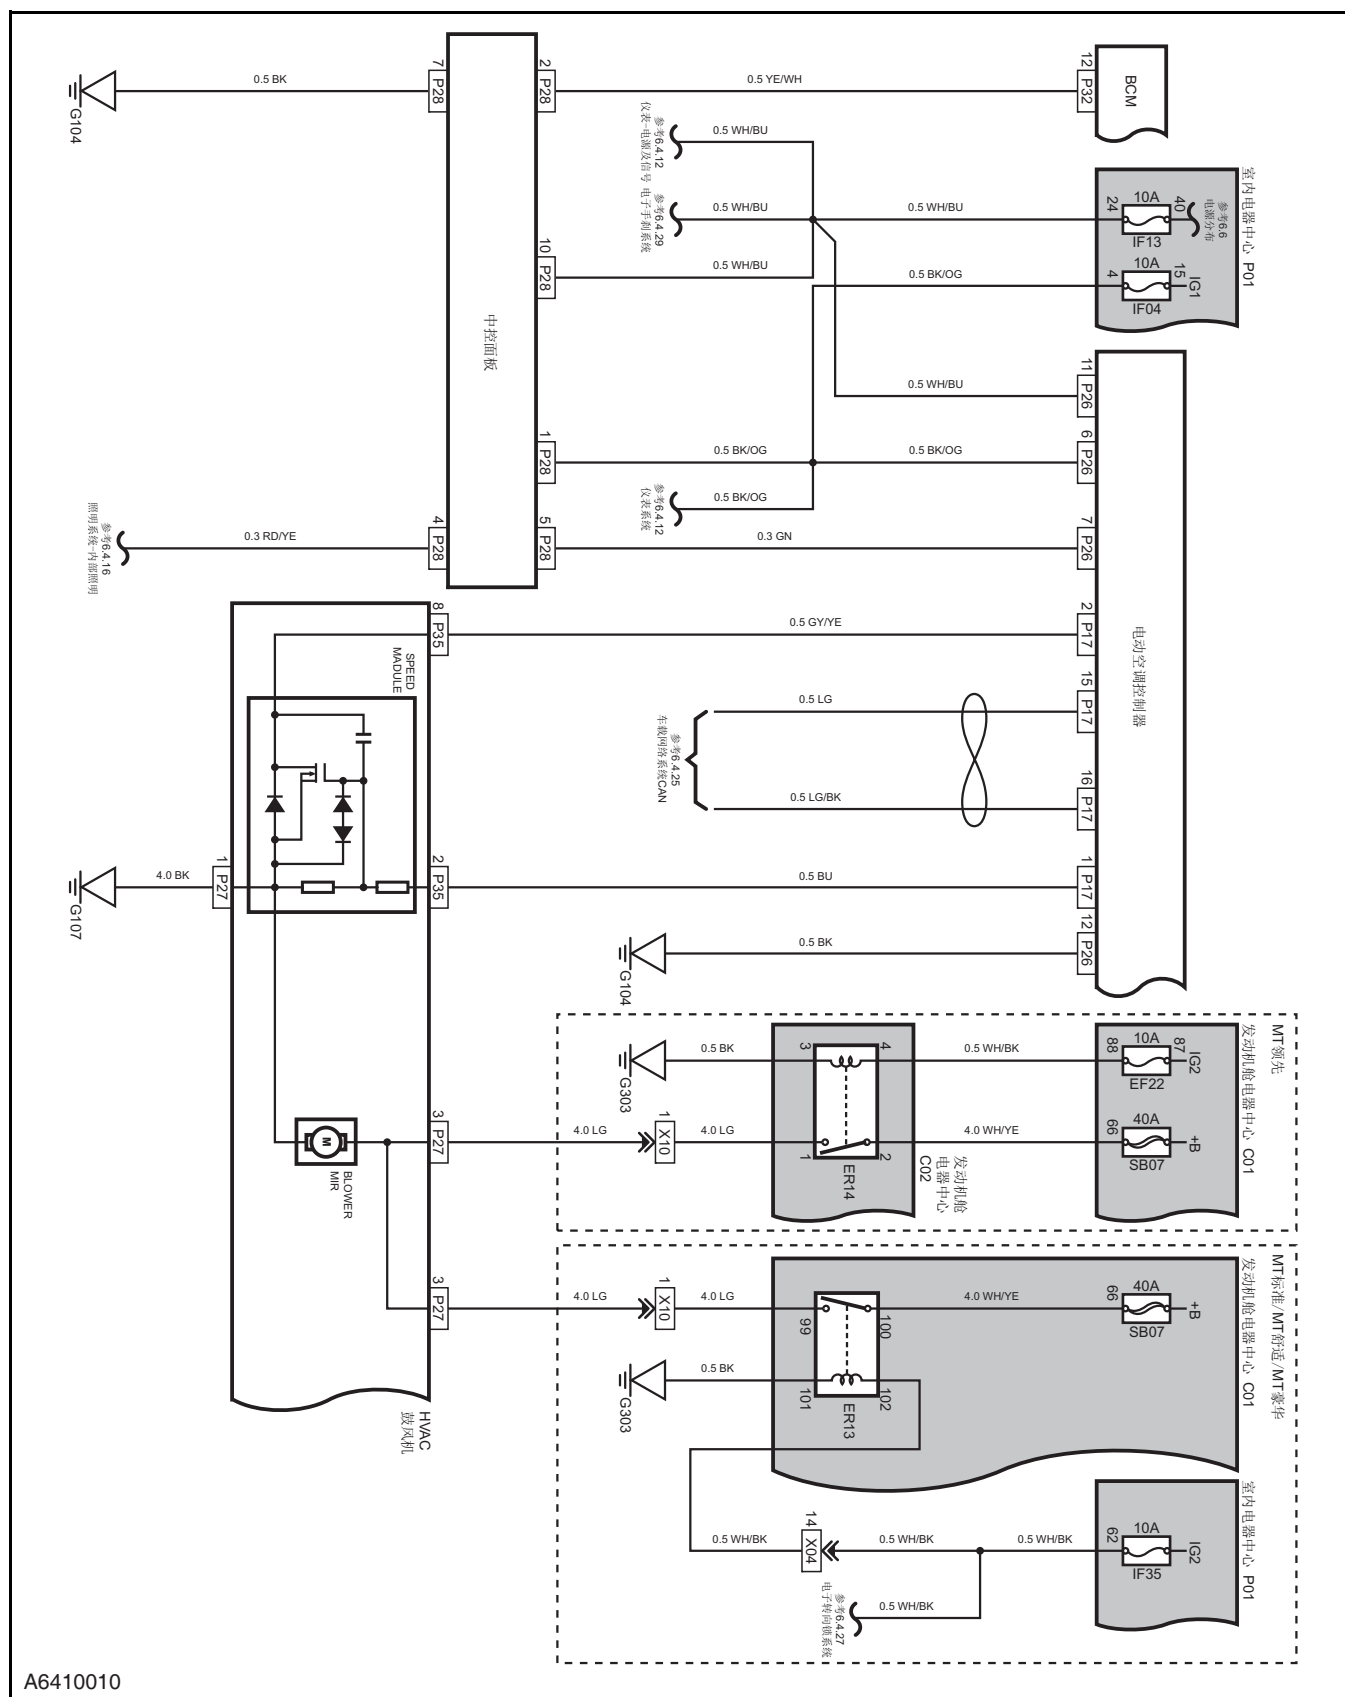

电动空调 - 电源数据 / 执行器 (MT)

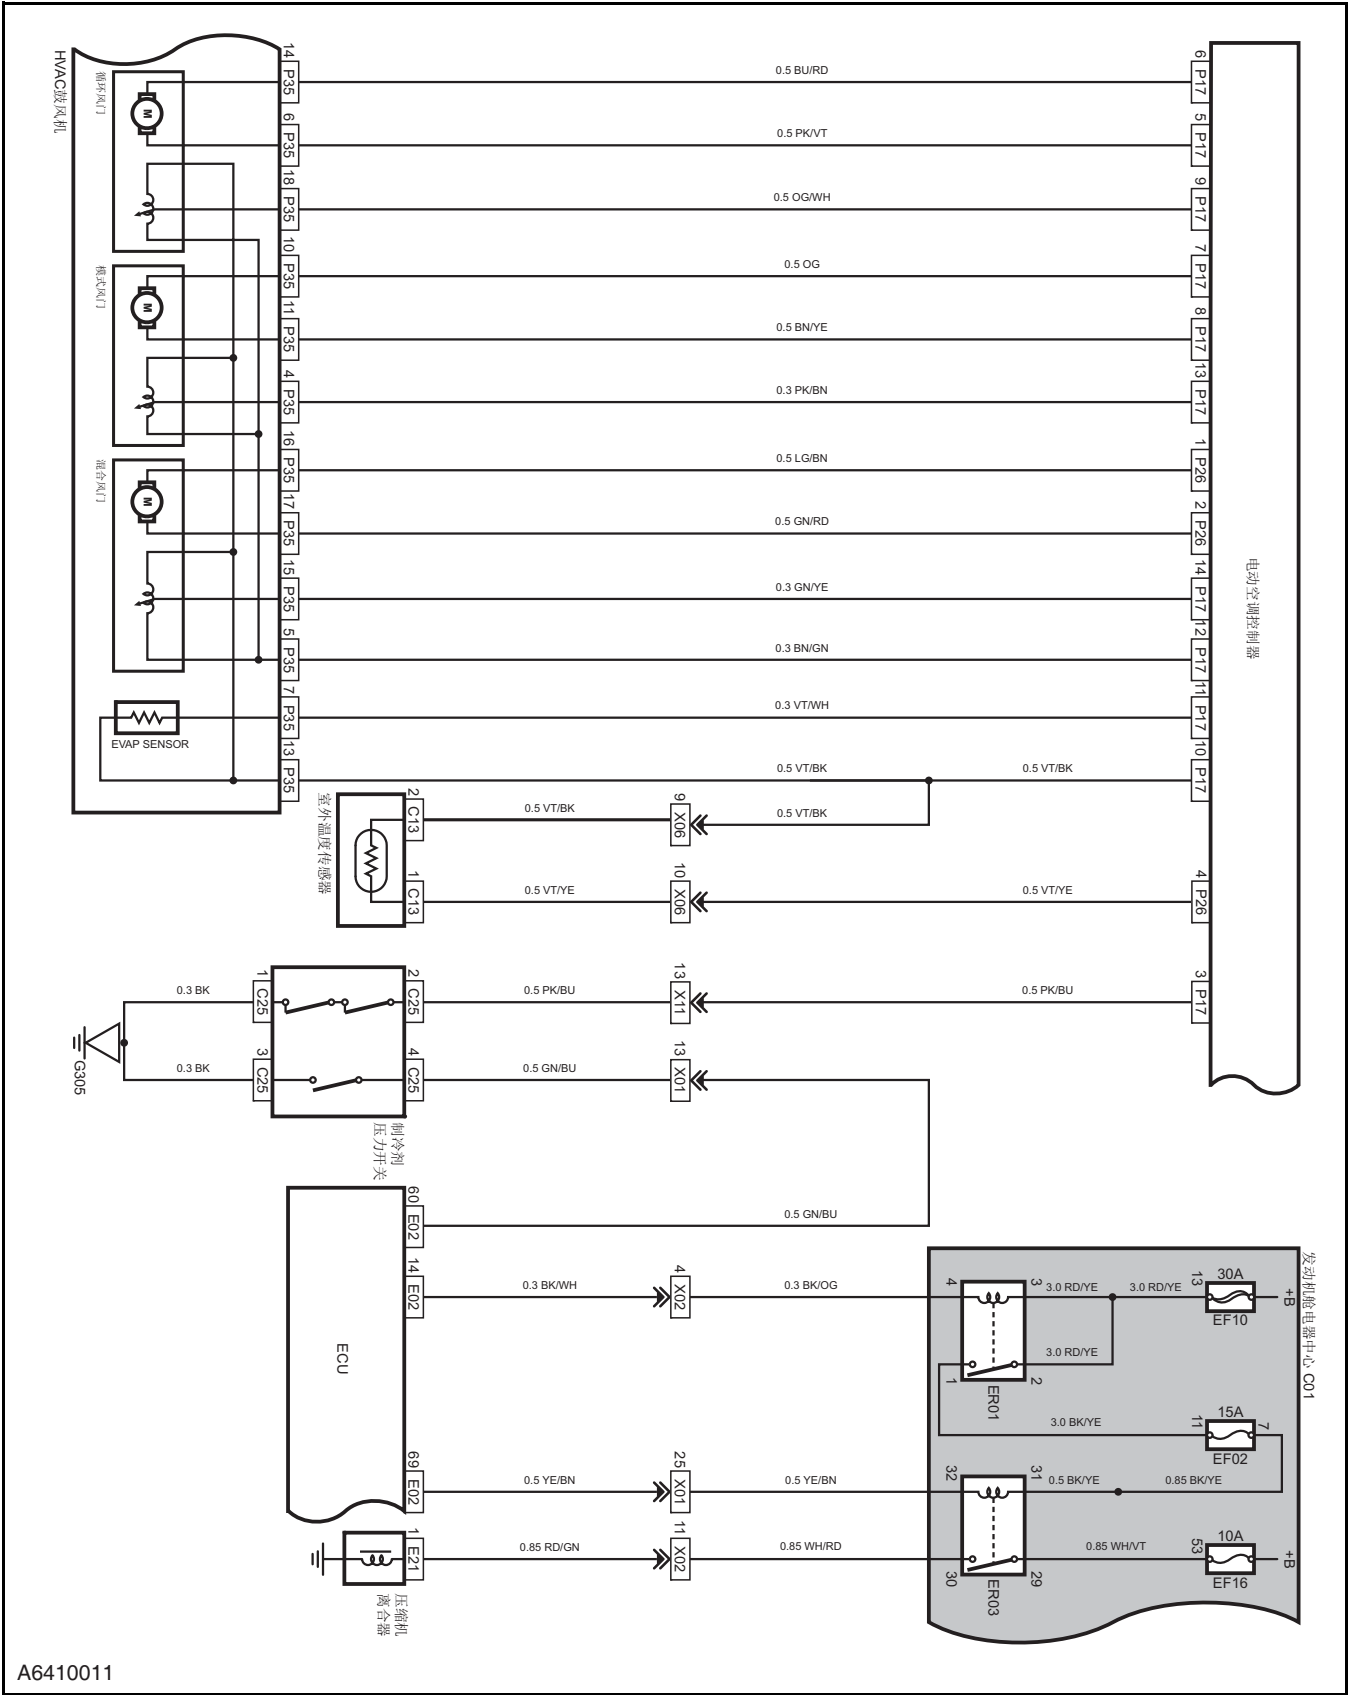

自动空调 - 传感器 / 压缩机控制 2 (AT)

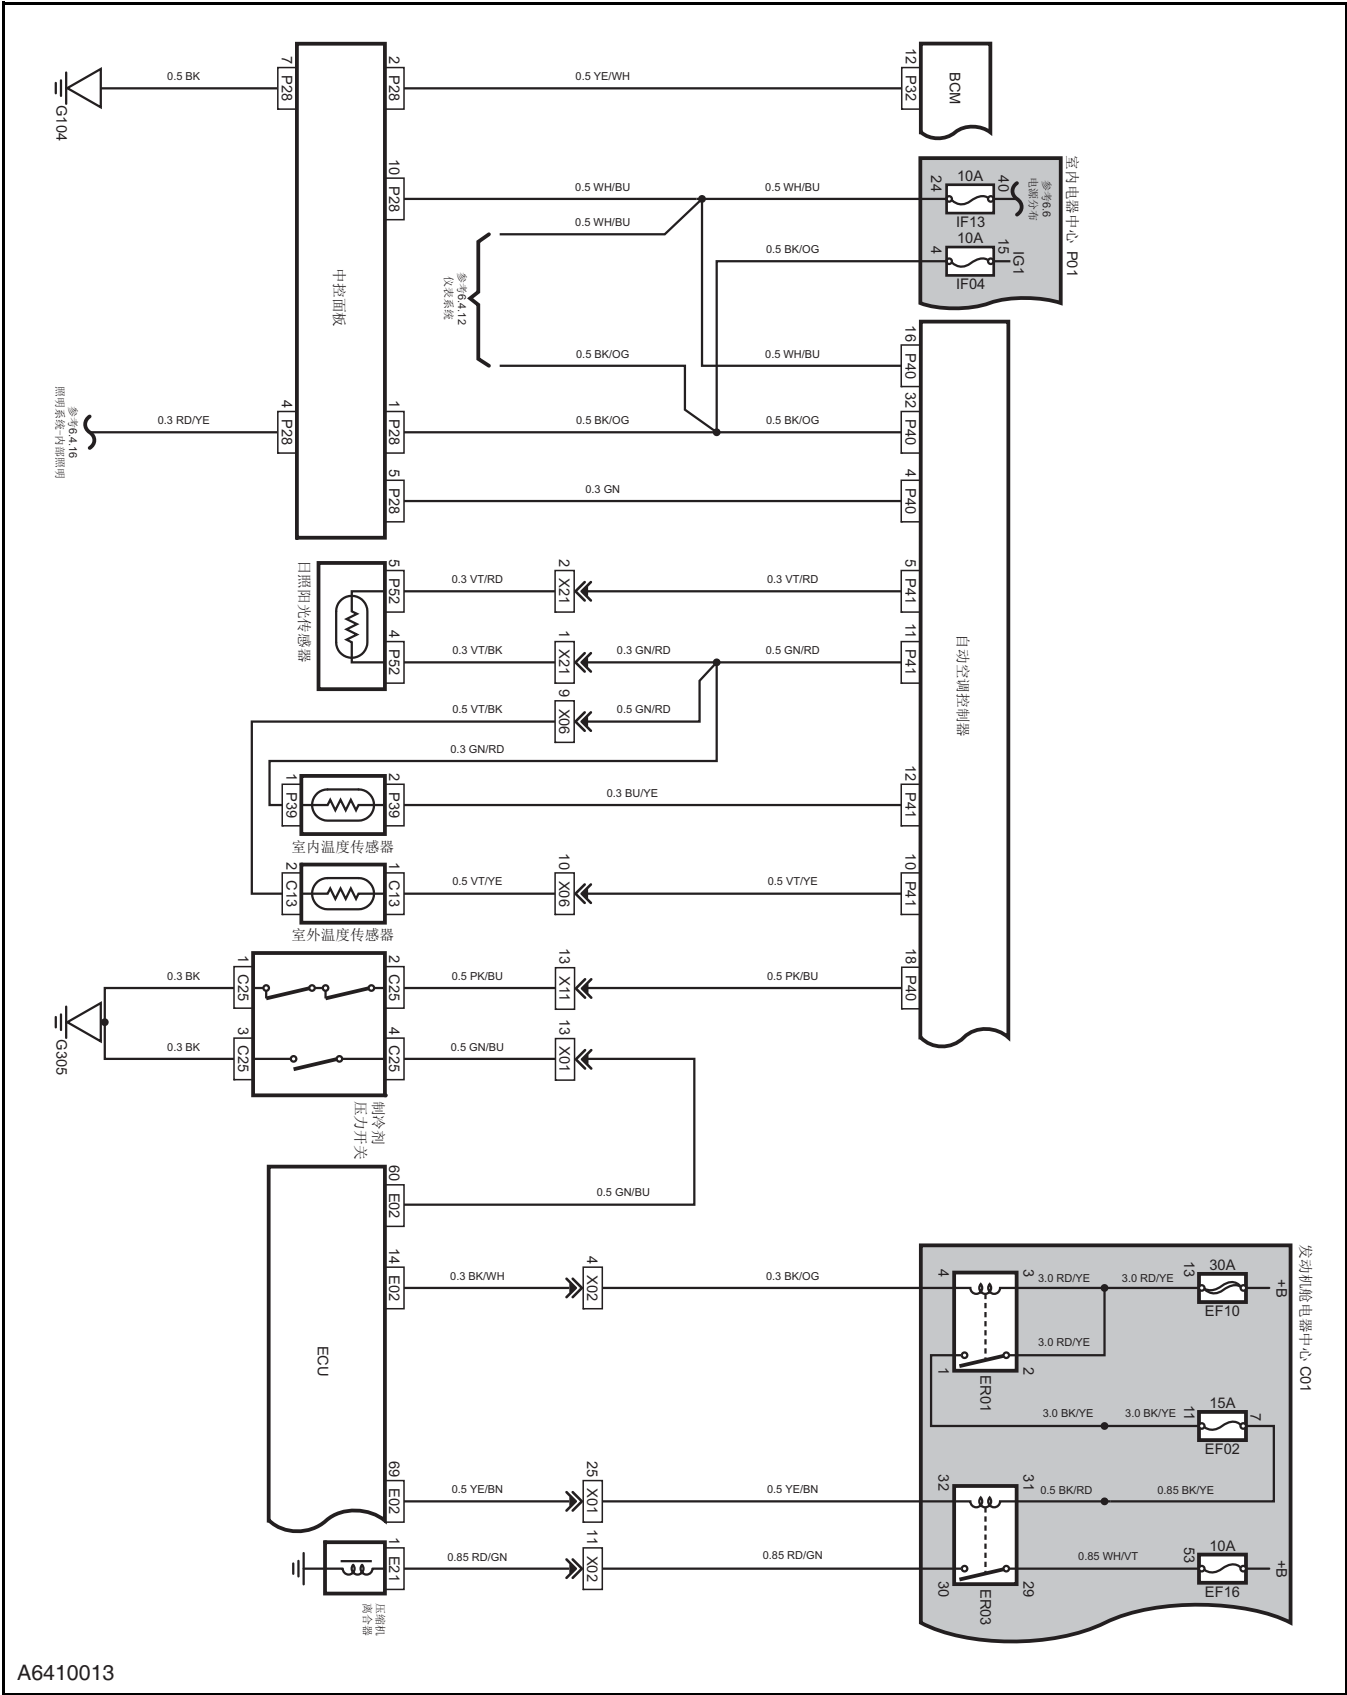

发动机舱电器中心 C01

电动空调控制器

制冷剂压力开关

ECU

压缩机离合器

30A EF10

15A EF02

10A EF16

ER01

ER03

X11

X01

X02

P17

C25

E02

E21

G305

0.5 PK/BU

0.5 GN/BU

0.3 BK/WH

0.3 BK/OG

0.5 YE/BN

0.85 RD/GN

0.85 WH/VT

0.85 BK/YE


0.5 BK/YE

3.0 RD/YE


3.0 BK/YE

0.3 BK


电动空调 - 鼓风机控制 2 (MT)

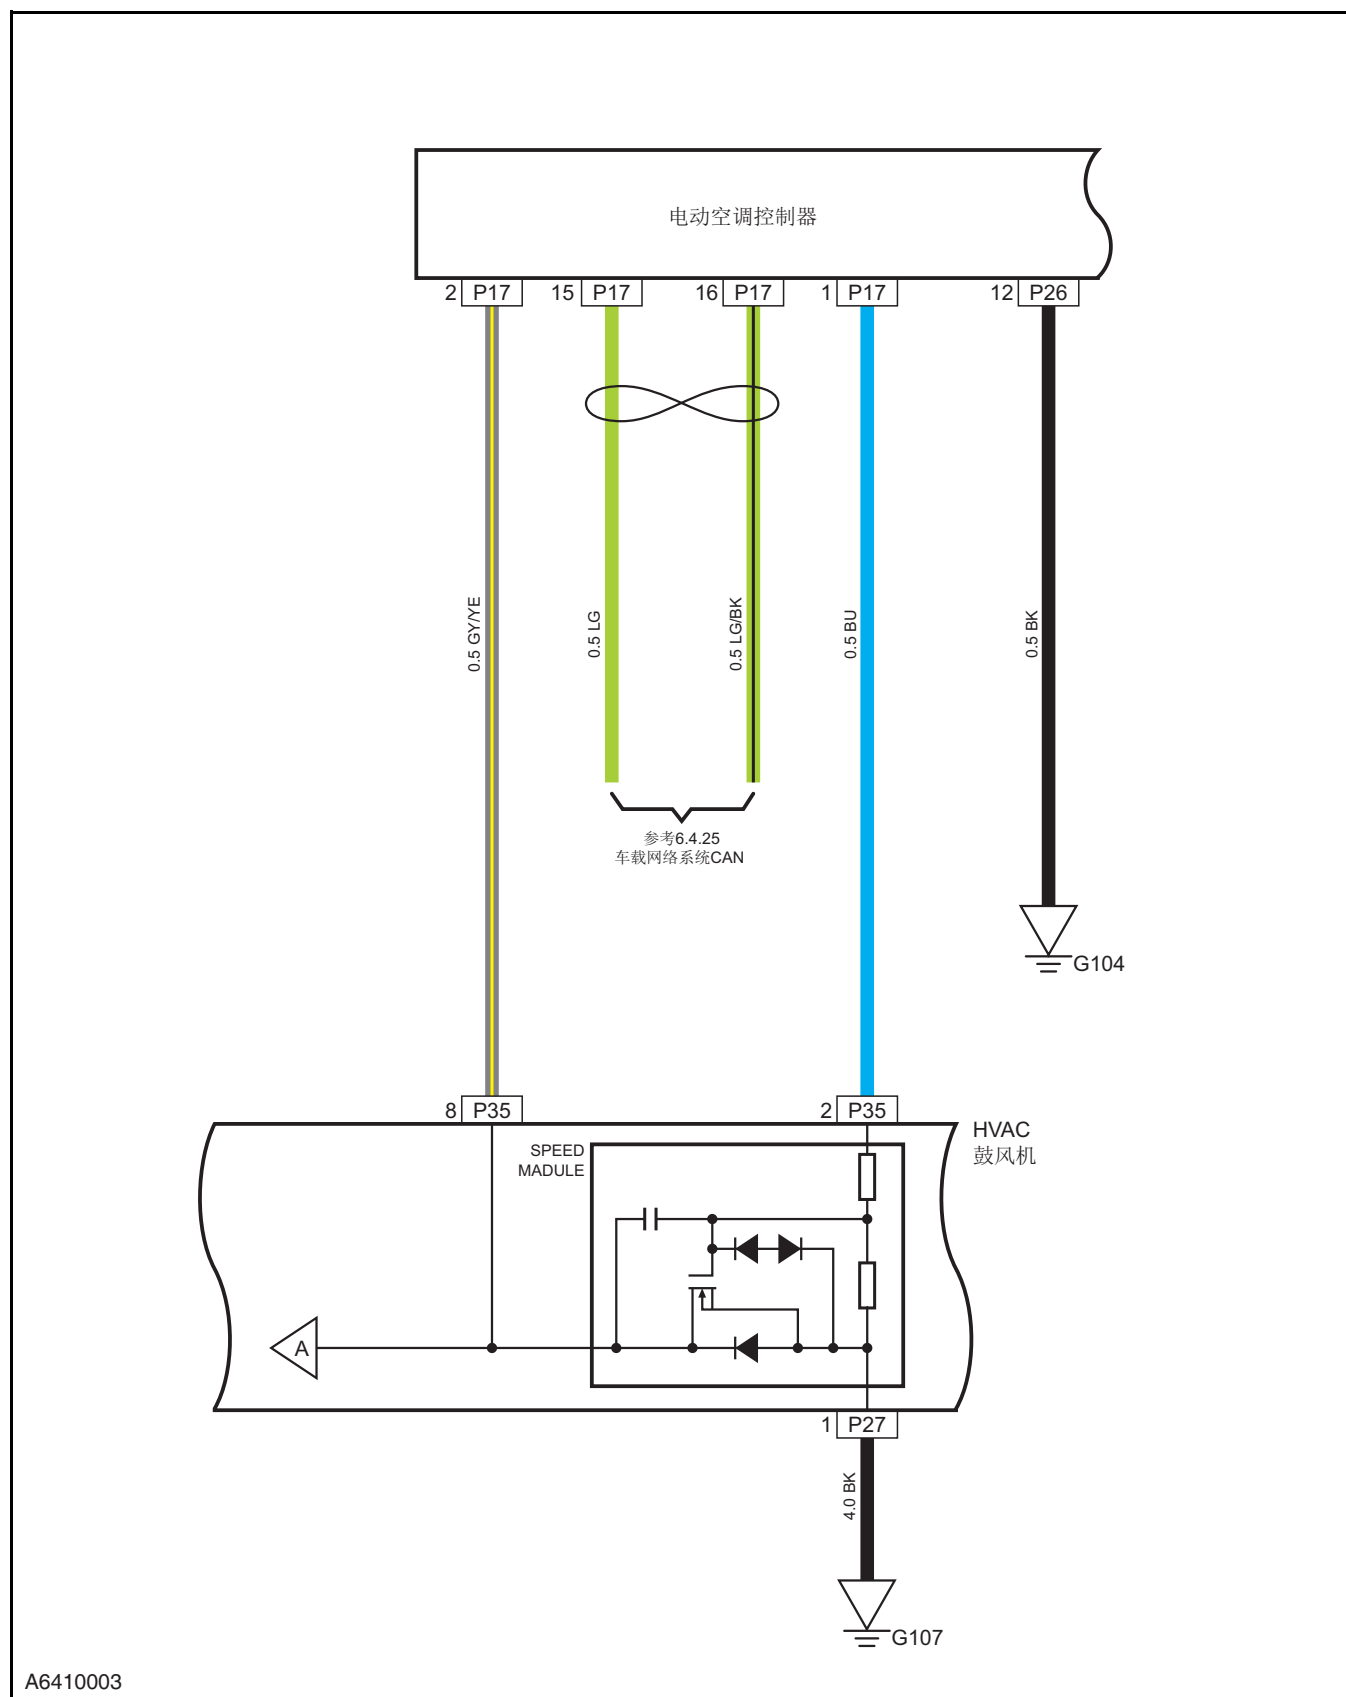


电动空调 - 控制器 (MT)

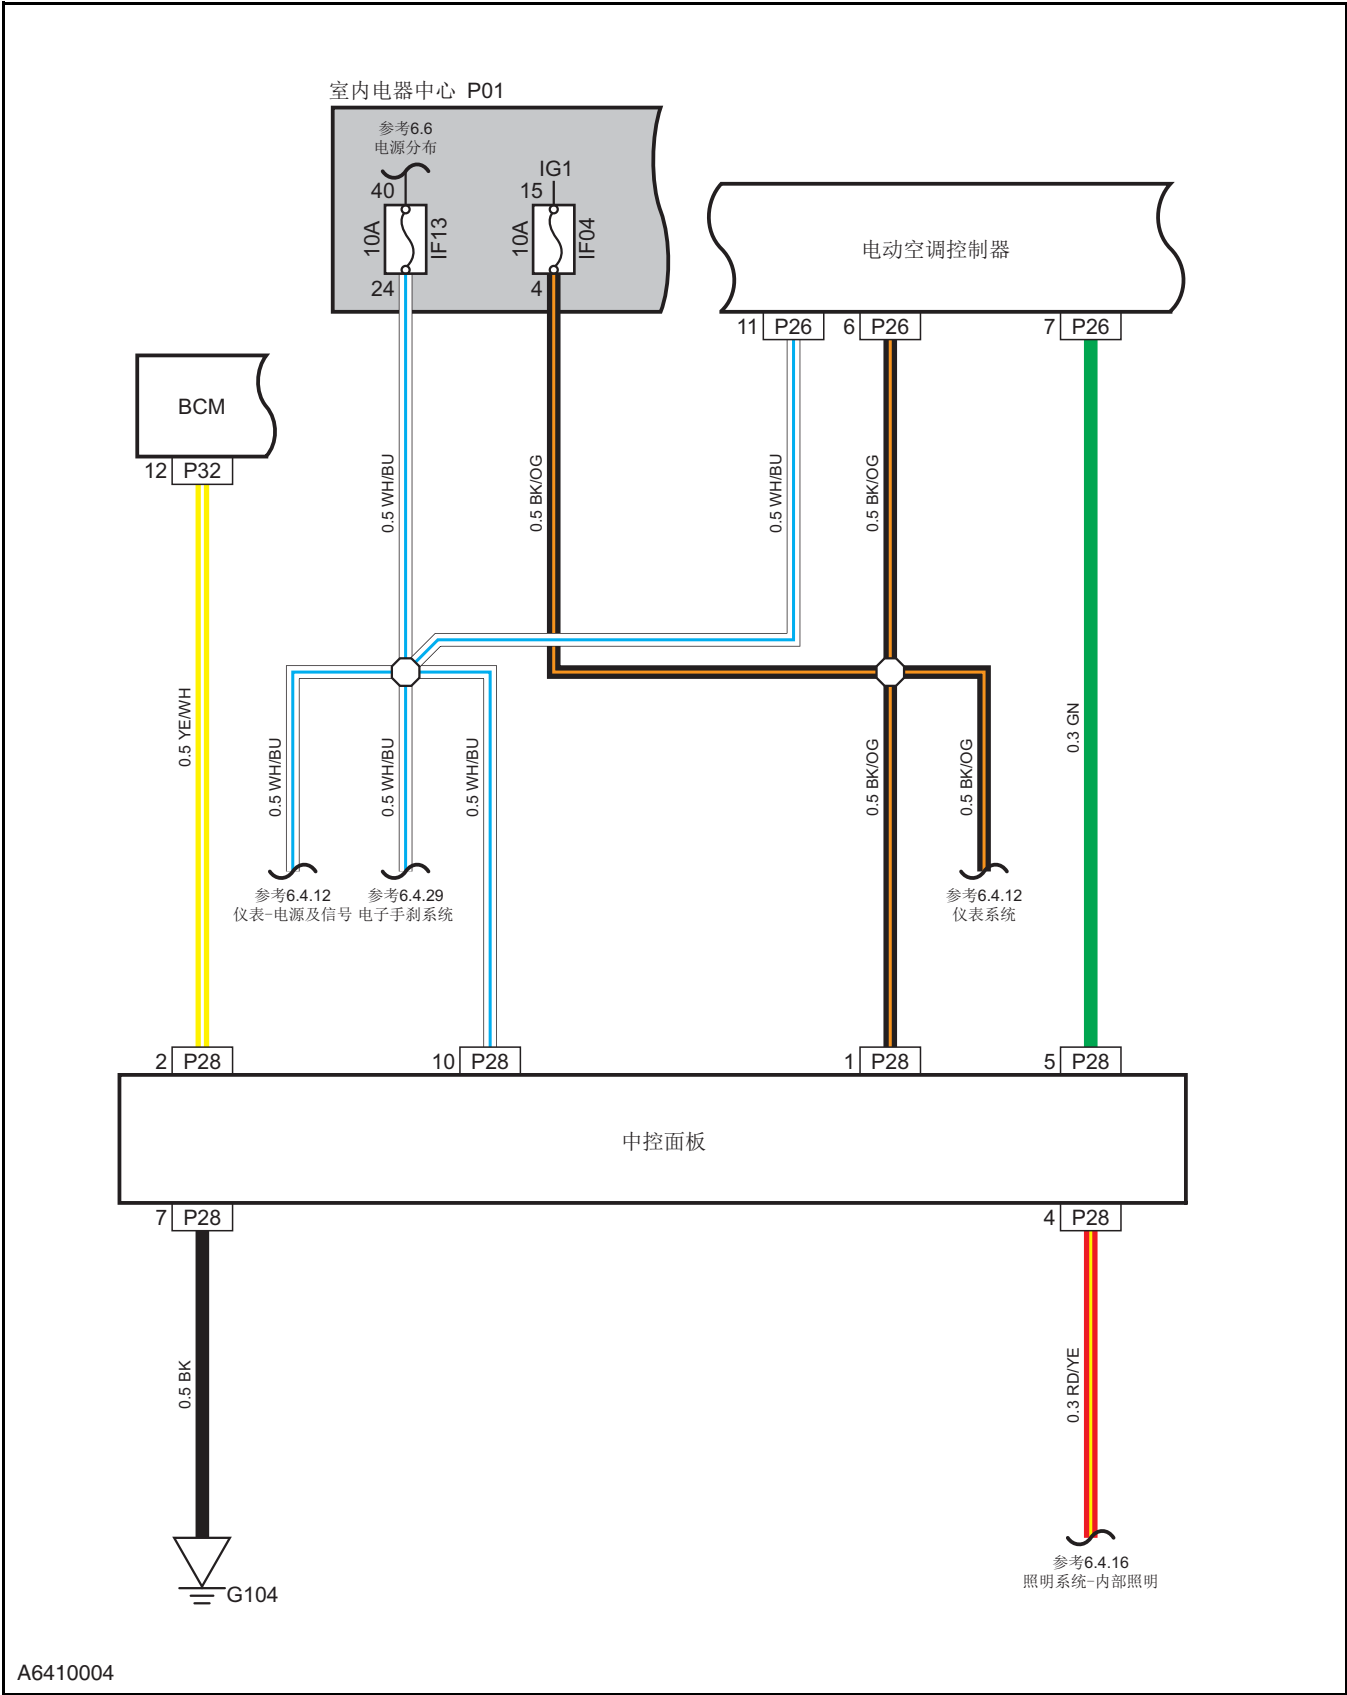

电动空调 - 执行器 (MT)

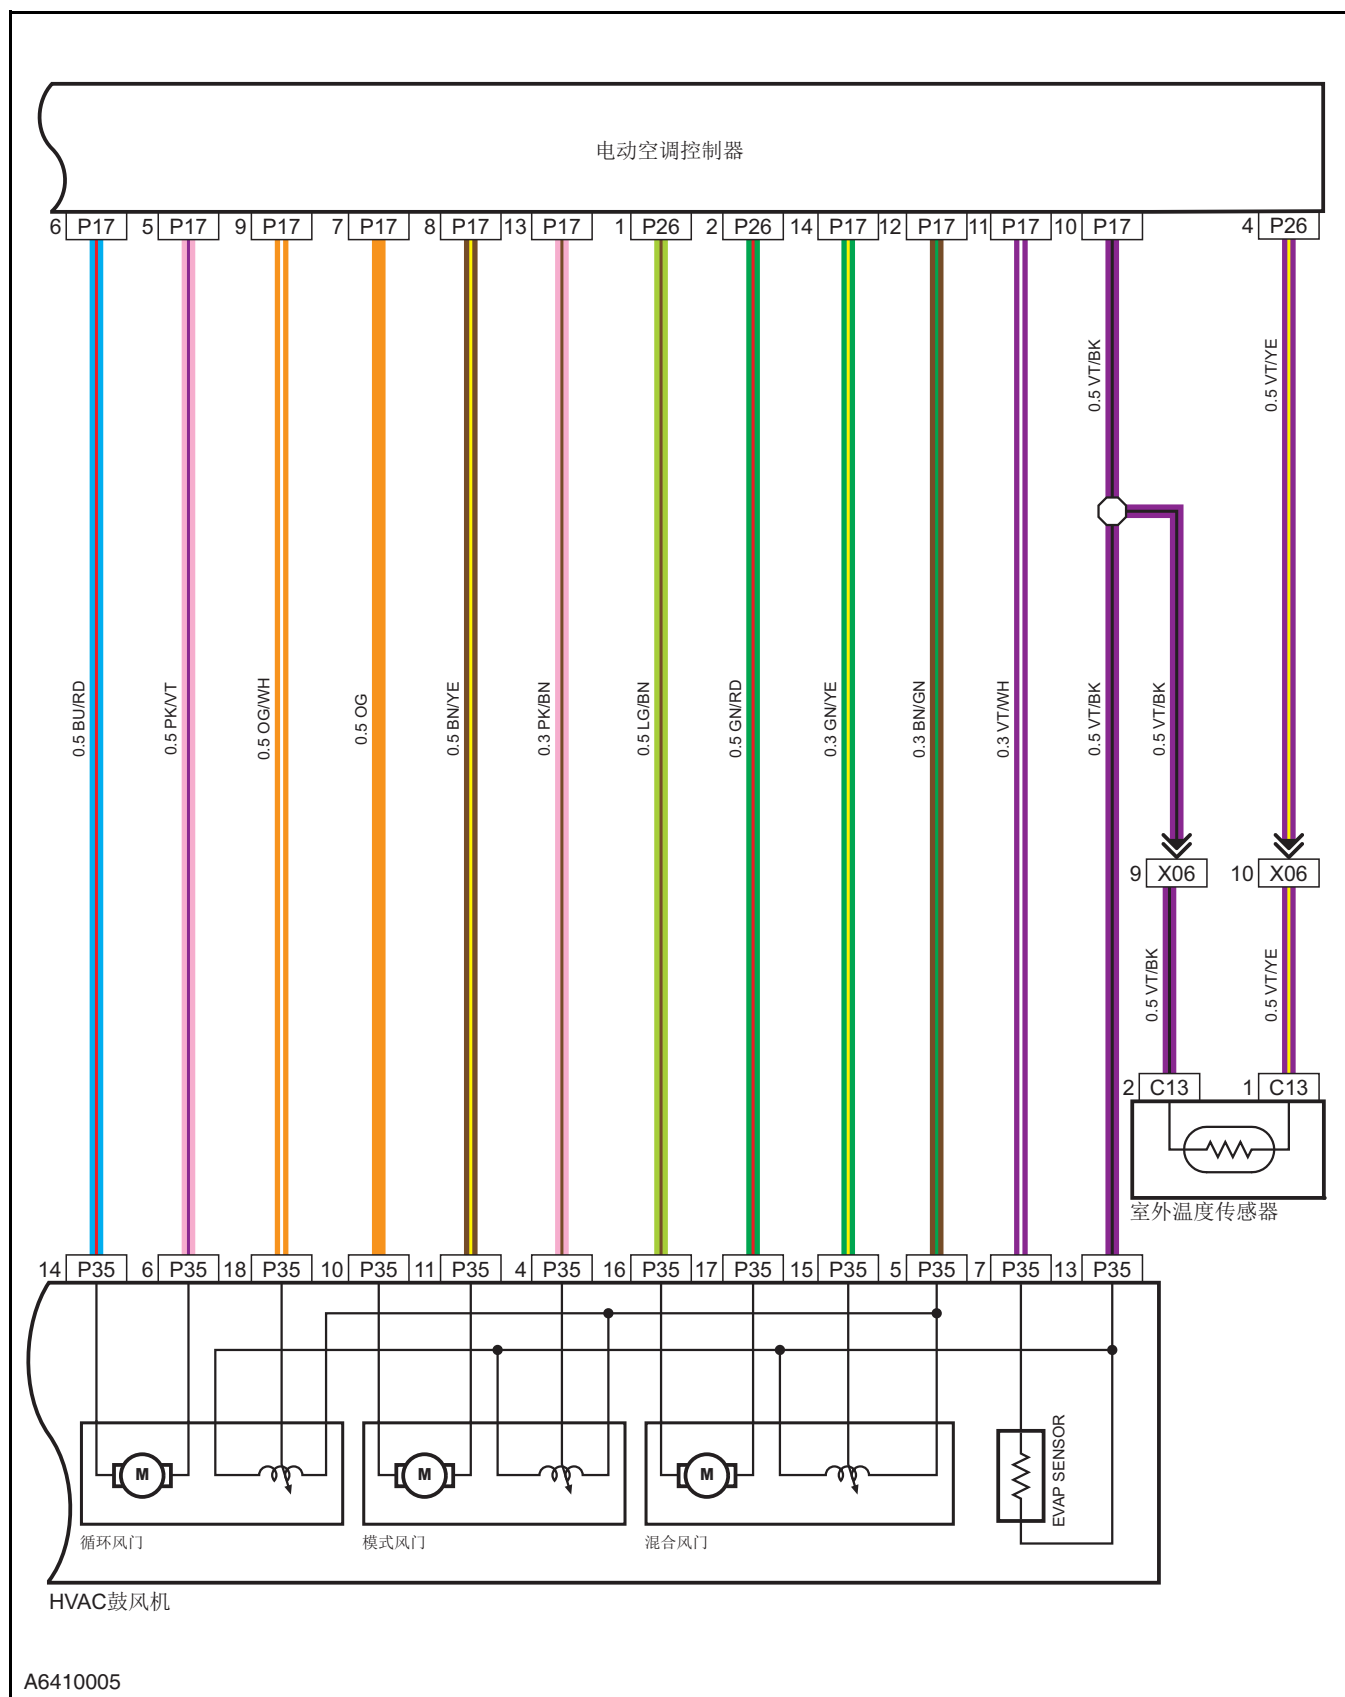


自动空调 - 电源数据 (AT)

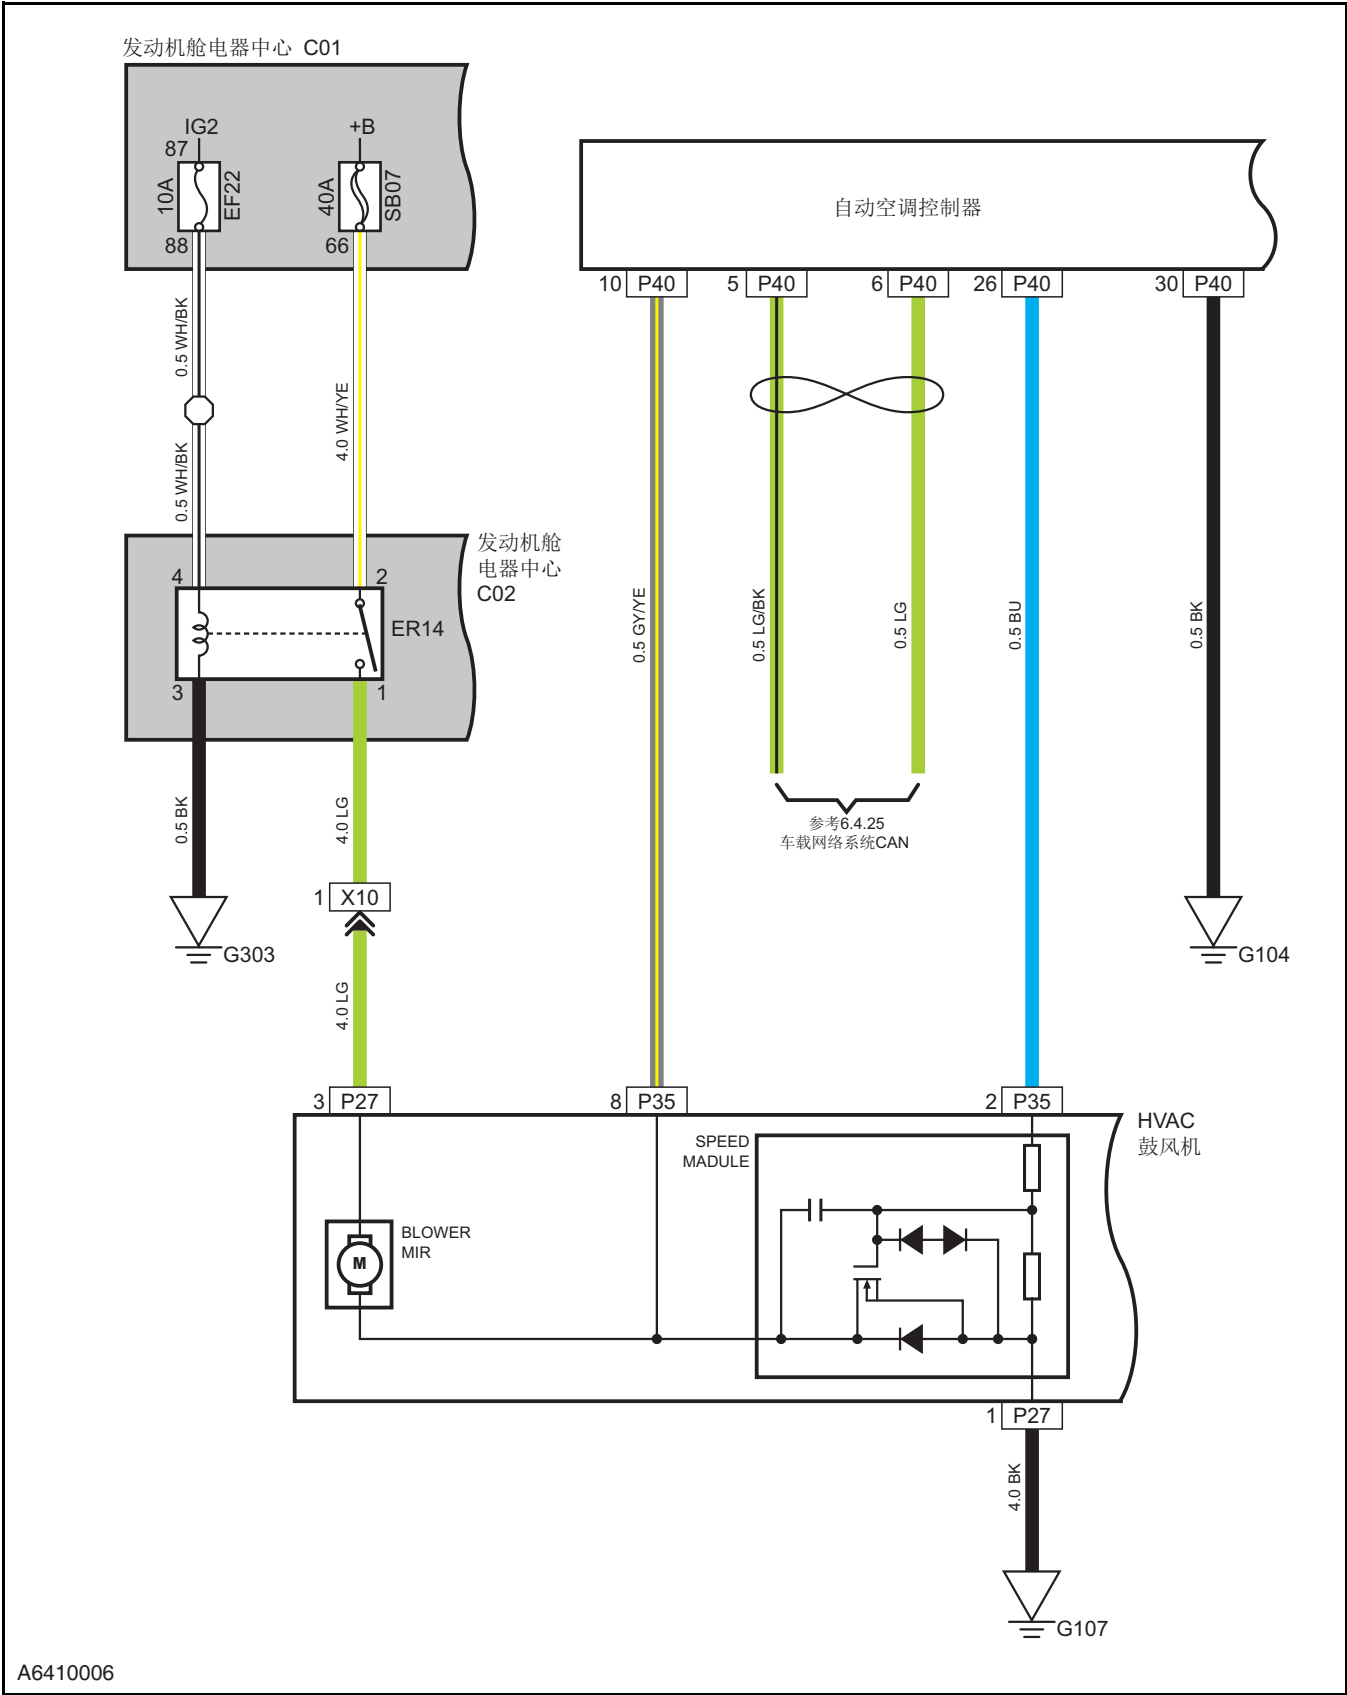


A6410006

自动空调 - 传感器 (AT)

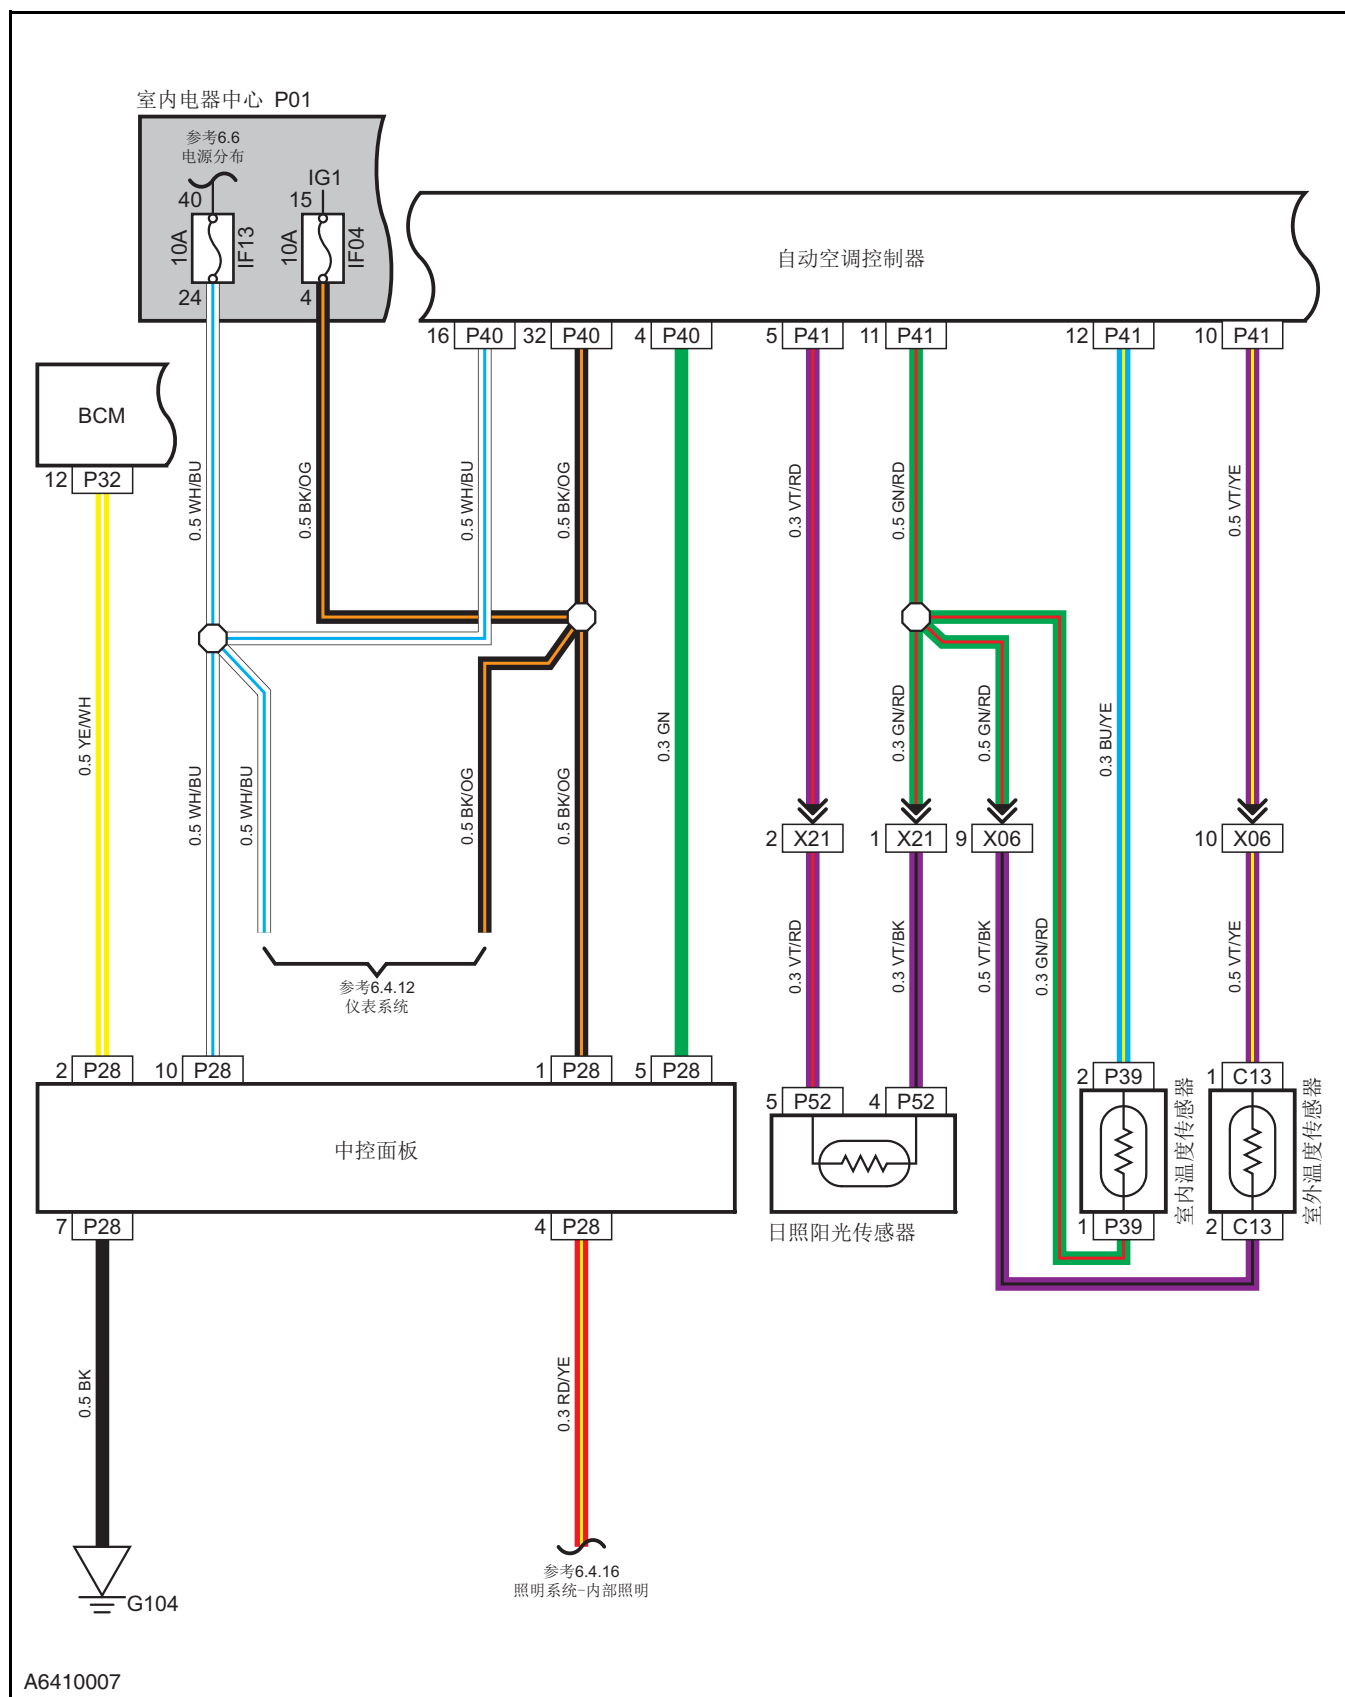


A6410007

自动空调 - 压缩机控制 (AT)

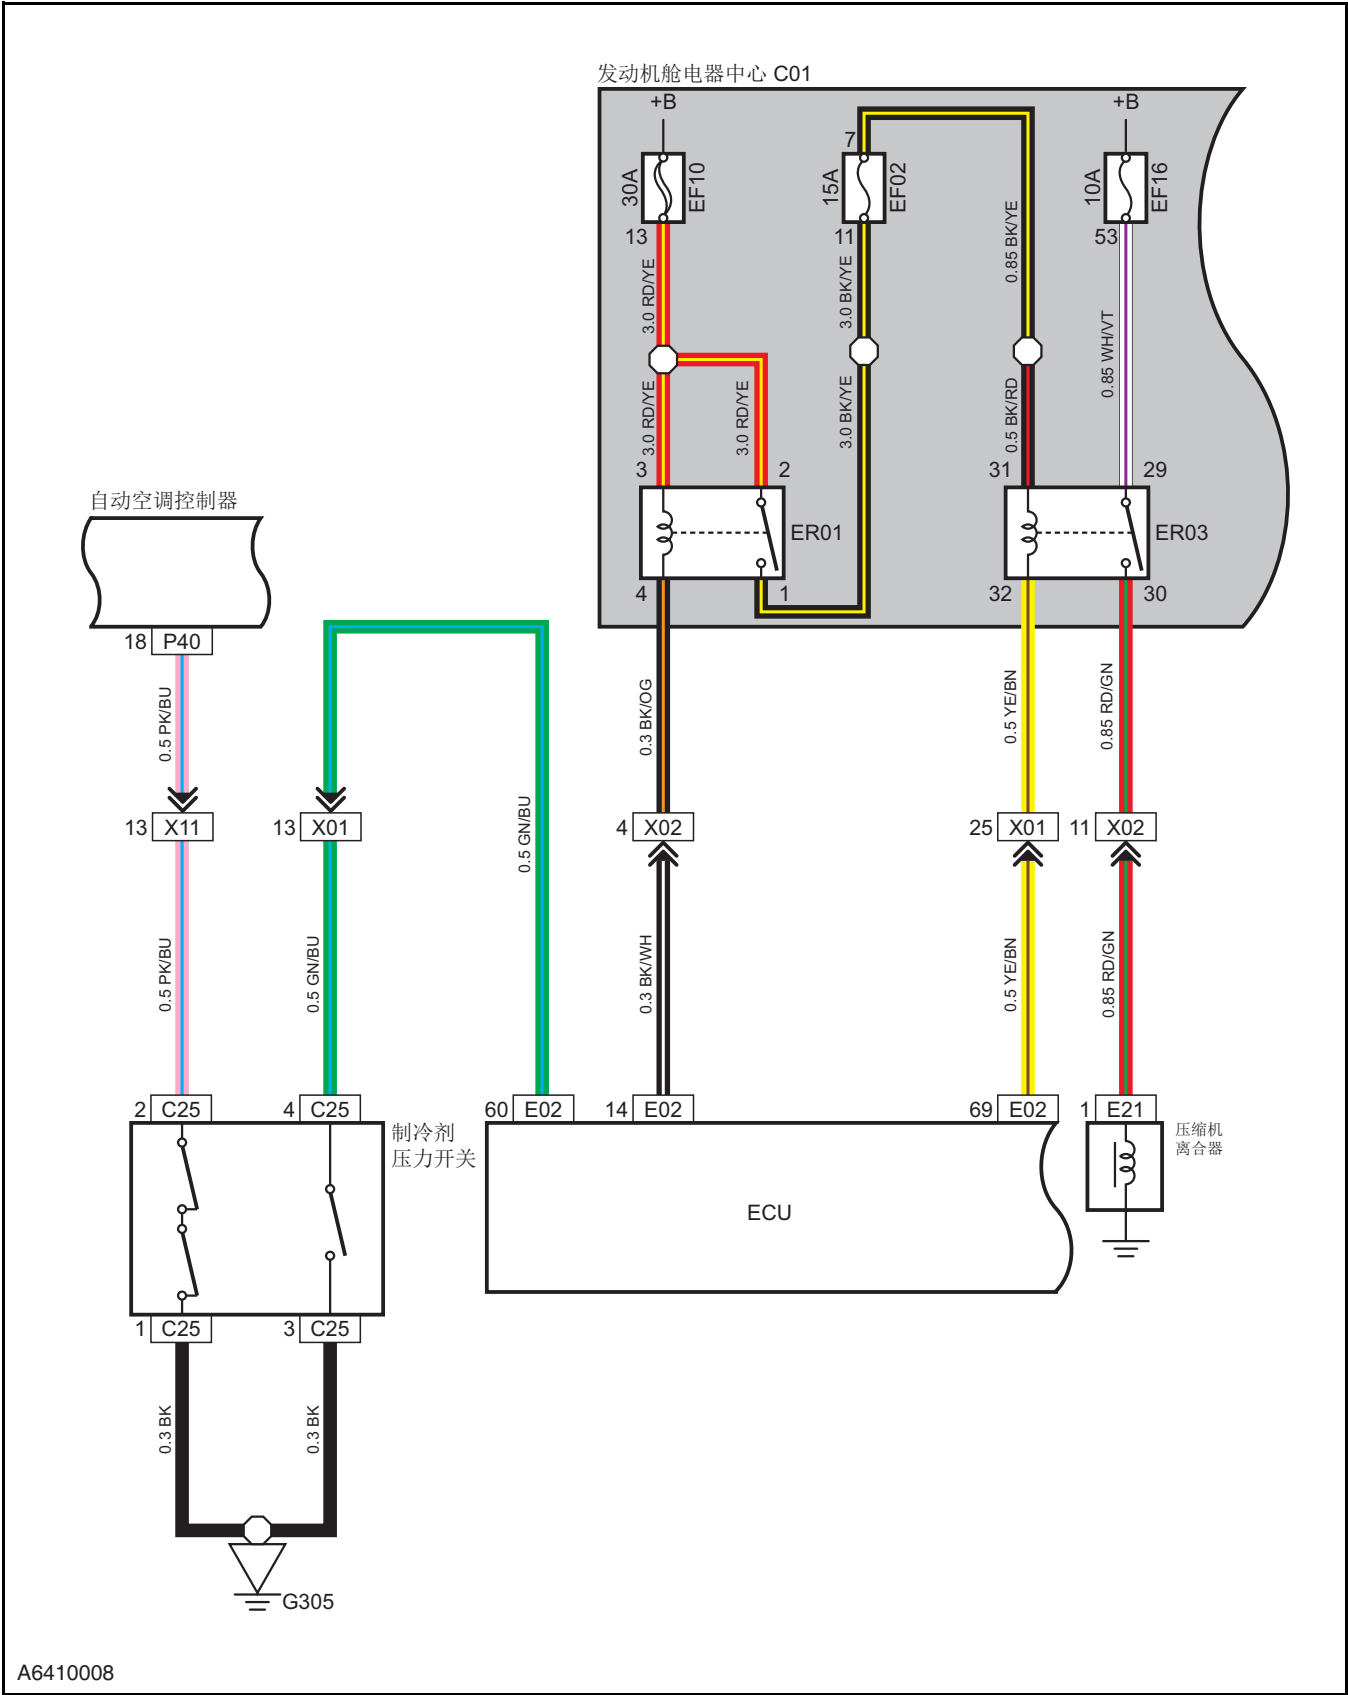


A6410008

自动空调 - 执行器 (AT)

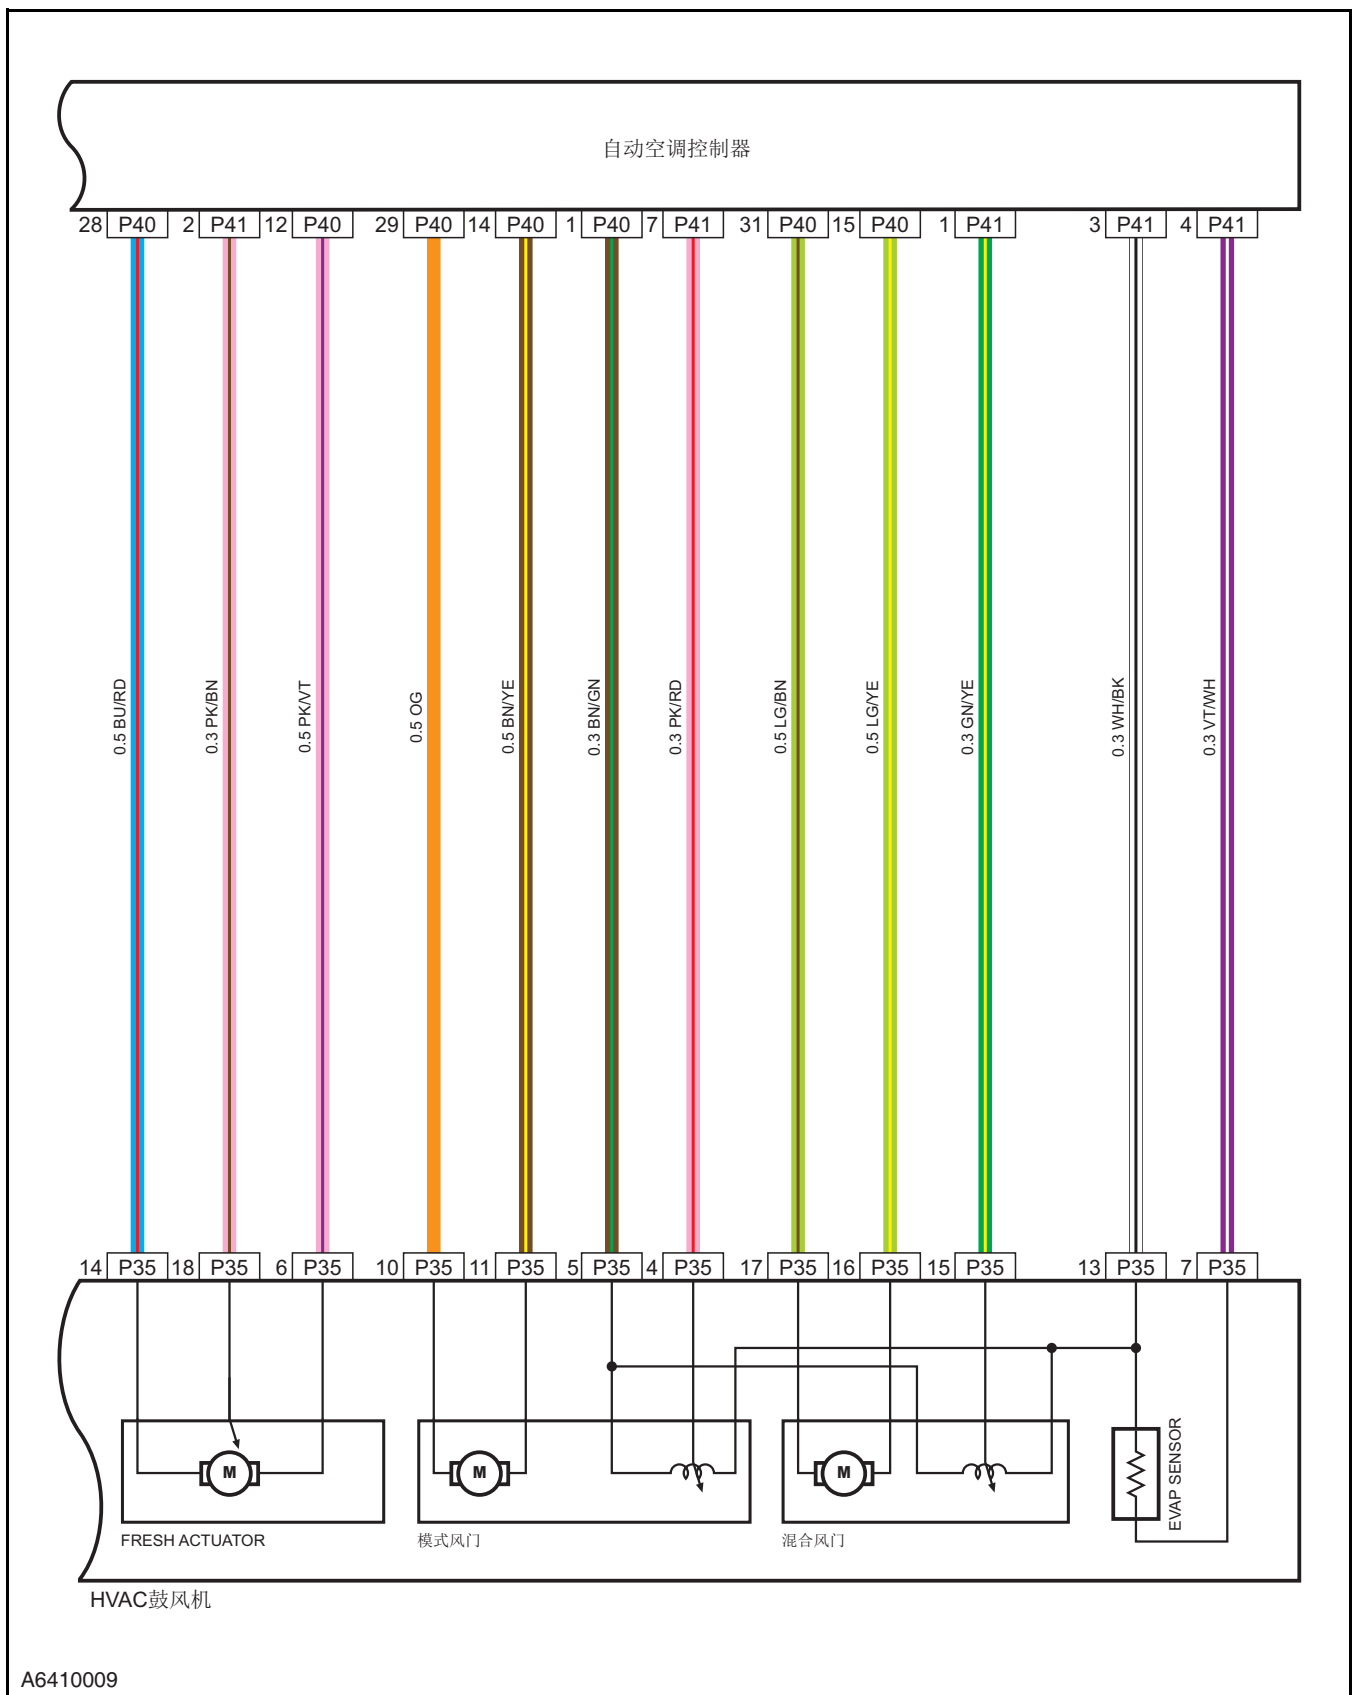


发动机线束接发动机舱保险盒 A

发动机舱保险盒接发动机线束 A

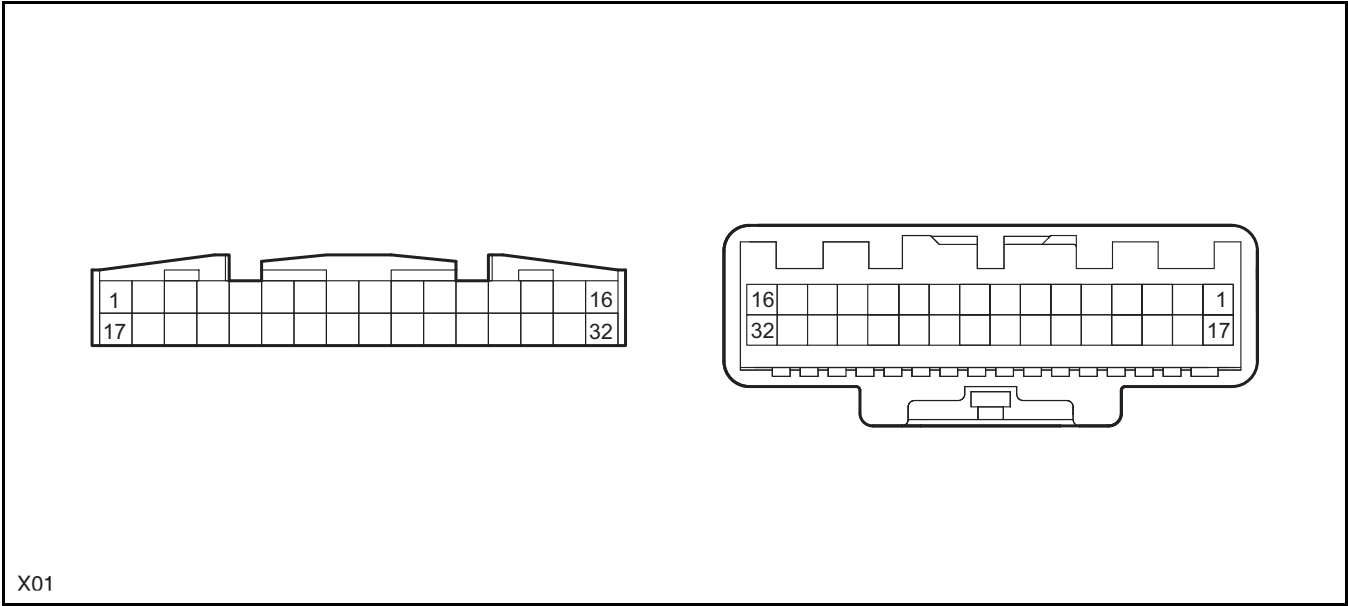


发动机线束接发动机舱保险盒 B

发动机舱保险盒接发动机线束 B

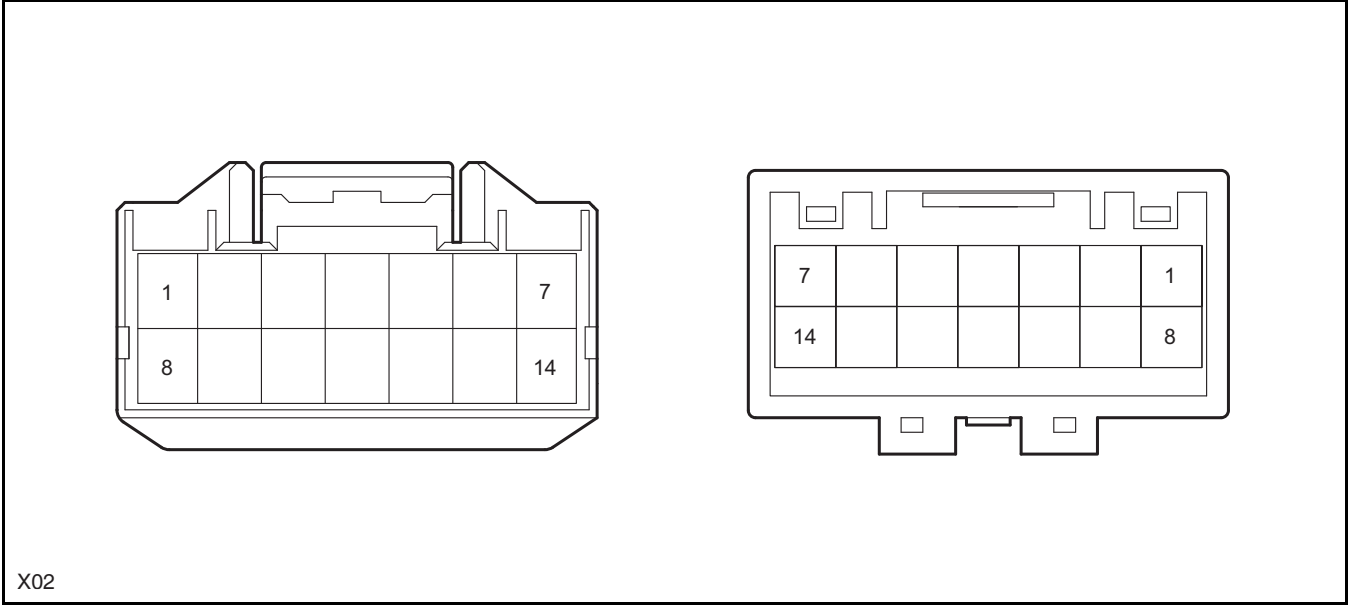


仪表线束接发动机舱线束 B

发动机舱线束接仪表线束 B

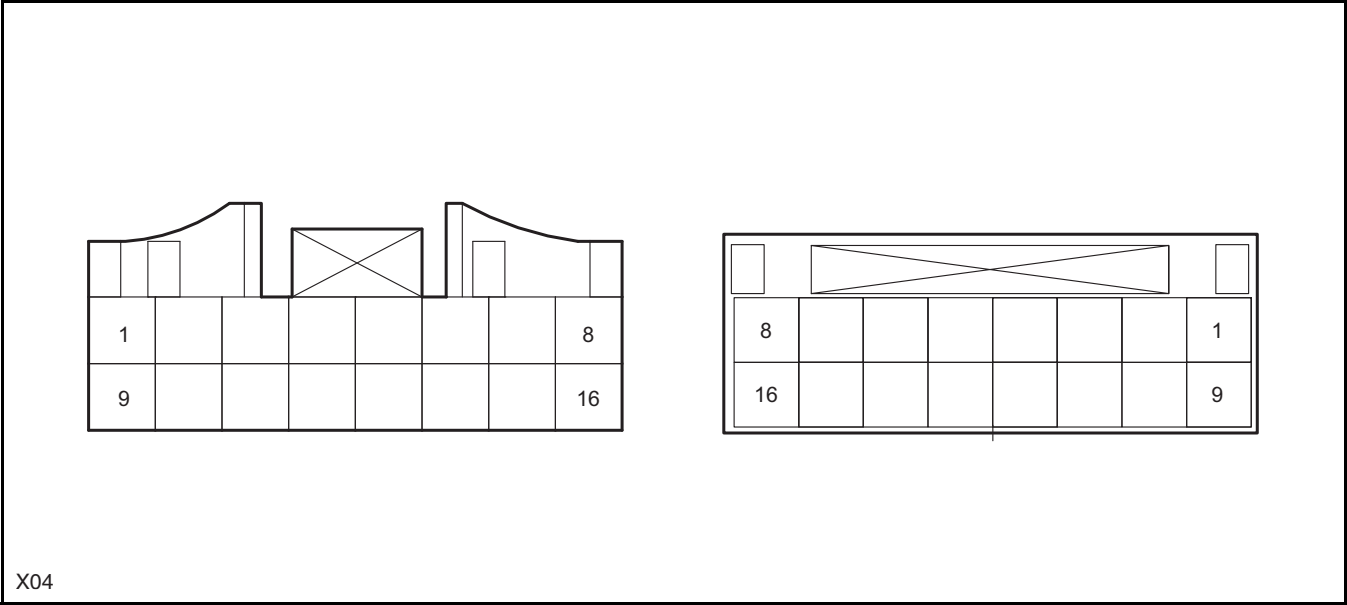


仪表线束接发动机舱线束 A

发动机舱线束接仪表线束 A

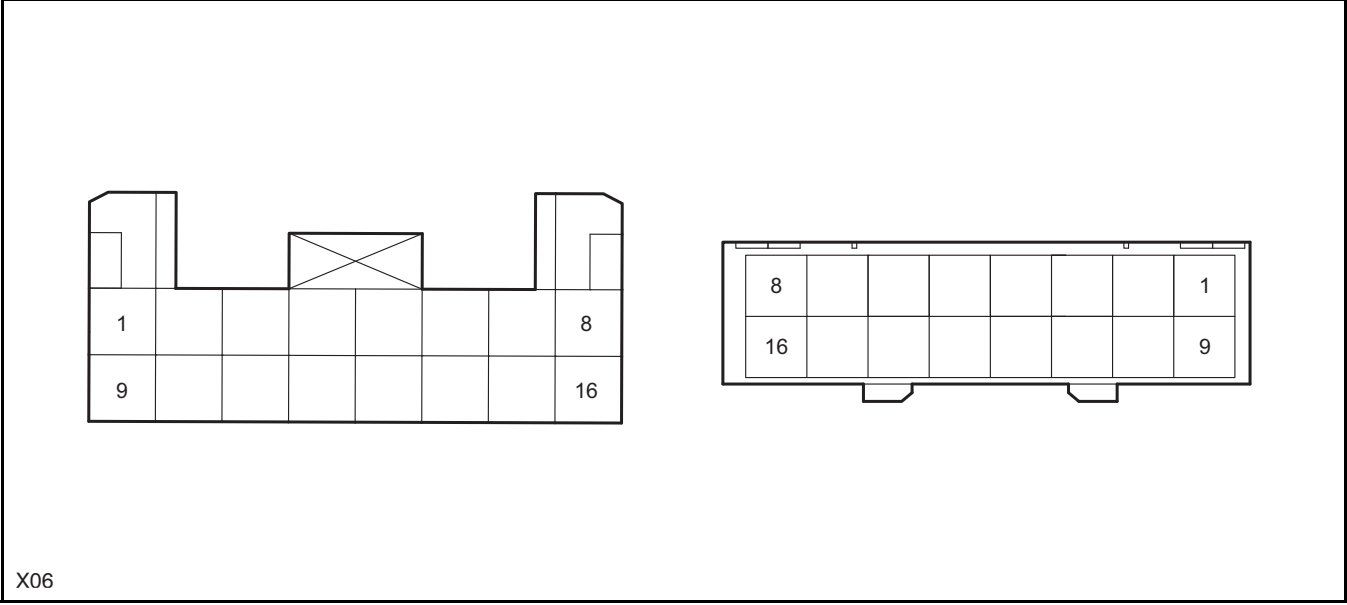


仪表线束接发动机舱线束 F

发动机舱线束接仪表线束 F

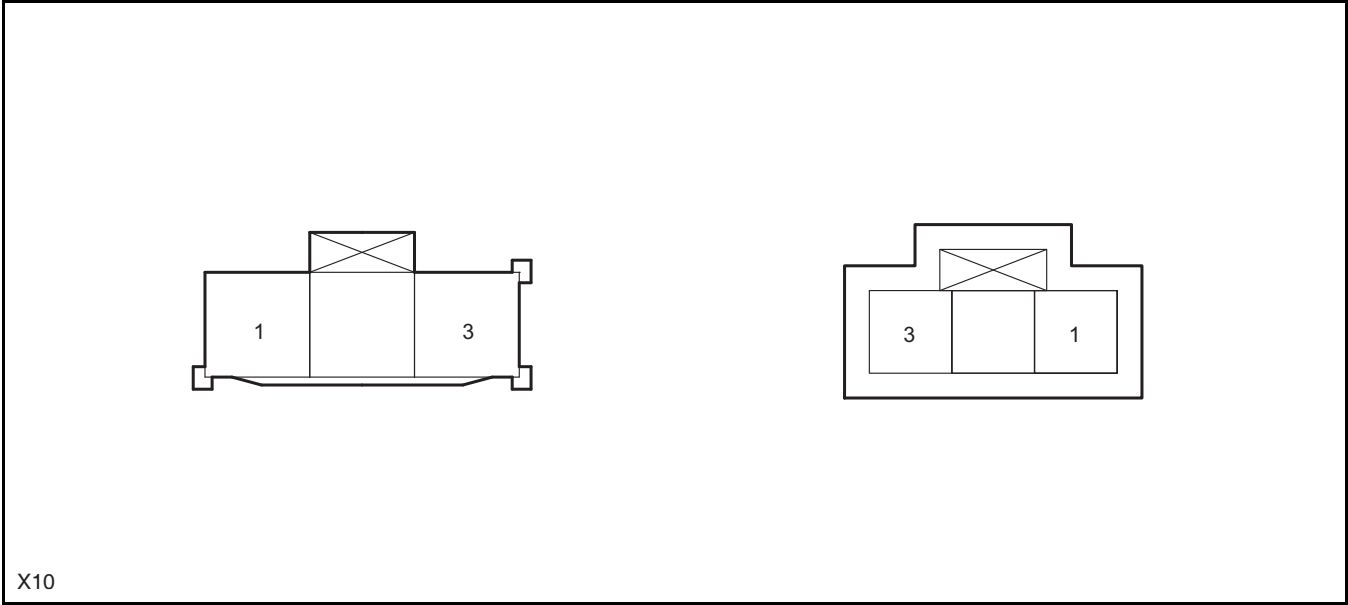


仪表线束接发动机舱线束 D


发动机舱线束接仪表线束 D

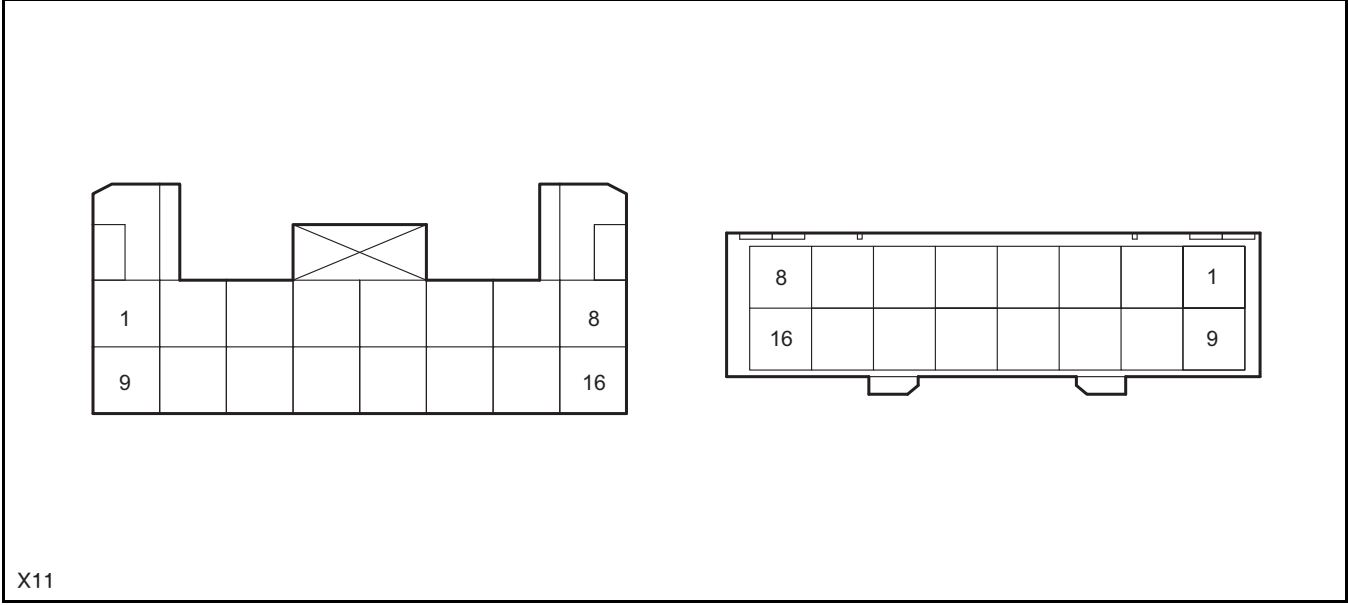

日照传感器线束接仪表线束

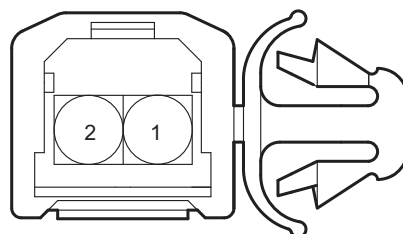


发动机舱电器中心 C01

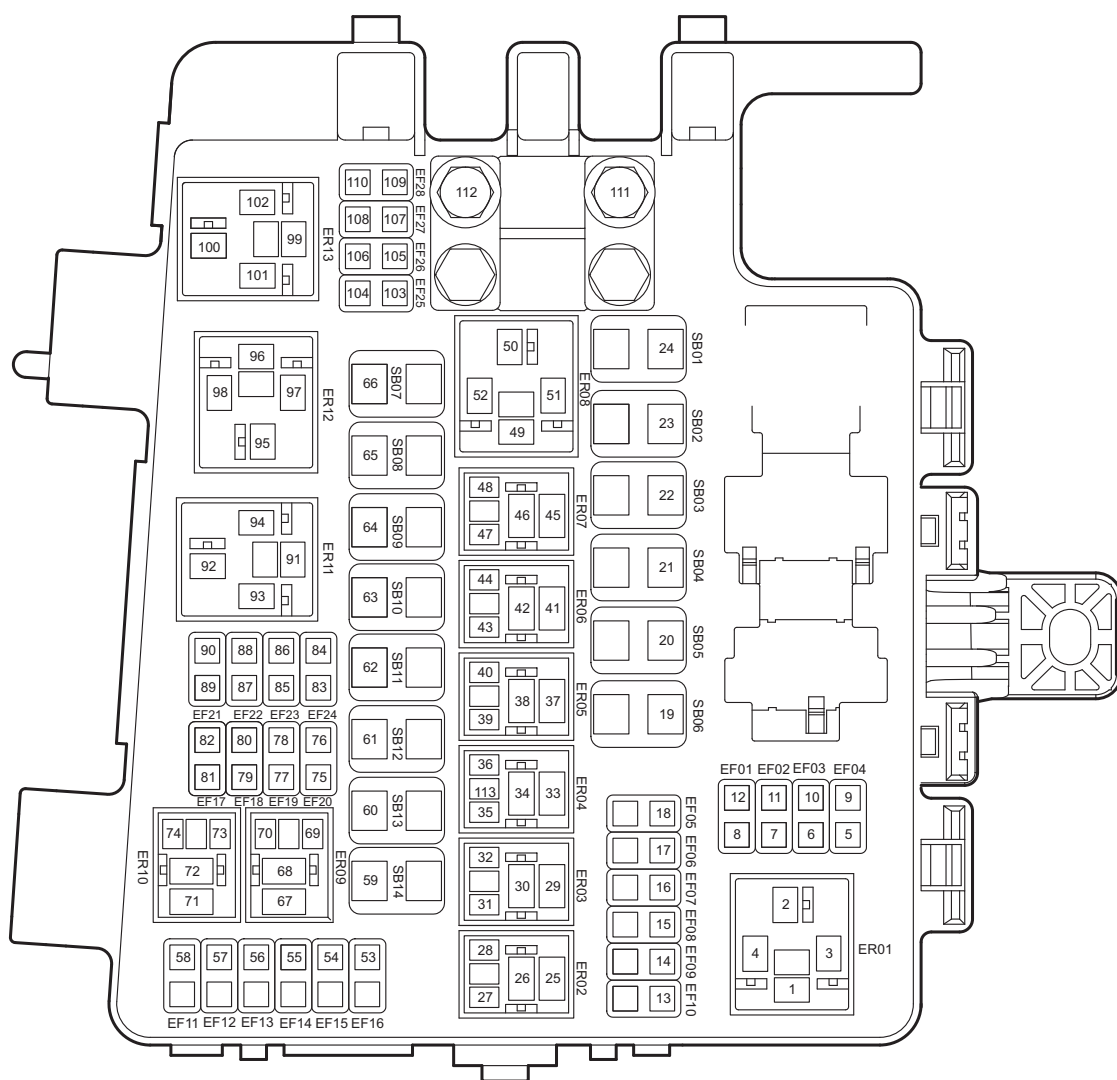


C01


发动机舱电器中心 C02

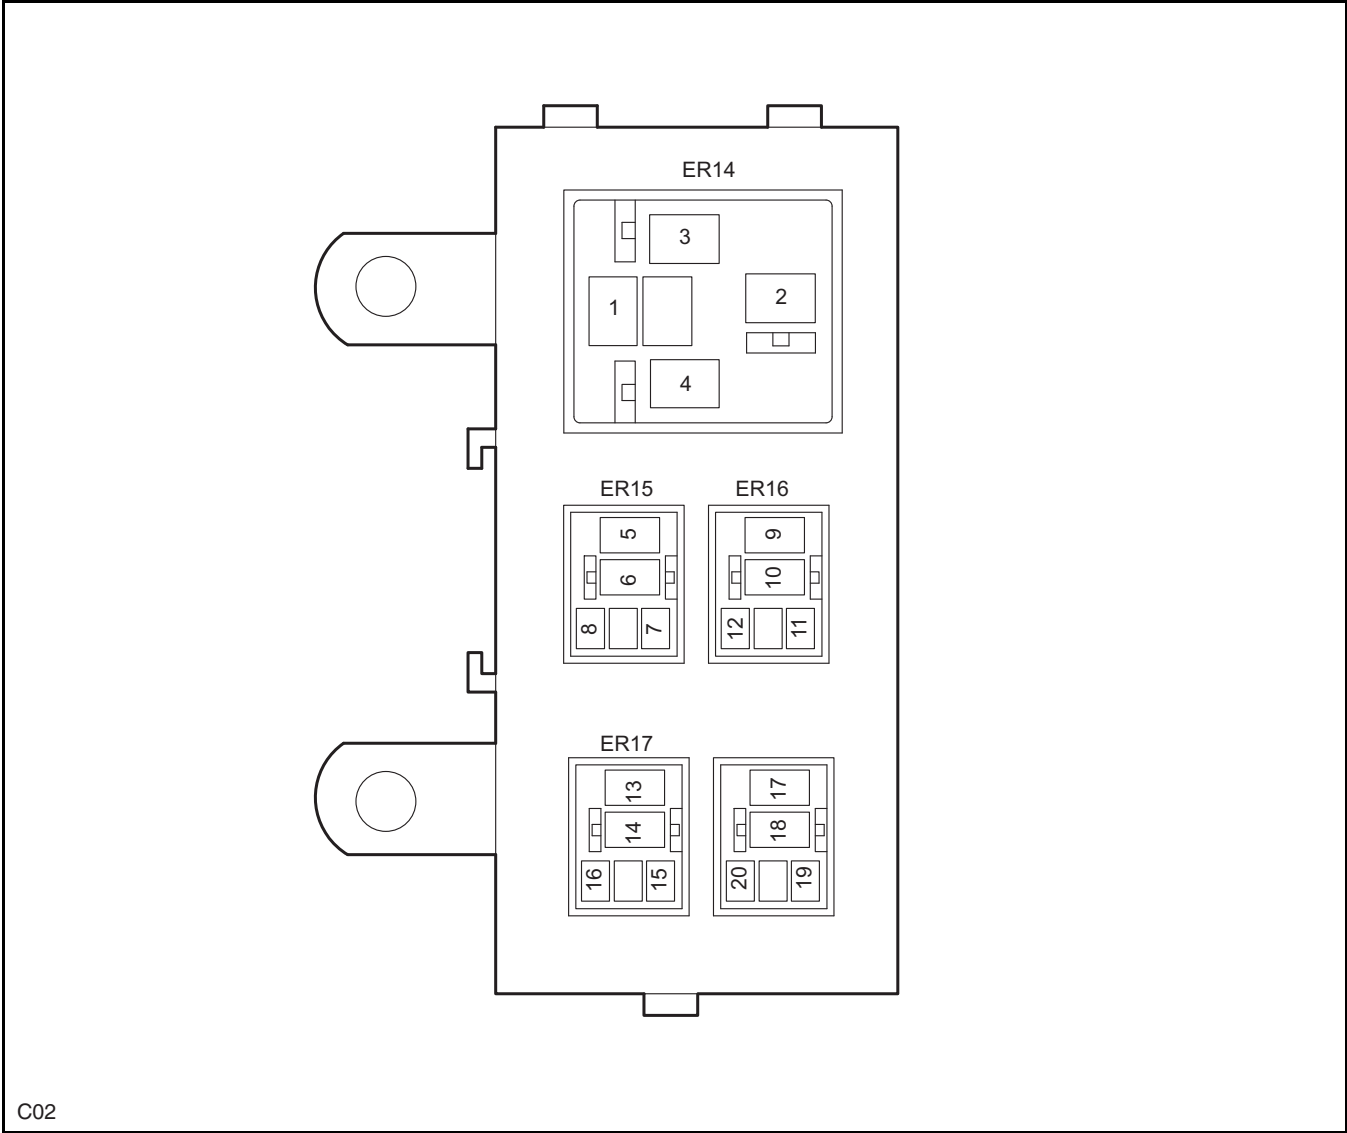


室外温度传感器

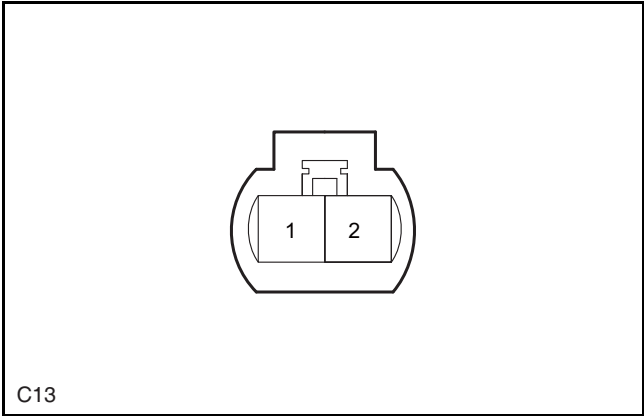


制冷剂压力开关

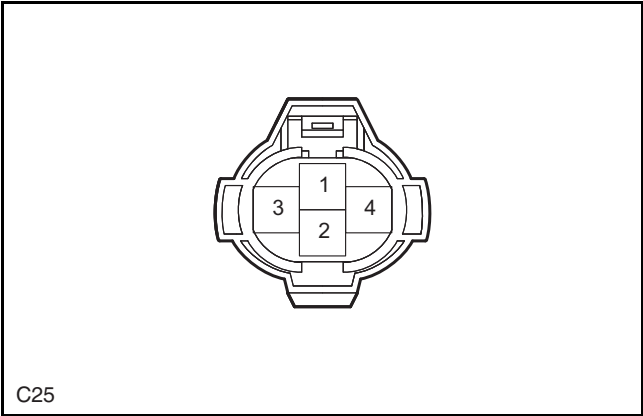


ECU

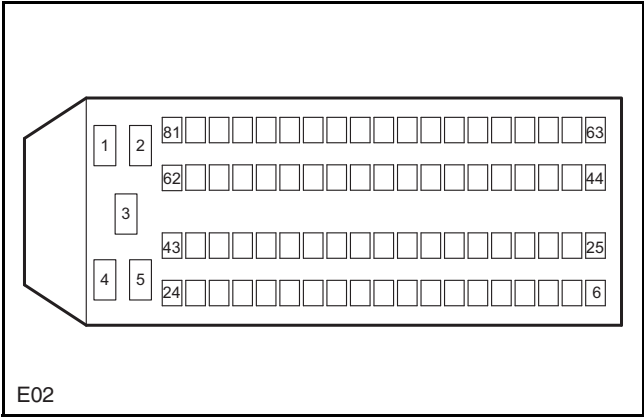


压缩机离合器

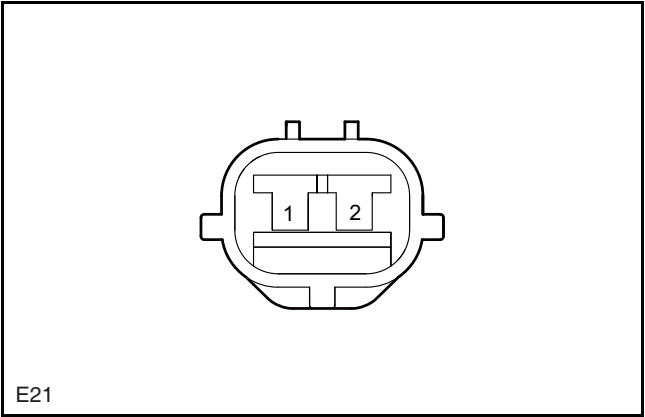


室内电器中心

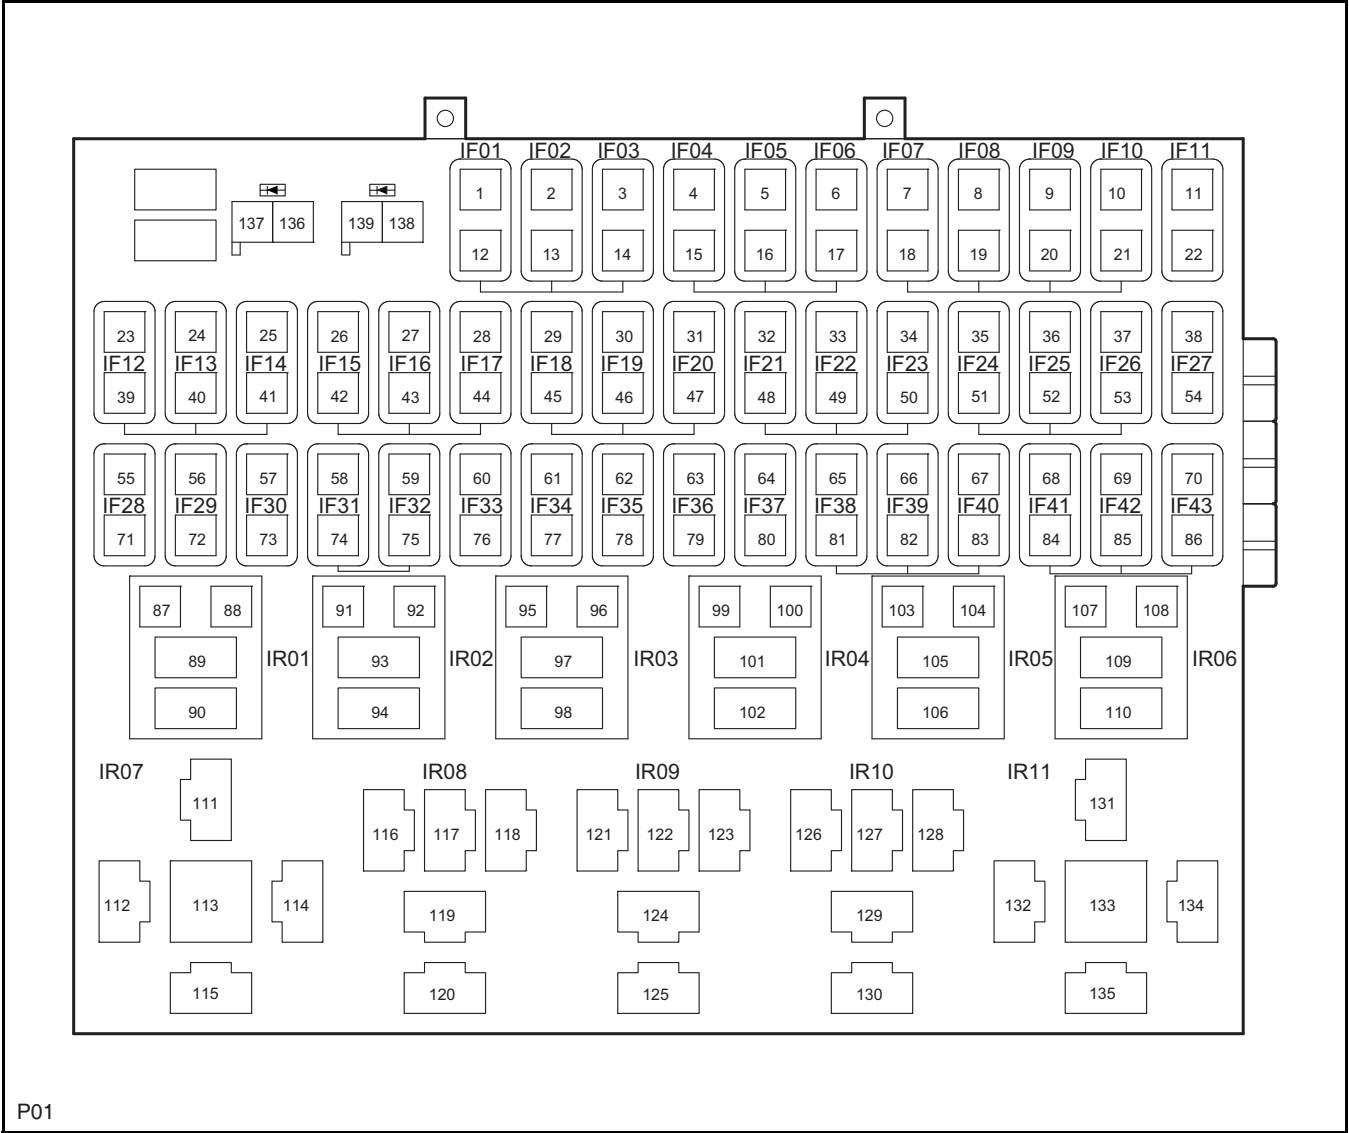


电动空调控制器 A

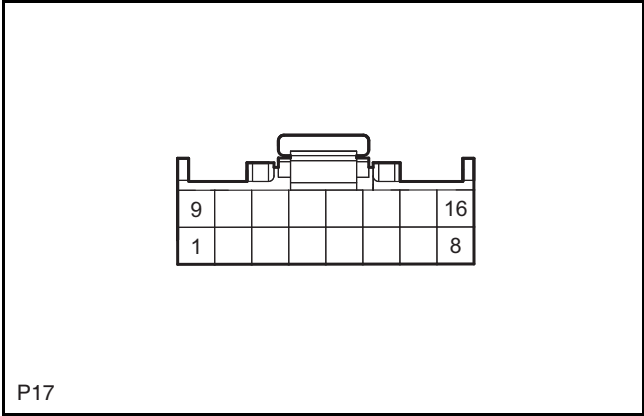


电动空调控制器 B

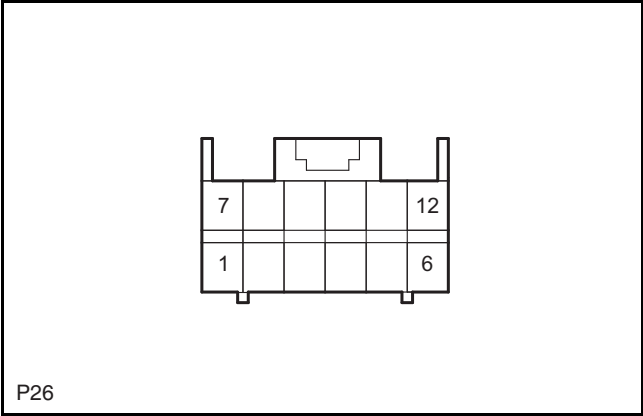


鼓风机 HVAC_C

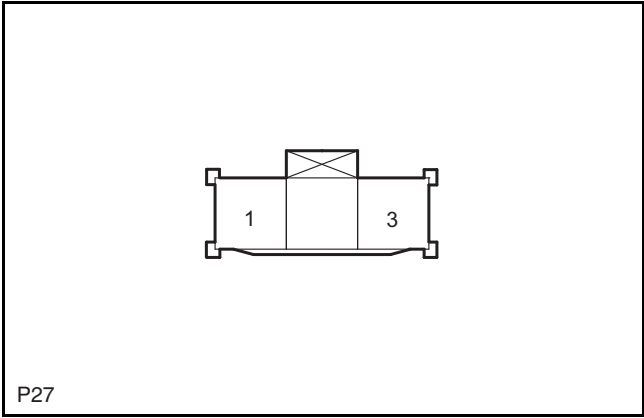


中控面板

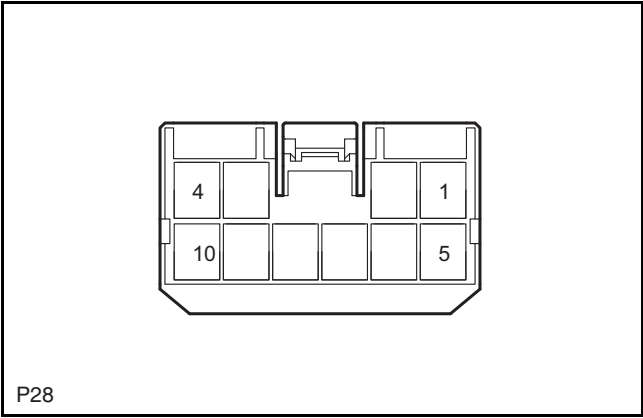


BCM C 绿色

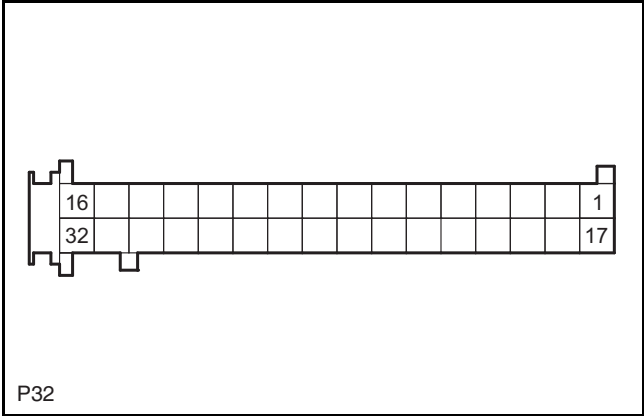


HVAC 鼓风机 _B

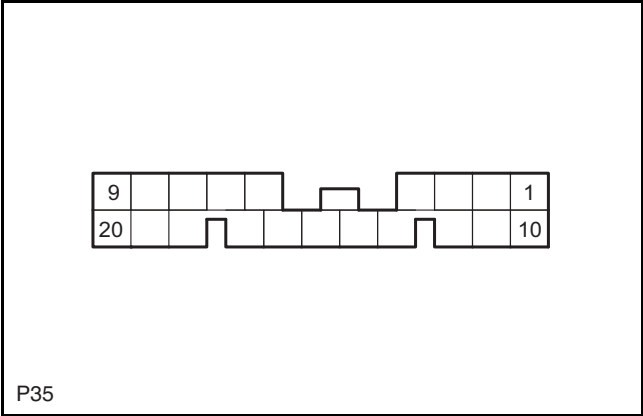


室内温度传感器

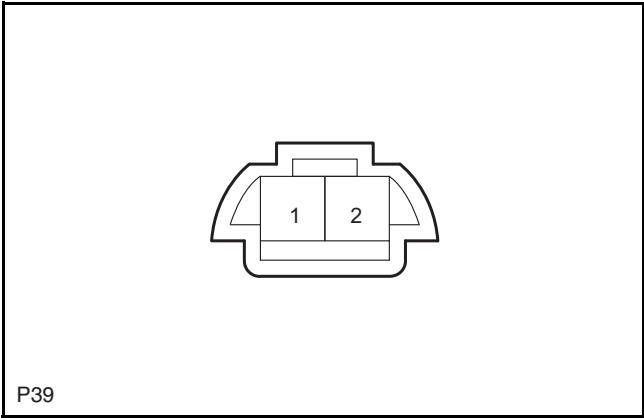

自动空调控制器 A

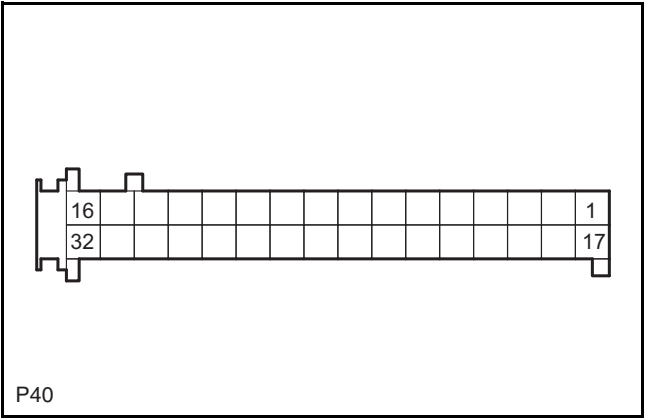

自动空调控制器 B

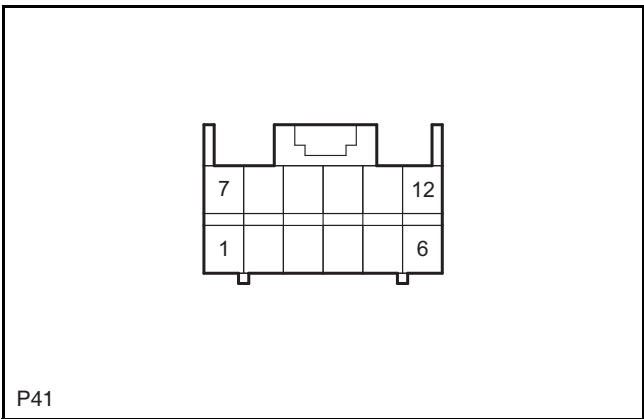

日照阳光传感器

