


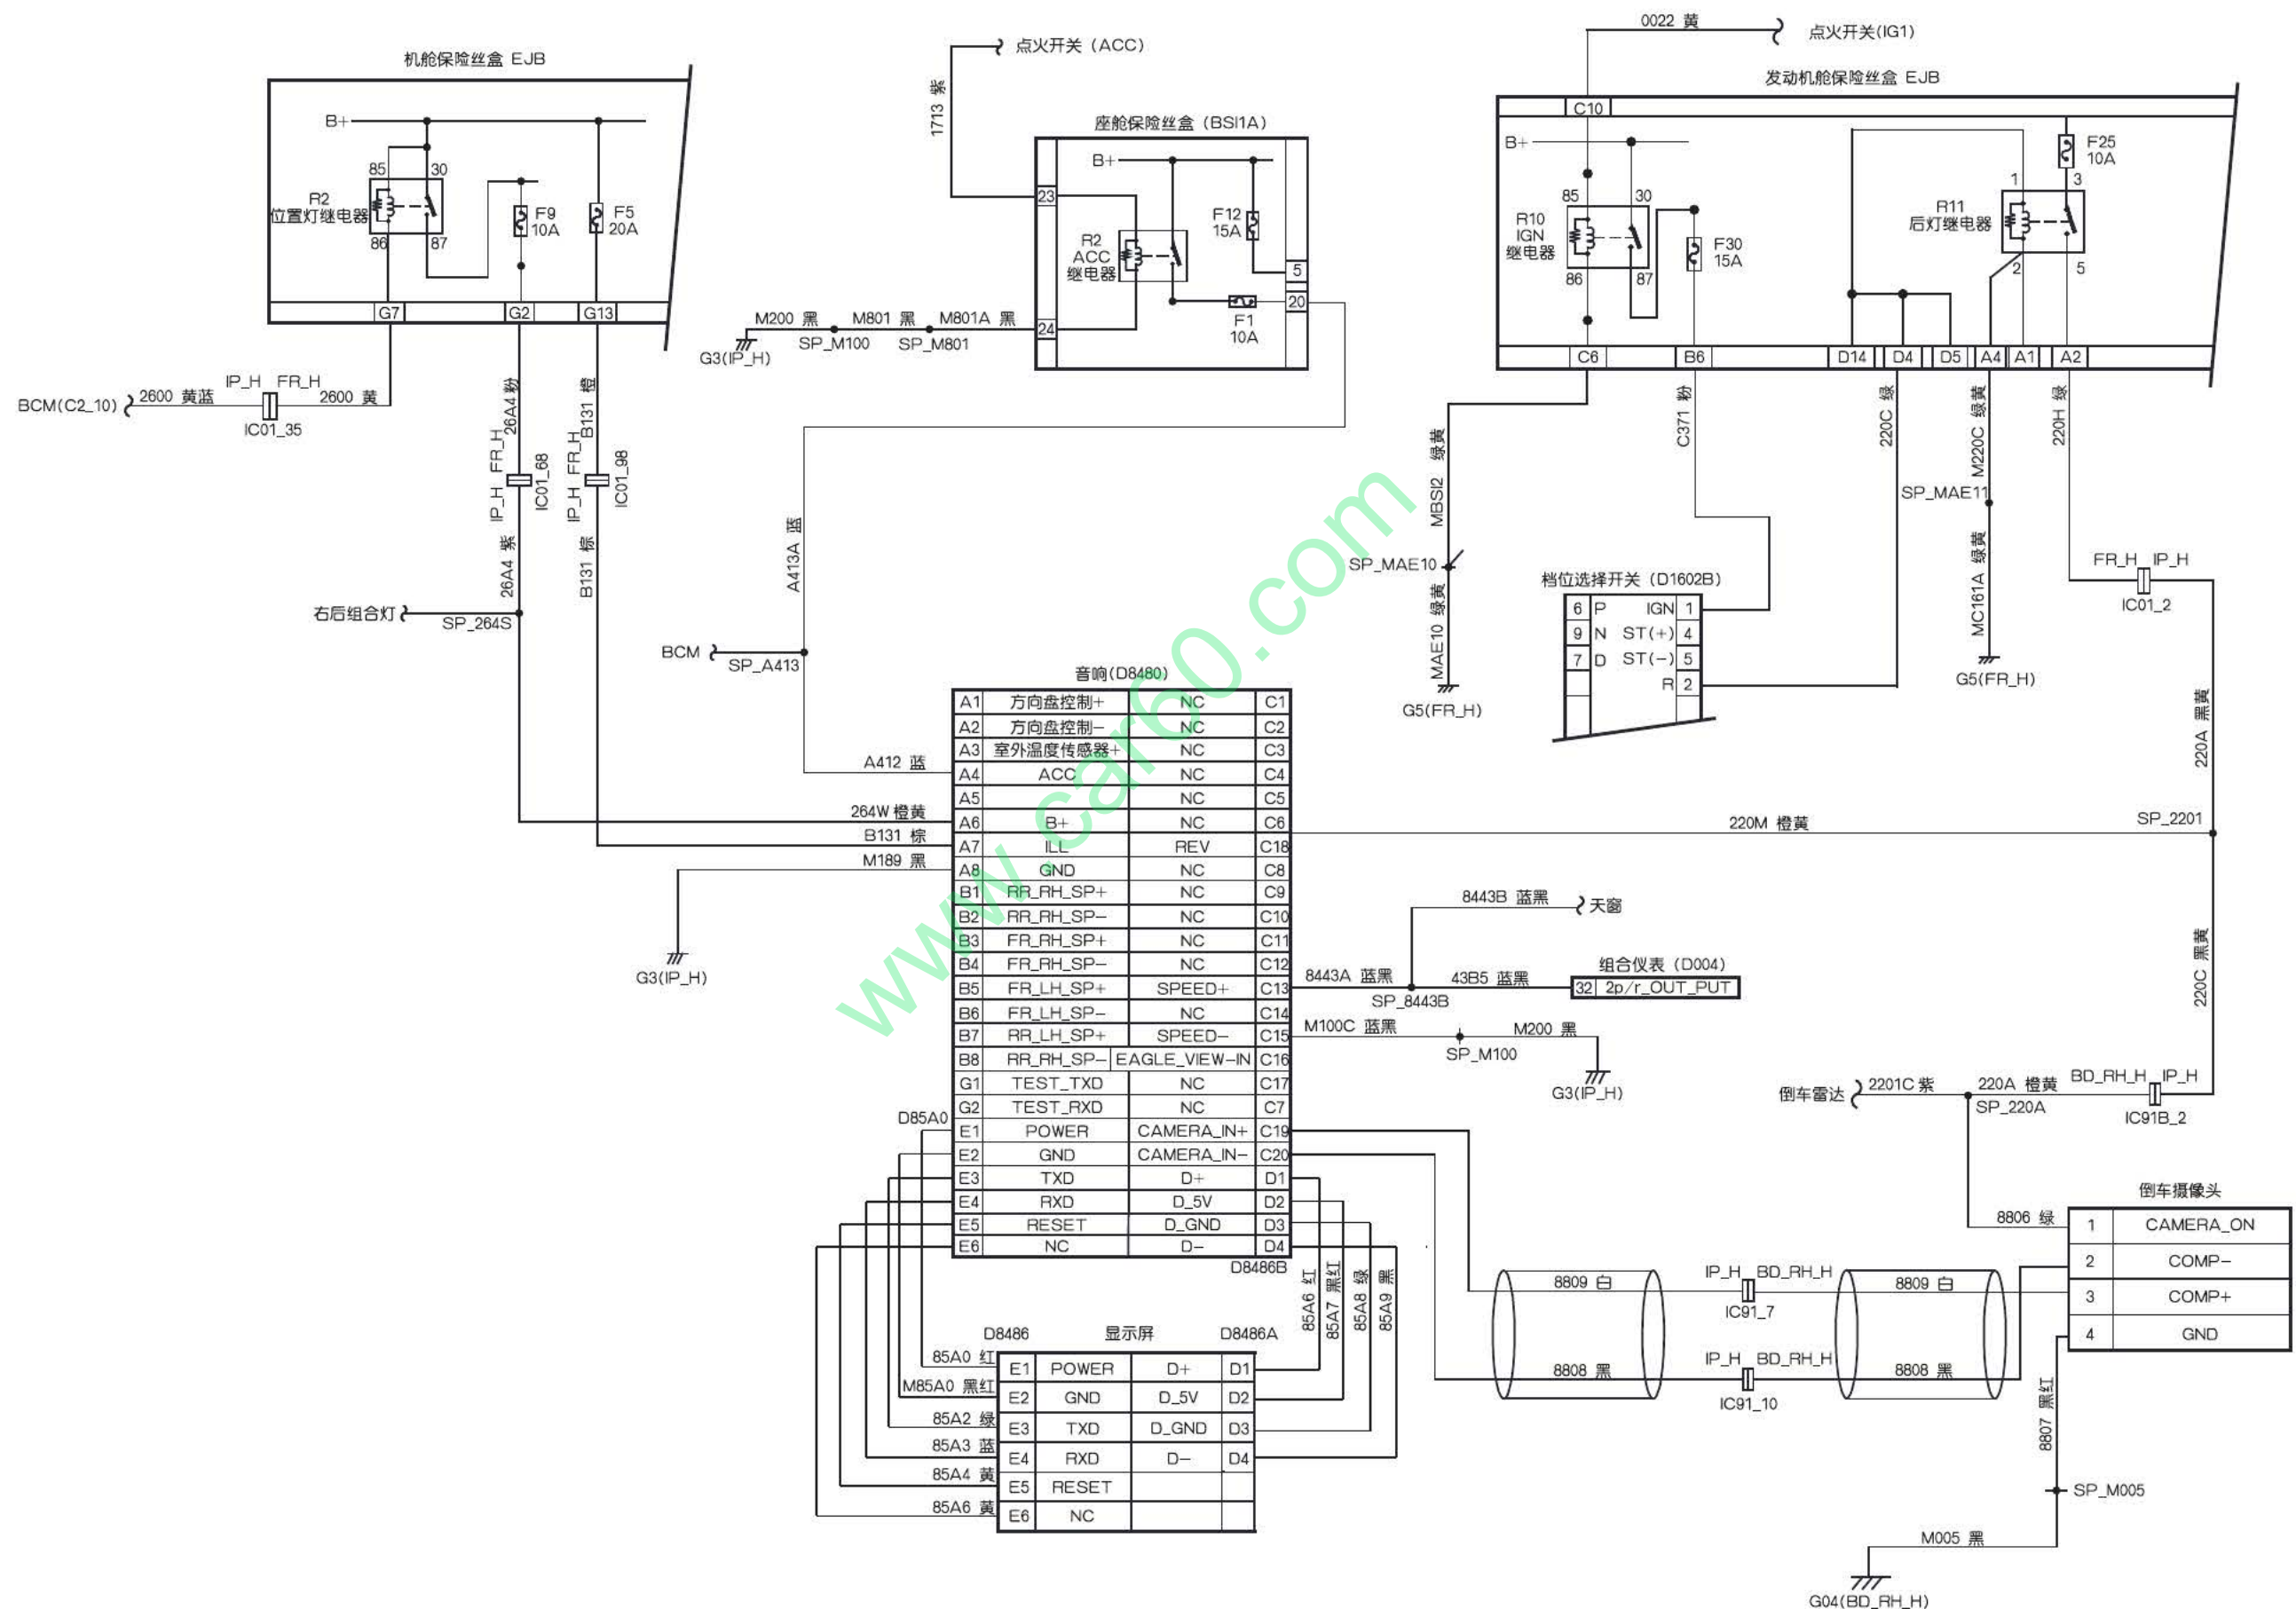

音响 (D8480)			
A1	方向盘控制+	NC	C1
A2	方向盘控制-	NC	C2
A3	室外温度传感器+	NC	C3
A4	ACC	NC	C4
A5		NC	C5
A6	B+	NC	C6
A7	ILL	REV	C18
A8	GND	NC	C8
B1	RR_RH_SP+	NC	C9
B2	RR_RH_SP-	NC	C10
B3	FR_RH_SP+	NC	C11
B4	FR_RH_SP-	NC	C12
B5	FR_LH_SP+	SPEED+	C13
B6	FR_LH_SP-	NC	C14
B7	RR_LH_SP+	SPEED-	C15
B8	RR_RH_SP-	EAGLE_VIEW-IN	C16
G1	TEST_TXD	NC	C17
G2	TEST_RXD	NC	C7
E1	POWER	CAMERA_IN+	C19
E2	GND	CAMERA_IN-	C20
E3	TXD	D+	D1
E4	RXD	D_5V	D2
E5	RESET	D_GND	D3
E6	NC	D-	D4

显示屏			
E1	POWER	D+	D1
E2	GND	D_5V	D2
E3	TXD	D_GND	D3
E4	RXD	D-	D4
E5	RESET		
E6	NC		