


智能进入控制单元 PEPS

J1

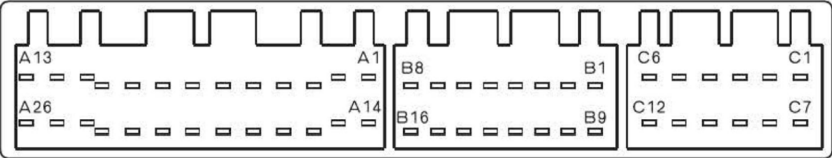


J1

端子号	功能定义	端子号	功能定义	端子号	功能定义
A1		B1	CAN_L(PEPS)	C1	室内天线(行李箱前部)+
A2	BAT(PEPS)	B2	CAN_H(PEPS)	C2	室内天线(副仪表板)+
A3		B3	IGN1_FB(PEPS)	C3	室内天线(仪表板)+
A4		B4	P档位置开关(AT)/N档位置开关(MT)	C4	室内天线(左前门)+
A5				C5	室内天线(后保杆)+
A6	ESCL_Lock_Enable	B5	制动踏板开关2	C6	室内天线(右前门)+
A7		B6		C7	室内天线(行李箱前部)-
A8	发动机舱内蜂鸣器驱动信号	B7	制动踏板开关2/制动踏板保险丝反馈	C8	室内天线(副仪表板)-
A9	ESCL_GND			C9	室内天线(仪表板)-
A10	背光灯	B8	离合开关2	C10	室内天线(左前门)-
A11		B9	ESCLorIMMO_LIN总线	C11	室内天线(后保杆)-
A12	GND(PEPS)	B10	离合开关1	C12	室内天线(右前门)-
A13		B11	行李箱开启请求开关		
A14		B12			
A15	左前门请求开关	B13	IGN1_FB(PEPS)		
A16	ESCL_FBI(PEPS)	B14	ACC_FB(PEPS)		
A17	起动开关请求信号(PEPS)	B15			
A18		B16			
A19					
A20	右前门请求开关				
A21	IGN2继电器输出(PEPS)				
A22	IGN1继电器输出(PEPS)				
A23	ACC继电器输出(PEPS)				
A24					
A25					
A26	黄白LED				

智能进入控制单元 BPM

J2

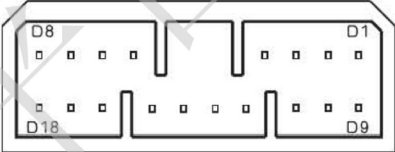

J2

端子号	功能定义	端子号	功能定义	端子号	功能定义
1	IGN2_FB(BPM)	7	CAN_L(BPM)	13	IGN2_继电器输出(BPM)
2		8	BAT(BPM)	14	ACC继电器输出(BPM)
3	IGN1_FB(BPM)	9		15	
4		10	ACC_FB(BPM)	16	
5	GND(BPM)	11		17	起动开关请求信号(BPM)
6	CAN_H(BPM)	12	IGN1_继电器输出(BPM)	18	ESCL_电机_电源

