

8W-02 COMPONENT INDEX

Component	Page	Component	Page
Actuator-Fuel Control	8W-30	Lamps-License	8W-51
Actuator-Mode Doors	8W-42	Lamps-Park/Turn	8W-50, 52
Actuator-Recirculation Door	8W-42	Lamps-Tail Stop/Turn	8W-51
Actuators-Blend Door	8W-42	Lamps-Tail/Stop	8W-52
Airbag-Squibs	8W-43	Lamps-Vanity	8W-44
Airbags-Side Curtain	8W-43	Lamp-Underhood	8W-44
Amplifier-Radio	8W-47	Latches-Door	8W-39, 61
Amplifier-Subwoofer	8W-47	Lumbar Motor-Passenger	8W-63
Assembly-EGR Valve	8W-30	Mirror-Inside Rearview	8W-49, 55
Assembly-Natural Vacuum Leak Detection	8W-30	Mirrors-Outside Rearview	8W-62
Assembly-Shift Motor/Mode Sensor	8W-31	Module-Anti-Lock Brakes	8W-34, 35
Assembly-Transmission Solenoid/TRS	8W-31	Module-Brake Provision	8W-54
Assembly-Transmission Solenoid	8W-31	Module-Electronic Overhead	8W-49
Assembly-Transmission Throttle Valve	8W-31	Module-Engine Control	8W-30
Assembly-Winch	8W-56	Module-Final Drive Control	8W-31
Backlite-Heated	8W-48	Module-Front Controls	8W-13
Battery	8W-13	Module-Fuel Pump	8W-30
Battery-Auxiliary	8W-13	Module-Hands Free	8W-55
Capacitor-Ignition	8W-30	Module-Heated Seats	8W-63
Circuit Breaker-Power Window	8W-13	Module-Integrated Power	8W-13
Clockspring	8W-33, 41, 43, 47	Module-Occupant Restraint Controller	8W-43
Cluster	8W-40	Module-Powertrain Control	8W-30, 31
Clutch-A/C Compressor	8W-42	Module-Sentry Key Immobilizer	8W-39
Coils-Ignition	8W-30	Module-Transfer Case Control	8W-31
Control-A/C-Heater	8W-42	Motor-Adjustable Pedal	8W-56
Data Link Connectors	8W-18	Motor-Blower	8W-42
Drive-Fan-Radiator	8W-30	Motor-Condenser Fan	8W-42
Fuse Holder	8W-13	Motor-IAC	8W-30
Fuses	8W-13	Motor-Seat Adjusters	8W-63
Fusible Link	8W-13	Motors-Lumbar	8W-63
Gauge-Engine Oil Temperature	8W-40	Motors-Power Window	8W-60
Generator	8W-20	Motor-Sunroof	8W-64
Grounds	8W-15	Motor-Windshield Wiper	8W-53
Heater-Fuel	8W-30	Power Outlets	8W-41
Heater-Intake Airs	8W-30	PTCS	8W-13
Heaters-Seat Cushion	8W-63	PTO Switch	8W-30
Horns	8W-41	Pump-Fuel Injection	8W-30
Injectors-Fuel	8W-30	Pump-Leak Detection	8W-30
Lamp-Bar-Tailgate	8W-51	Pump-Washer-Windshield	8W-53
Lamp-Center Bezel	8W-44	Radio	8W-47
Lamp-CHMSL-Aftermarket	8W-51	Receiver-Satellite	8W-47
Lamp-Clearances	8W-50	Relay-Adjustable Pedals	8W-56
Lamp-Dome-Rear	8W-44	Relay-Auto Shut Down	8W-30
Lamp-Glove Box	8W-44	Relay-Blower Motor	8W-42
Lamp-High Mounted Stop	8W-51	Relay-Clutch-A/C Compressor	8W-42

Component	Page
Relay-Heated Mirror	8W-62
Relay-Horn	8W-41
Relay-Ignition Run-Acc	8W-13
Relay-Intake Air Heaters	8W-30
Relay-Oxygen Sensor Downstream	8W-30
Relay-Park Lamp	8W-50, 52
Relay-Rear Window Defogger	8W-48
Relay-Run	8W-13
Relays-Starter	8W-21
Relays-Trailer Tow	8W-54
Relays-Wiper	8W-53
Relay-Transmission Control	8W-31
Resistor Block-Blower Motor	8W-42
Seat Belts-Tensioner	8W-43
Seat Belt-Tension Reducer-Driver	8W-40, 43
Sensor-Accelerator Pedal Position	8W-30
Sensor-Ambient Air Temperature	8W-49
Sensor-Battery Temperature	8W-30
Sensor-Brake Fluid Level	8W-34, 35
Sensor-Camshaft Position	8W-30
Sensor-Crankshaft Position	8W-30
Sensor-Engine Coolant Temperature	8W-30
Sensor-Engine Oil Pressure	8W-30
Sensor-Engine Oil Temperature	8W-30, 40
Sensor-Evaporator Temperature	8W-42
Sensor-Intake Air Temperature	8W-30
Sensor-Knocks	8W-30
Sensor-Line Pressure	8W-31
Sensor-MAP	8W-30
Sensors-Oxygen	8W-30
Sensors-Side Impact	8W-43
Sensors-Speed	8W-31
Sensors-Wheel Speed	8W-34, 35
Sensor-Temperature/Pressure Intake	8W-30
Sensor-Temperature/Pressure-MAP	8W-30
Sensor-Throttle Position	8W-30
Sensor-Transfer Case Position	8W-31
Sensor-Transmission Range	8W-31
Sensor-Washer Fluid Level	8W-53
Sensor-Water In Fuel	8W-30
Servo-Speed Control	8W-33
Solenoid-Brake Transmission Shift Interlock	8W-40

Component	Page
Solenoid-EVAP/Purge	8W-30
Solenoid-Radiator Fan	8W-30
Solenoid-Reverse Lock-Out	8W-30
Solenoids-Locker	8W-31
Solenoid-Wastegate	8W-30
Speakers	8W-47
Splices	8W-70
Starter	8W-21
Switch-Adjustable Pedals	8W-56
Switch-Axle Lock	8W-31
Switch-Back Up Lamp	8W-51
Switch-Clutch Interlock	8W-21
Switch-Cylinder Lock-Driver	8W-61
Switch-Disconnecting Stabilizer Bar	8W-31
Switch-Door Lock-Passenger	8W-61
Switch-Engine Oil Pressure	8W-30
Switches-Heated Seat	8W-63
Switches-Power Window	8W-60
Switches-Remote Radio	8W-47
Switches-Seat Belt	8W-40
Switches-Speed Control	8W-33
Switch-Headlamp	8W-40
Switch-Heated Seat-Passenger	8W-63
Switch-Horn	8W-41
Switch-Ignition	8W-13
Switch-Multifunction	8W-40
Switch-Oil Pressure	8W-30
Switch-Parking Brake	8W-40
Switch-Passenger Airbag On/Off	8W-43
Switch-Power Steering Pressure	8W-30
Switch-Push-Button Starter	8W-21
Switch-Seat-Driver	8W-63
Switch-Stop Lamp	8W-33
Switch-Sunroof	8W-64
Switch-Tow/Haul Overdrive	8W-31
Switch-Transfer Case Selector	8W-31
Switch-Window/Door Lock-Driver	8W-60, 61, 62
Throttle Body	8W-30
Transducer-A/C Pressure	8W-42
Wiring-Trailer Tow 4-Way	8W-54
Wiring-Trailer Tow 7-Way	8W-54