




8W-30 FUEL/IGNITION SYSTEM


Component	Page	Component	Page
A/C Compressor Clutch	8W-30-24	Fuselink	8W-30-32
A/C Compressor Clutch Relay	8W-30-4, 24	G100	8W-30-2, 6, 16, 21, 25
A/C Pressure Sensor	8W-30-14, 19, 31	G101	8W-30-2, 6, 7, 10, 16, 21, 24
Accelerator Pedal Position Sensor	8W-30-38	G103	8W-30-24, 25, 28
Adjustable Pedals Module	8W-30-23	G200	8W-30-22
Adjustable Pedals Motor	8W-30-23	G300	8W-30-4, 7, 23, 27, 36
Adjustable Pedals Relay	8W-30-22	G302	8W-30-5, 25, 35
Adjustable Pedals Sensor	8W-30-23	Generator	8W-30-4, 25
Adjustable Pedals Switch	8W-30-22	Glow Plug No. 1	8W-30-32
Ambient Temperature Sensor	8W-30-8	Glow Plug No. 2	8W-30-32
Auto Shut Down Relay	8W-30-4, 12, 15, 17, 20	Glow Plug No. 3	8W-30-32
Battery	8W-30-2, 6, 10, 16, 21, 24, 32	Glow Plug No. 4	8W-30-32
Battery Temperature Sensor	8W-30-8, 31	Glow Plug Relay	8W-30-32
Body Control Module	8W-30-5, 25	Idle Air Control Motor	8W-30-9
Boost Pressure Sensor	8W-30-31	Ignition Coil	8W-30-12, 17
Brake Lamp Switch	8W-30-7, 27, 37	Ignition Switch	8W-30-10
Cabin Heater Assist	8W-30-28	Inlet Air Temperature Sensor	8W-30-13, 18
Camshaft Position Sensor	8W-30-8, 30	Input Speed Sensor	8W-30-21
Clockspring	8W-30-5, 29, 36	Integrated Power Module	8W-30-2, 3, 4, 5, 10, 12, 15, 17, 20, 21, 22, 24, 25, 26, 28, 30, 32, 34, 35, 36, 37
Clutch Pedal Interlock Switch	8W-30-4	Knock Sensor	8W-30-9
Clutch Pedal Upstop Switch	8W-30-36	Left Speed Control Switch	8W-30-5, 29
Crank Case Ventilation Heater	8W-30-25	Lift Pump Motor	8W-30-35
Crankshaft Position Sensor	8W-30-13, 18, 30	Lift Pump Relay	8W-30-35
Data Link Connector	8W-30-3, 28	Manifold Absolute Pressure Sensor	8W-30-14, 19
Dosing Pump	8W-30-28	Mass Air Flow Sensor	8W-30-26
ECM/PCM Relay	8W-30-24, 26, 30, 32, 34	Memory Seat/Mirror Module	8W-30-22
EGR Solenoid	8W-30-16, 34	Natural Vacuum Leak Detection Assembly	8W-30-10
Engine Control Module	8W-30-24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38	Output Speed Sensor	8W-30-21
Engine Coolant Temp Sensor	8W-30-14, 19, 31	Oxygen Sensor 1/1 Upstream	8W-30-6
Engine Oil Pressure Sensor	8W-30-27	Oxygen Sensor 1/2 Downstream	8W-30-6
Engine Oil Pressure Switch	8W-30-7	Powertrain Control Module	8W-30-2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21
EVAP/Purge Solenoid	8W-30-4	Radiator Fan Relay	8W-30-12, 17
Front Control Module	8W-30-2, 5, 22, 28, 36	Radiator Fan Relay No. 1	8W-30-37
Fuel Heater	8W-30-35	Radiator Fan Relay No. 2	8W-30-37
Fuel Heater Relay	8W-30-25, 35	Radiator Fan Relay No. 3	8W-30-37
Fuel Injector No. 1	8W-30-15, 20, 33	Right Speed Control Switch	8W-30-5, 29
Fuel Injector No. 2	8W-30-15, 20, 33	Speed Control Servo	8W-30-7
Fuel Injector No. 3	8W-30-15, 20, 33	Starter Motor Relay	8W-30-5, 25
Fuel Injector No. 4	8W-30-15, 20, 33	Throttle Position Sensor	8W-30-13, 18
Fuel Injector No. 5	8W-30-20	Transmission Control Relay	8W-30-21
Fuel Injector No. 6	8W-30-20	Transmission Range Sensor	8W-30-11
Fuel Pressure Sensor	8W-30-37	Transmission Solenoid/Pressure Switch Assembly	8W-30-11, 21
Fuel Pressure Solenoid	8W-30-26	Vehicle Speed Sensor	8W-30-9, 34
Fuel Pump Module	8W-30-5, 25	Water In Fuel Sensor	8W-30-36
Fuel Pump Relay	8W-30-5		
Fuse 14	8W-30-22		
Fuse 15	8W-30-21, 28, 35		
Fuse 16	8W-30-4, 12, 15, 17, 20, 24, 26, 30, 32, 34		
Fuse 17	8W-30-2, 5, 25, 35		
Fuse 18	8W-30-22, 24		
Fuse 26	8W-30-37		

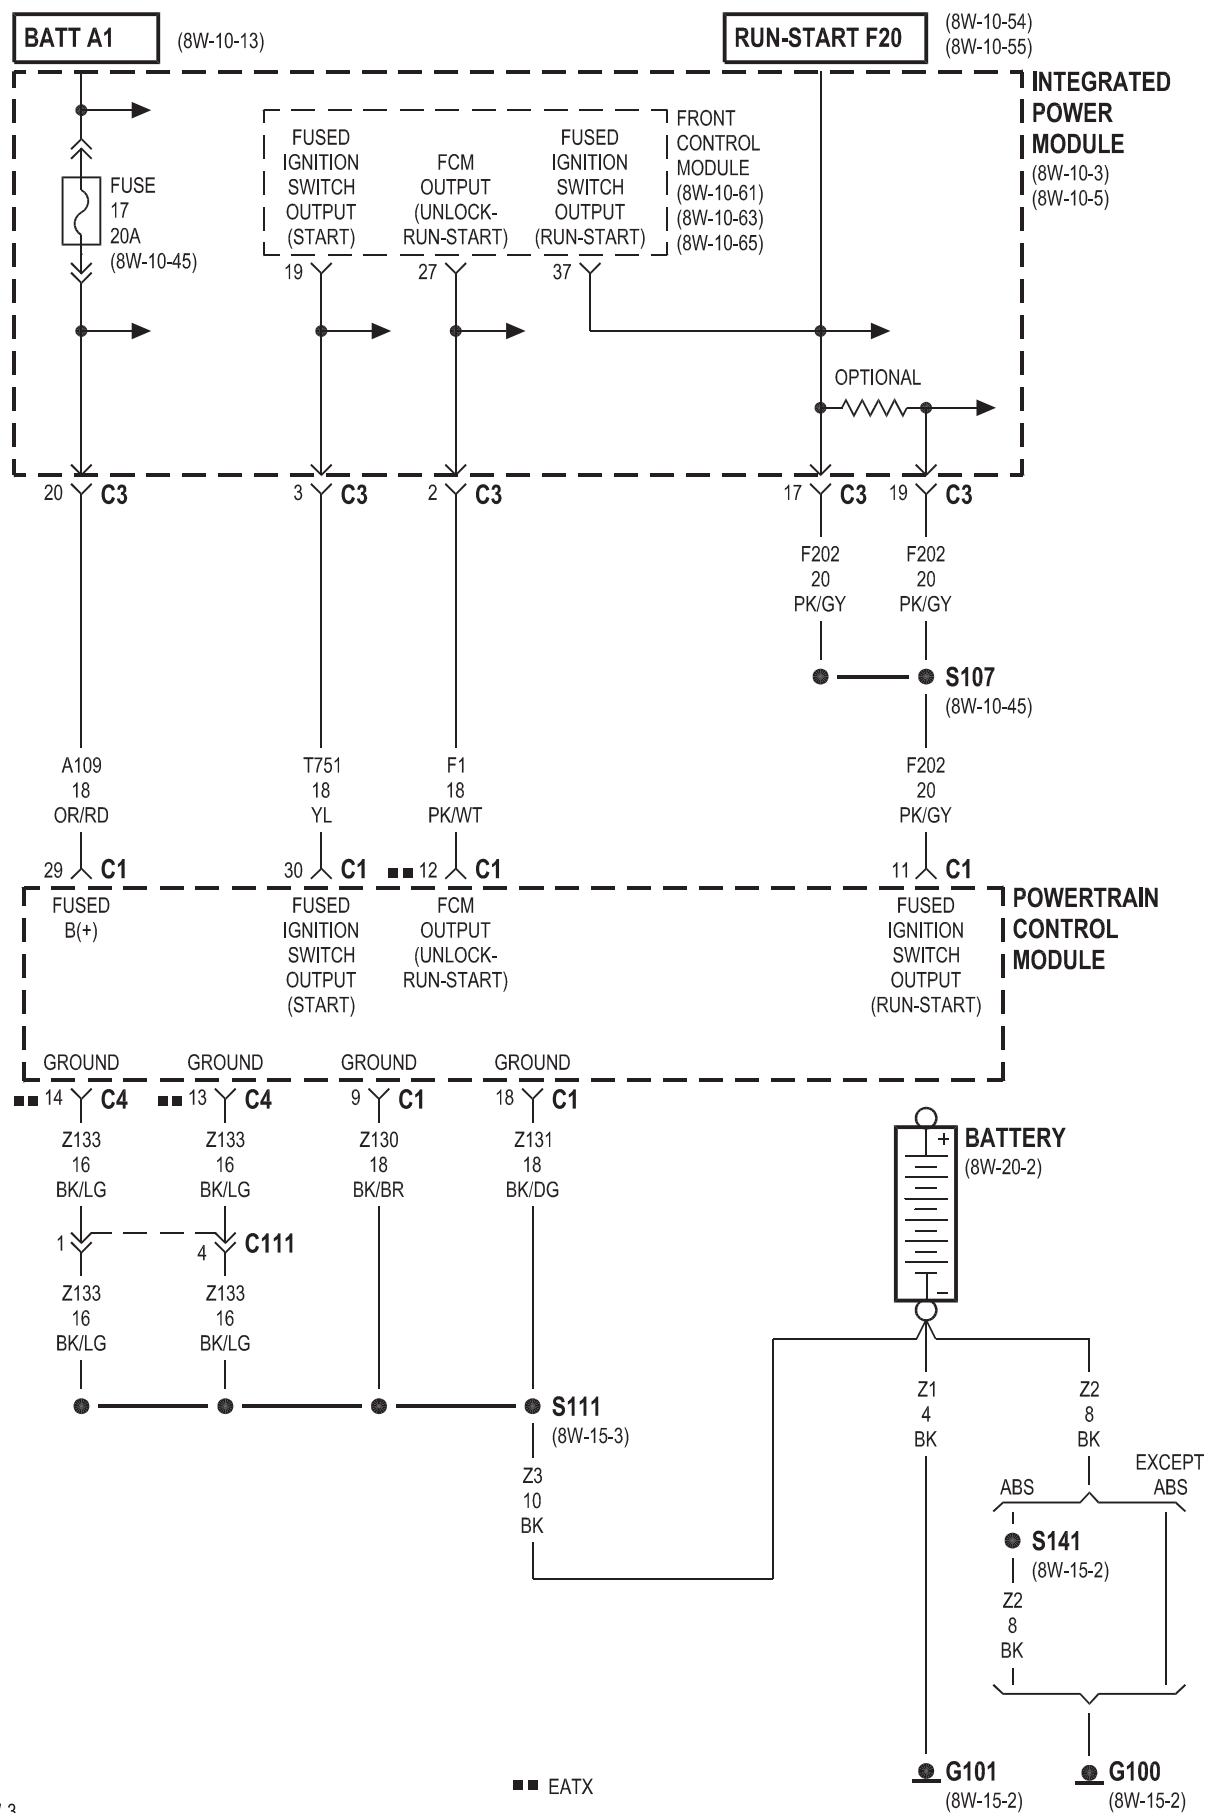


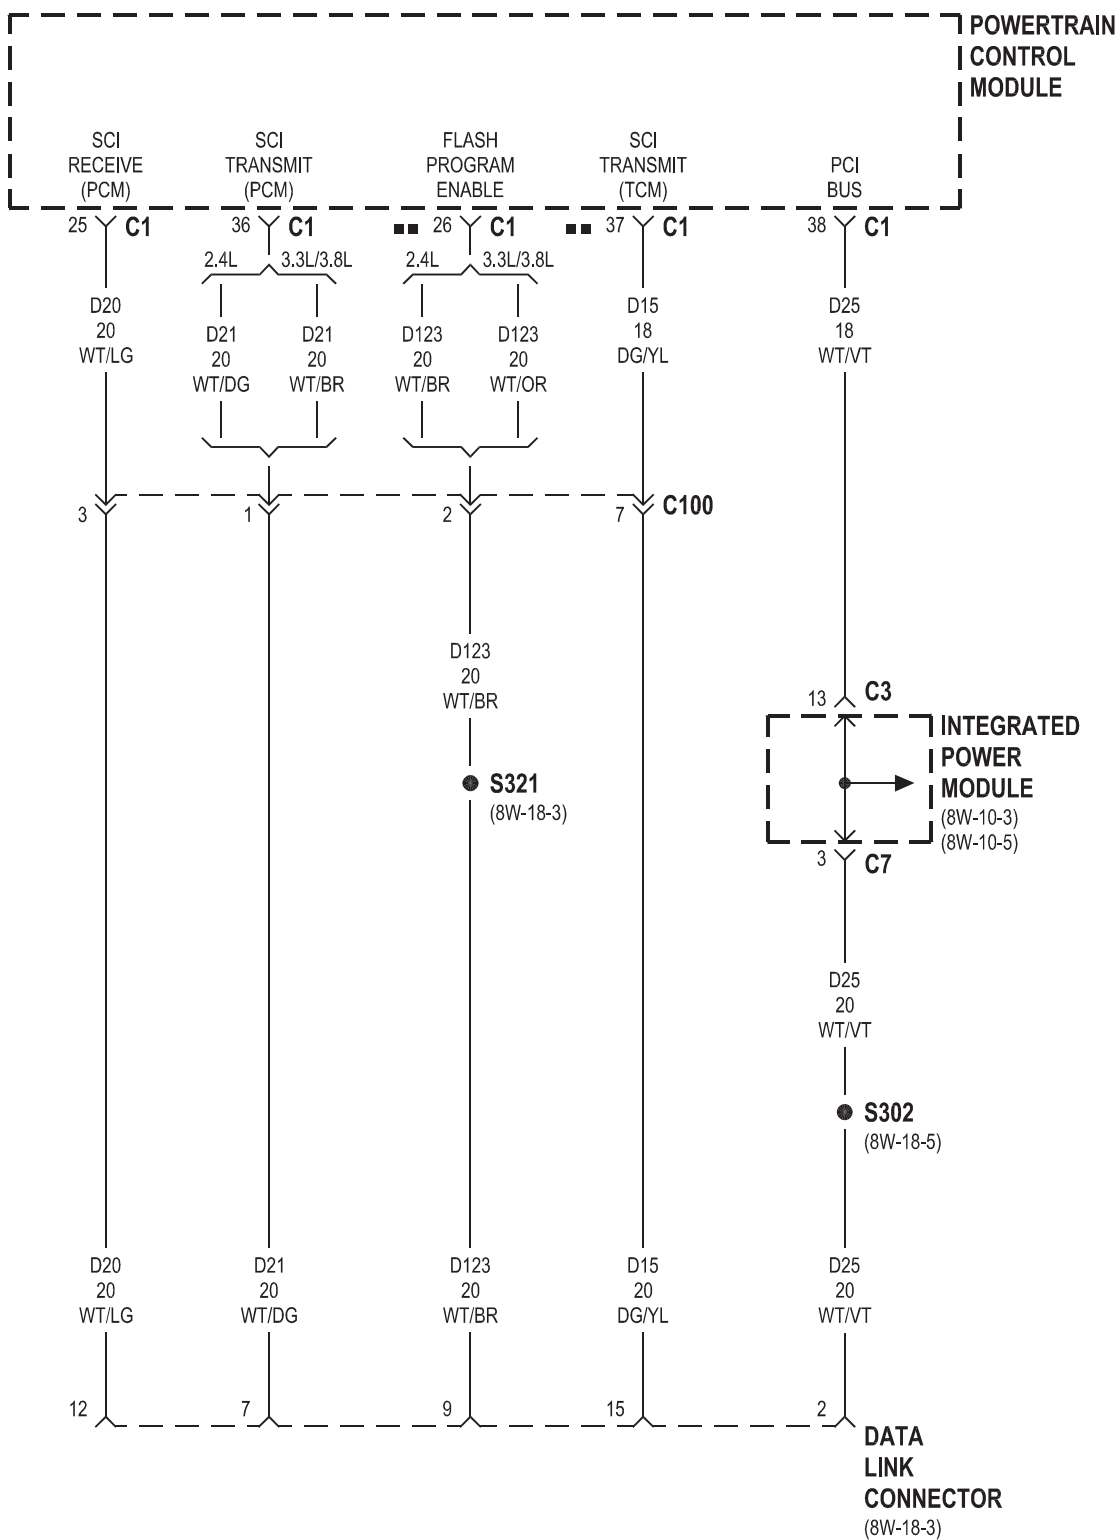


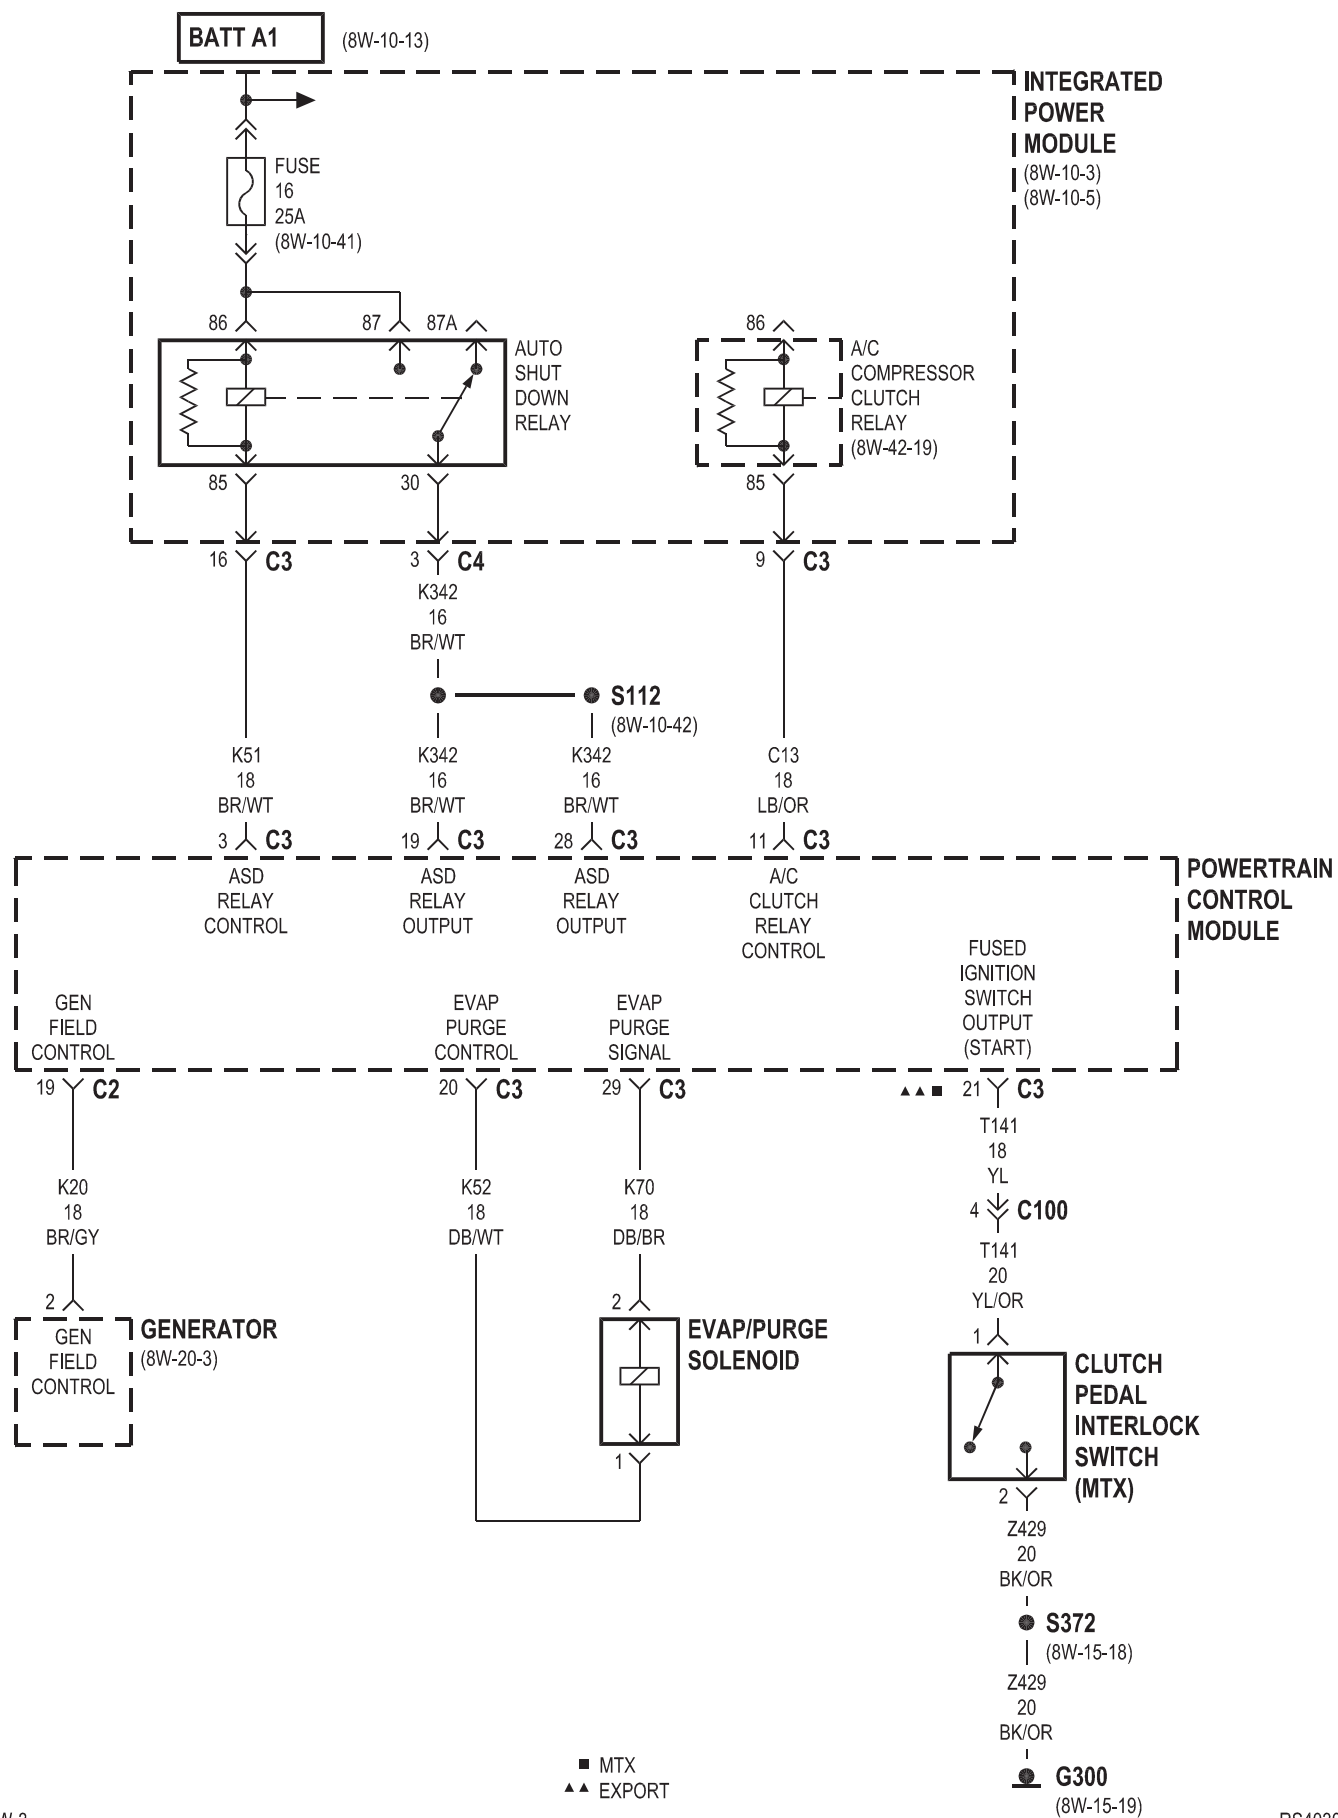



GAS

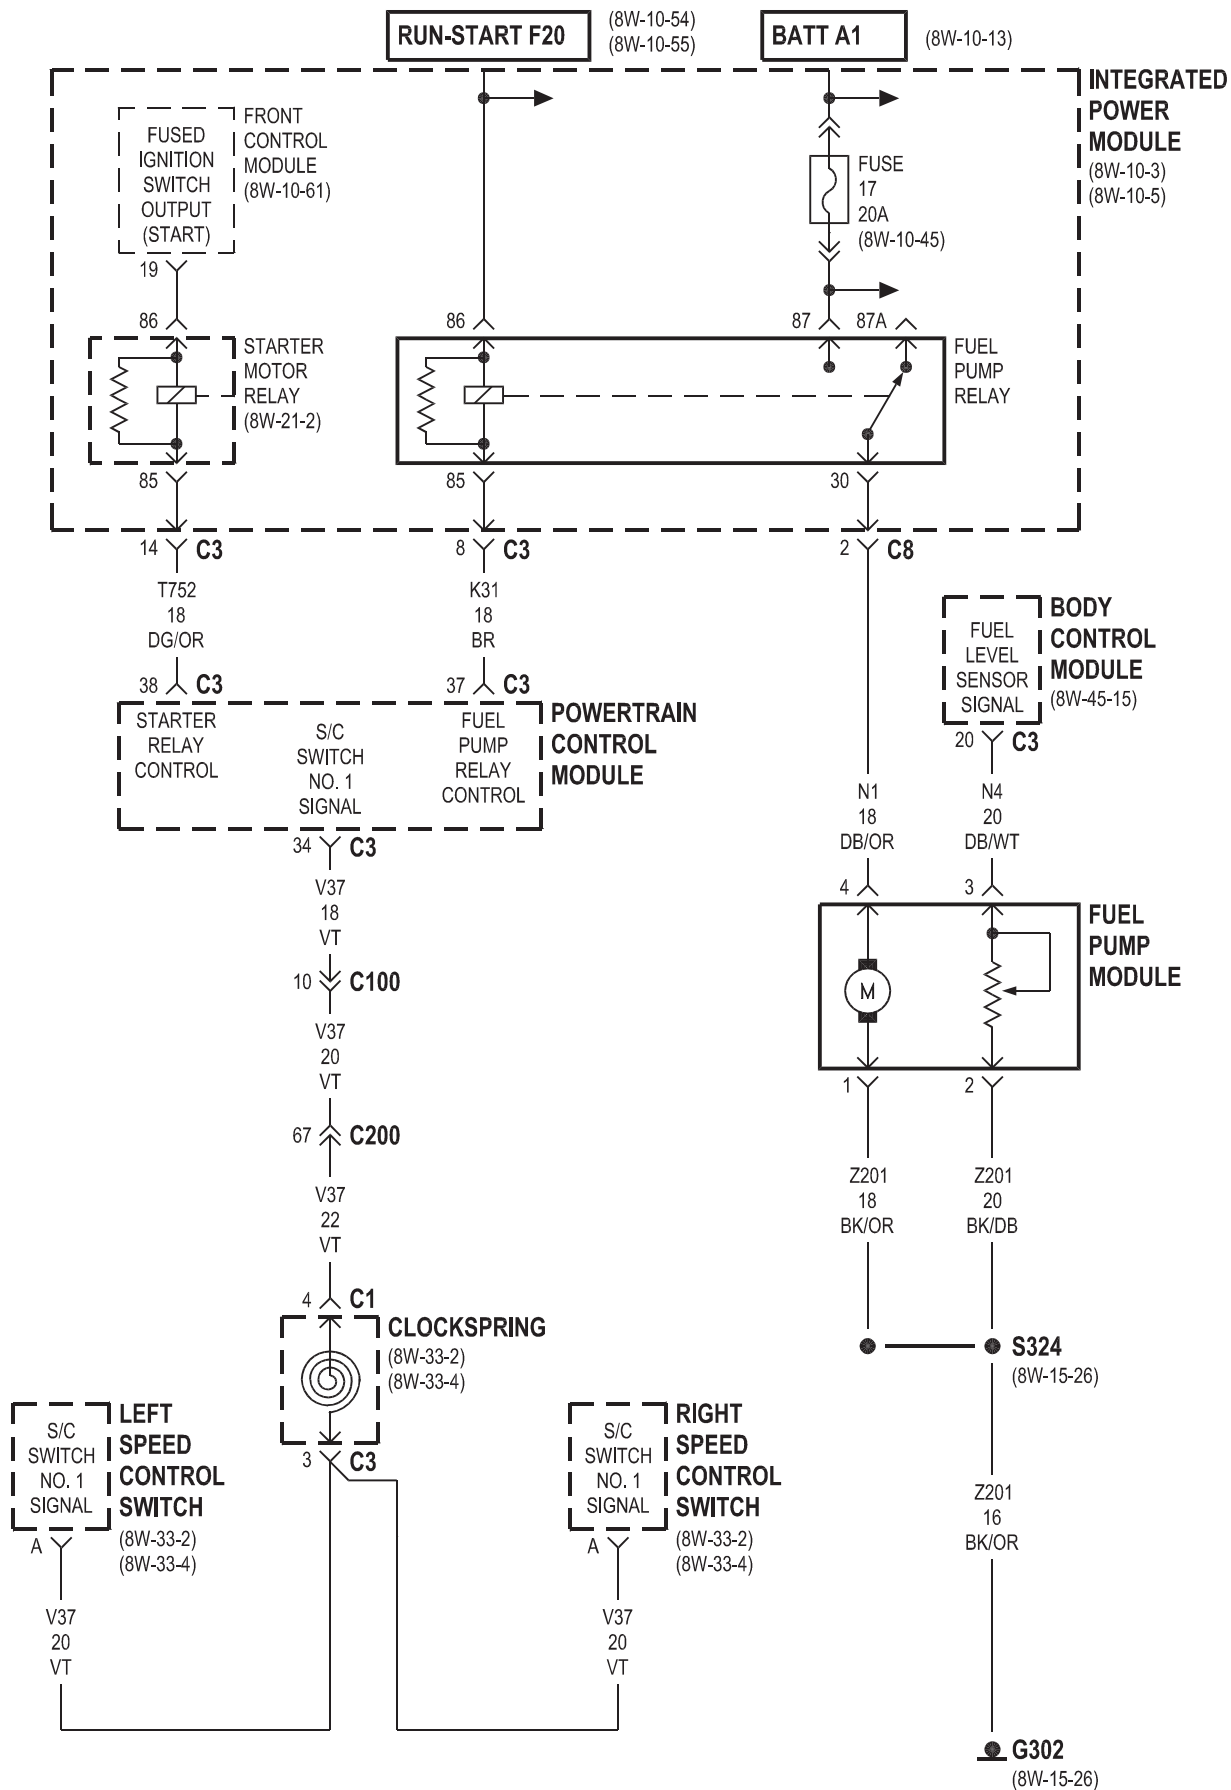


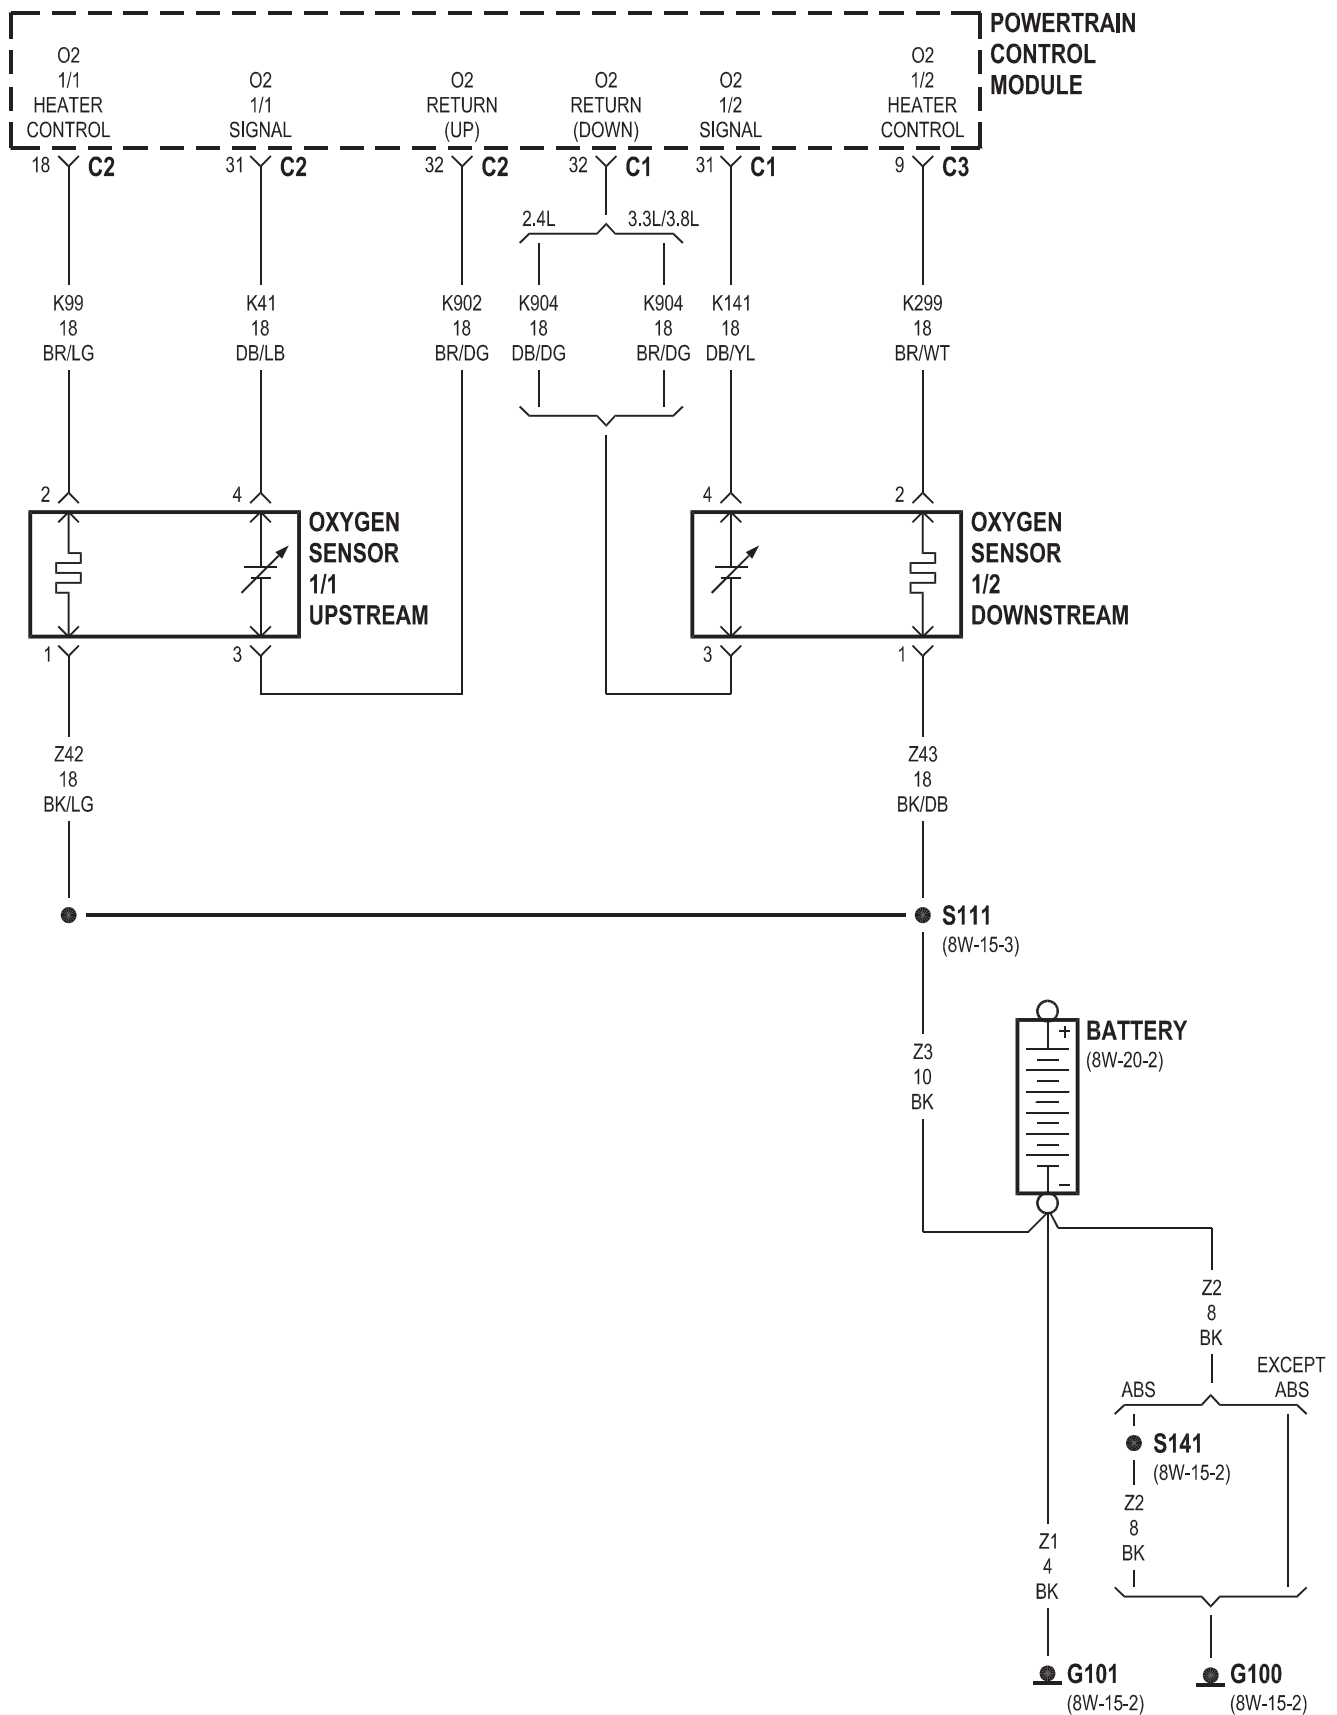


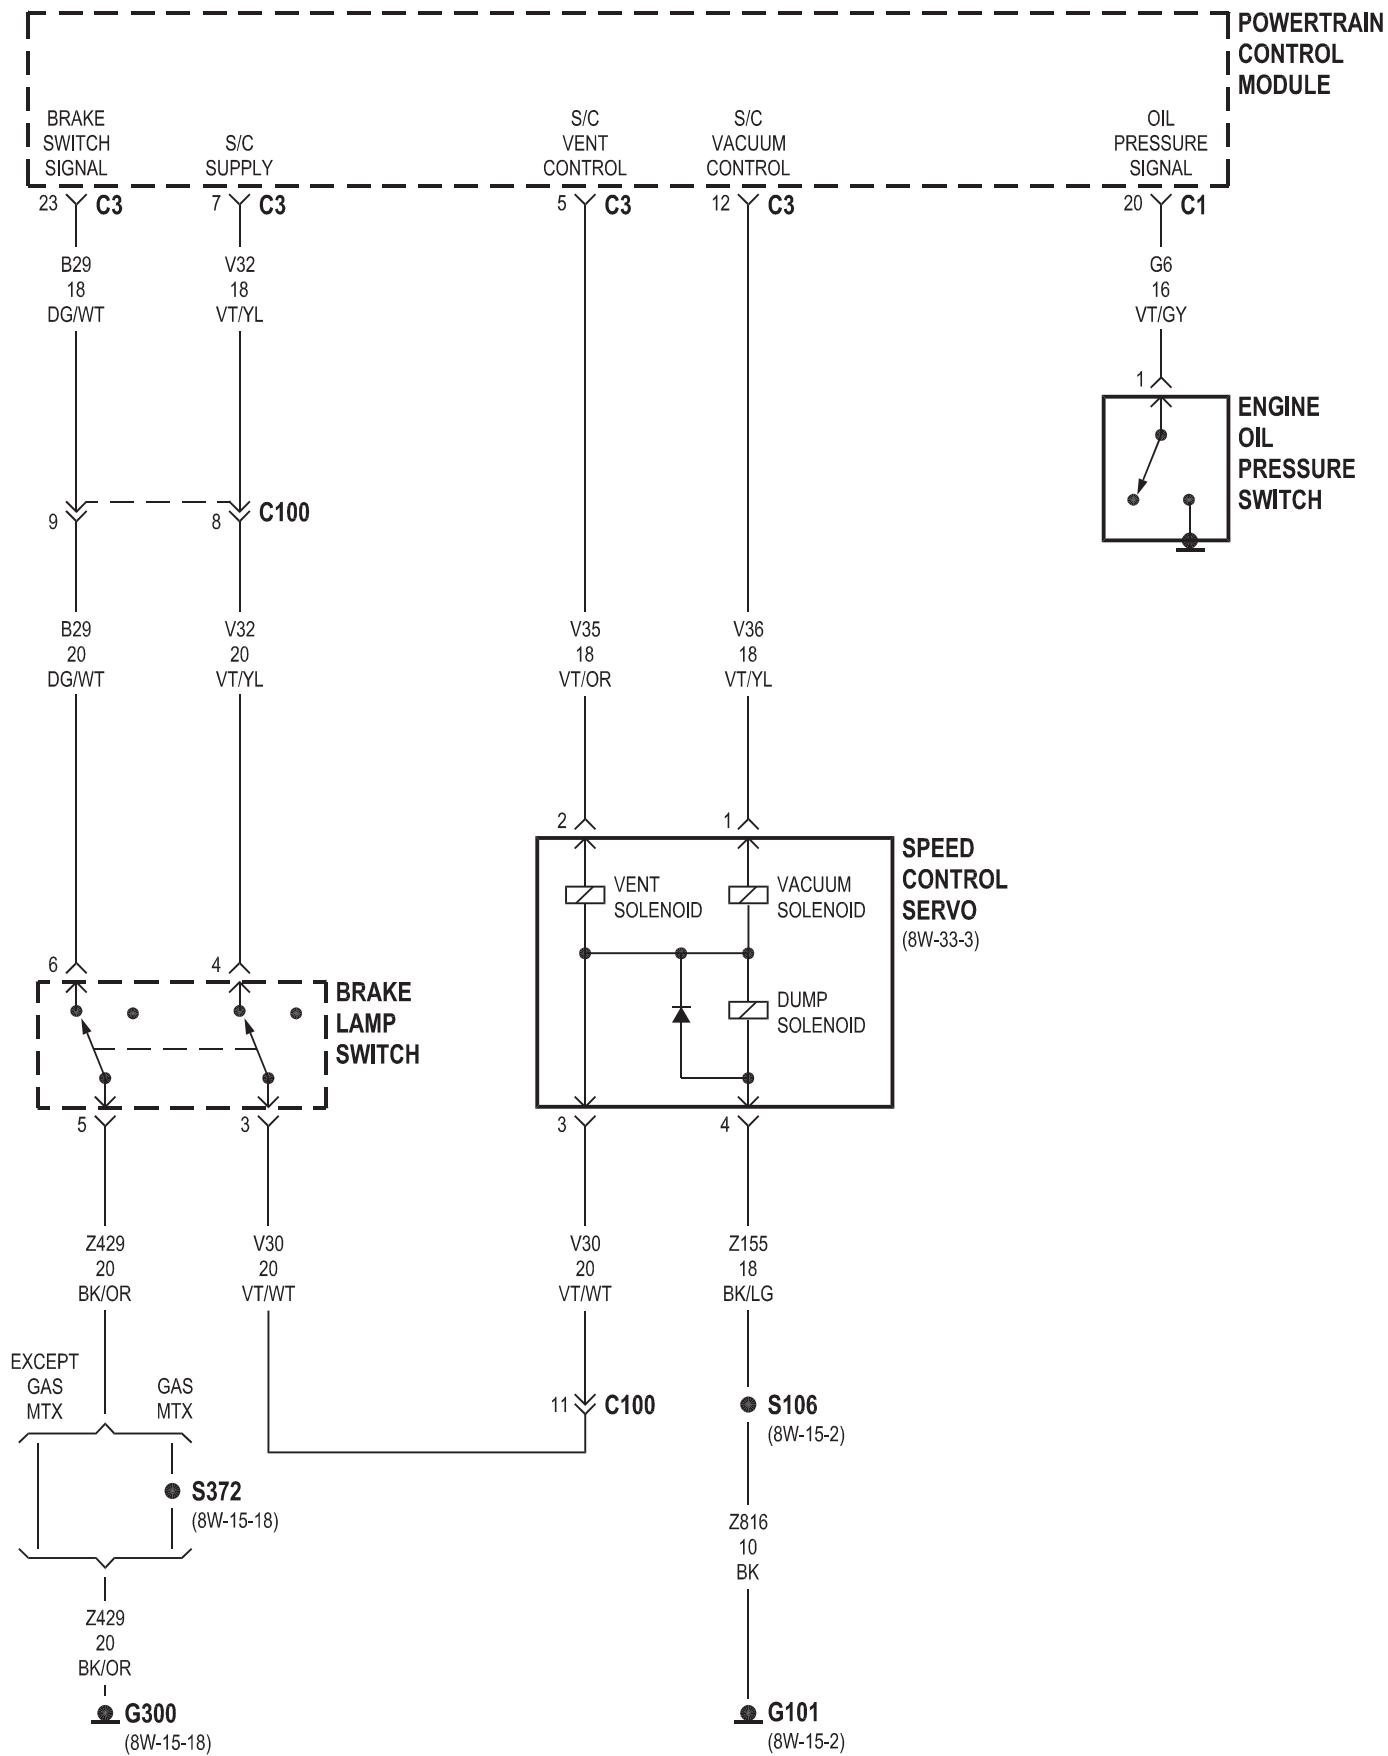

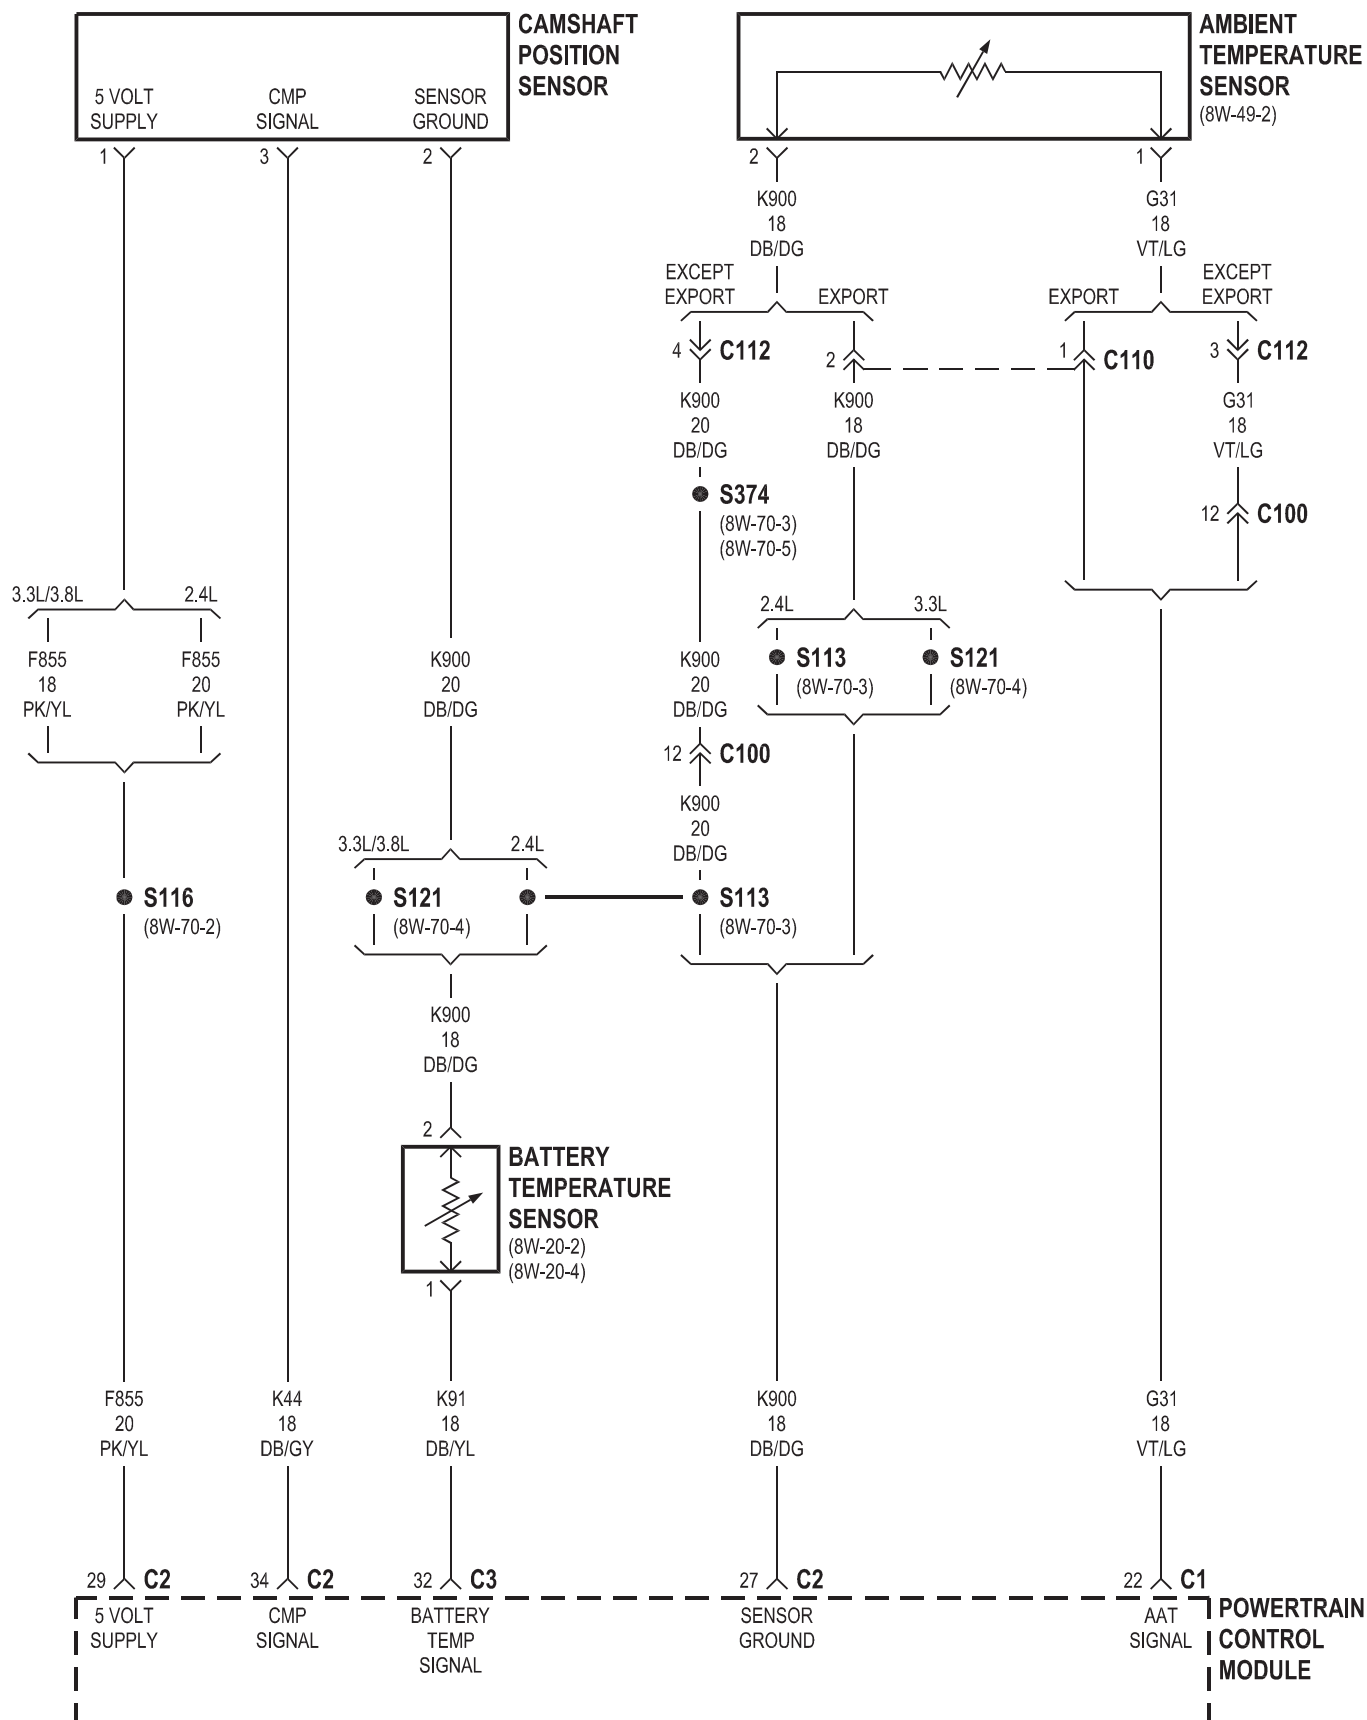


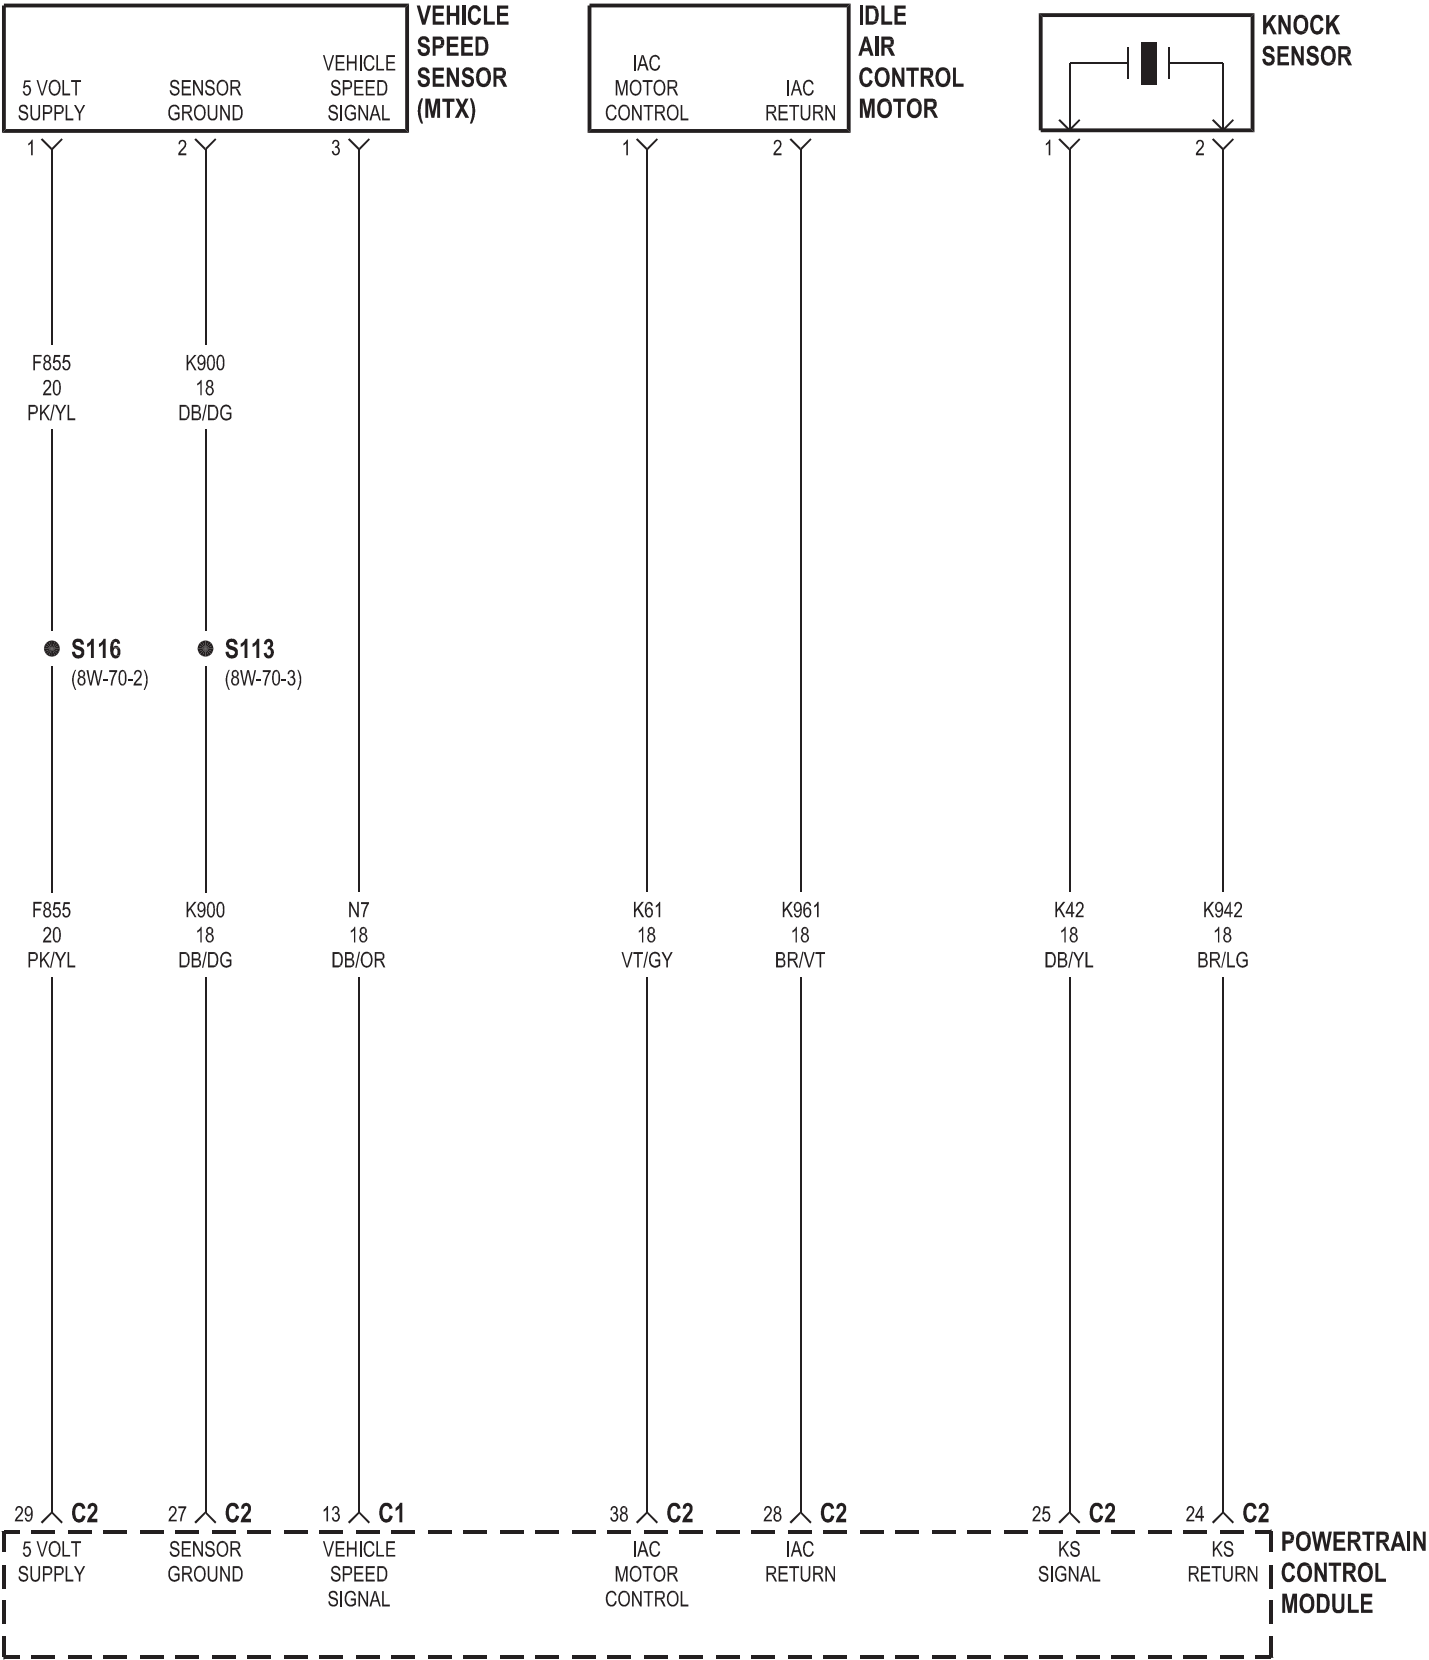


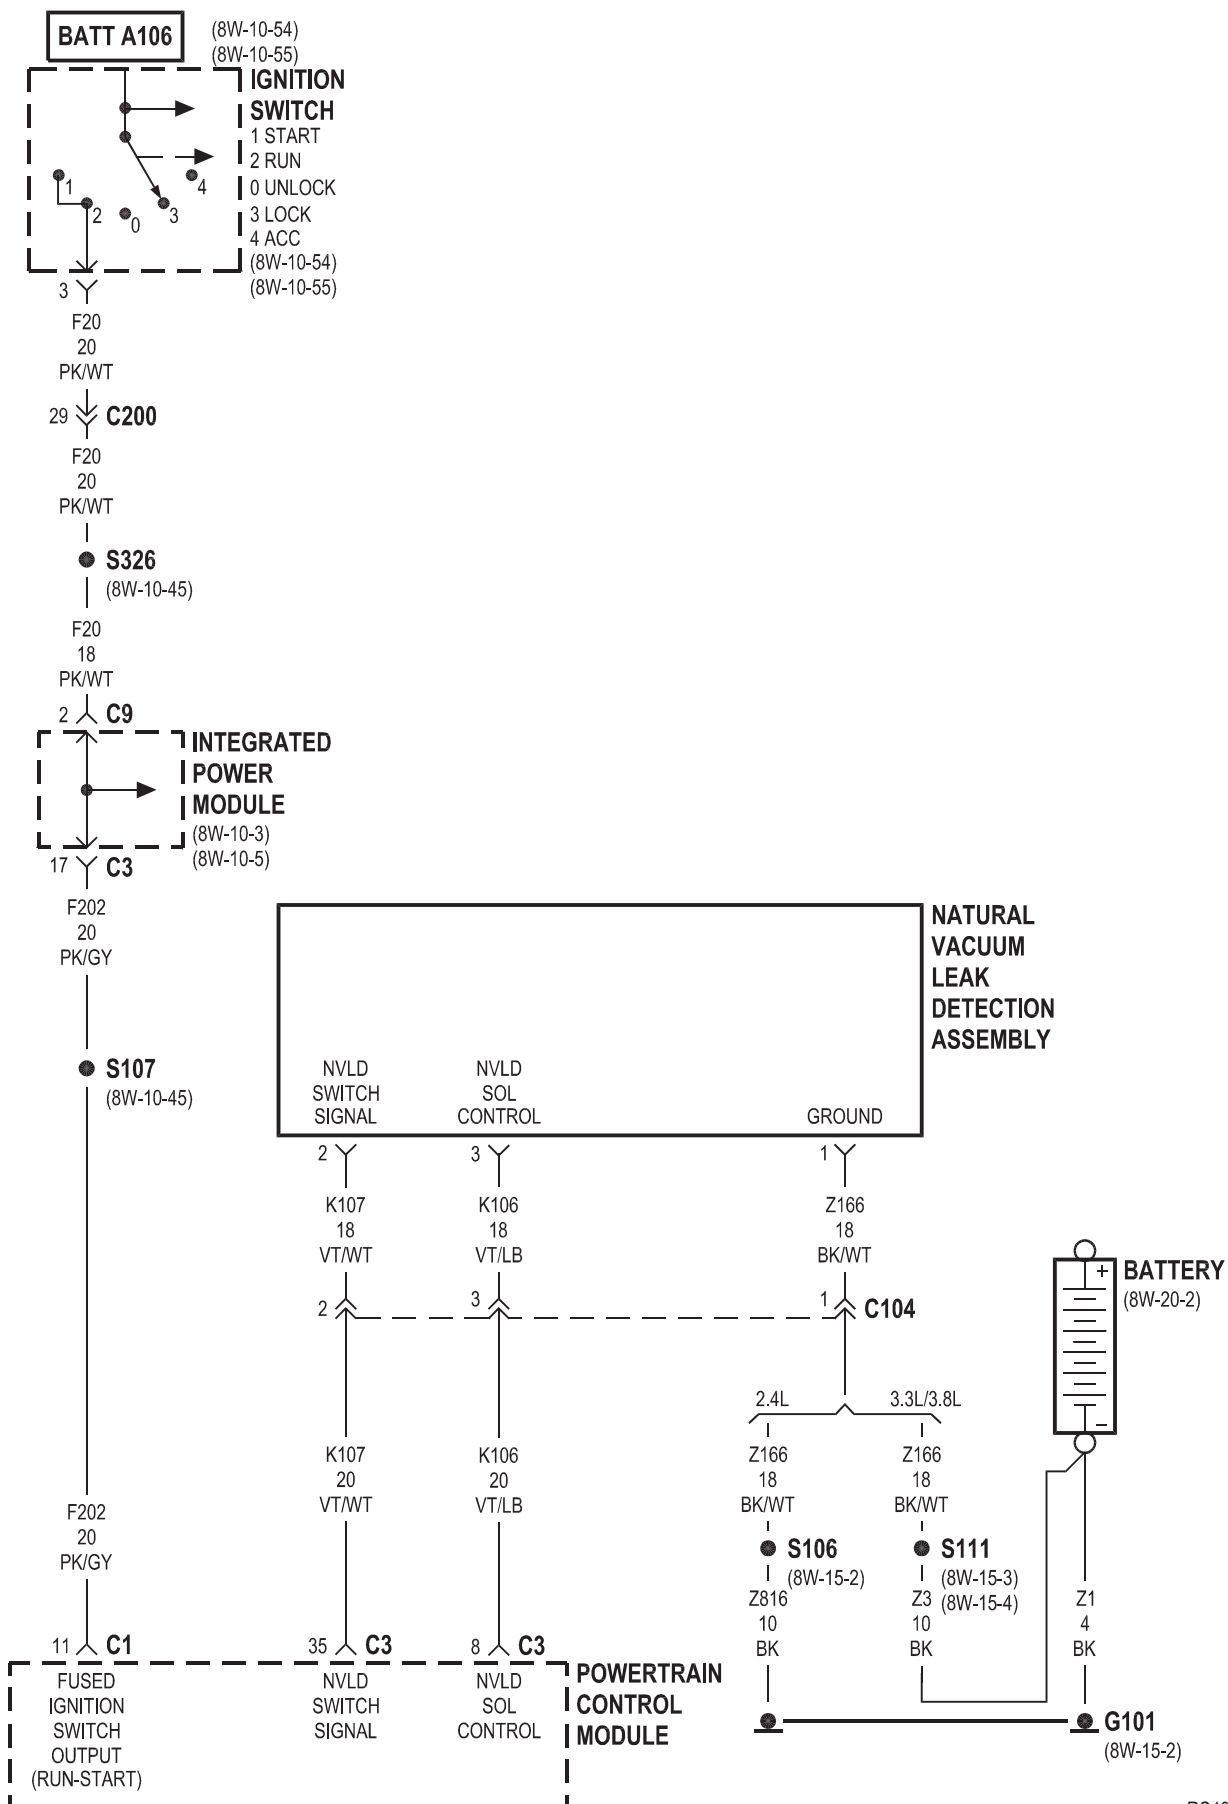


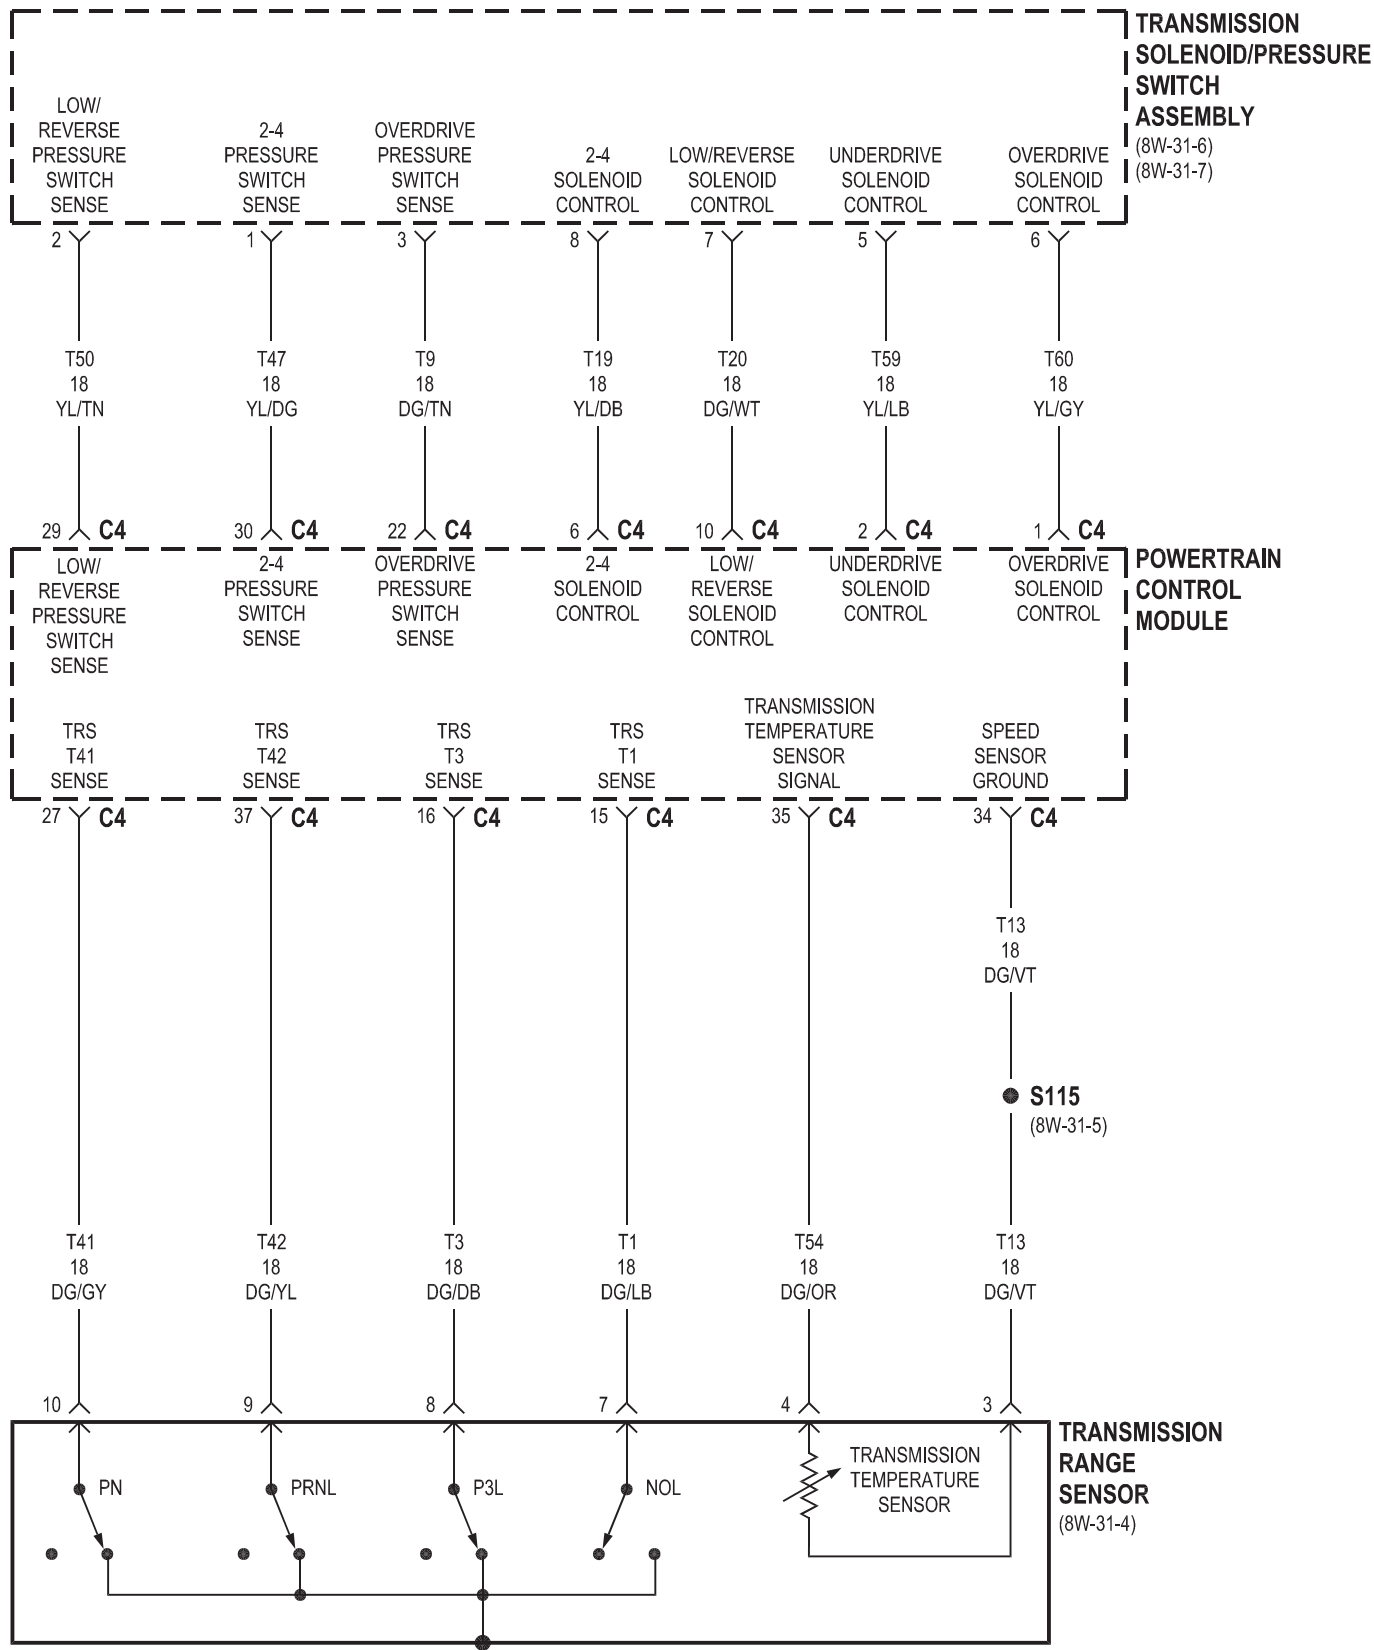


2.4L

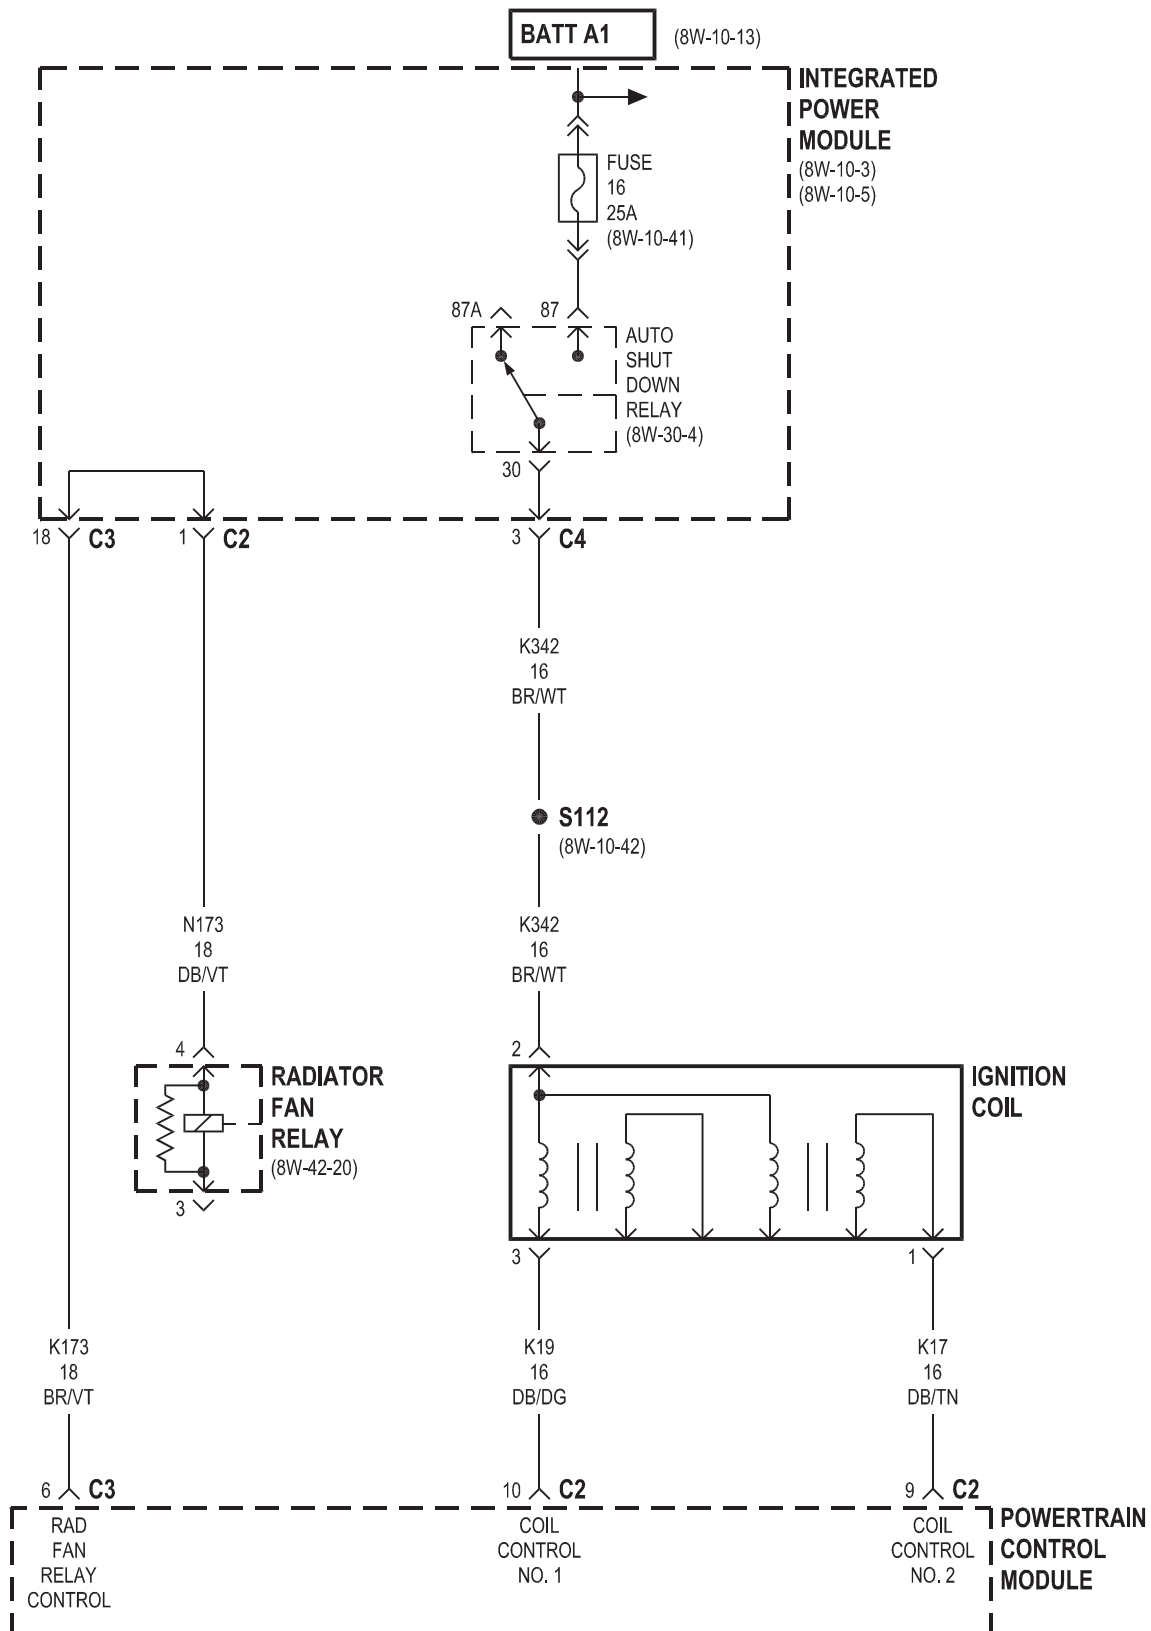


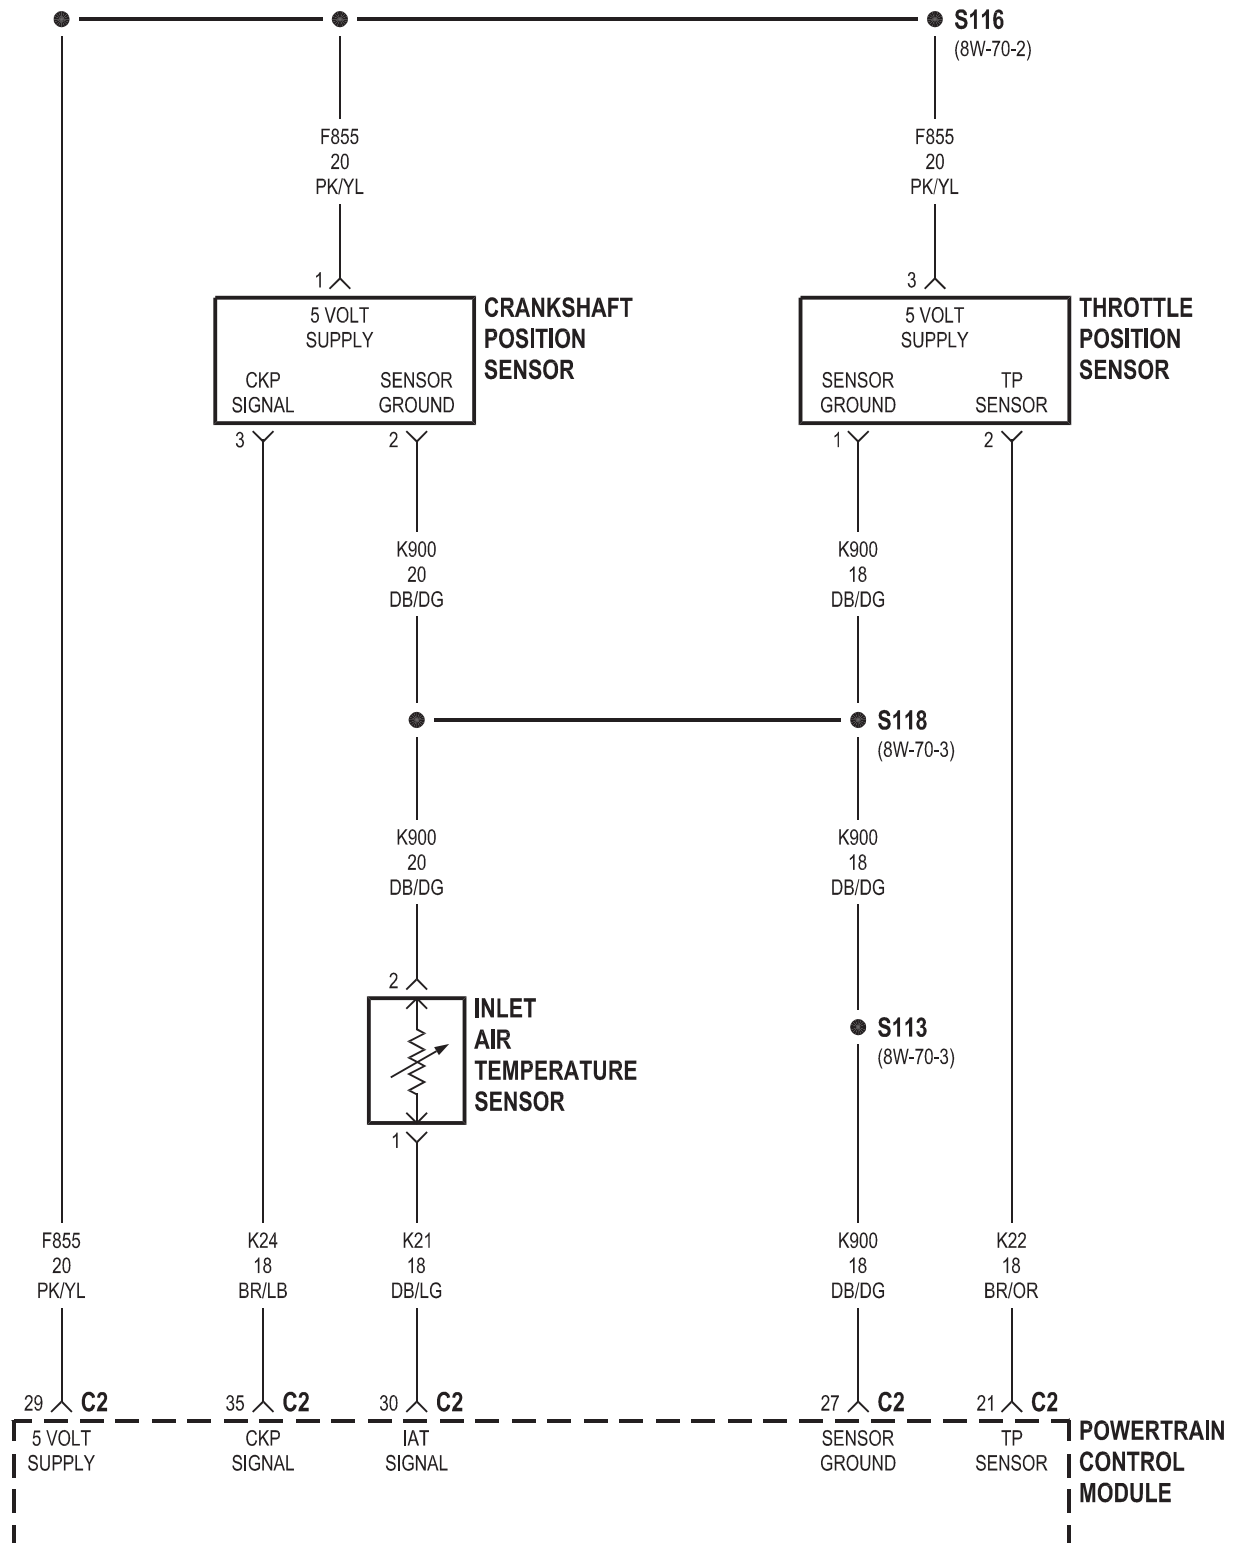


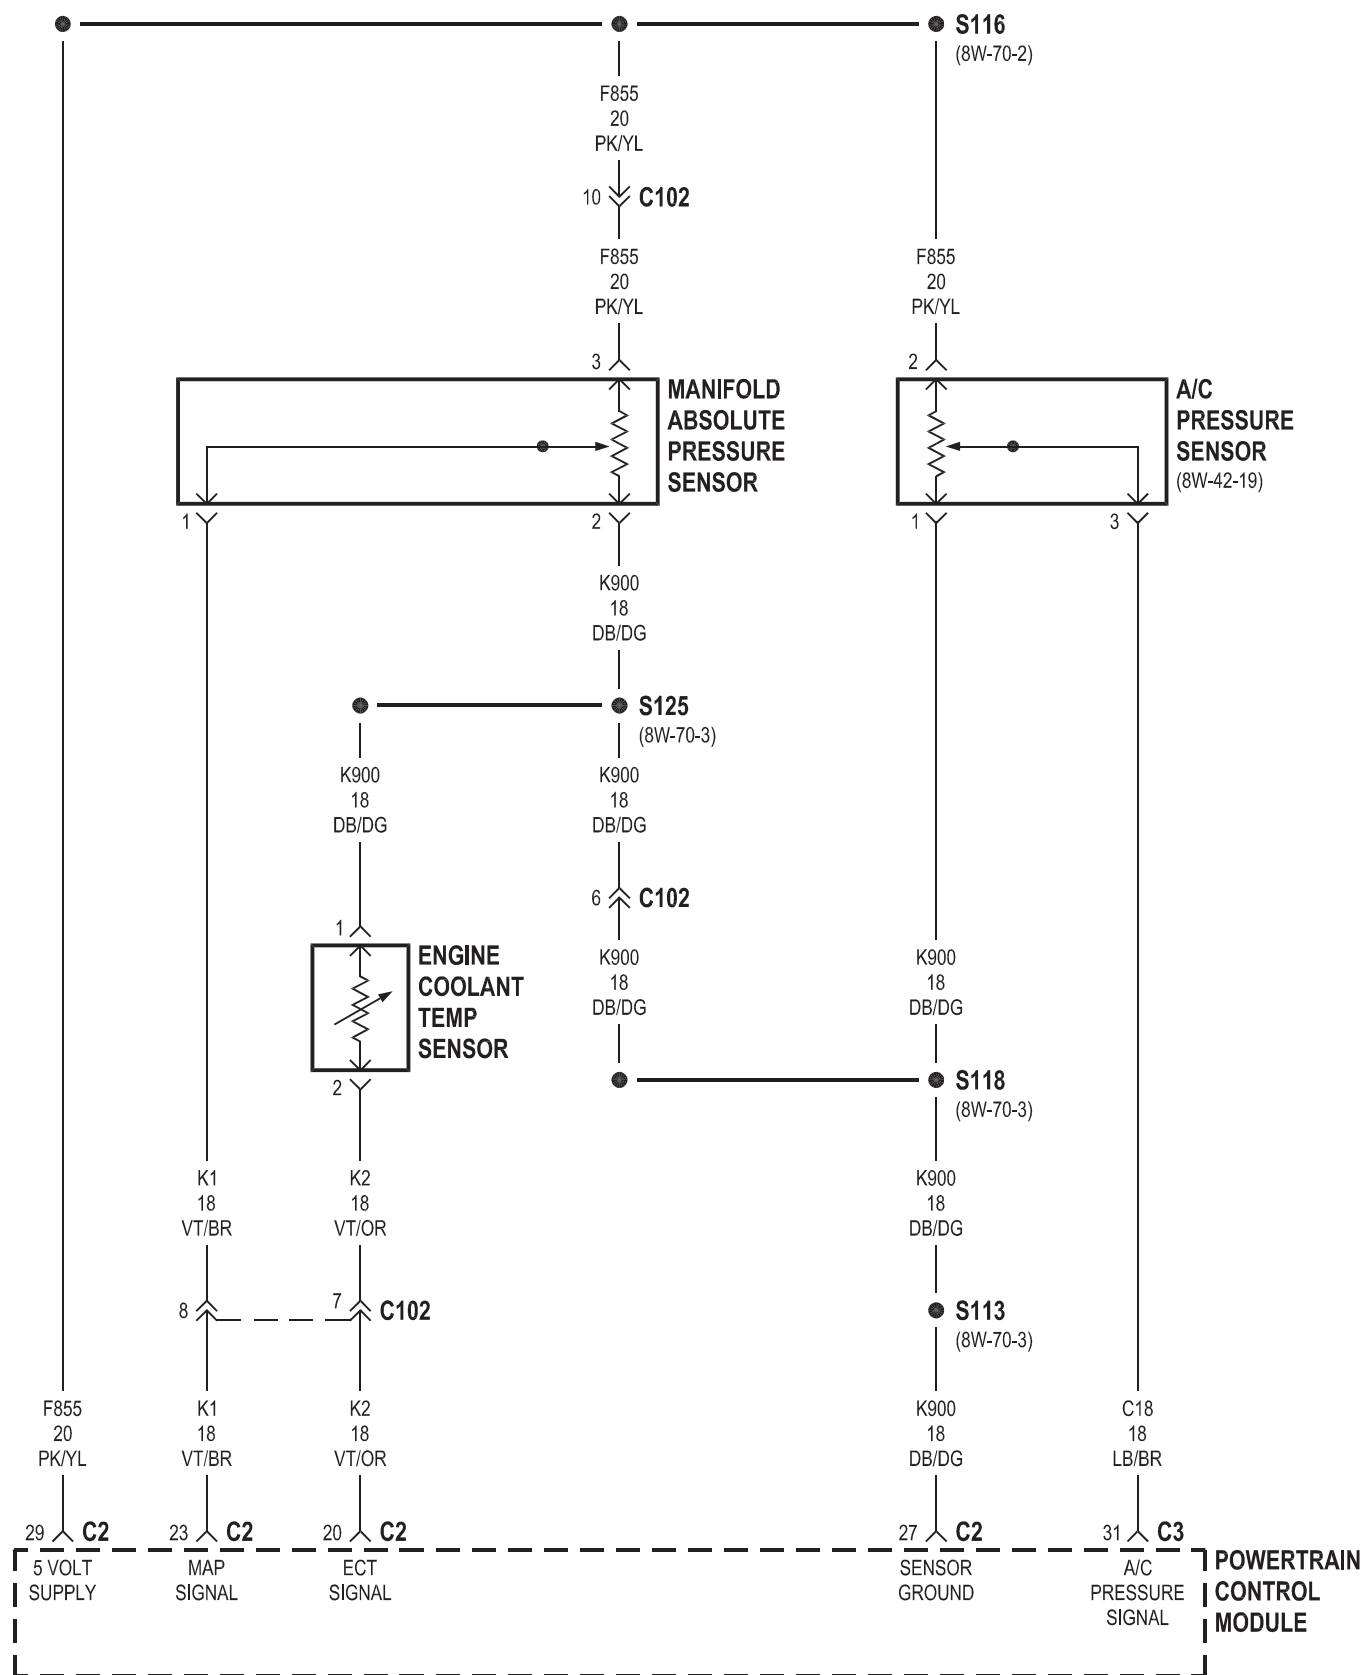


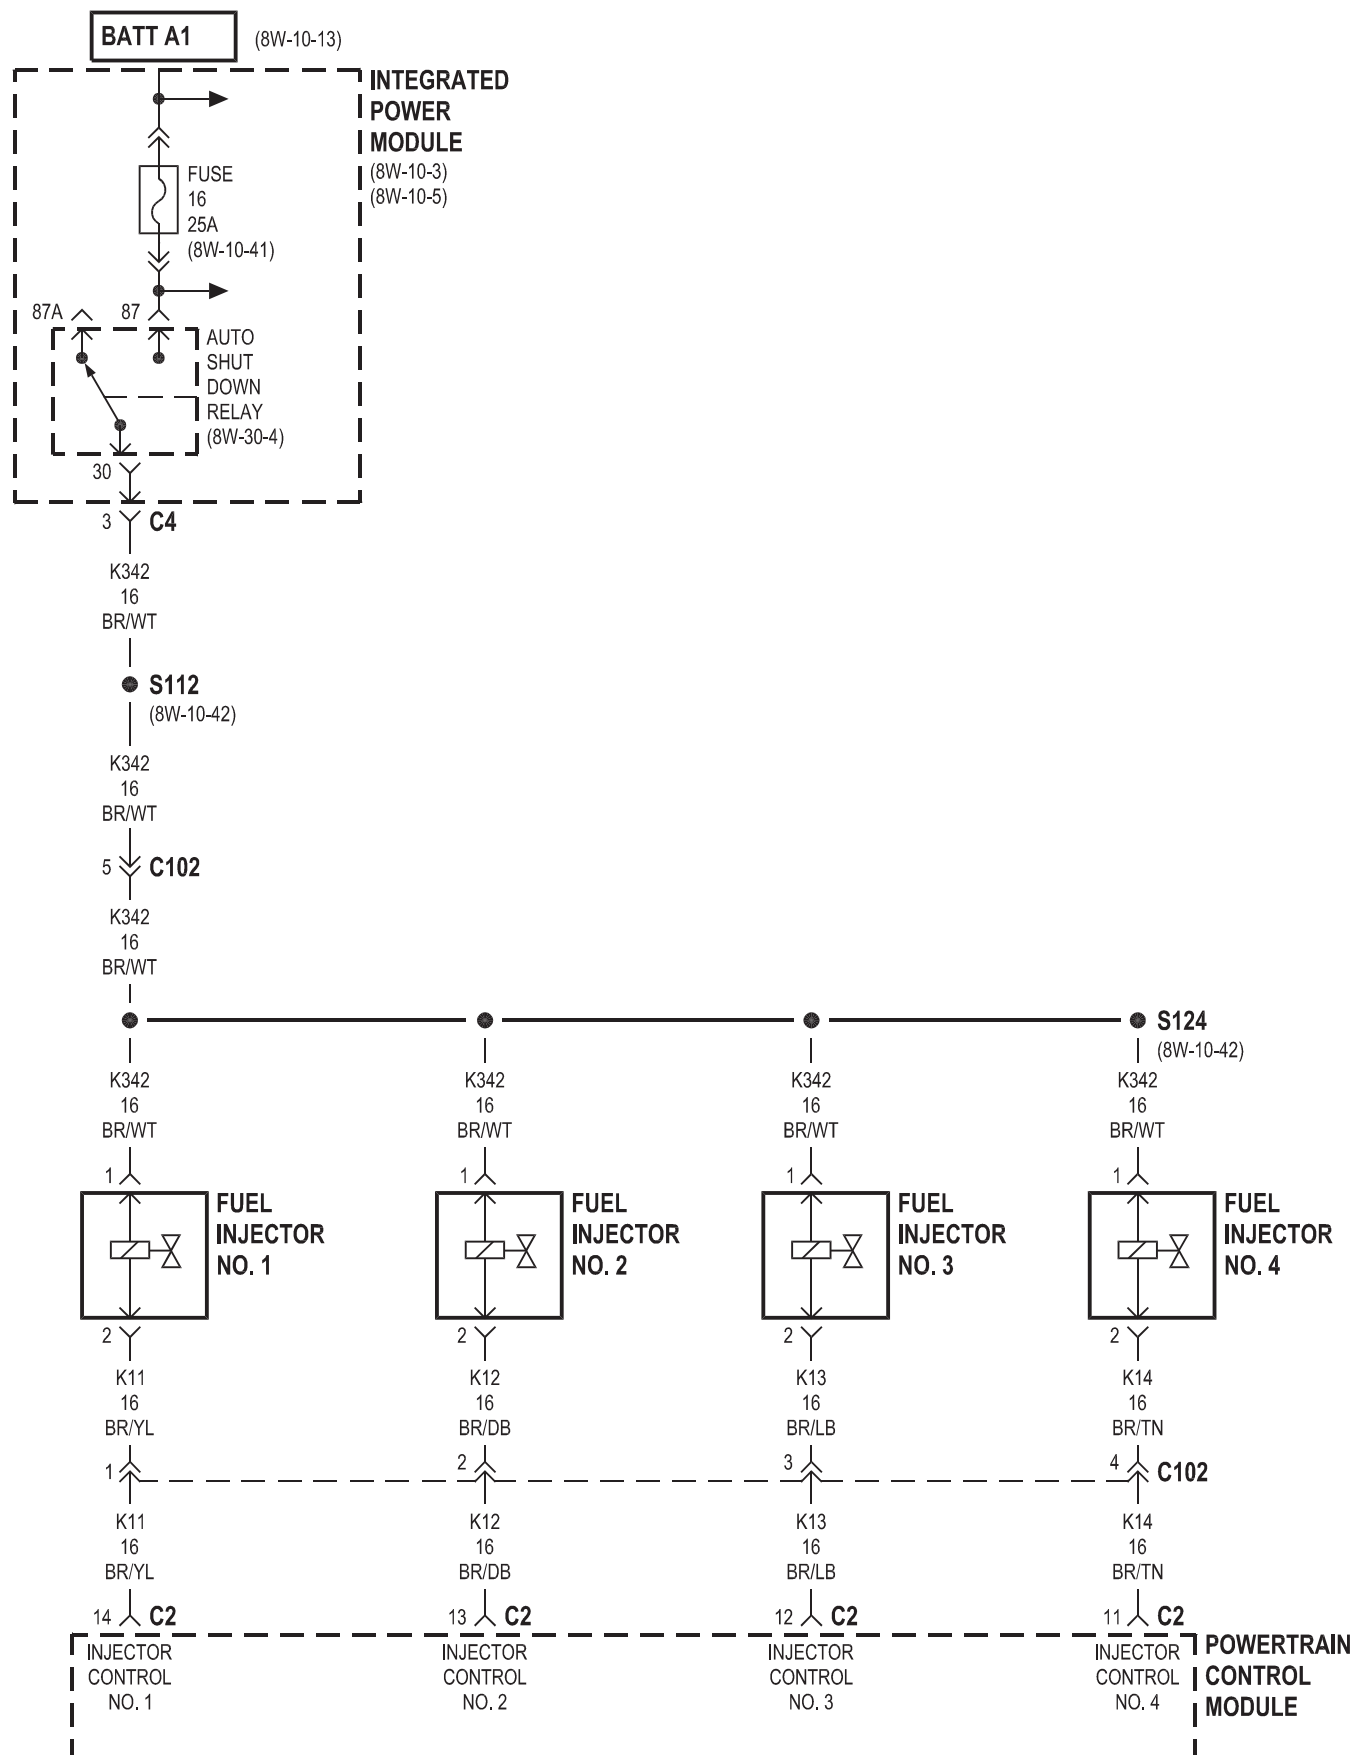



3.3L

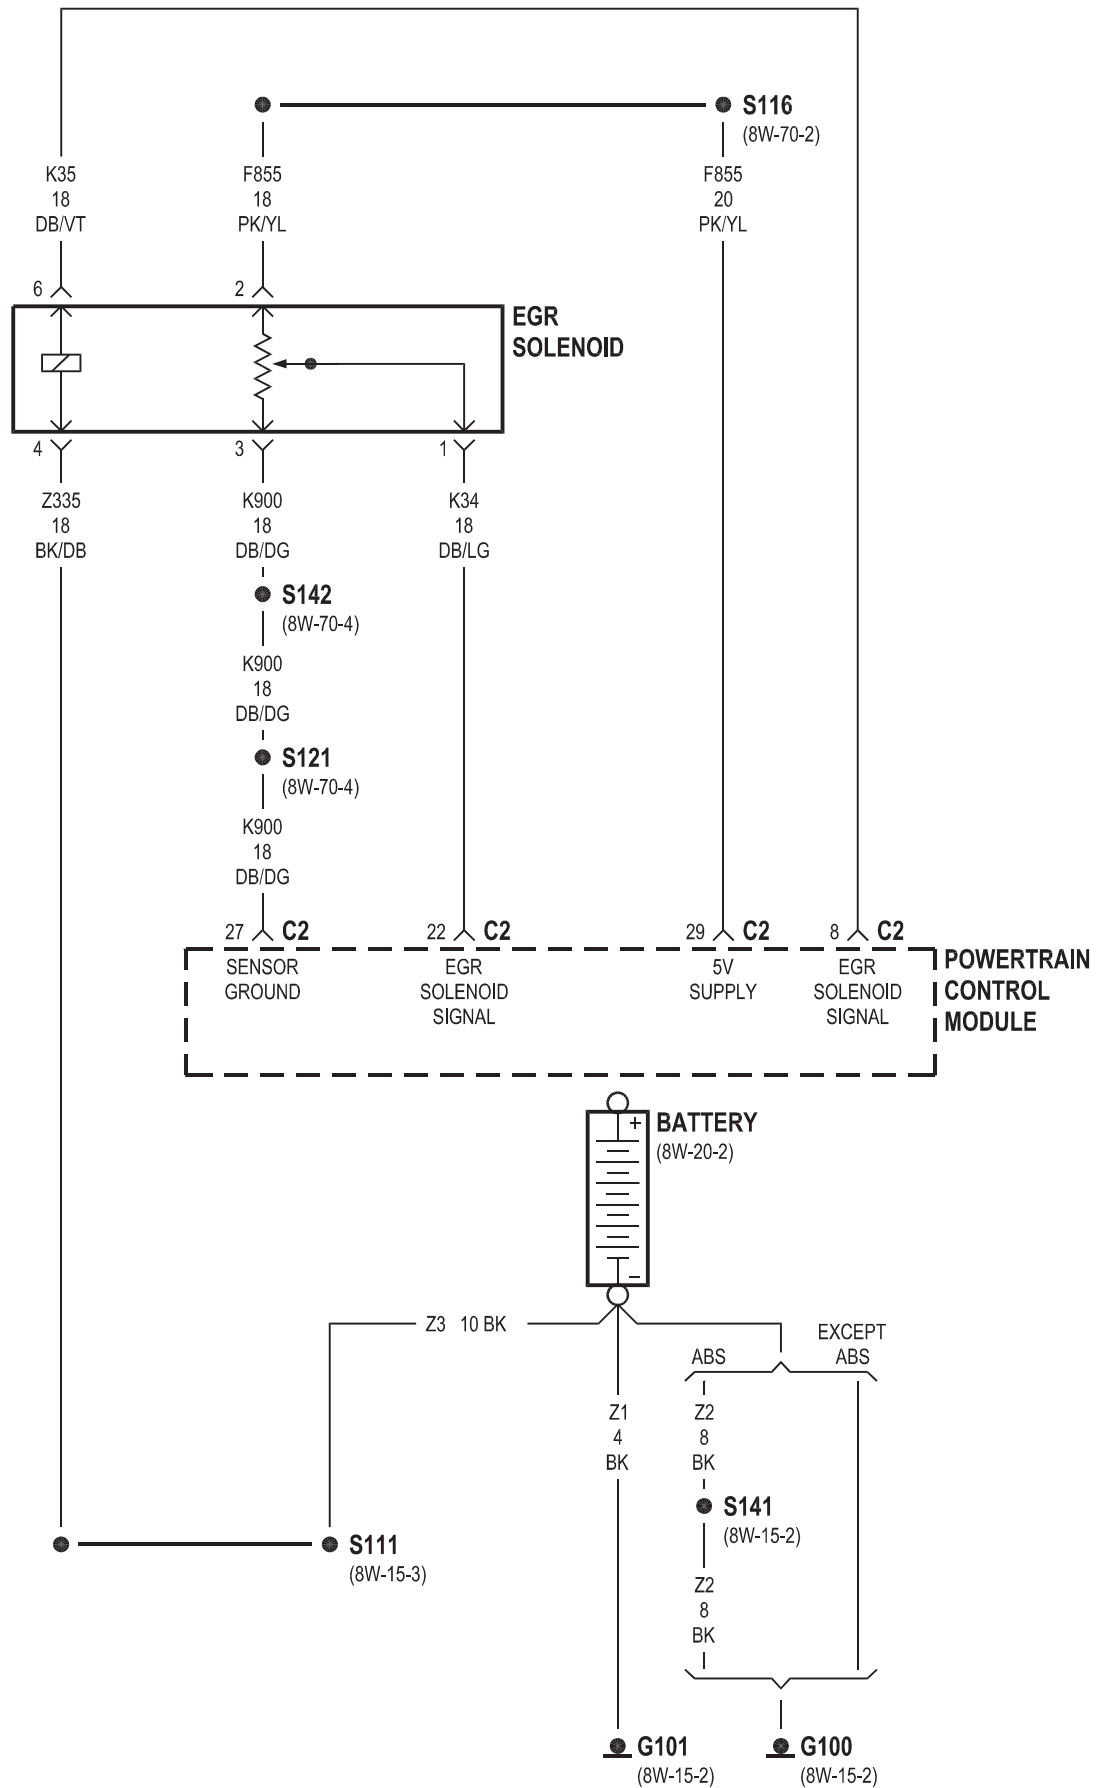


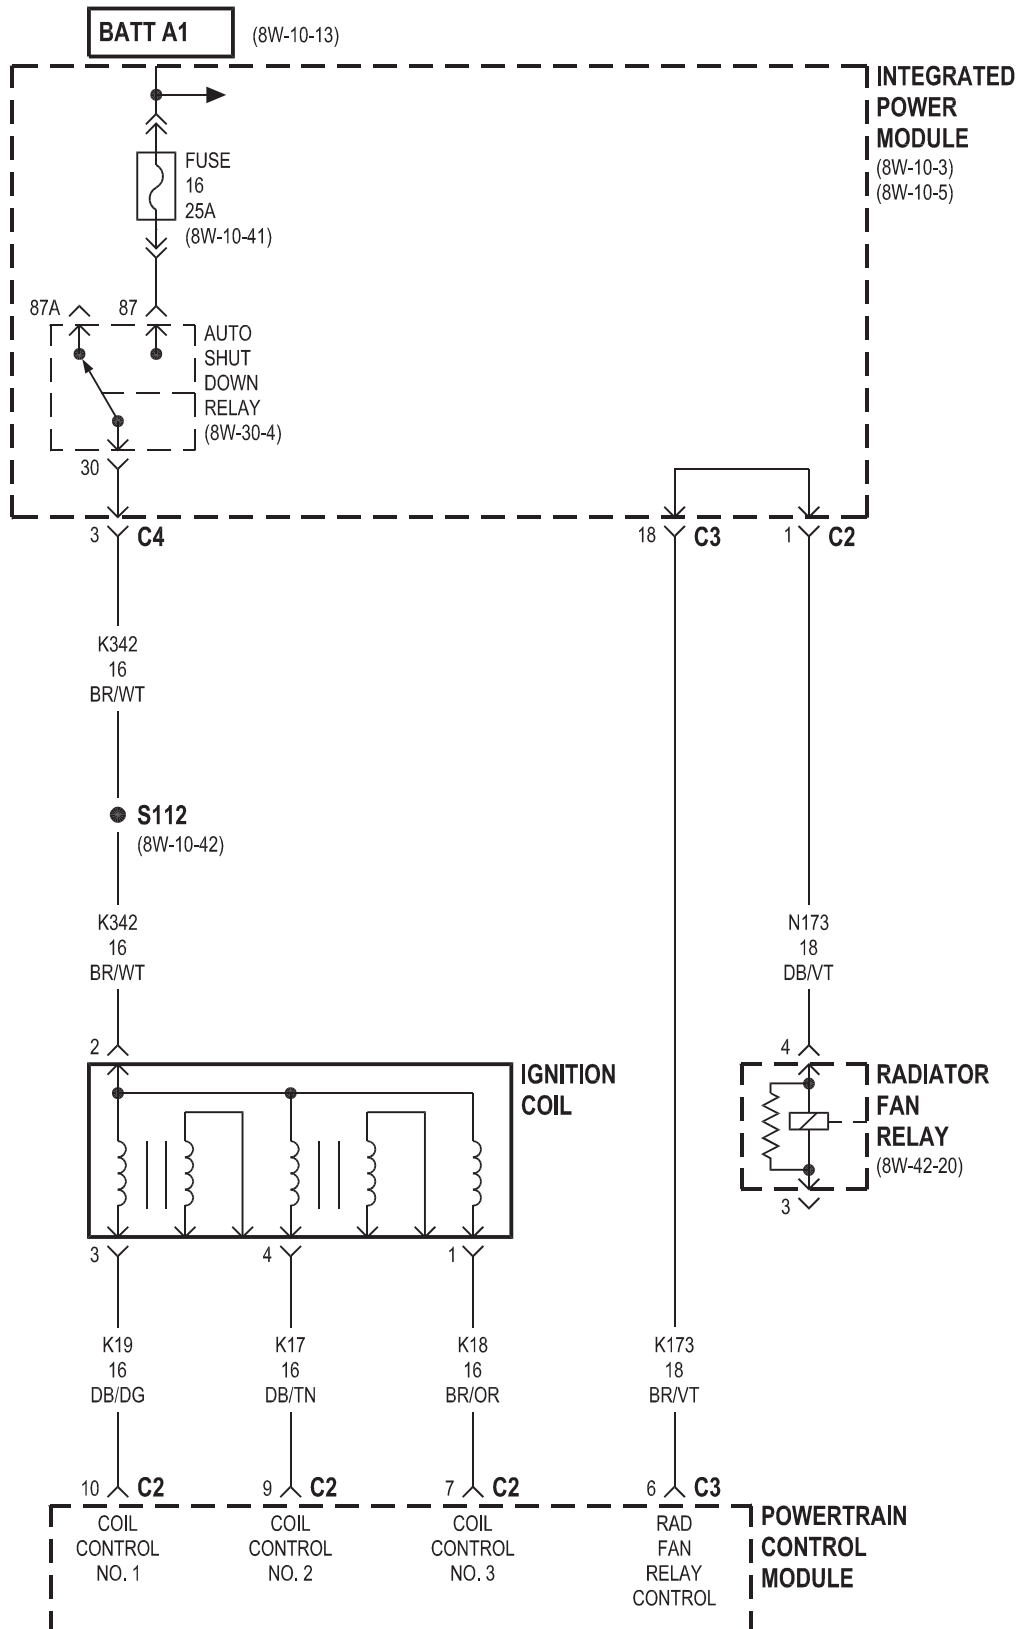


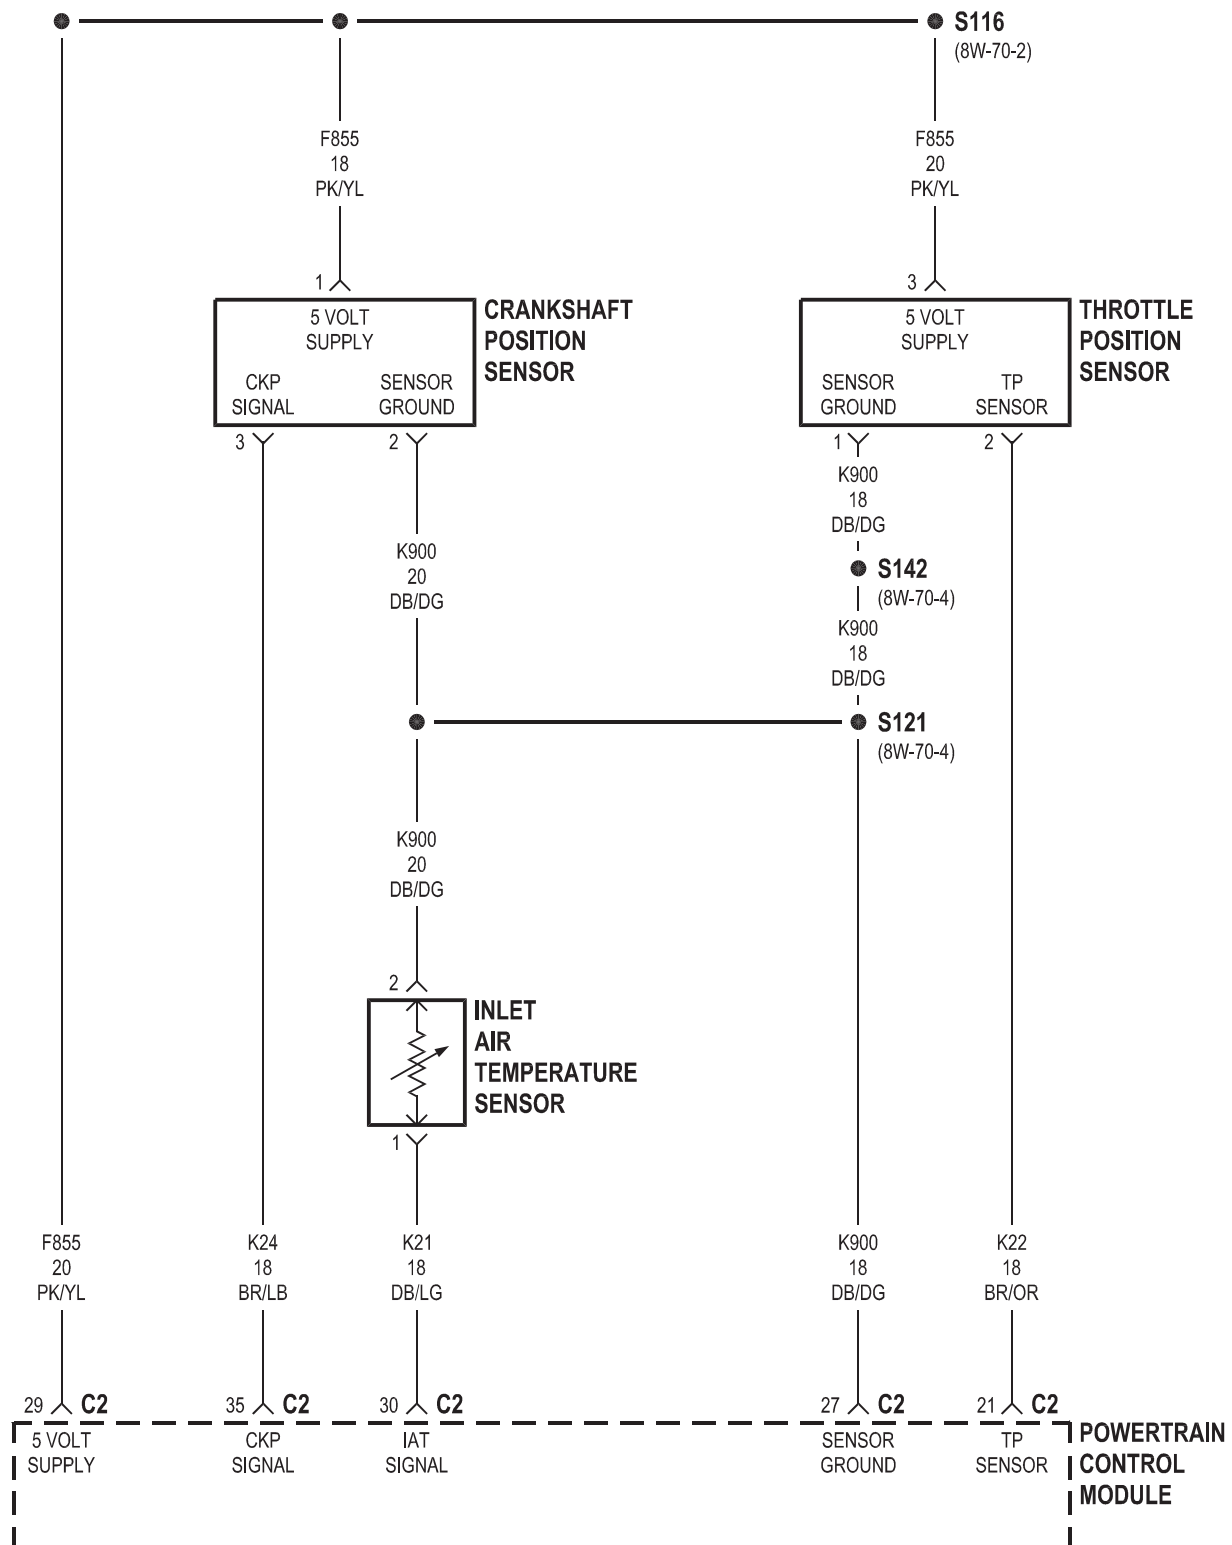


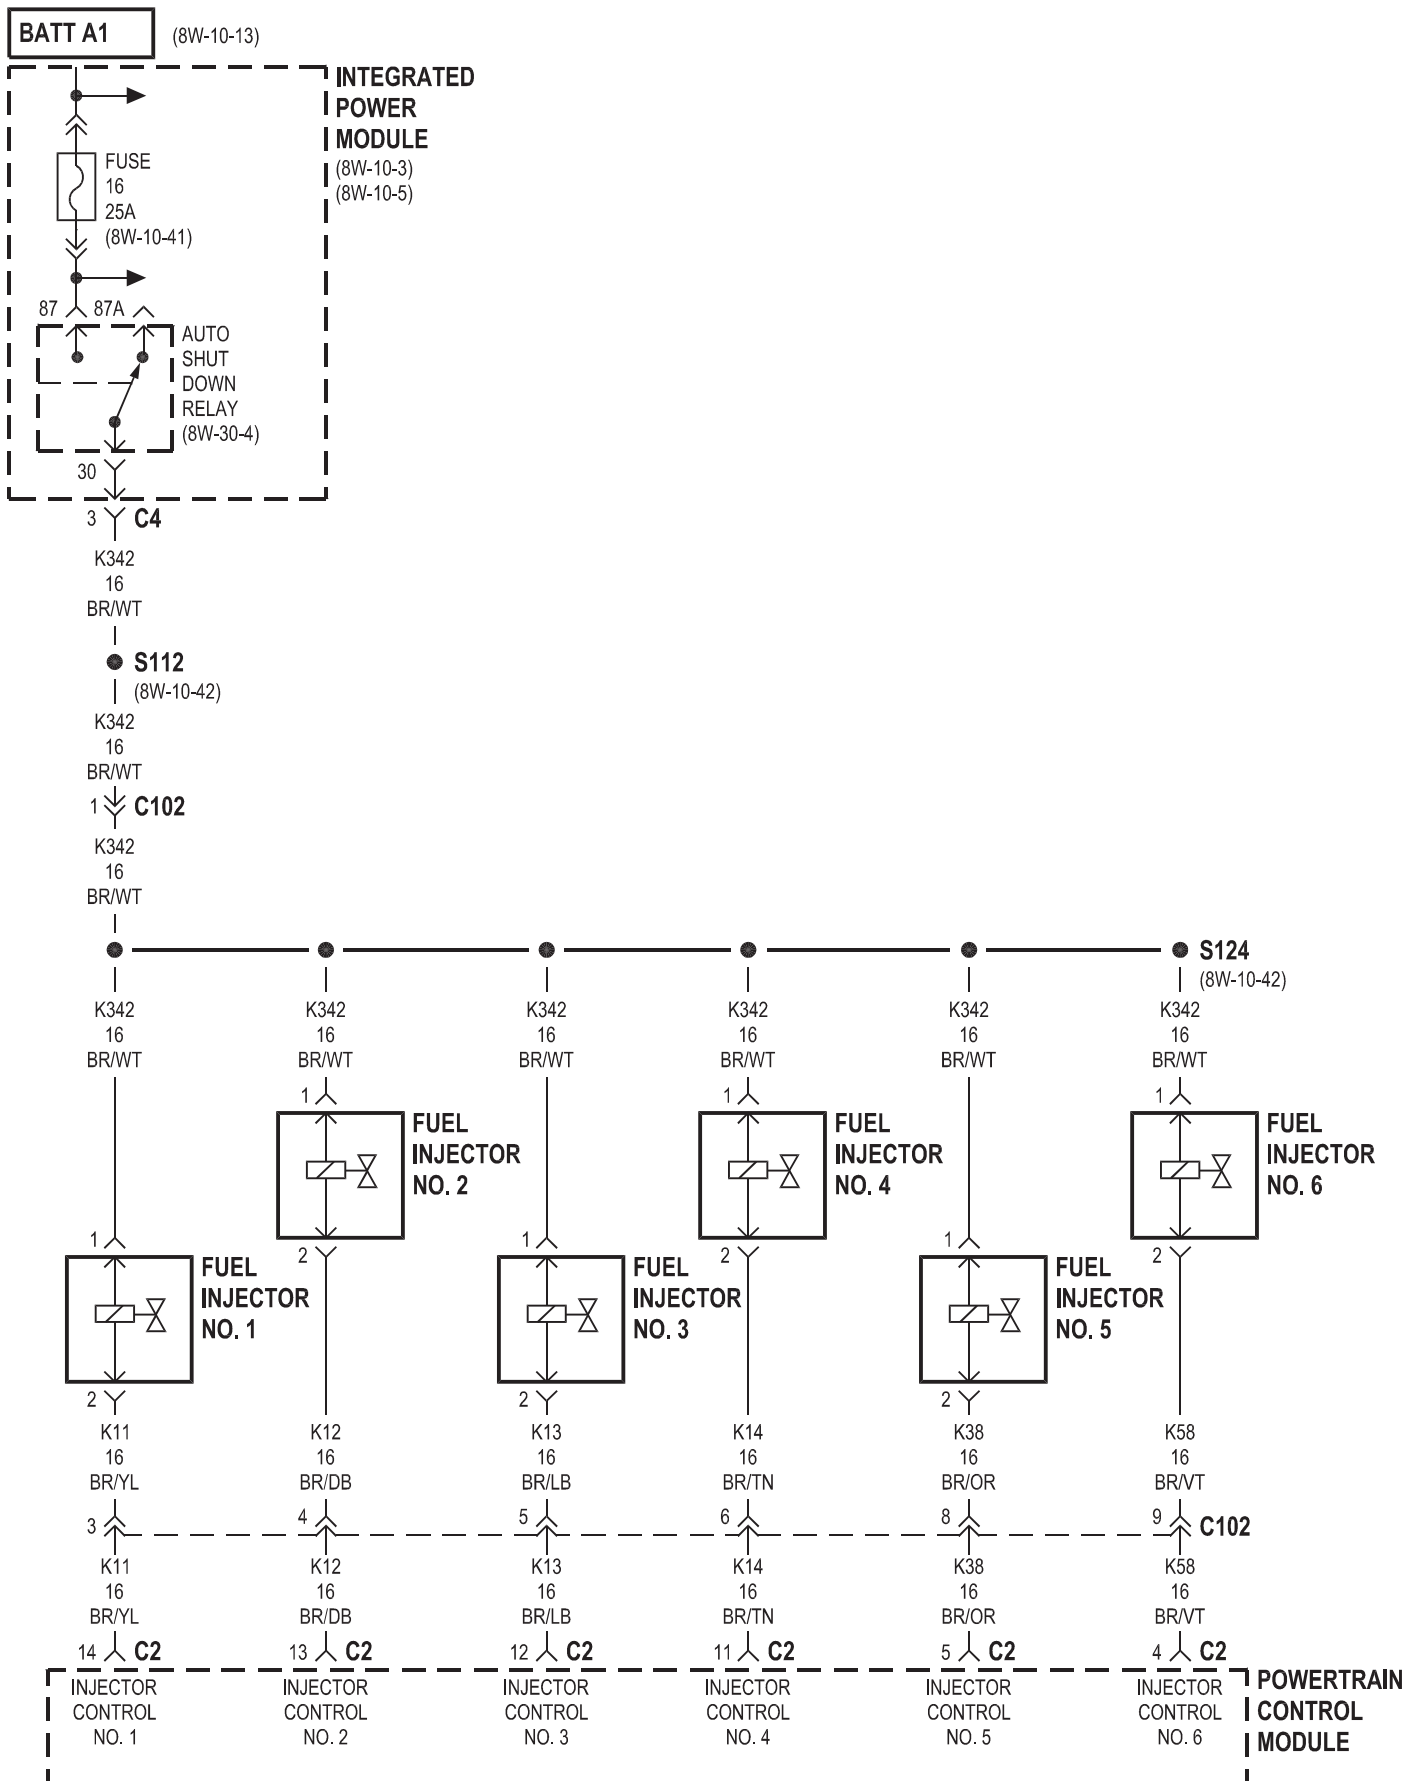

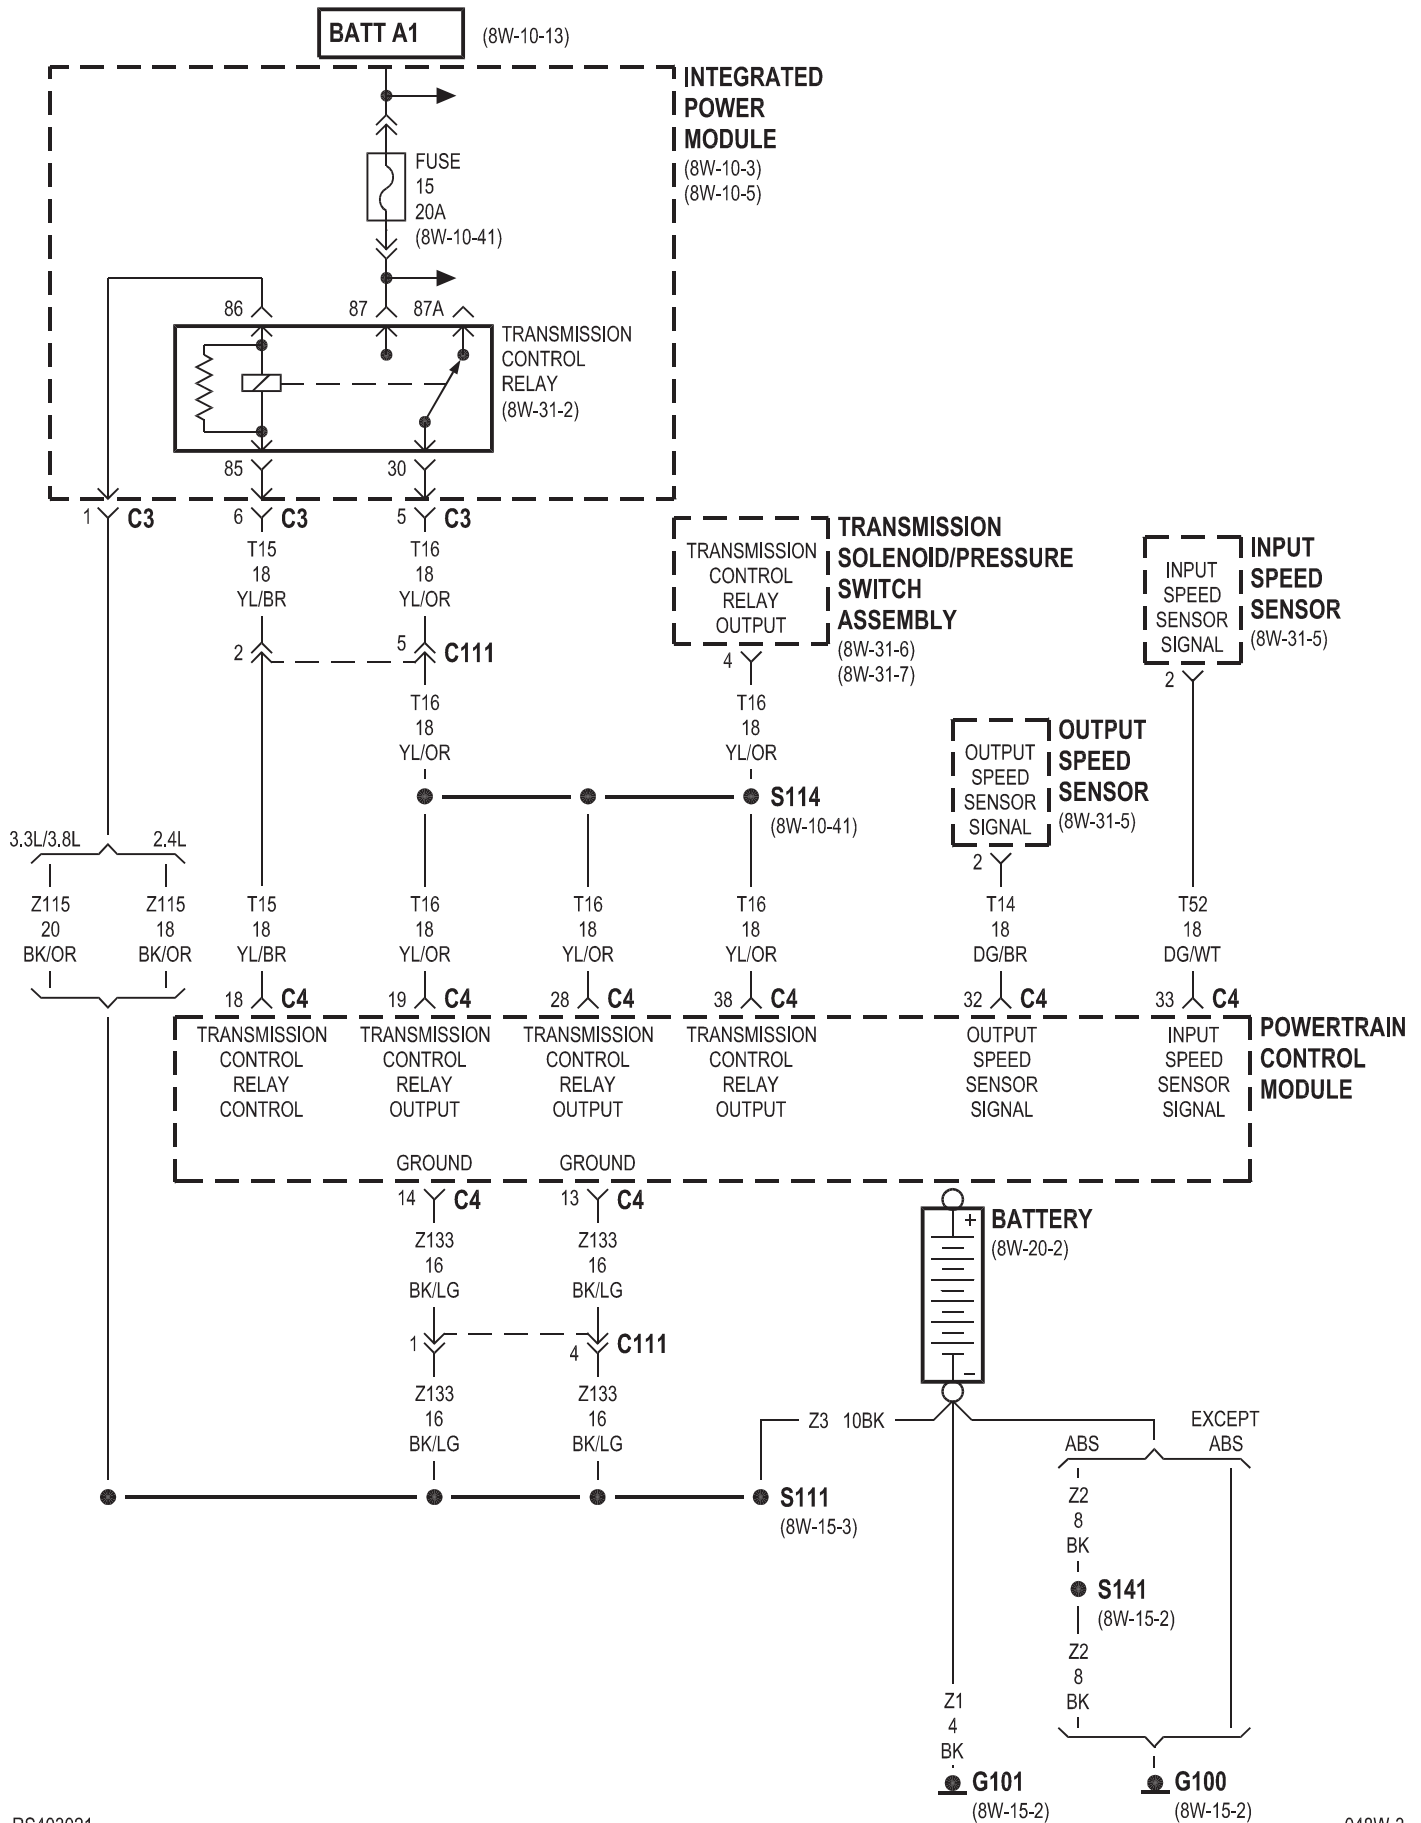


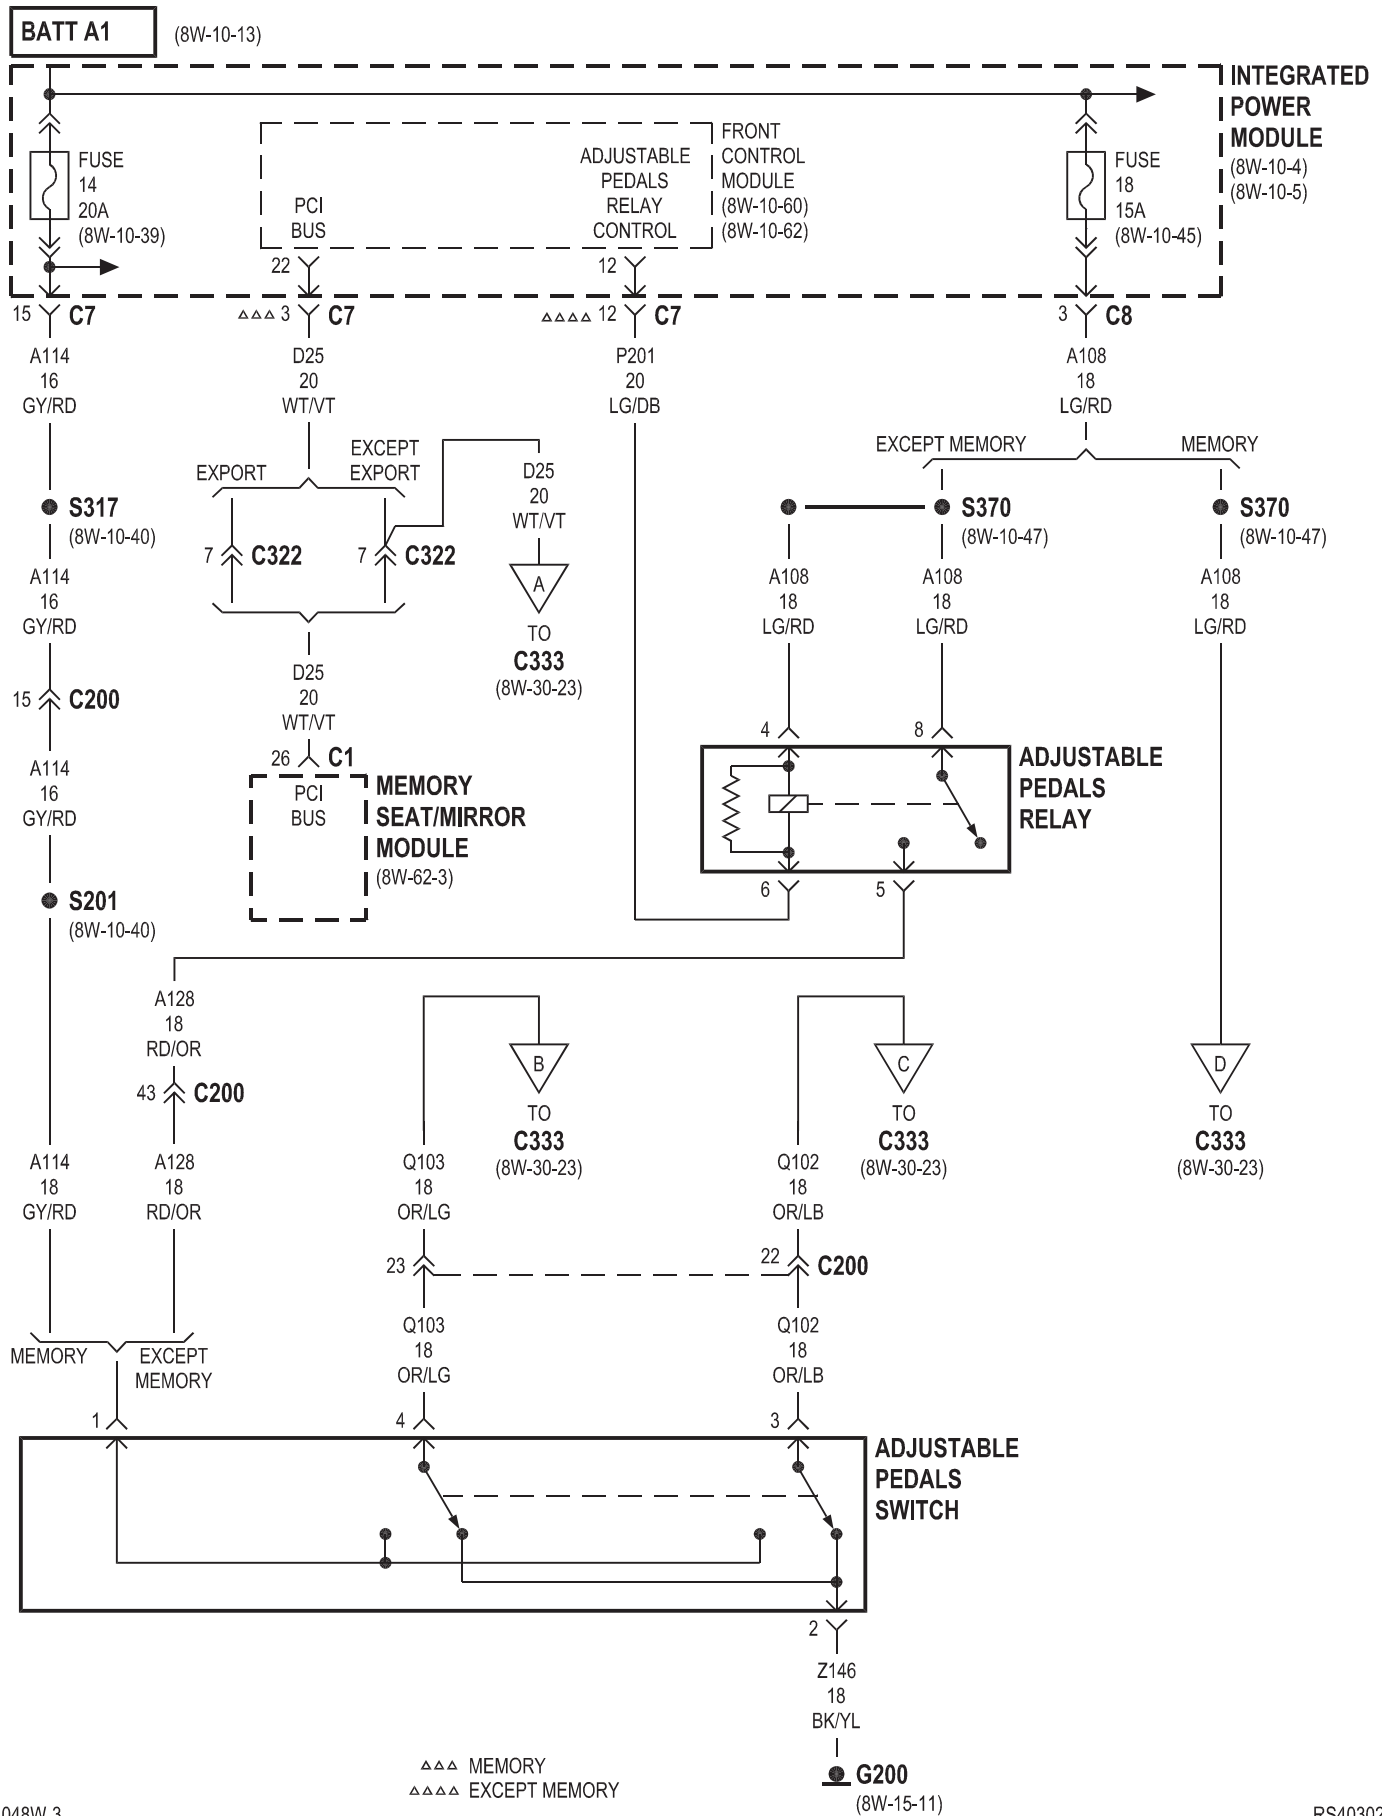


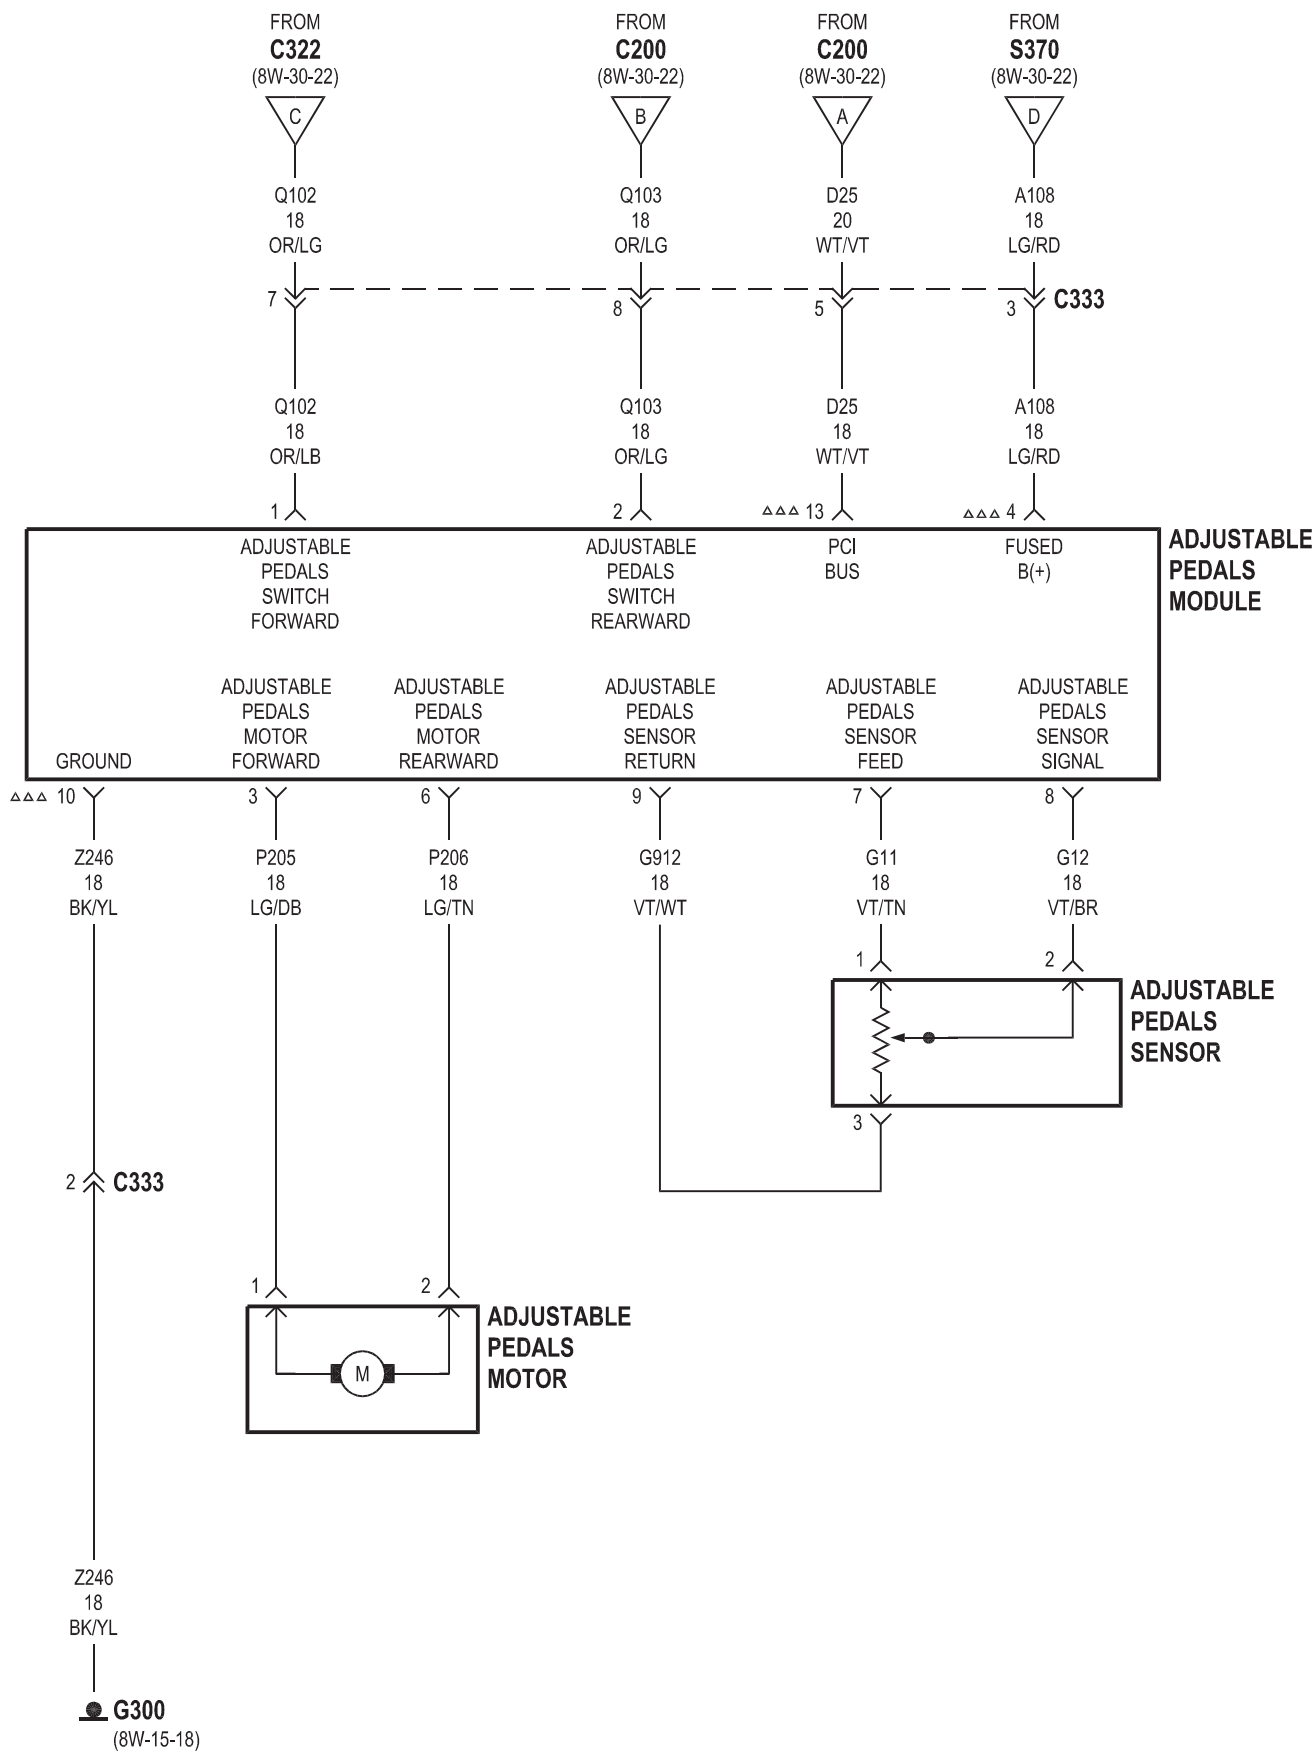


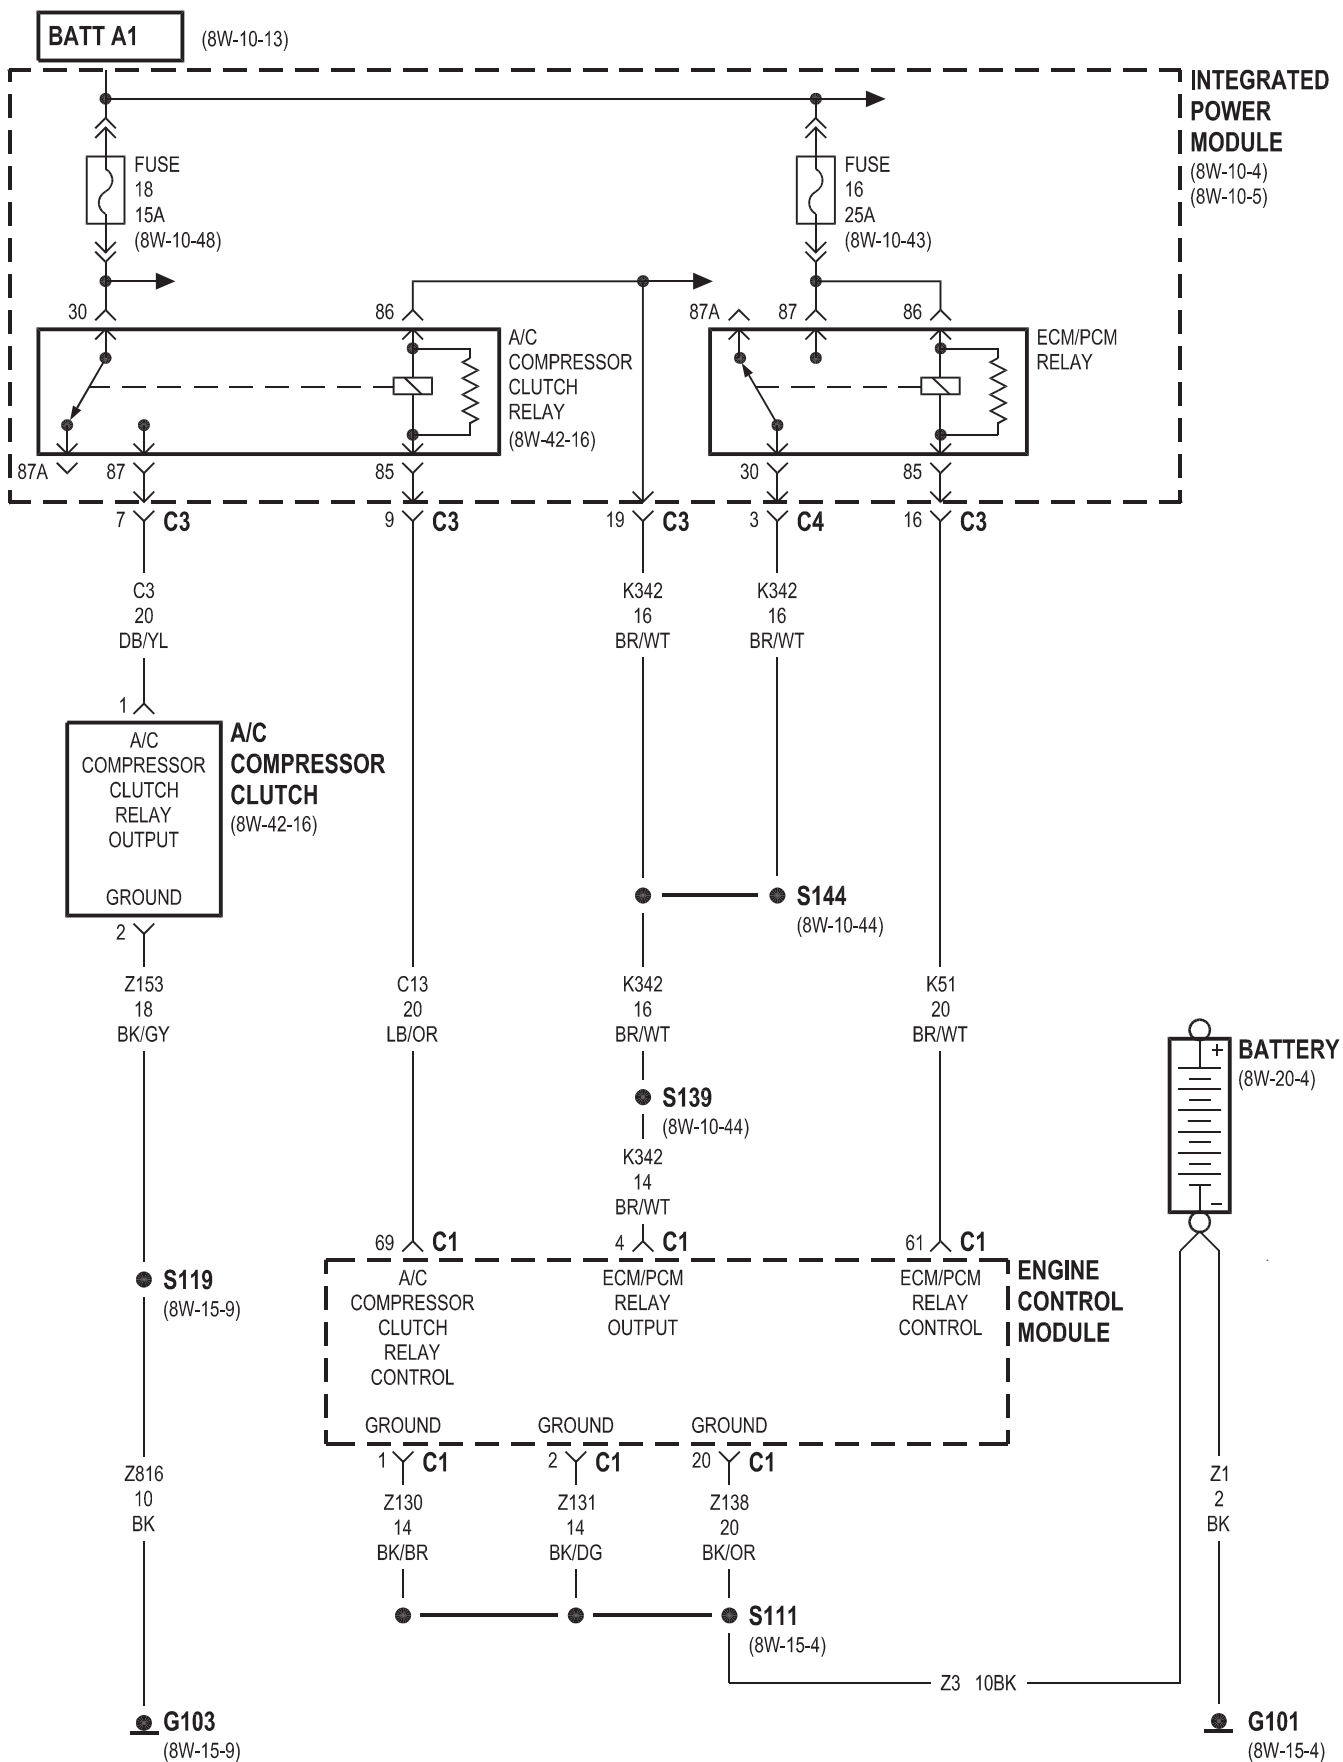




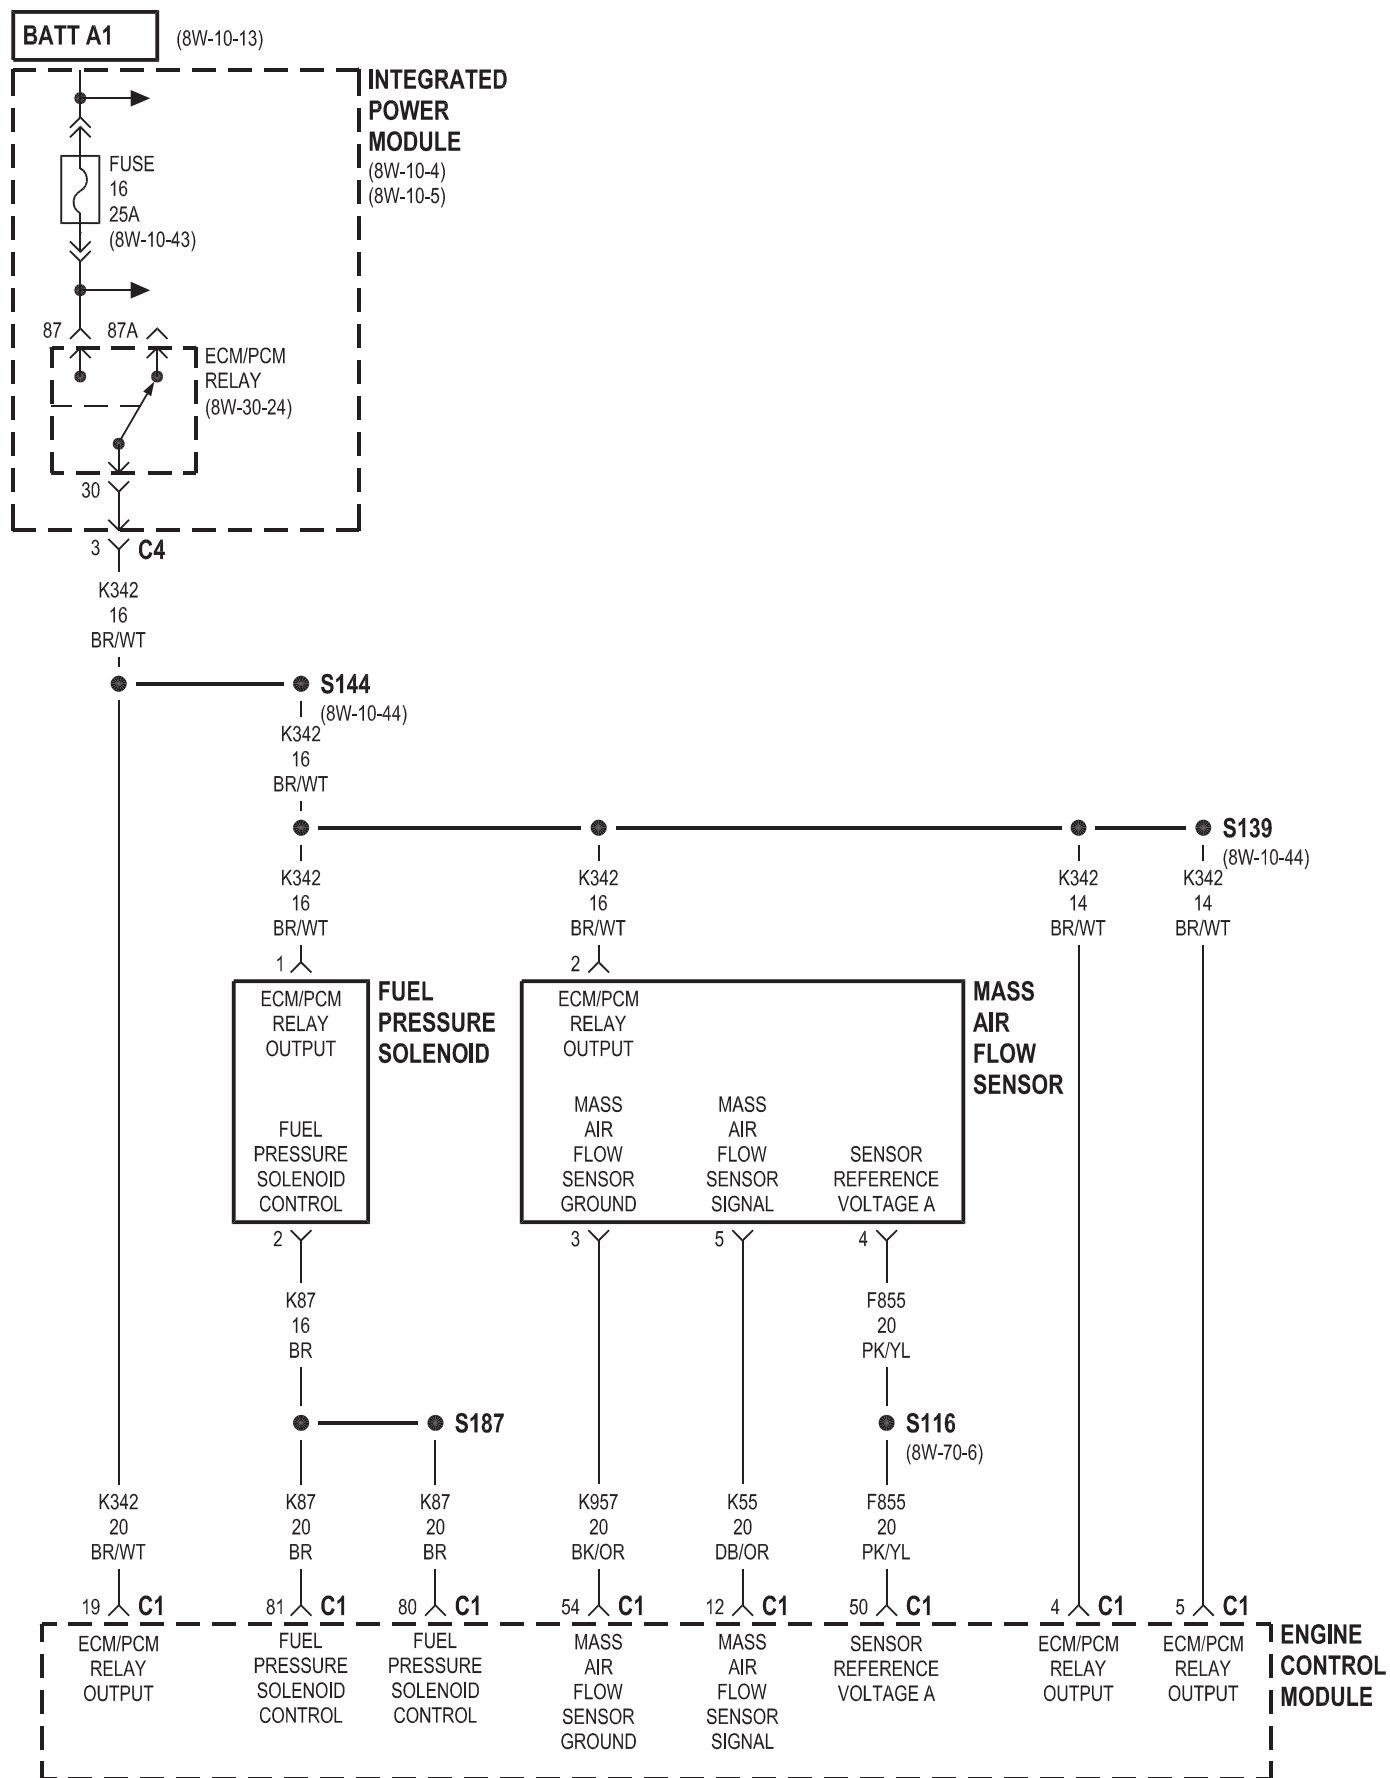


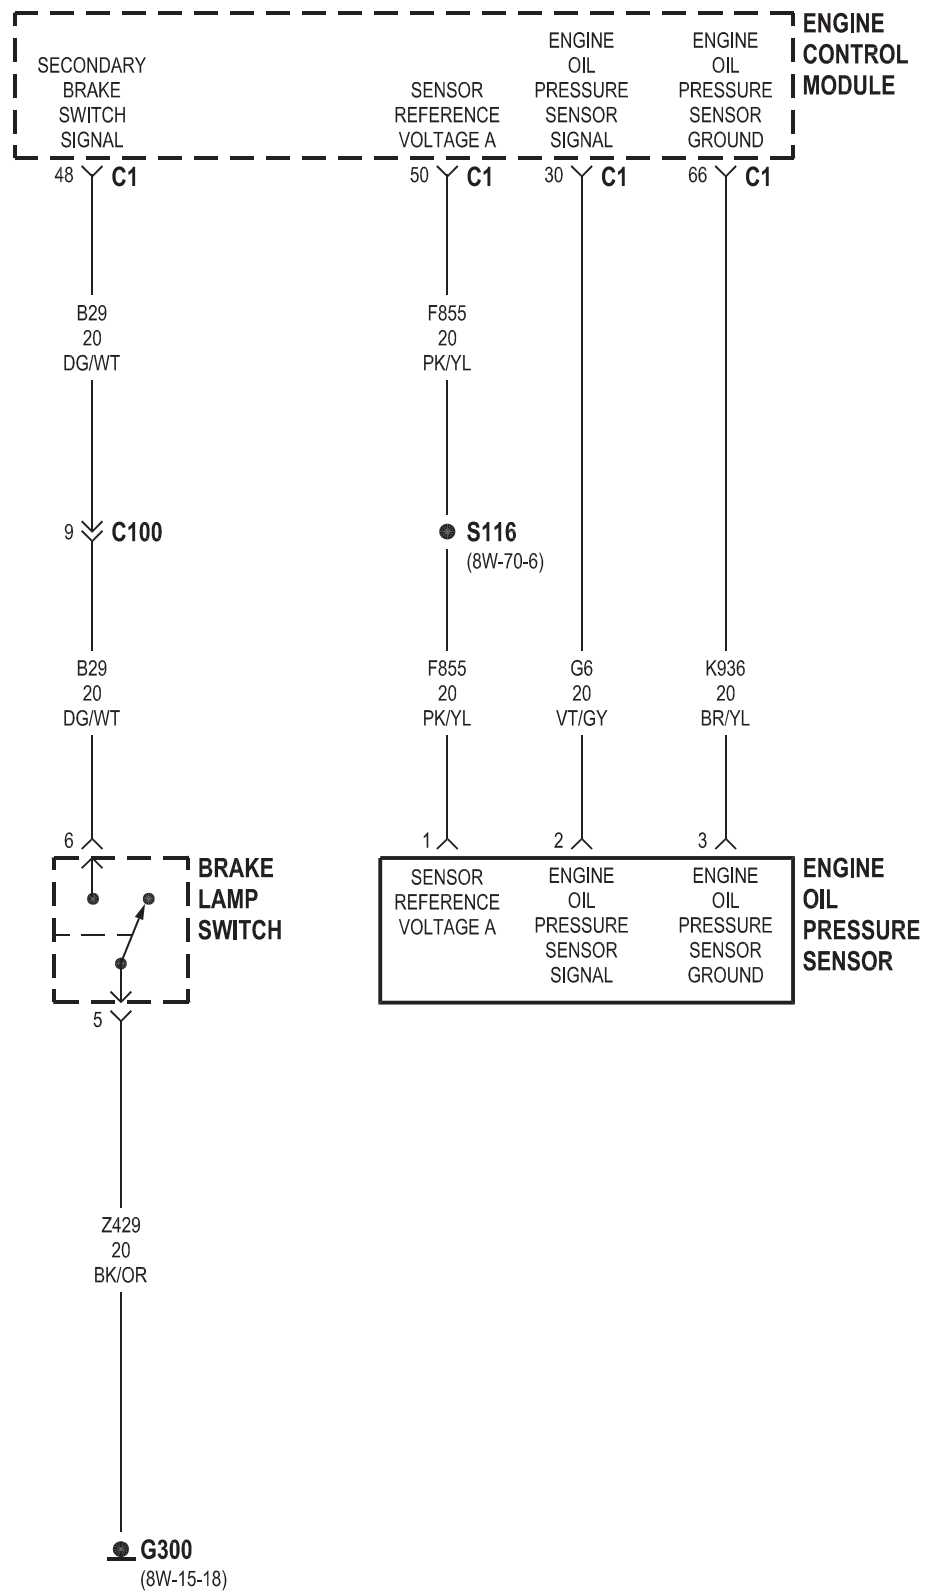

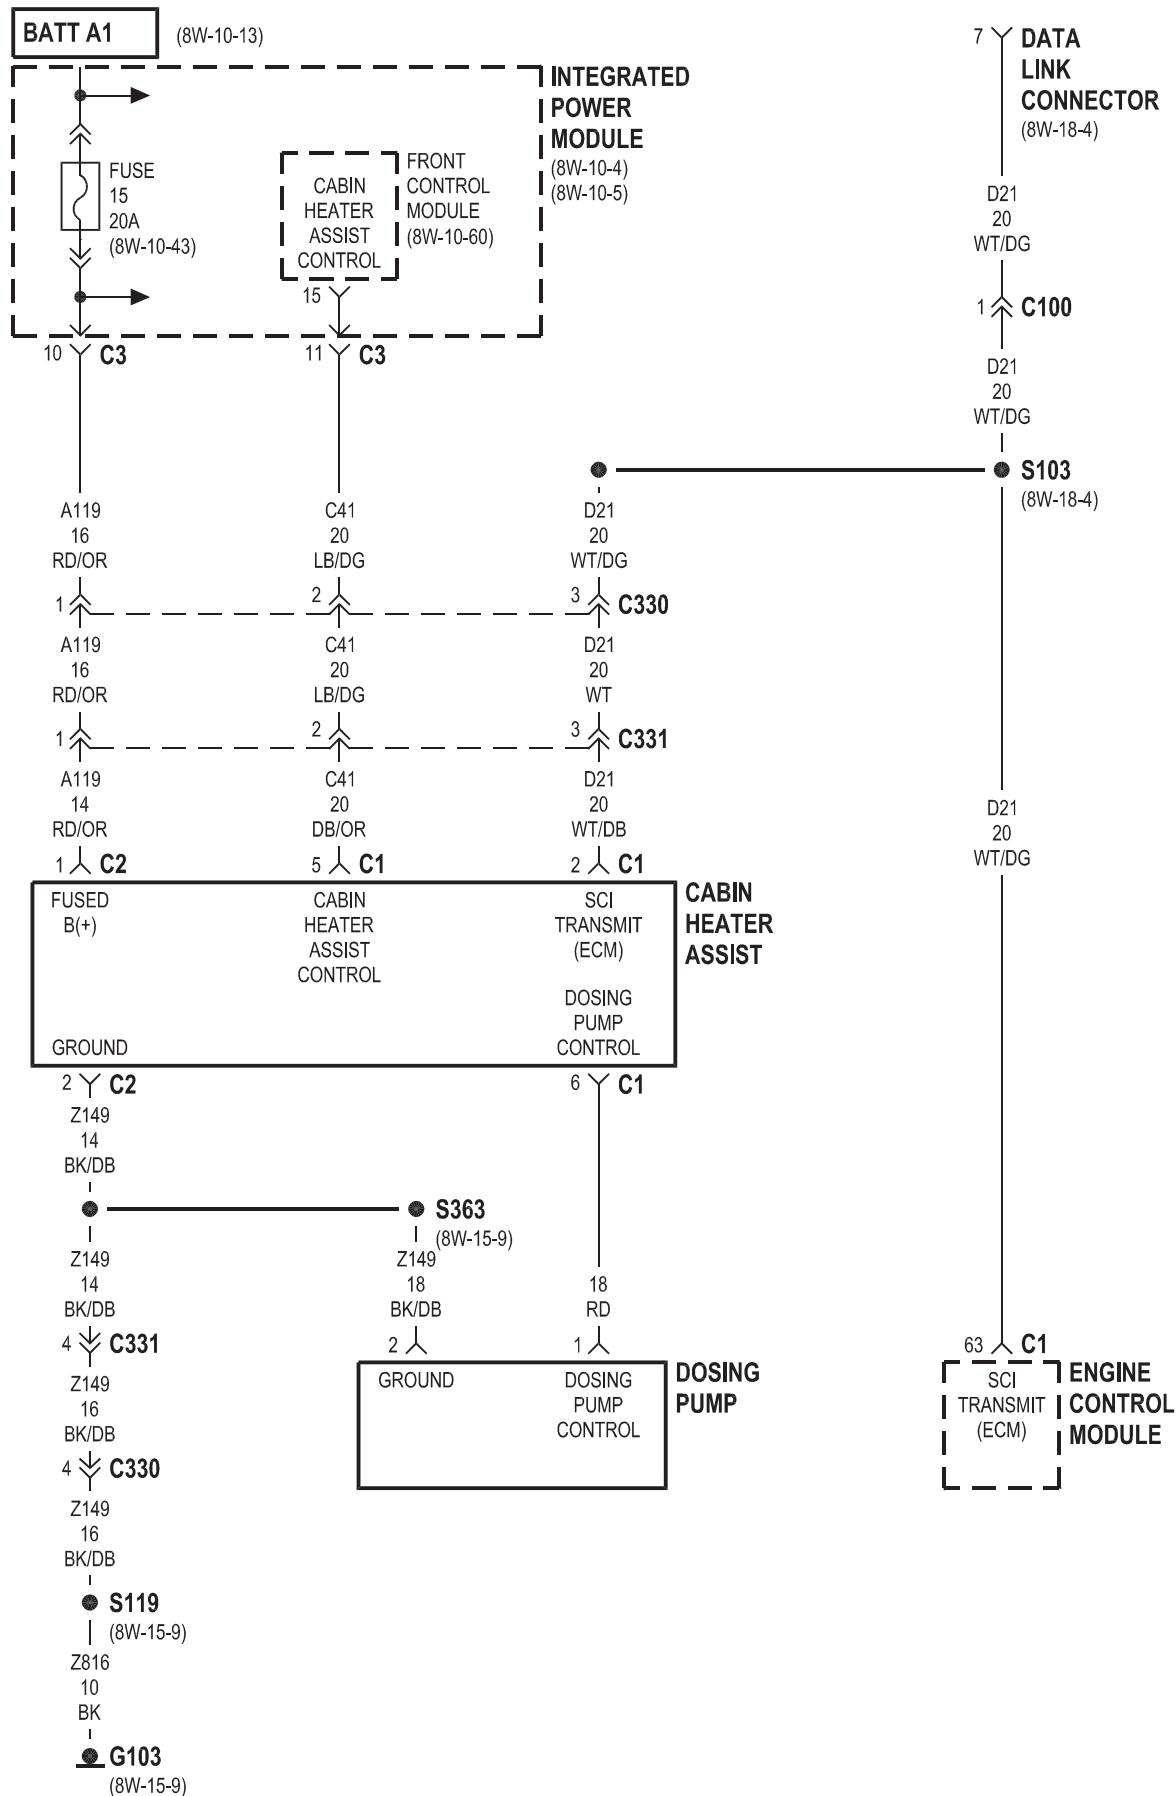

DIESEL

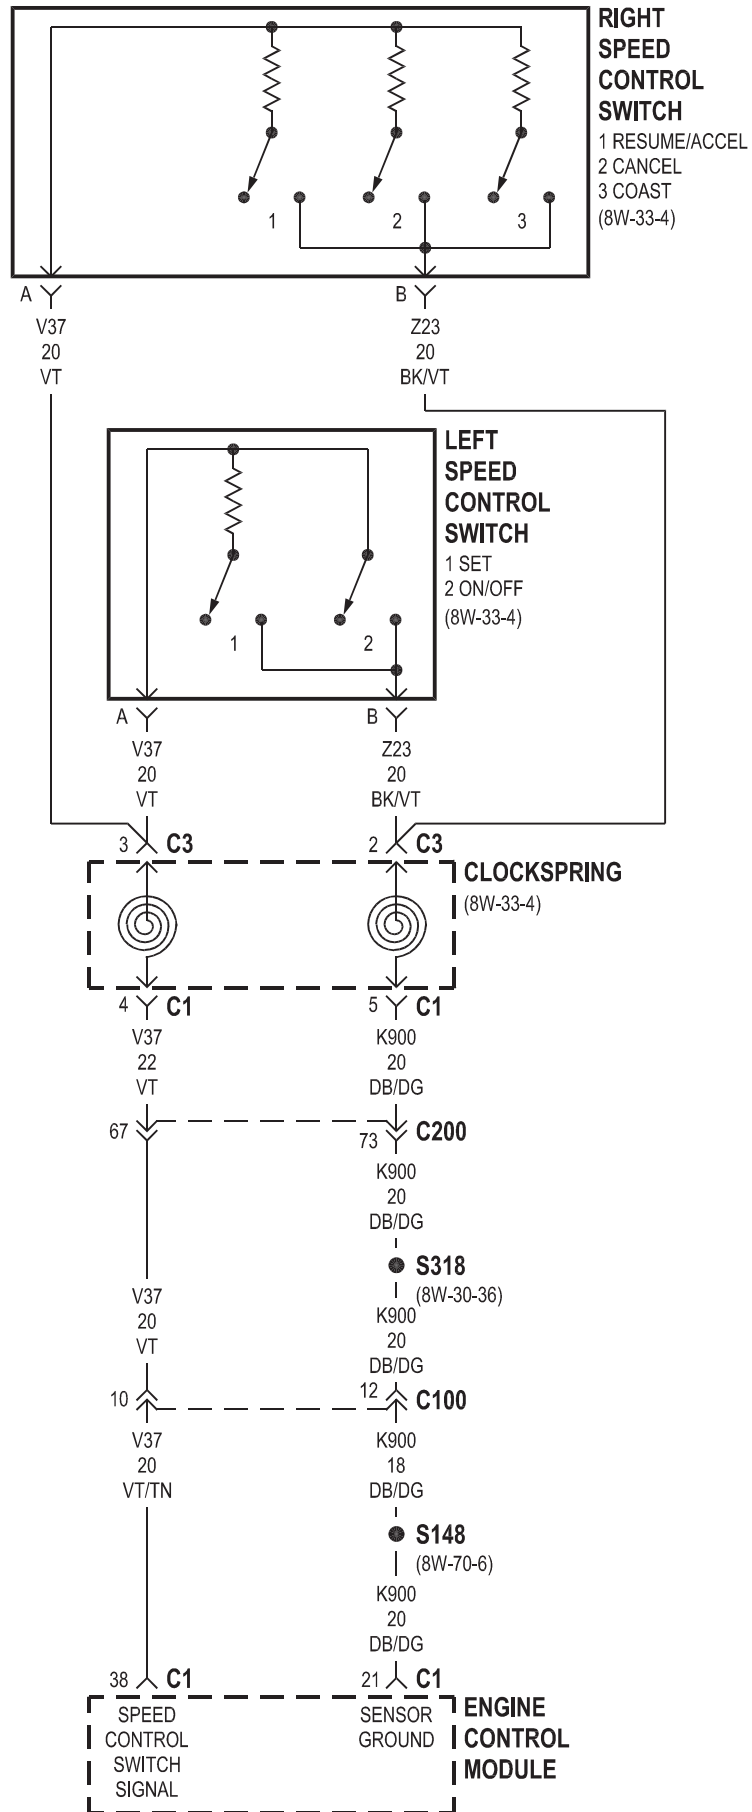

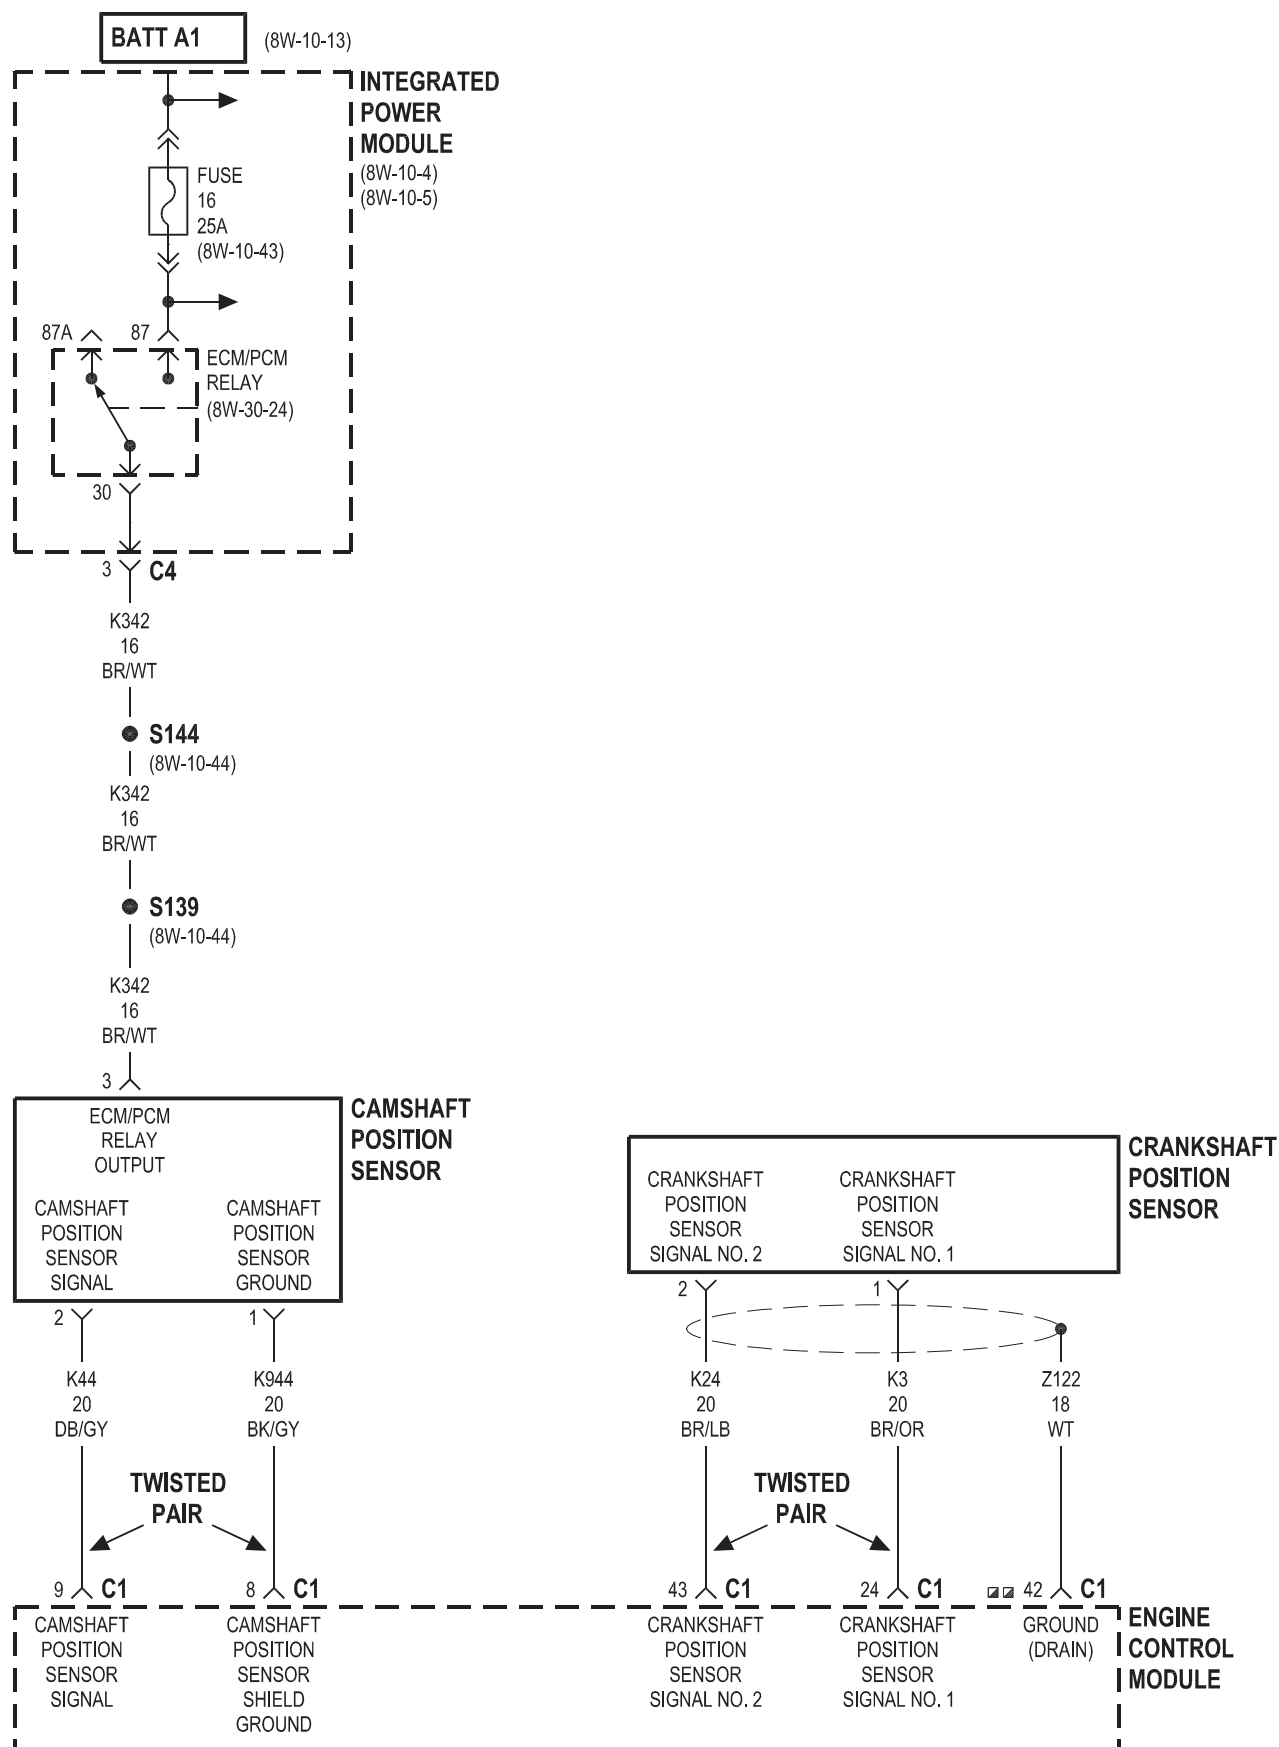

■ ■ GROUND (DRAIN)

DIESEL

