

TABLE OF CONTENTS

1.0	INTRODUCTION	1
1.1	SYSTEM COVERAGE	1
1.2	SIX-STEP TROUBLESHOOTING PROCEDURE	1
2.0	IDENTIFICATION OF SYSTEM	1
3.0	SYSTEM DESCRIPTION AND FUNCTIONAL OPERATION	1
3.1	GENERAL DESCRIPTION	1
3.2	FUNCTIONAL OPERATION	2
3.2.1	FUEL CONTROL	2
3.2.2	ON-BOARD DIAGNOSTICS	2
3.2.3	OTHER CONTROLS	5
3.2.4	PCM OPERATING MODES	9
3.2.5	NON-MONITORED CIRCUITS	9
3.2.6	SENTRY KEY REMOTE ENTRY SYSTEM (SKREES) OVERVIEW	9
3.2.7	SKREEM ON-BOARD DIAGNOSTICS	9
3.2.8	SKREES OPERATION	10
3.2.9	PROGRAMMING THE POWERTRAIN CONTROL MODULE	10
3.2.10	PROGRAMMING THE SKREEM	11
3.2.11	PROGRAMMING THE IGNITION KEYS TO THE SKREEM	11
3.3	DIAGNOSTIC TROUBLE CODES	11
3.3.1	HARD CODE	11
3.3.2	INTERMITTENT CODE	12
3.3.3	STARTS SINCE SET COUNTER	12
3.3.4	DISTANCE SINCE MI SET	12
3.4	USING THE DRBIII®	12
3.5	DRBIII® ERROR MESSAGES AND BLANK SCREEN	12
3.5.1	DRBIII® DOES NOT POWER UP	12
3.5.2	DISPLAY IS NOT VISIBLE	13
4.0	DISCLAIMERS, SAFETY, WARNINGS	13
4.1	DISCLAIMERS	13
4.2	SAFETY	13
4.2.1	TECHNICIAN SAFETY INFORMATION	13
4.2.2	VEHICLE PREPARATION FOR TESTING	13
4.2.3	SERVICING SUB ASSEMBLIES	13
4.2.4	DRBIII® SAFETY INFORMATION	13
4.3	WARNINGS AND CAUTIONS	14
4.3.1	ROAD TEST WARNINGS	14
4.3.2	VEHICLE DAMAGE CAUTIONS	14
5.0	REQUIRED TOOLS AND EQUIPMENT	14
6.0	GLOSSARY OF TERMS	14

TABLE OF CONTENTS - Continued

7.0	DIAGNOSTIC INFORMATION AND PROCEDURES	17
	COMMUNICATION	
	*NO RESPONSE FROM PCM (PCI BUS) - NGC	18
	*NO RESPONSE FROM PCM (PCM SCI ONLY) - NGC	19
	*NO RESPONSE FROM SENTRY KEY REMOTE ENTRY MODULE	22
	*NO RESPONSE FROM TRANSMISSION CONTROL MODULE - NGC	24
	*PCI BUS COMMUNICATION FAILURE	27
	DRIVEABILITY - NGC	
	INTERMITTENT CONDITION	30
	P0016-CRANKSHAFT/CAMSHAFT TIMING MISALIGNMENT	31
	P0031-O2 SENSOR 1/1 HEATER CIRCUIT LOW	35
	P0037-O2 SENSOR 1/2 HEATER CIRCUIT LOW	35
	P0032-O2 SENSOR 1/1 HEATER CIRCUIT HIGH	37
	P0038-O2 SENSOR 1/2 HEATER CIRCUIT HIGH	37
	P0068-MANIFOLD PRESSURE/THROTTLE POSITION CORRELATION	40
	P0071-AMBIENT TEMP SENSOR PERFORMANCE	46
	P0072-AMBIENT TEMP SENSOR LOW	49
	P0073-AMBIENT TEMP SENSOR HIGH	51
	P0107-MAP SENSOR LOW	53
	P0108-MAP SENSOR HIGH	56
	P0111-INTAKE AIR TEMPERATURE SENSOR PERFORMANCE	59
	P0112-INTAKE AIR TEMPERATURE SENSOR LOW	62
	P0113-INTAKE AIR TEMPERATURE SENSOR HIGH	64
	P0116-ENGINE COOLANT TEMPERATURE PERFORMANCE	66
	P0117-ENGINE COOLANT TEMPERATURE SENSOR LOW	69
	P0118-ENGINE COOLANT TEMPERATURE SENSOR HIGH	71
	P0122-THROTTLE POSITION SENSOR #1 LOW	73
	P0123-THROTTLE POSITION SENSOR #1 HIGH	76
	P0125-INSUFFICIENT COOLANT TEMP FOR CLOSED-LOOP FUEL CONTROL	79
	P0128-THERMOSTAT RATIONALITY	81
	P0129-BAROMETRIC PRESSURE OUT-OF-RANGE LOW	86
	P0131-O2 SENSOR 1/1 VOLTAGE LOW	89
	P0137-O2 SENSOR 1/2 VOLTAGE LOW	89
	P0132-O2 SENSOR 1/1 VOLTAGE HIGH	92
	P0138-O2 SENSOR 1/2 VOLTAGE HIGH	92
	P0133-O2 SENSOR 1/1 SLOW RESPONSE	95
	P0139-O2 SENSOR 1/2 SLOW RESPONSE	95
	P0135-O2 SENSOR 1/1 HEATER PERFORMANCE	97
	P0141-O2 SENSOR 1/2 HEATER PERFORMANCE	97
	P0171-FUEL SYSTEM 1/1 LEAN	100
	P0172-FUEL SYSTEM 1/1 RICH	105
	P0201-FUEL INJECTOR #1	109
	P0202-FUEL INJECTOR #2	109
	P0203-FUEL INJECTOR #3	109
	P0204-FUEL INJECTOR #4	109
	P0205-FUEL INJECTOR #5	109
	P0206-FUEL INJECTOR #6	109
	P0300-MULTIPLE CYLINDER MISFIRE	112
	P0301-CYLINDER #1 MISFIRE	112
	P0302-CYLINDER #2 MISFIRE	112
	P0303-CYLINDER #3 MISFIRE	112
	P0304-CYLINDER #4 MISFIRE	112

TABLE OF CONTENTS - Continued

P0305-CYLINDER #5 MISFIRE	112
P0306-CYLINDER #6 MISFIRE	112
P0315-NO CRANK SENSOR LEARNED	120
P0325-KNOCK SENSOR #1 CIRCUIT	122
P0335-CRANKSHAFT POSITION SENSOR CIRCUIT	125
P0339-CRANKSHAFT POSITION SENSOR INTERMITTENT	130
P0340-CAMSHAFT POSITION SENSOR CIRCUIT	134
P0344-CAMSHAFT POSITION SENSOR INTERMITTENT	139
P0401 - EGR SYSTEM PERFORMANCE	143
P0403 - EGR CONTROL CIRCUIT	146
P0404 - EGR POSITION SENSOR PERFORMANCE	149
P0405 - EGR POSITION SENSOR LOW	153
P0406 - EGR POSITION SENSOR HIGH	156
P0420-CATALYTIC 1/1 EFFICIENCY	159
P0432-CATALYTIC 2/1 EFFICIENCY	159
P0440-GENERAL EVAP SYSTEM FAILURE	161
P0441-EVAP PURGE SYSTEM PERFORMANCE	166
P0442-EVAP SYSTEM MEDIUM LEAK	168
P0455-EVAP SYSTEM LARGE LEAK	168
P0443-EVAP PURGE SOLENOID CIRCUIT	173
P0452-NVLD PRESSURE SWITCH SENSE CIRCUIT LOW	176
P0453-NVLD PRESSURE SWITCH SENSE CIRCUIT HIGH	179
P0456-EVAP SYSTEM SMALL LEAK	181
P0461-FUEL LEVEL SENSOR #1 PERFORMANCE	183
P0462-FUEL LEVEL SENSOR #1 LOW	185
P0463-FUEL LEVEL SENSOR #1 HIGH	185
P0480-LOW SPEED FAN CONTROL RELAY CIRCUIT	186
P0498-NVLD CANISTER VENT VALVE SOLENOID CIRCUIT LOW	190
P0499-NVLD CANISTER VENT VALVE SOLENOID CIRCUIT HIGH	191
P0501-VEHICLE SPEED SENSOR #1 PERFORMANCE (AUTO TRANS)	193
P0501-VEHICLE SPEED SENSOR #1 PERFORMANCE (MANUAL TRANS)	194
P0506-IDLE SPEED LOW PERFORMANCE	196
P0507-IDLE SPEED HIGH PERFORMANCE	196
P0519-IDLE SPEED PERFORMANCE	196
P0508-IAC VALVE SENSE CIRCUIT LOW	198
P0509-IAC VALVE SENSE CIRCUIT HIGH	201
P0513-INVALID SKIM KEY	203
P0516-BATTERY TEMPERATURE SENSOR LOW	205
P0517-BATTERY TEMPERATURE SENSOR HIGH	207
P0522 PRESSURE SENSOR LOW	209
P0532-A/C PRESSURE SENSOR LOW	210
P0533-A/C PRESSURE SENSOR HIGH	213
P0562-BATTERY VOLTAGE LOW	216
P0563-BATTERY VOLTAGE HIGH	219
P0572-BRAKE SWITCH #1 CIRCUIT LOW	221
P0573-BRAKE SWITCH #1 CIRCUIT HIGH	223
P0580-SPEED CONTROL SWITCH #1 LOW	225
P0581-SPEED CONTROL SWITCH #1 HIGH	227
P0582-SPEED CONTROL VACUUM SOLENOID CIRCUIT	229
P0586-SPEED CONTROL VENT SOLENOID CIRCUIT	231
P0594-SPEED CONTROL SERVO POWER CIRCUIT	233
P0600-SERIAL COMMUNICATION LINK	236
P0601-INTERNAL MEMORY CHECKSUM INVALID	236

TABLE OF CONTENTS - Continued

P0622-GENERATOR FIELD CONTROL CIRCUIT237
P0627-FUEL PUMP RELAY CIRCUIT239
P0630-VIN NOT PROGRAMMED IN PCM242
P0632-ODOMETER NOT PROGRAMMED IN PCM.....	.243
P0633-SKIM KEY NOT PROGRAMMED IN PCM.....	.244
P0645-A/C CLUTCH RELAY CIRCUIT245
P0685-ASD RELAY CONTROL CIRCUIT248
P0688-ASD RELAY SENSE CIRCUIT LOW251
P0700-TRANSMISSION CONTROL SYSTEM/READ TRANSMISSION DTCS ON THE DRBIII®.....	.254
P0833-CLUTCH RELEASED SWITCH CIRCUIT255
P0850-PARK/NEUTRAL SWITCH PERFORMANCE257
P1115-GENERAL TEMP SENSOR PERFORMANCE.....	.258
P1593-SPEED CONTROL SWITCH STUCK.....	.262
P1602-PCM NOT PROGRAMMED265
P1603-PCM INTERNAL DUAL-PORT RAM COMMUNICATION266
P1604-PCM INTERNAL DUAL-PORT RAM READ/WRITE INTEGRITY FAILURE ..	.266
P1607-PCM INTERNAL SHUTDOWN TIMER RATIONALITY266
P1696-EEPROM MEMORY WRITE DENIED/INVALID.....	.267
P1697-EMR (SRI) MILEAGE NOT STORED.....	.267
P2074-MANIFOLD PRESSURE/THROTTLE POSITION CORRELATION - HIGH FLOW/VACUUM LEAK269
P2096-DOWN STREAM FUEL SYSTEM 1/2 LEAN275
P2097-DOWN STREAM FUEL SYSTEM 1/2 RICH275
P2302-IGNITION COIL #1 SECONDARY CIRCUIT-INSUFFICIENT IONIZATION ..	.278
P2305-IGNITION COIL #2 SECONDARY CIRCUIT-INSUFFICIENT IONIZATION ..	.278
P2308-IGNITION COIL #3 SECONDARY CIRCUIT-INSUFFICIENT IONIZATION ..	.278
P2503-CHARGING SYSTEM VOLTAGE LOW281
U0101-NO TRANSMISSION BUS MESSAGE.....	.284
U0140-NO BODY BUS MESSAGES286
U0155-NO CLUSTER BUS MESSAGE288
U0168-NO SKIM BUS MESSAGES.....	.289
U110C-NO FUEL LEVEL BUS MESSAGE291
*CHECKING PCM POWER AND GROUND CIRCUITS293
*CHECKING THE A/C RELAY OUTPUT294
 SKREEM	
ANTENNA FAILURE296
COP FAILURE.....	.296
EEPROM FAILURE.....	.296
RAM FAILURE.....	.296
ROM FAILURE296
SERIAL LINK INTERNAL FAULT296
STACK OVERFLOW FAILURE.....	.296
BCM MESSAGE MISSING.....	.298
PCM STATUS FAILURE299
SERIAL LINK EXTERNAL FAULT299
ROLLING CODE FAILURE.....	.301
VIN MISMATCH.....	.301
TRANSPONDER COMMUNICATION FAILURE303
TRANSPONDER ID MISMATCH303
TRANSPONDER RESPONSE MISMATCH.....	.303
UNPROGRAMMED KEY306

TABLE OF CONTENTS - Continued

STARTING	
*CHECKING FUEL DELIVERY	307
*CHECKING FUEL PRESSURE LEAK DOWN	310
*CHECKING HARD START (FUEL DELIVERY SYSTEM)	311
*ENGINE CRANKS DOES NOT START	313
*NO CRANK CONDITION	318
*NO RESPONSE FROM PCM WITH A NO START CONDITION	321
*START AND STALL CONDITION	322
VERIFICATION TESTS	
VERIFICATION TESTS	325
8.0 COMPONENT LOCATIONS	331
8.1 CONTROL MODULES AND FUSE & RELAY CENTER	331
8.2 CONTROLS AND SOLENOID	331
8.3 DATA LINK CONNECTOR	333
8.4 SENSORS	334
8.5 FUEL SYSTEM	336
8.6 SWITCHES	337
9.0 CONNECTOR PINOUTS	339
A/C COMPRESSOR CLUTCH - LT. GRAY 2 WAY	339
A/C PRESSURE SENSOR - GRAY 4 WAY	339
AMBIENT TEMPERATURE SENSOR - BLACK 2 WAY	339
BATTERY TEMPERATURE SENSOR - BLACK 2 WAY	339
BRAKE LAMP SWITCH - BLACK 6 WAY	340
CAMSHAFT POSITION SENSOR (GAS) - BLACK 3 WAY	340
CRANKSHAFT POSITION SENSOR (GAS) - BLACK 3 WAY	340
DATA LINK CONNECTOR - BLACK 16 WAY	340
EGR SOLENOID (3.3L) - BLACK 6 WAY	341
ENGINE COOLANT TEMP SENSOR (GAS) - BLACK 2 WAY	341
EVAP/PURGE SOLENOID (GAS) - BLACK 2 WAY	341
FUEL INJECTOR NO. 1 (2.4L/3.3L/3.8L) - BLACK 2 WAY	341
FUEL INJECTOR NO. 2 (2.4L/3.3L/3.8L) - BLACK 2 WAY	342
FUEL INJECTOR NO. 3 (2.4L/3.3L/3.8L) - BLACK 2 WAY	342
FUEL INJECTOR NO. 4 (2.4L/3.3L/3.8L) - BLACK 2 WAY	342
FUEL INJECTOR NO. 5 (3.3L/3.8L) - BLACK 2 WAY	342
FUEL INJECTOR NO. 6 (3.3L/3.8L) - BLACK 2 WAY	343
FUEL PUMP MODULE - LT. GRAY 4 WAY	343
GENERATOR - BLACK 2 WAY	343
IDLE AIR CONTROL MOTOR (GAS) - BLACK 2 WAY	343
IGNITION COIL (2.4L) - BLACK 3 WAY	344
IGNITION COIL (3.3L/3.8L) - DK. GRAY 4 WAY	344
INLET AIR TEMPERATURE SENSOR - BLACK 2 WAY	344
A/C COMPRESSOR CLUTCH RELAY	346
AUTO SHUT DOWN RELAY (GAS)	346
FUEL PUMP RELAY (GAS)	346
STARTER MOTOR RELAY	346
INTEGRATED POWER MODULE C2 - GREEN/BLUE 10 WAY	347
INTEGRATED POWER MODULE C3 - 20 WAY	347
INTEGRATED POWER MODULE C4 - BLUE 10 WAY	348

TABLE OF CONTENTS - Continued

INTEGRATED POWER MODULE C7 - 20 WAY348
INTEGRATED POWER MODULE C8 - ORANGE 10 WAY349
INTEGRATED POWER MODULE C9 - BLACK 10 WAY349
KNOCK SENSOR (EXCEPT EXPORT) - BLACK 2 WAY349
LEFT SPEED CONTROL SWITCH - WHITE 2 WAY349
MANIFOLD ABSOLUTE PRESSURE SENSOR (GAS) - BLACK 3 WAY350
OXYGEN SENSOR 1/1 UPSTREAM (GAS) - 4 WAY350
OXYGEN SENSOR 1/2 DOWNSTREAM (GAS) - 4 WAY350
POWERTRAIN CONTROL MODULE C1 - BLACK 38 WAY351
POWERTRAIN CONTROL MODULE C2 - ORANGE 38 WAY352
POWERTRAIN CONTROL MODULE C3 - NATURAL 38 WAY353
POWERTRAIN CONTROL MODULE C4 - GREEN 38 WAY354
RADIATOR FAN NO. 1 (GAS) - BLACK 2 WAY354
RADIATOR FAN NO. 2 (GAS) - BLACK 2 WAY355
RADIATOR FAN RELAY (GAS) - 4 WAY355
RIGHT SPEED CONTROL SWITCH - WHITE 2 WAY355
SENTRY KEY REMOTE ENTRY MODULE (SKREEM) - BLACK 6 WAY355
SPEED CONTROL SERVO (GAS) - BLACK 4 WAY356
THROTTLE POSITION SENSOR (GAS) - GRAY 3 WAY356
VEHICLE SPEED SENSOR (MTX) - BLACK 3 WAY356
10.0 SCHEMATIC DIAGRAMS357
11.0 CHARTS AND GRAPHS359