


8.0 COMPONENT LOCATIONS

8.1 CONTROL MODULE LOCATIONS


ECM - DIESEL

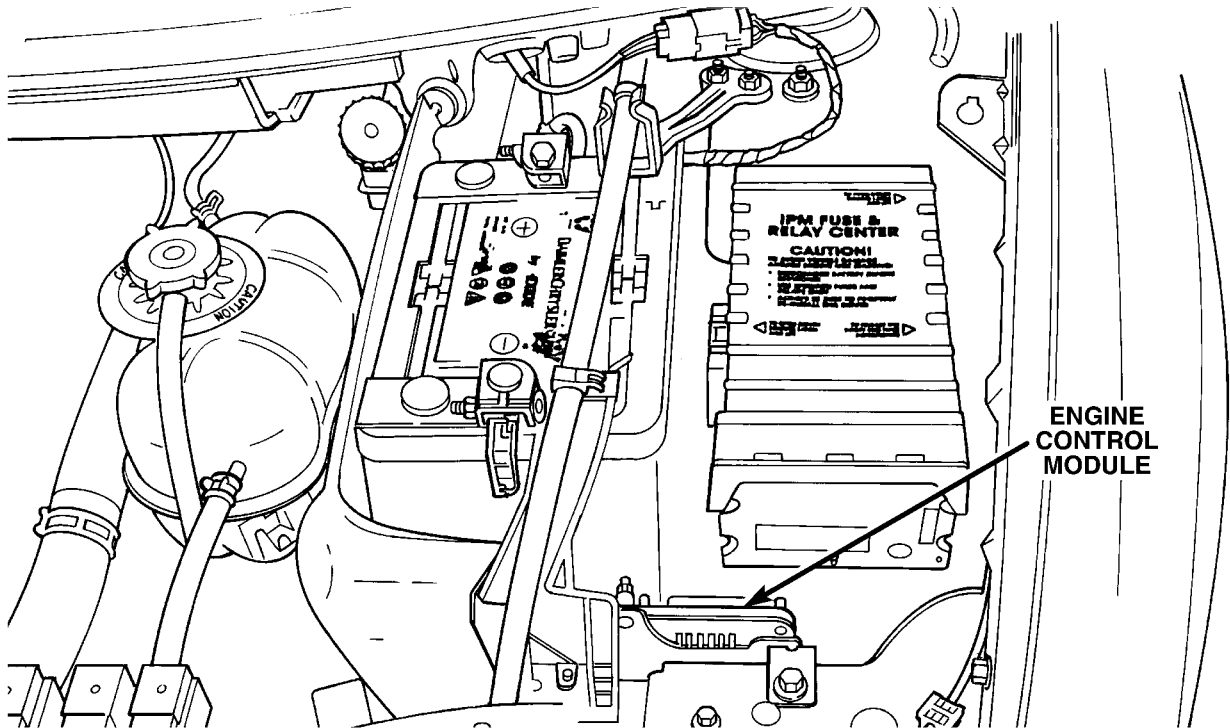


80bc3b33

TCM-EATX

PCM-NGC

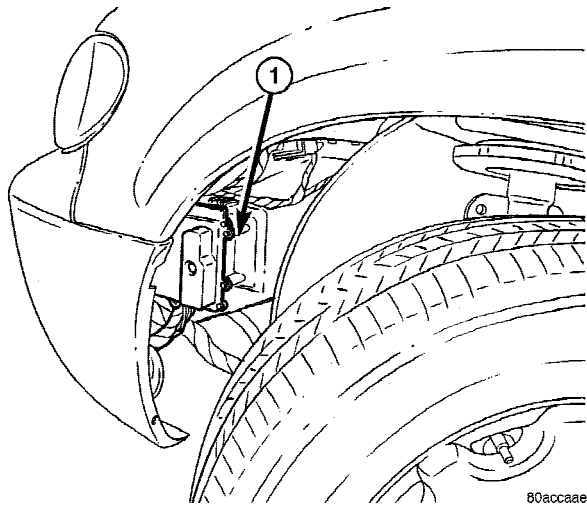


80accaae

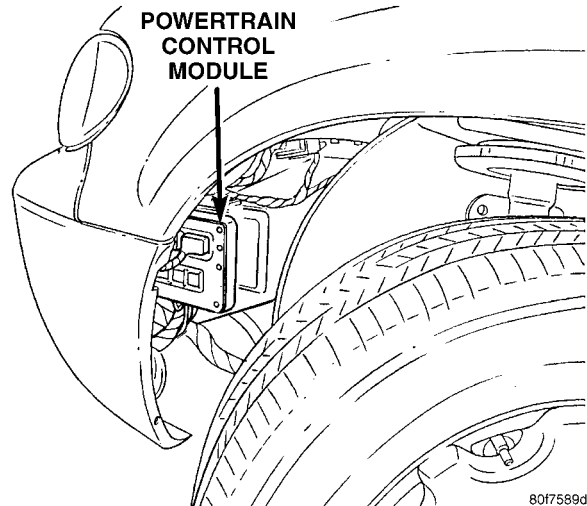

80f7589d

COMPONENT LOCATIONS

8.2 PRESSURE PORT LOCATIONS

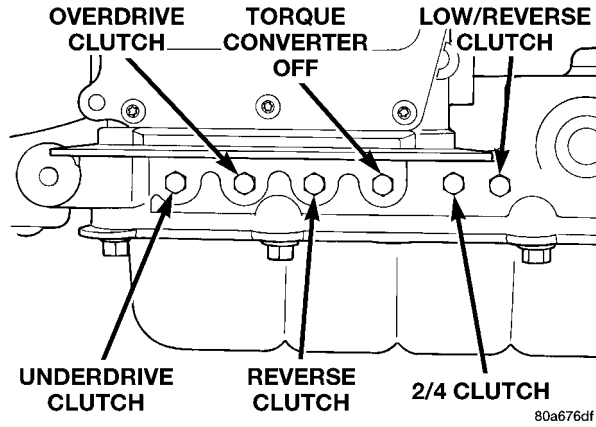

8.3 TRANSMISSION COMPONENT LOCATIONS

