




8W-43 OCCUPANT RESTRAINT SYSTEM


Component	Page
Belt Tension Sensor	8W-43-8
Clockspring	8W-43-4
Driver Airbag Squib 1	8W-43-4
Driver Airbag Squib 2	8W-43-4
Driver Knee Blocker Airbag Squib	8W-43-4
Driver Seat Belt Switch	8W-43-3
Driver Seat Belt Tensioner	8W-43-3
Front Control Module	8W-43-2, 8
G200	8W-43-2
G201	8W-43-2
G301	8W-43-8
Instrument Cluster	8W-43-2
Instrument Panel Switch Bank	8W-43-2
Integrated Power Module	8W-43-2, 8
Left Curtain Airbag Squib	8W-43-6
Left Front Impact Sensor	8W-43-6

Component	Page
Left Side Impact Sensor 1	8W-43-6
Left Side Impact Sensor 2	8W-43-6
Left Side Impact Sensor 3	8W-43-6
Occupant Classification Module	8W-43-2, 8
Occupant Restraint Controller	8W-43-2, 3, 4, 5, 6, 7, 8
Passenger Airbag	8W-43-5
Passenger Airbag On/Off Indicator Lamp . .	8W-43-2
Passenger Seat Belt Switch	8W-43-5
Passenger Seat Belt Tensioner	8W-43-5
Passenger Seat Weight Sensor	8W-43-8
Right Curtain Airbag Squib	8W-43-7
Right Front Impact Sensor	8W-43-7
Right Side Impact Sensor 1	8W-43-7
Right Side Impact Sensor 2	8W-43-7
Right Side Impact Sensor 3	8W-43-7

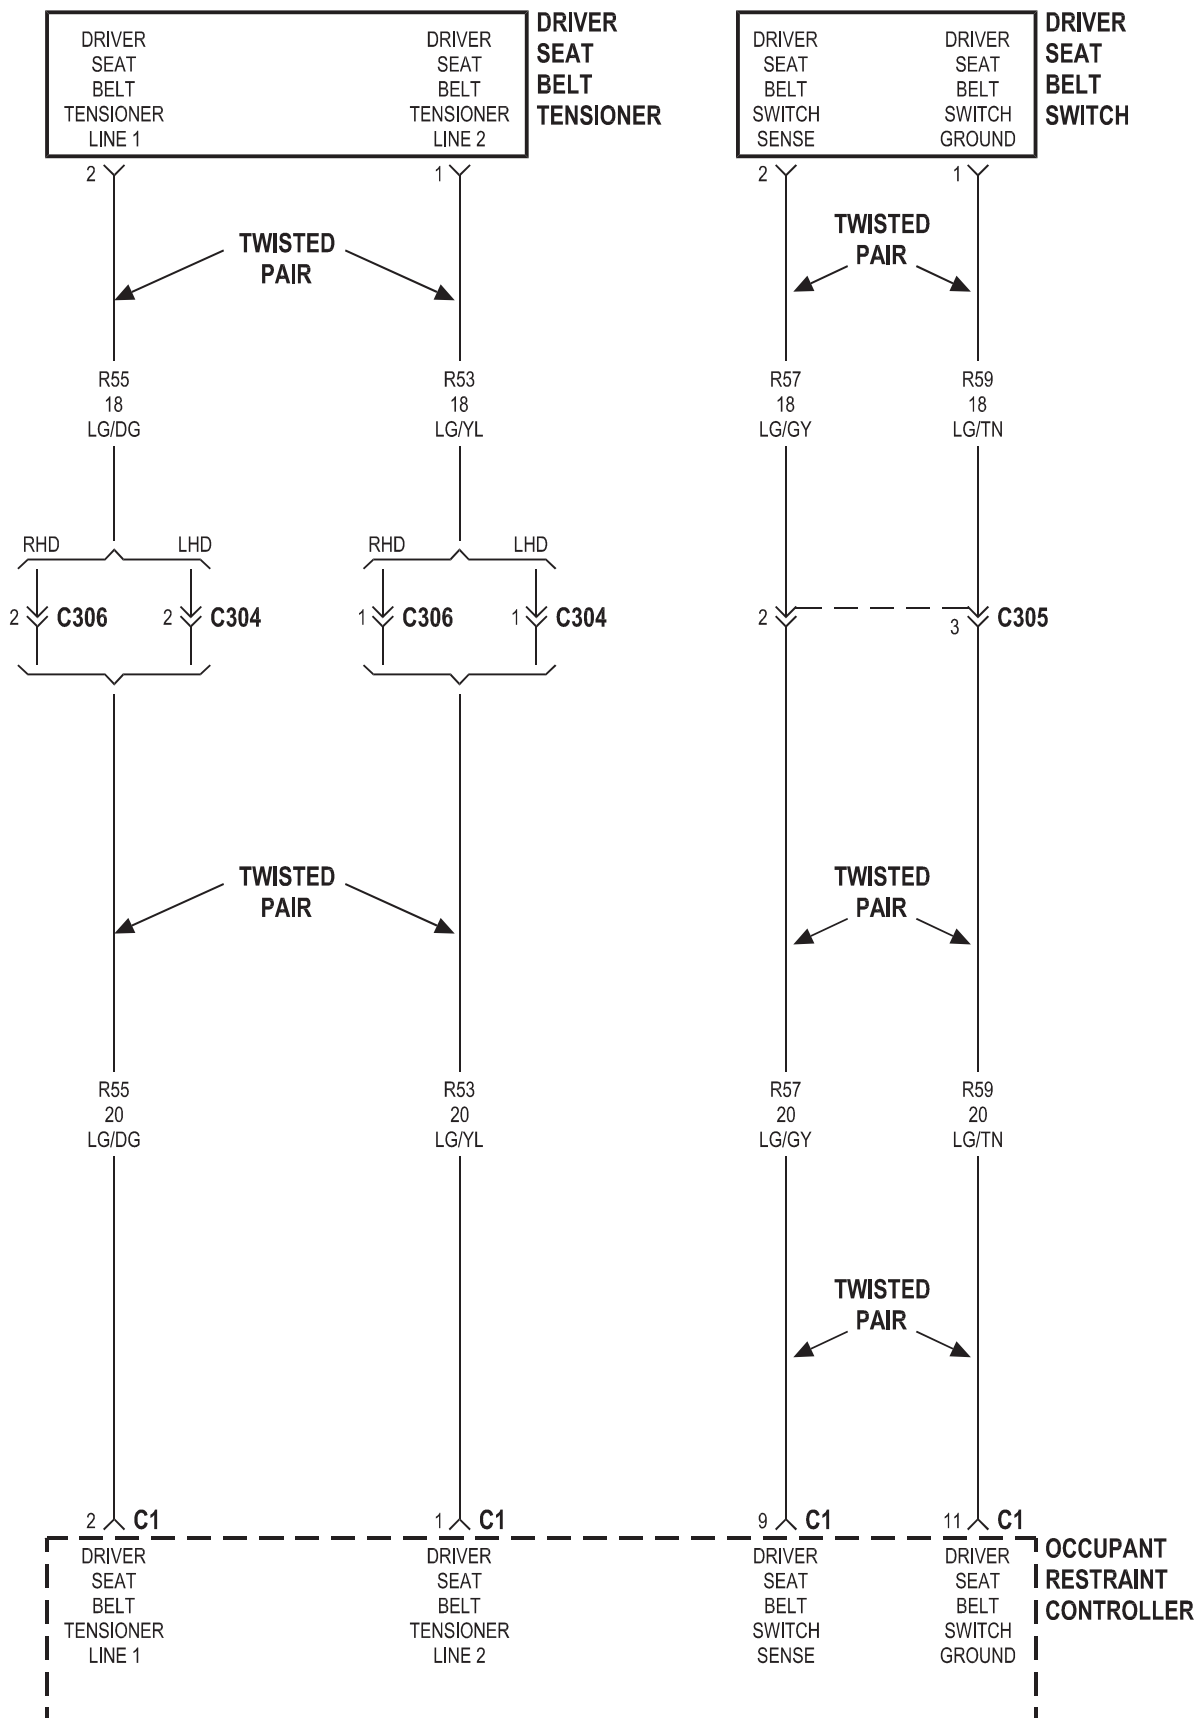

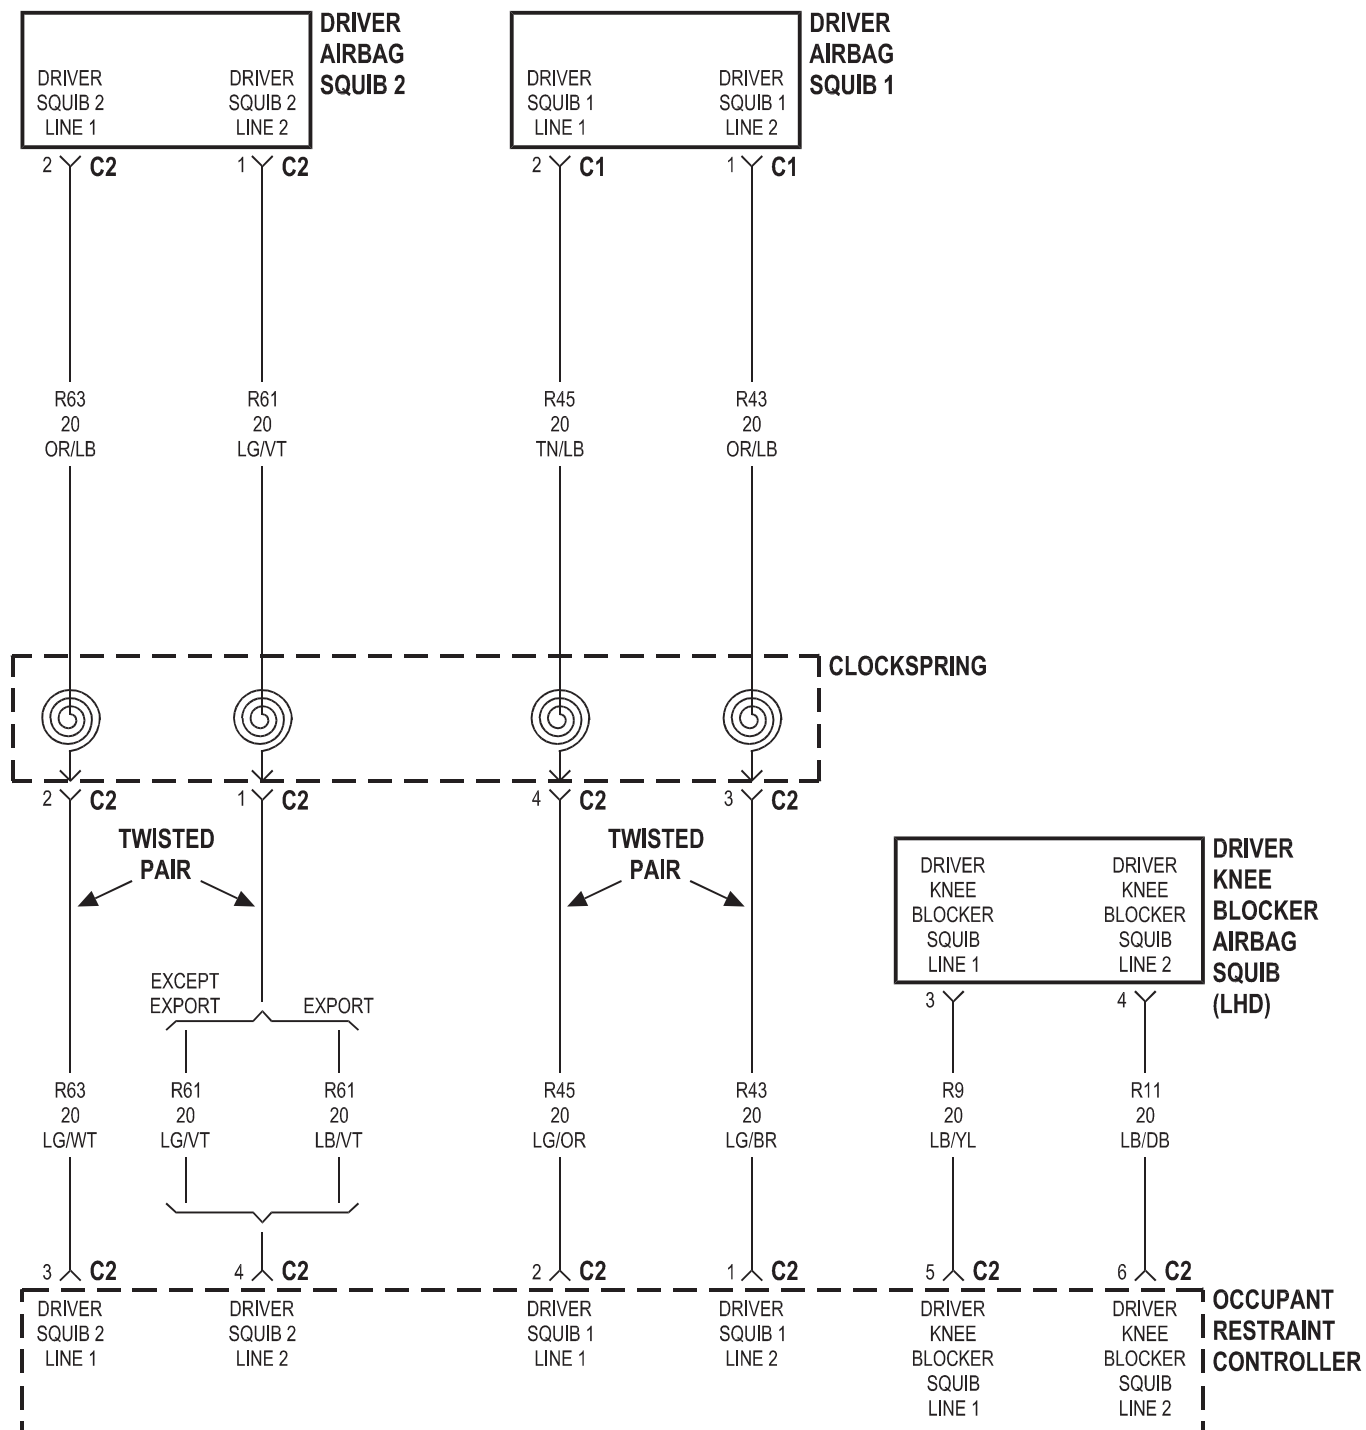

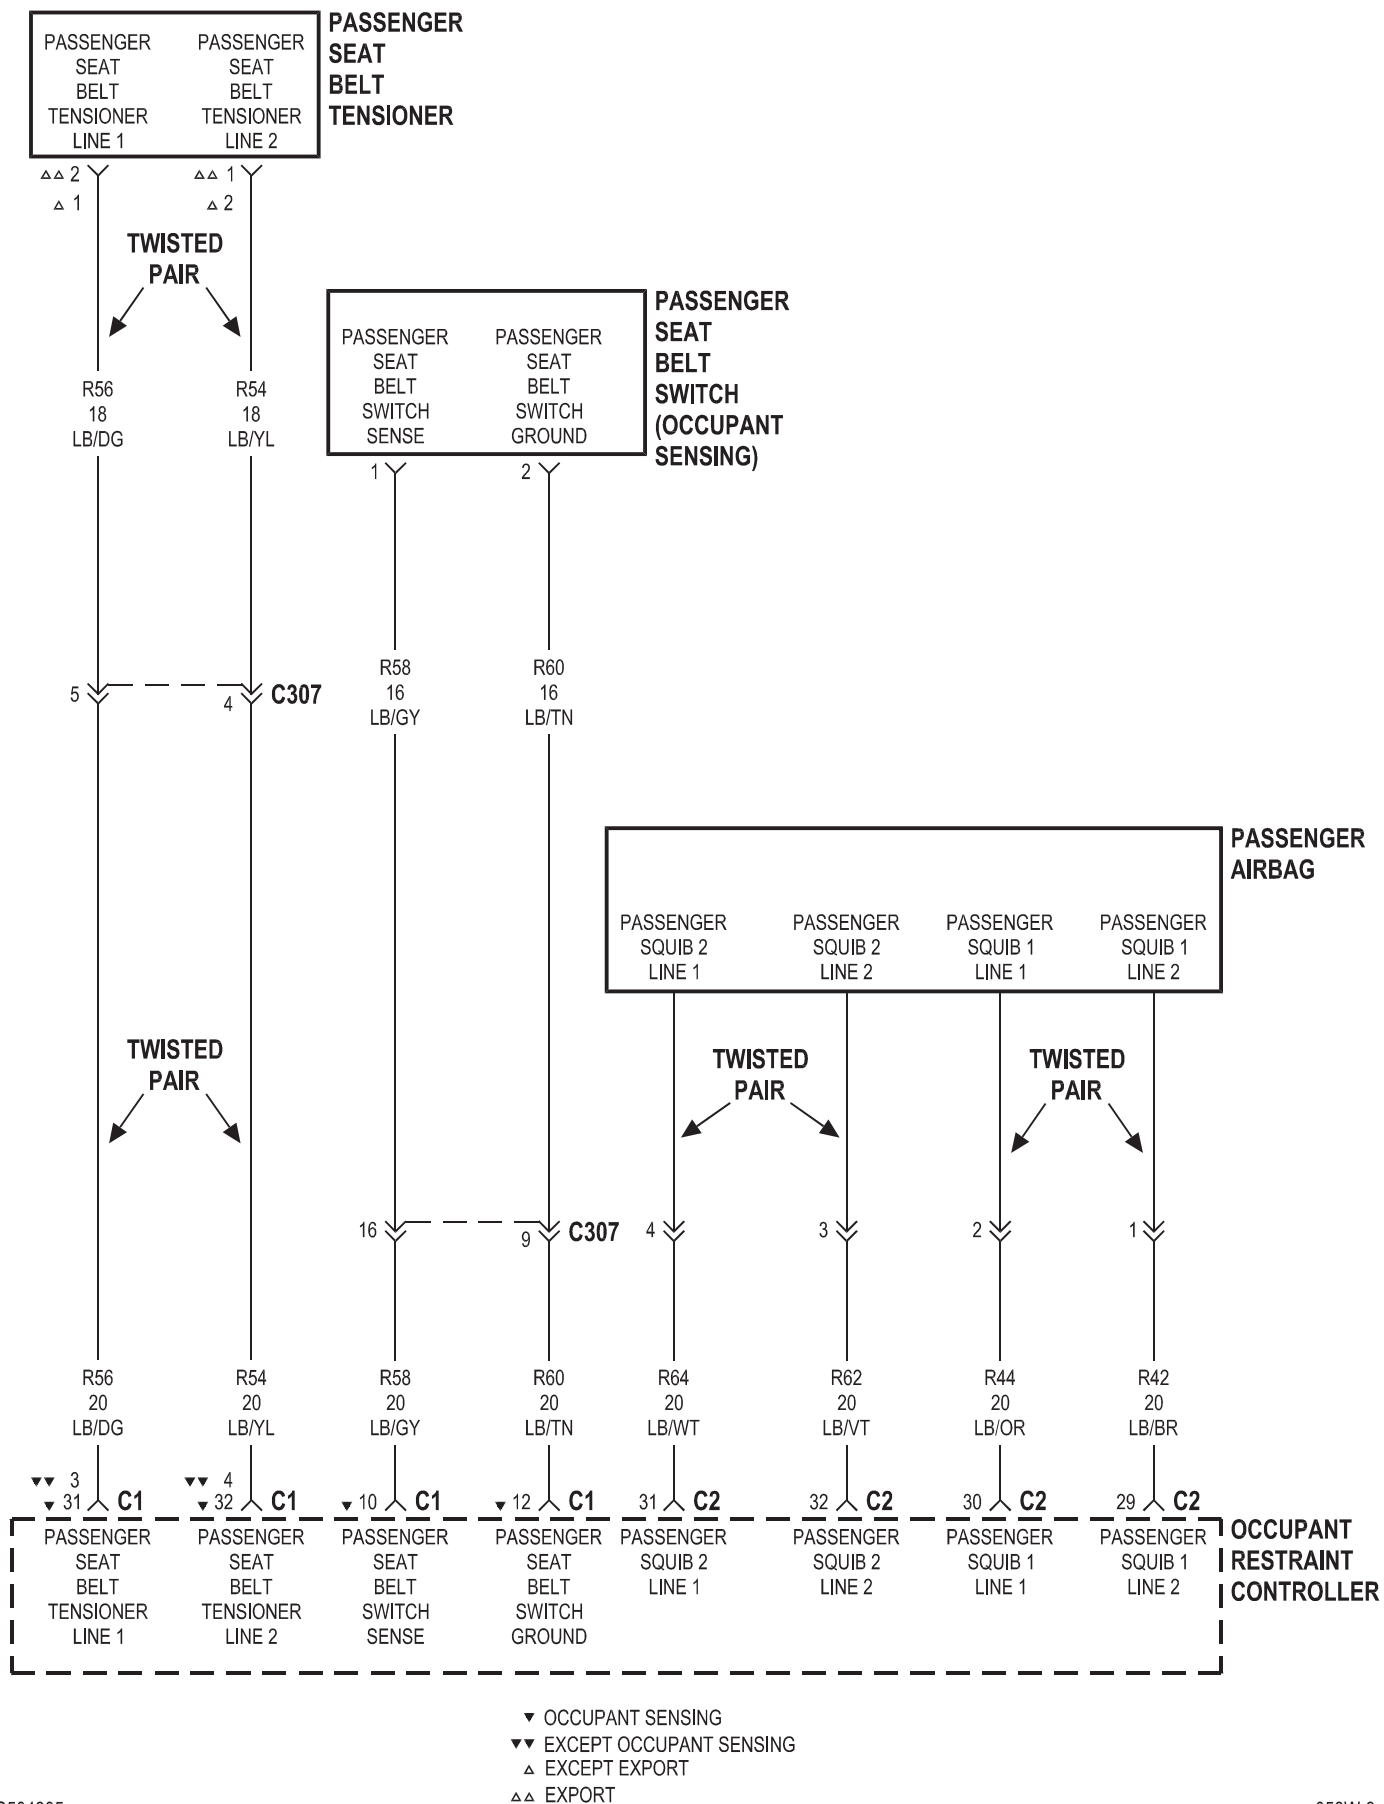

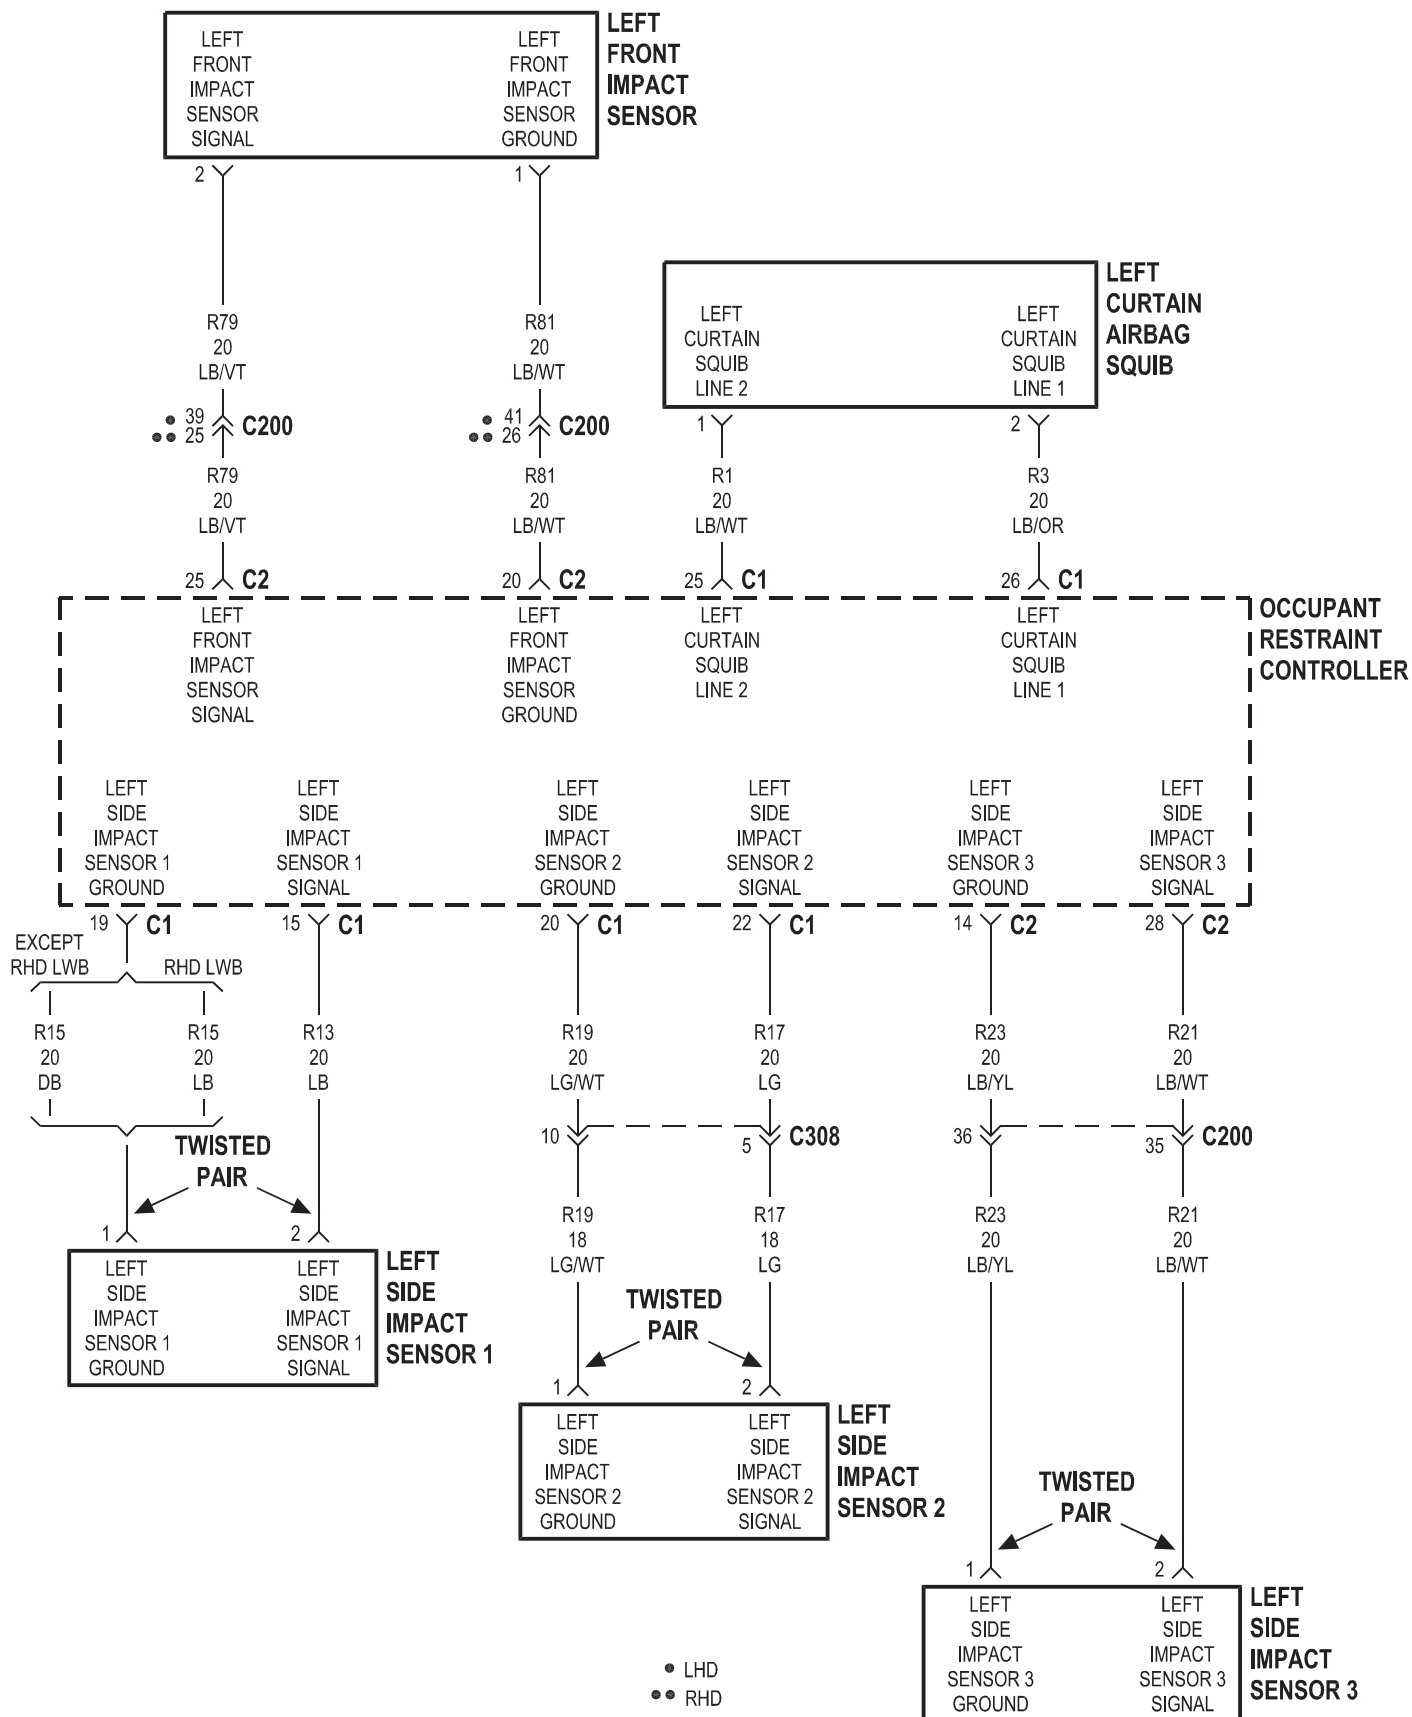

SIDE AIRBAG

