





8W-63 POWER SEATS

Component	Page	Component	Page
Body Control Module	8W-63-5, 9	Fuse 22	8W-63-2, 4
Driver Heated Seat Back	8W-63-9	G300	8W-63-2, 4, 6, 9
Driver Heated Seat Cushion	8W-63-9	G301	8W-63-3, 10, 11
Driver Heated Seat Module	8W-63-3, 4, 9	Instrument Panel Switch Bank	8W-63-9
Driver Power Seat Front Riser Motor . . .	8W-63-2, 7	Integrated Power Module	8W-63-2, 4, 5
Driver Power Seat Front Riser Position Sensor	8W-63-8	Left Sliding Door Control Module	8W-63-5
Driver Power Seat Horizontal Motor . . .	8W-63-2, 7	Memory Seat/Mirror/Adjustable Pedals Module	8W-63-4, 5, 6, 7, 8
Driver Power Seat Horizontal Position Sensor	8W-63-8	Memory Set Switch	8W-63-5
Driver Power Seat Rear Riser Motor . . .	8W-63-2, 7	Passenger Heated Seat Back	8W-63-10, 11
Driver Power Seat Rear Riser Position Sensor	8W-63-8	Passenger Heated Seat Cushion	8W-63-10, 11
Driver Power Seat Recliner Motor	8W-63-2, 7	Passenger Heated Seat Module	8W-63-10, 11
Driver Power Seat Recliner Position Sensor	8W-63-8	Passenger Power Seat Front Riser Motor . .	8W-63-3
Driver Power Seat Switch	8W-63-2, 6	Passenger Power Seat Horizontal Motor . .	8W-63-3
Front Control Module	8W-63-5	Passenger Power Seat Rear Riser Motor . .	8W-63-3
		Passenger Power Seat Recliner Motor	8W-63-3
		Passenger Power Seat Switch	8W-63-3
		Power Seat Circuit Breaker	8W-63-2, 3, 4

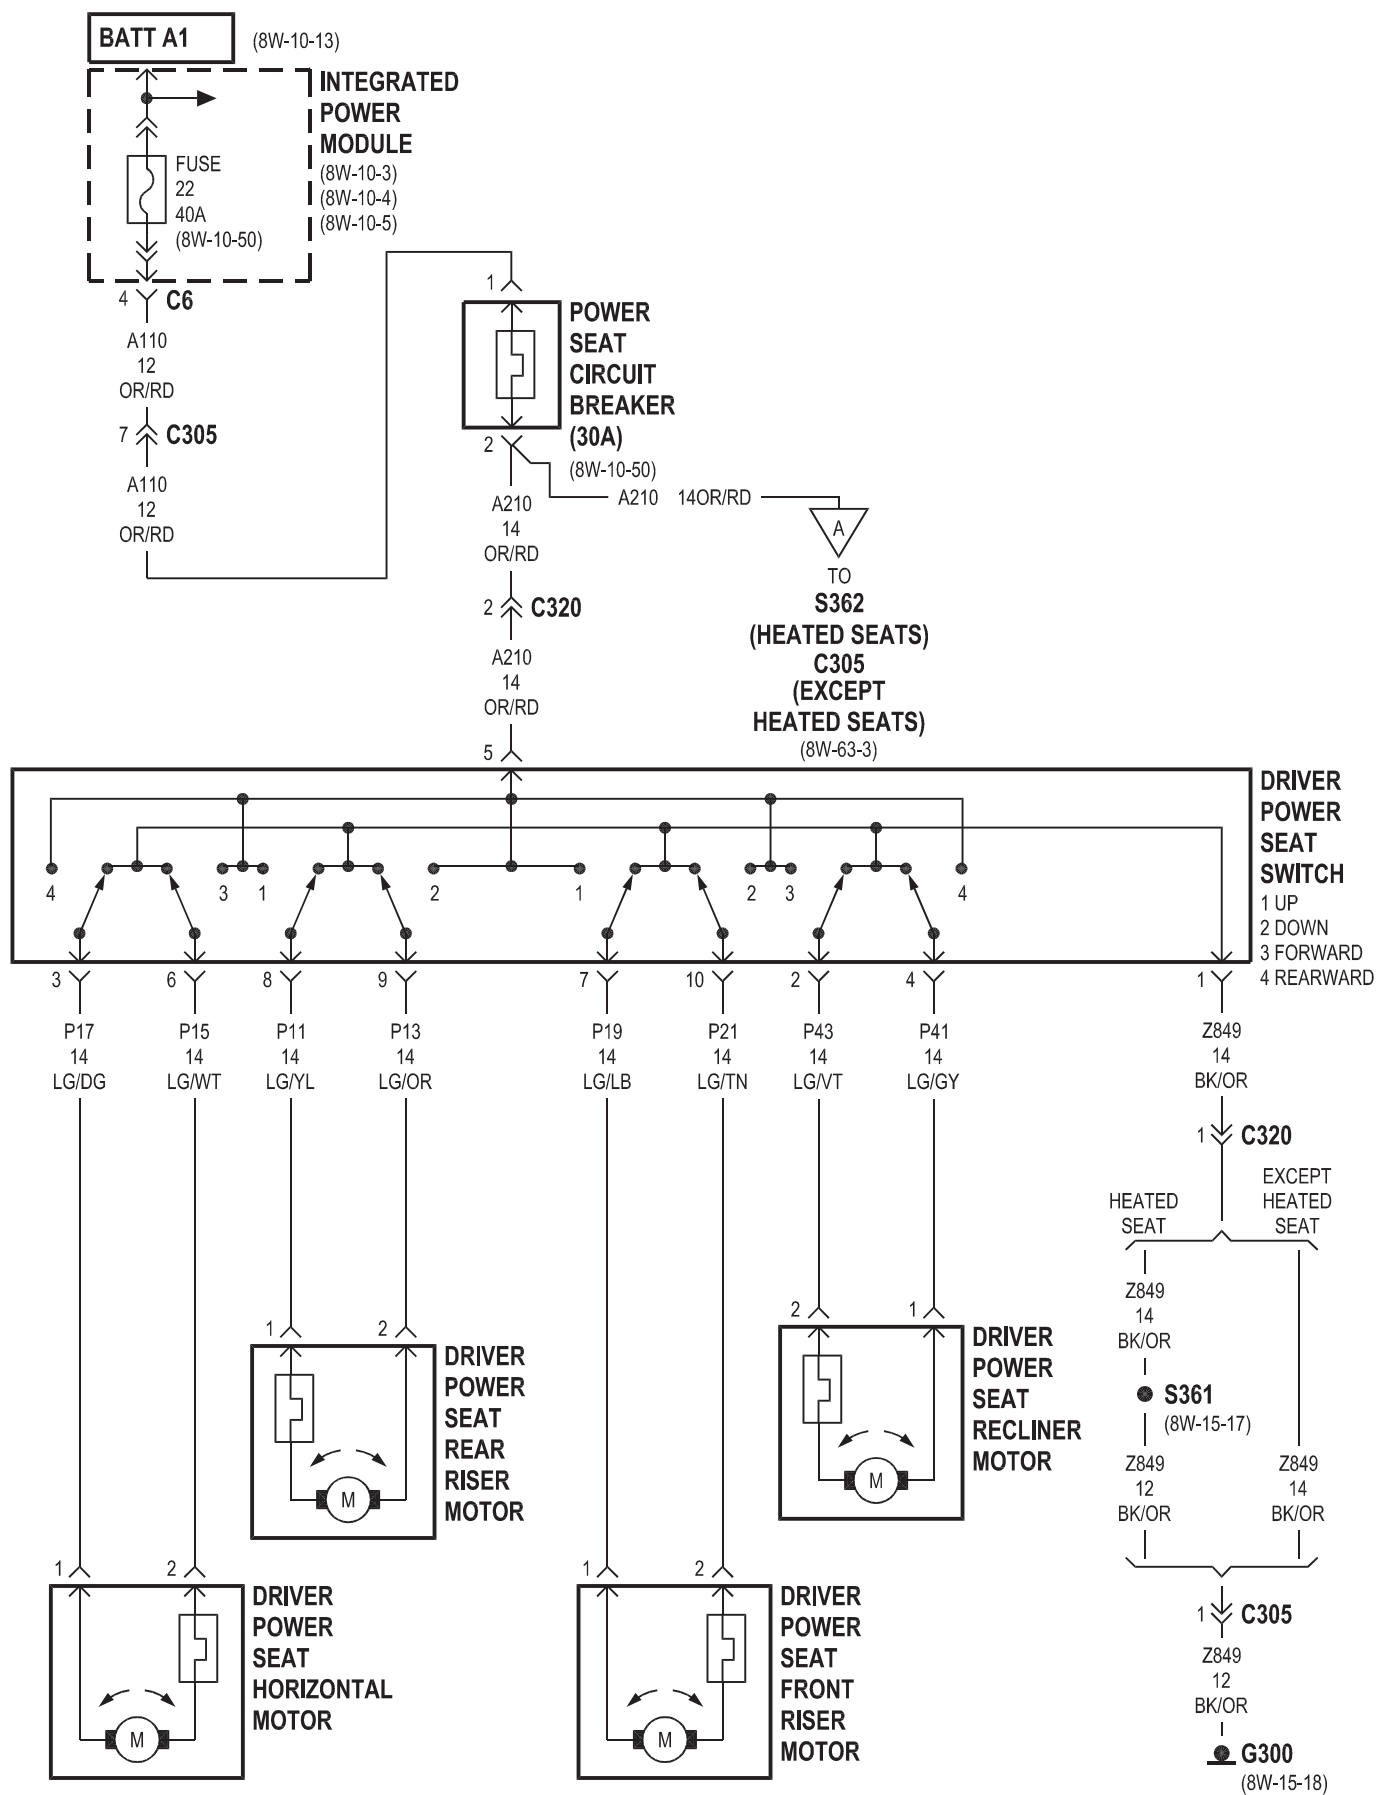

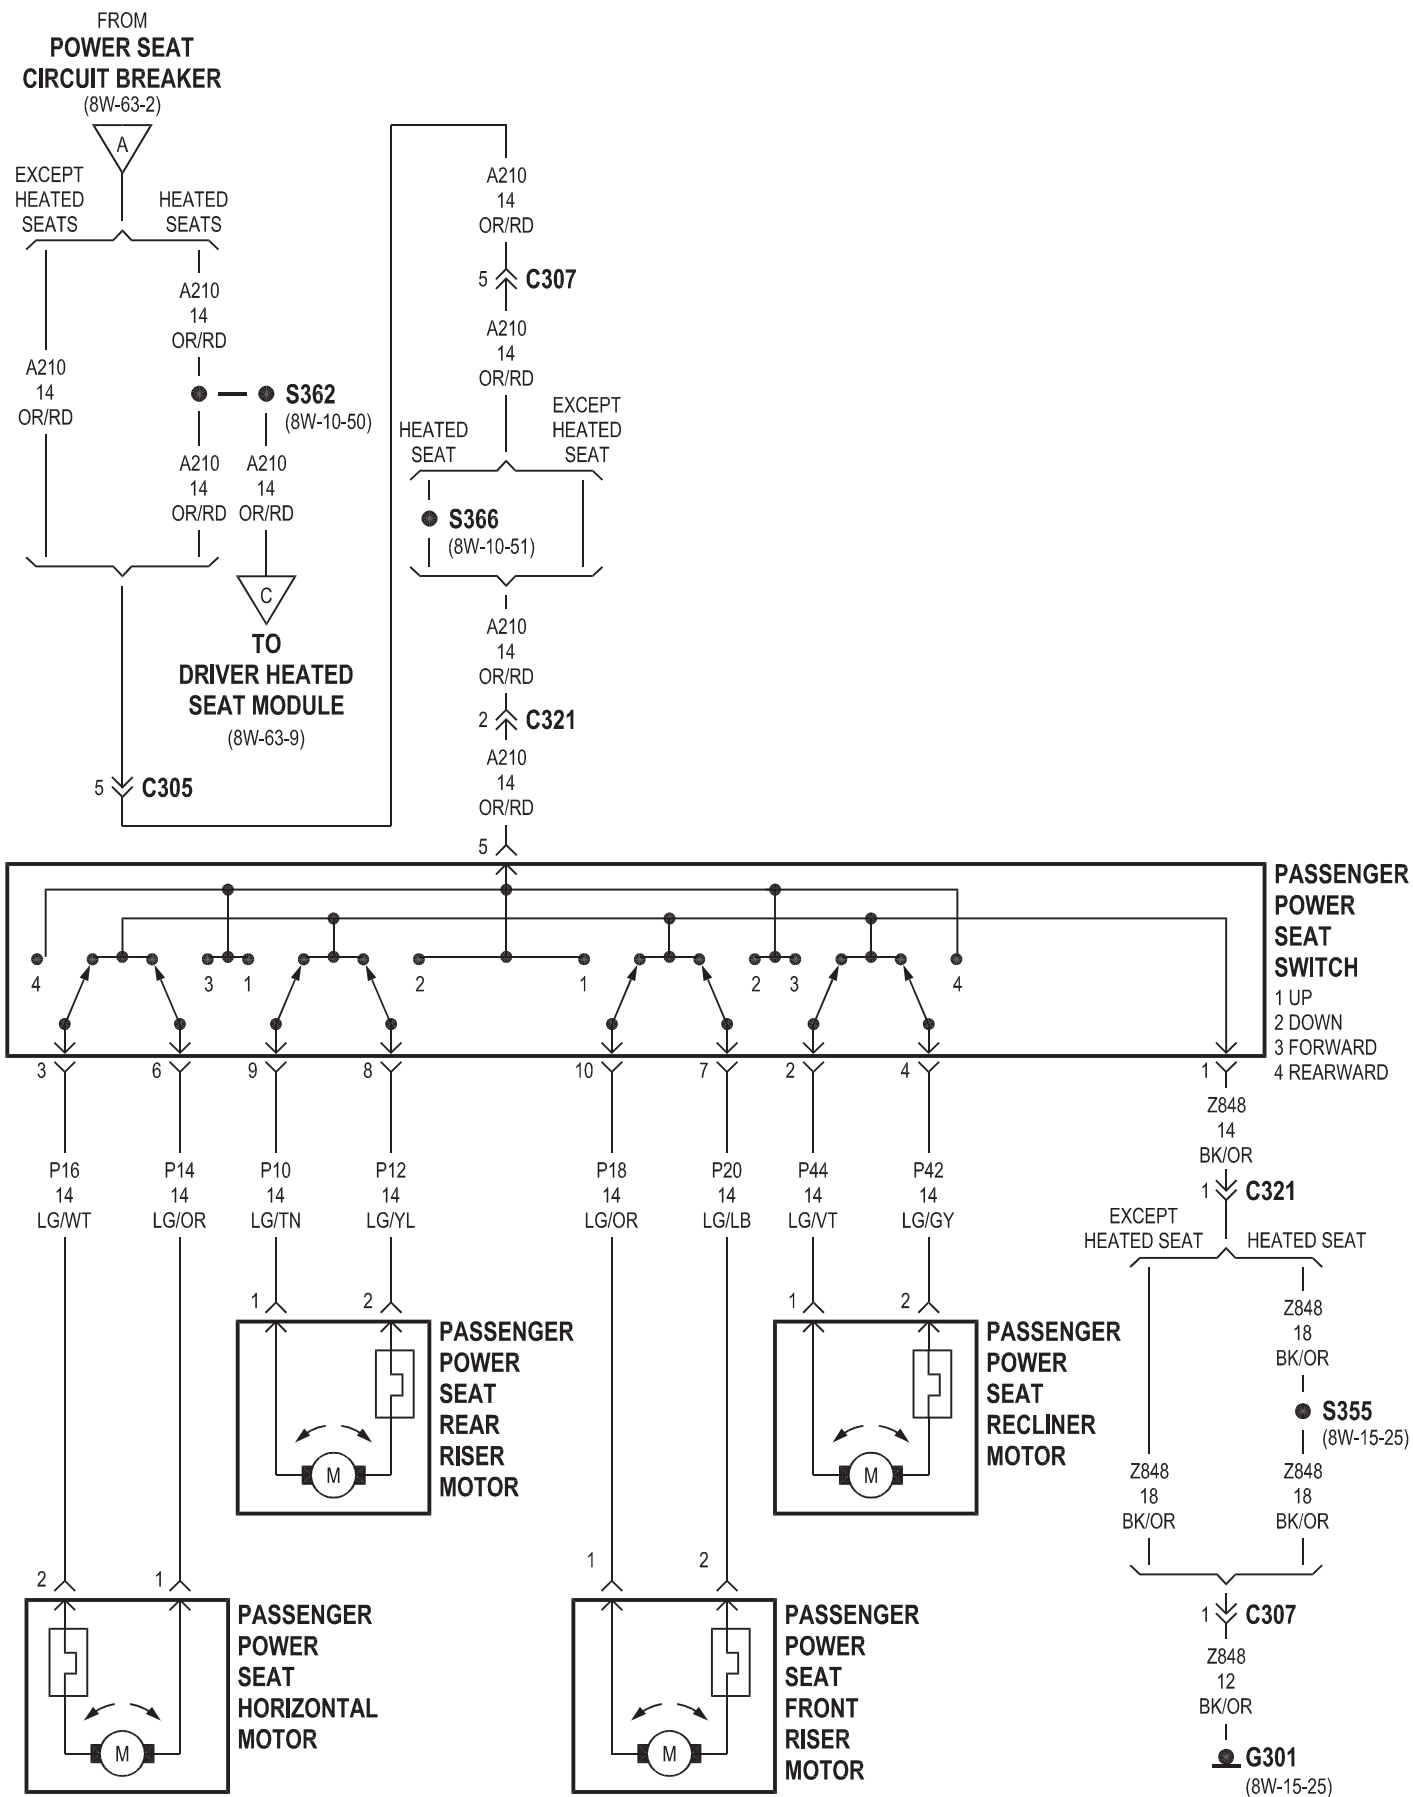

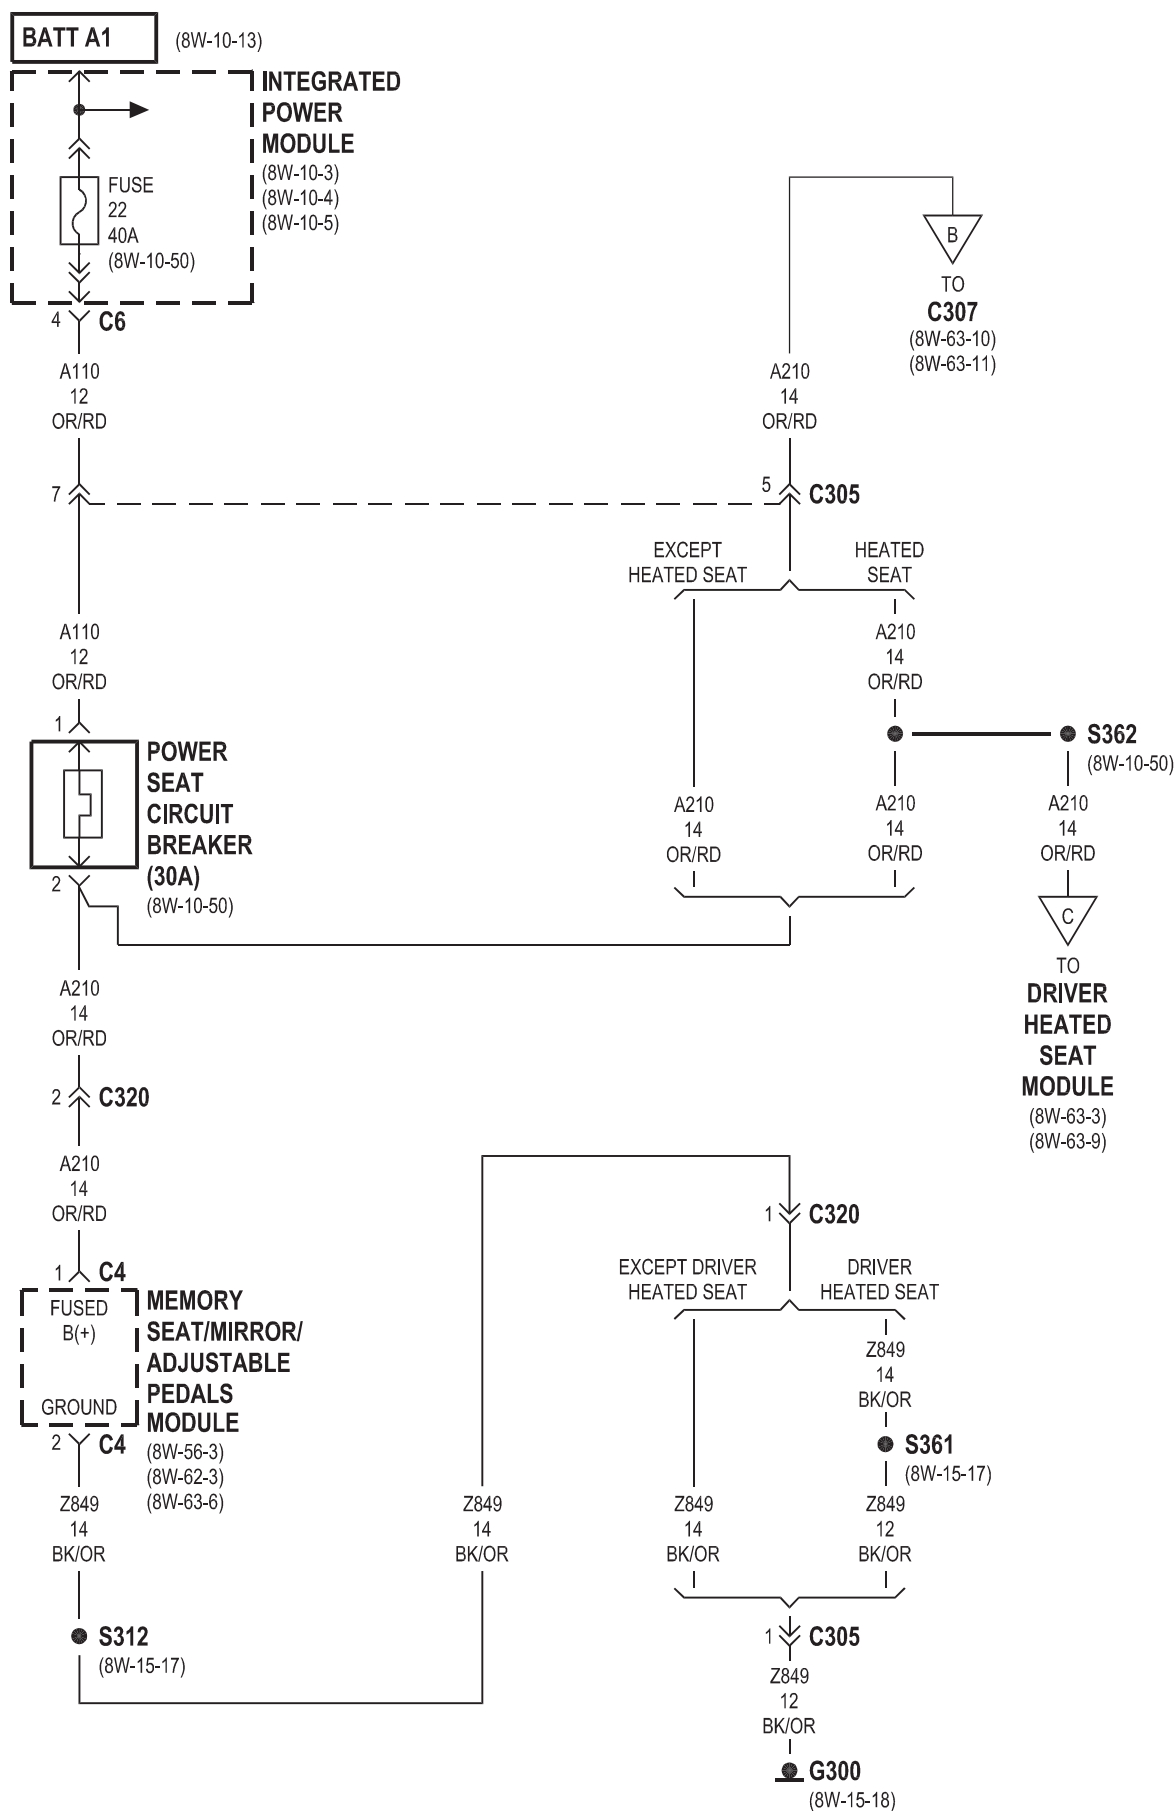

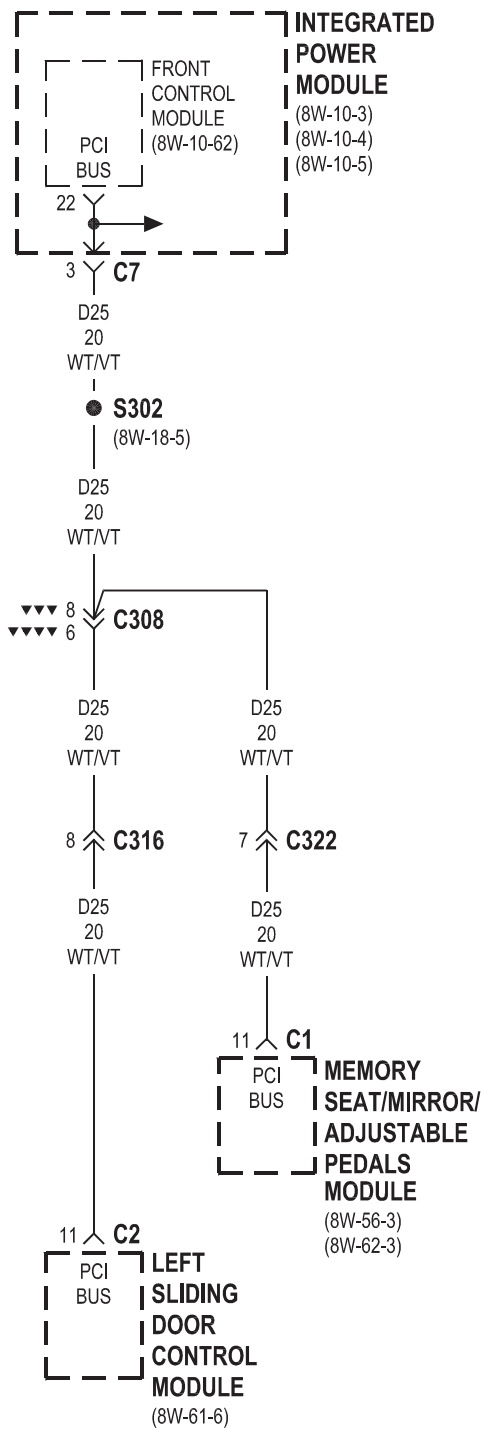

▼▼▼ SIDE AIRBAG
▼▼▼▼ EXCEPT SIDE AIRBAG

