




2.7L ENGINE

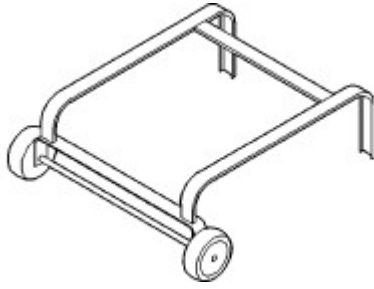


Dolly 6135

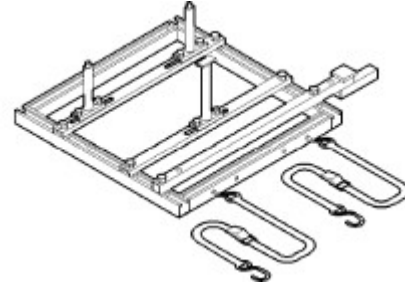


Cradle 6710

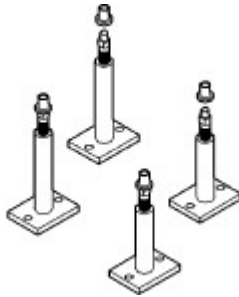


Post Kit Engine Cradle 6848

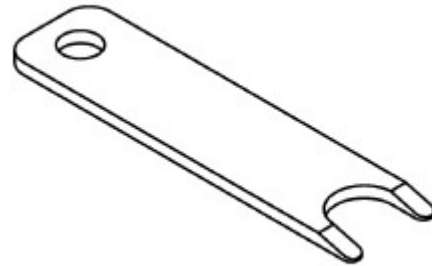


Disconnect Tool, 6638A

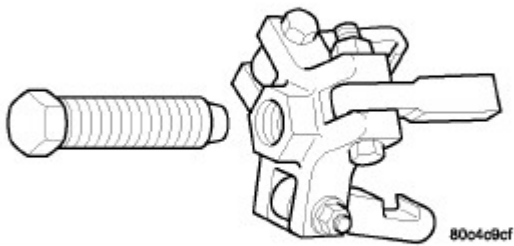


Puller 8454

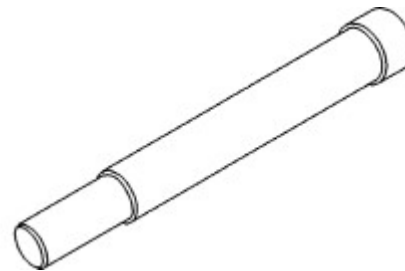


Crankshaft Damper Remover Insert 8194

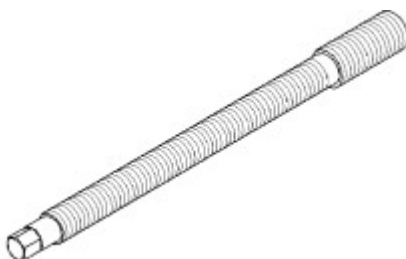

Crankshaft Damper Installer Screw 8179

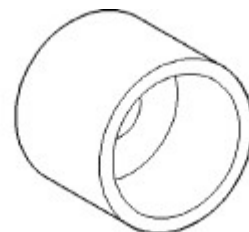


Crankshaft Damper Installer 6792-1

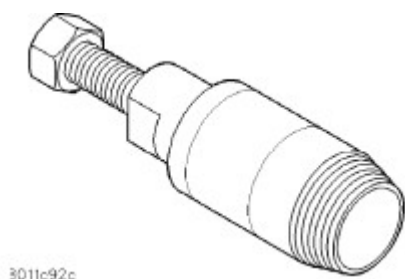


3011c92c

Crankshaft Seal Remover 6771

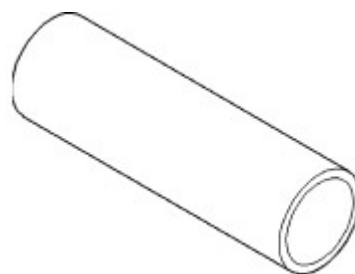


Crankshaft Seal and Sprocket Installer 6780-1

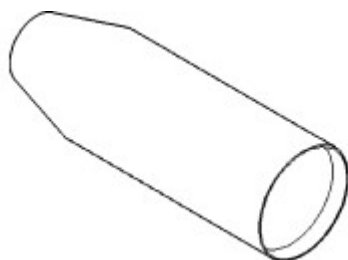


Crankshaft Seal Protector 6780-2




Puller 5048

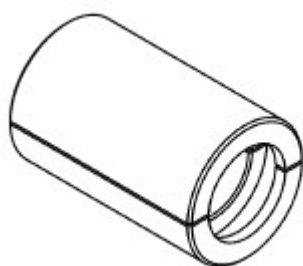


Puller Adaptor 8539

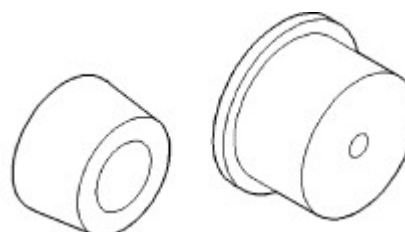


Crankshaft Rear Seal Guide 6926-1 and Installer 6926-2

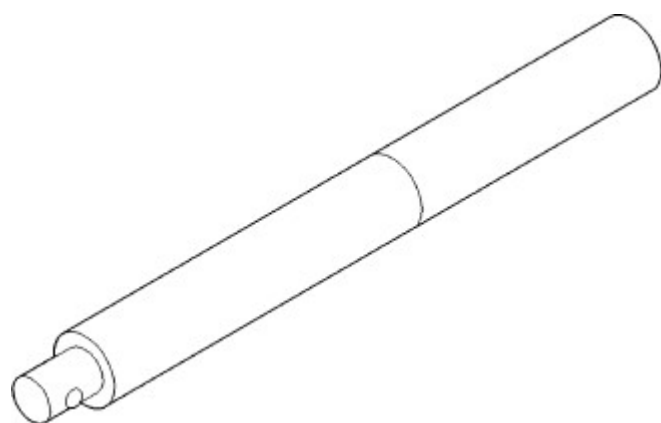


Driver Handle C-4171

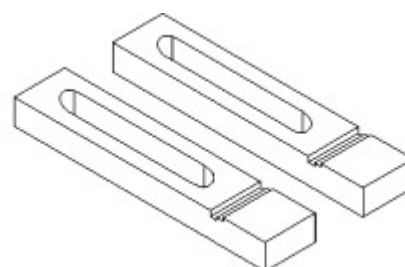

Crankshaft Real Seal Retainer Alignment Fixture 8225

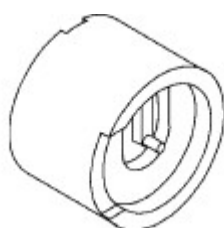


Timing Chain Tensioner Resetting Gauge 8186

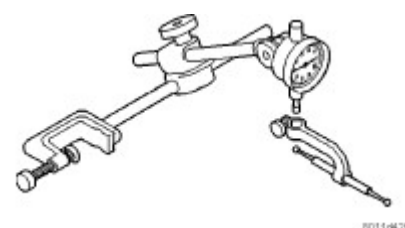


0011d62b

Dial Indicator C-3339

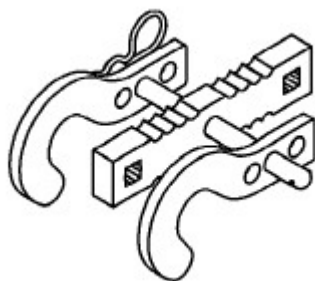


Valve Spring Compressor 8215-A

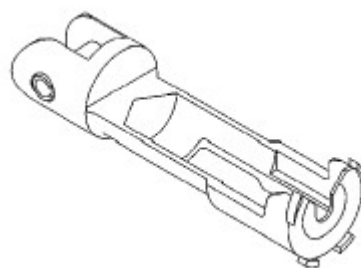


Adaptor 8216-A




Valve Spring Compressor C-3422-D

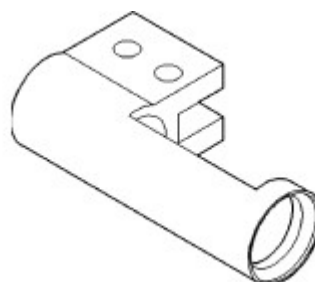


Valve Spring Adapter 6526

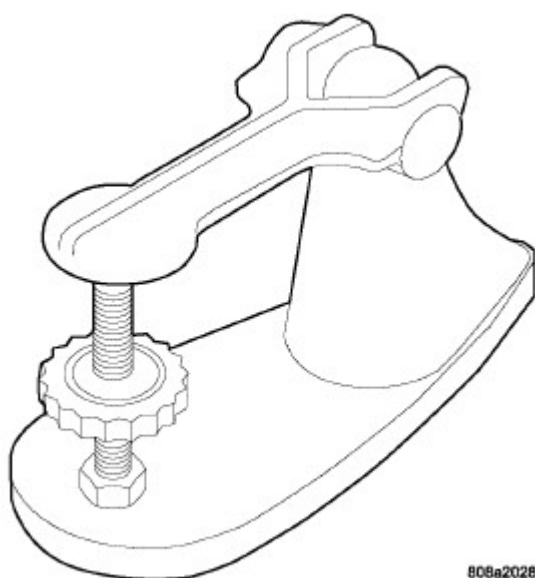


Valve Spring Tester C-647

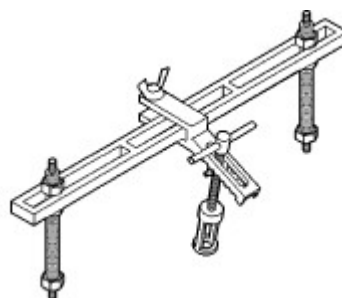


Valve Spring Compressor MD-998772-A

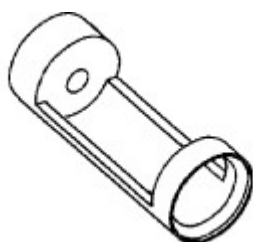


Valve Spring Adapter 6527

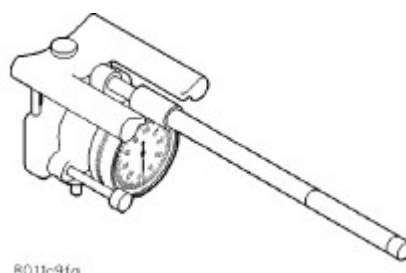


Indicator Bore Size C-119

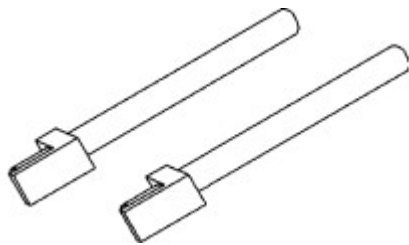

Connecting Rod Installation Guides 8189

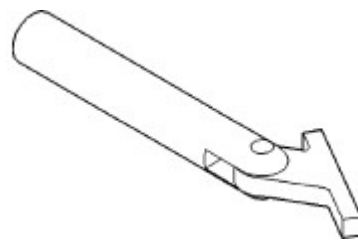


Main Bearing Remover/Installer C-3059

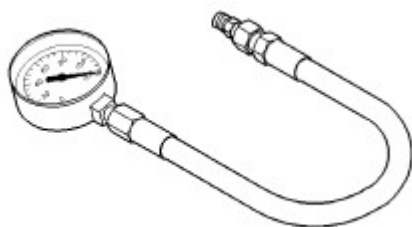


Pressure Gauge C-3292



Adapter 8406

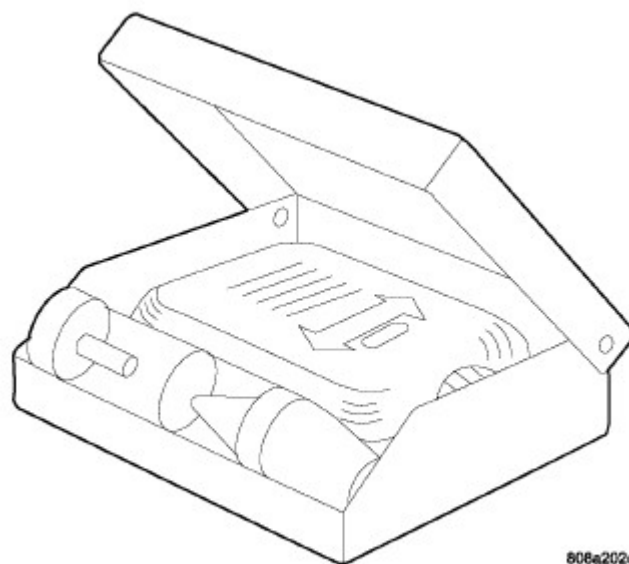

806a202c

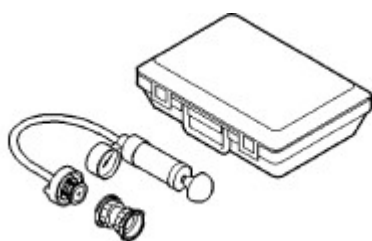

Cooling System Tester 7700

Combustion Leak Tester C-3685-A