


Position of Parts in Instrument Panel <LHD>

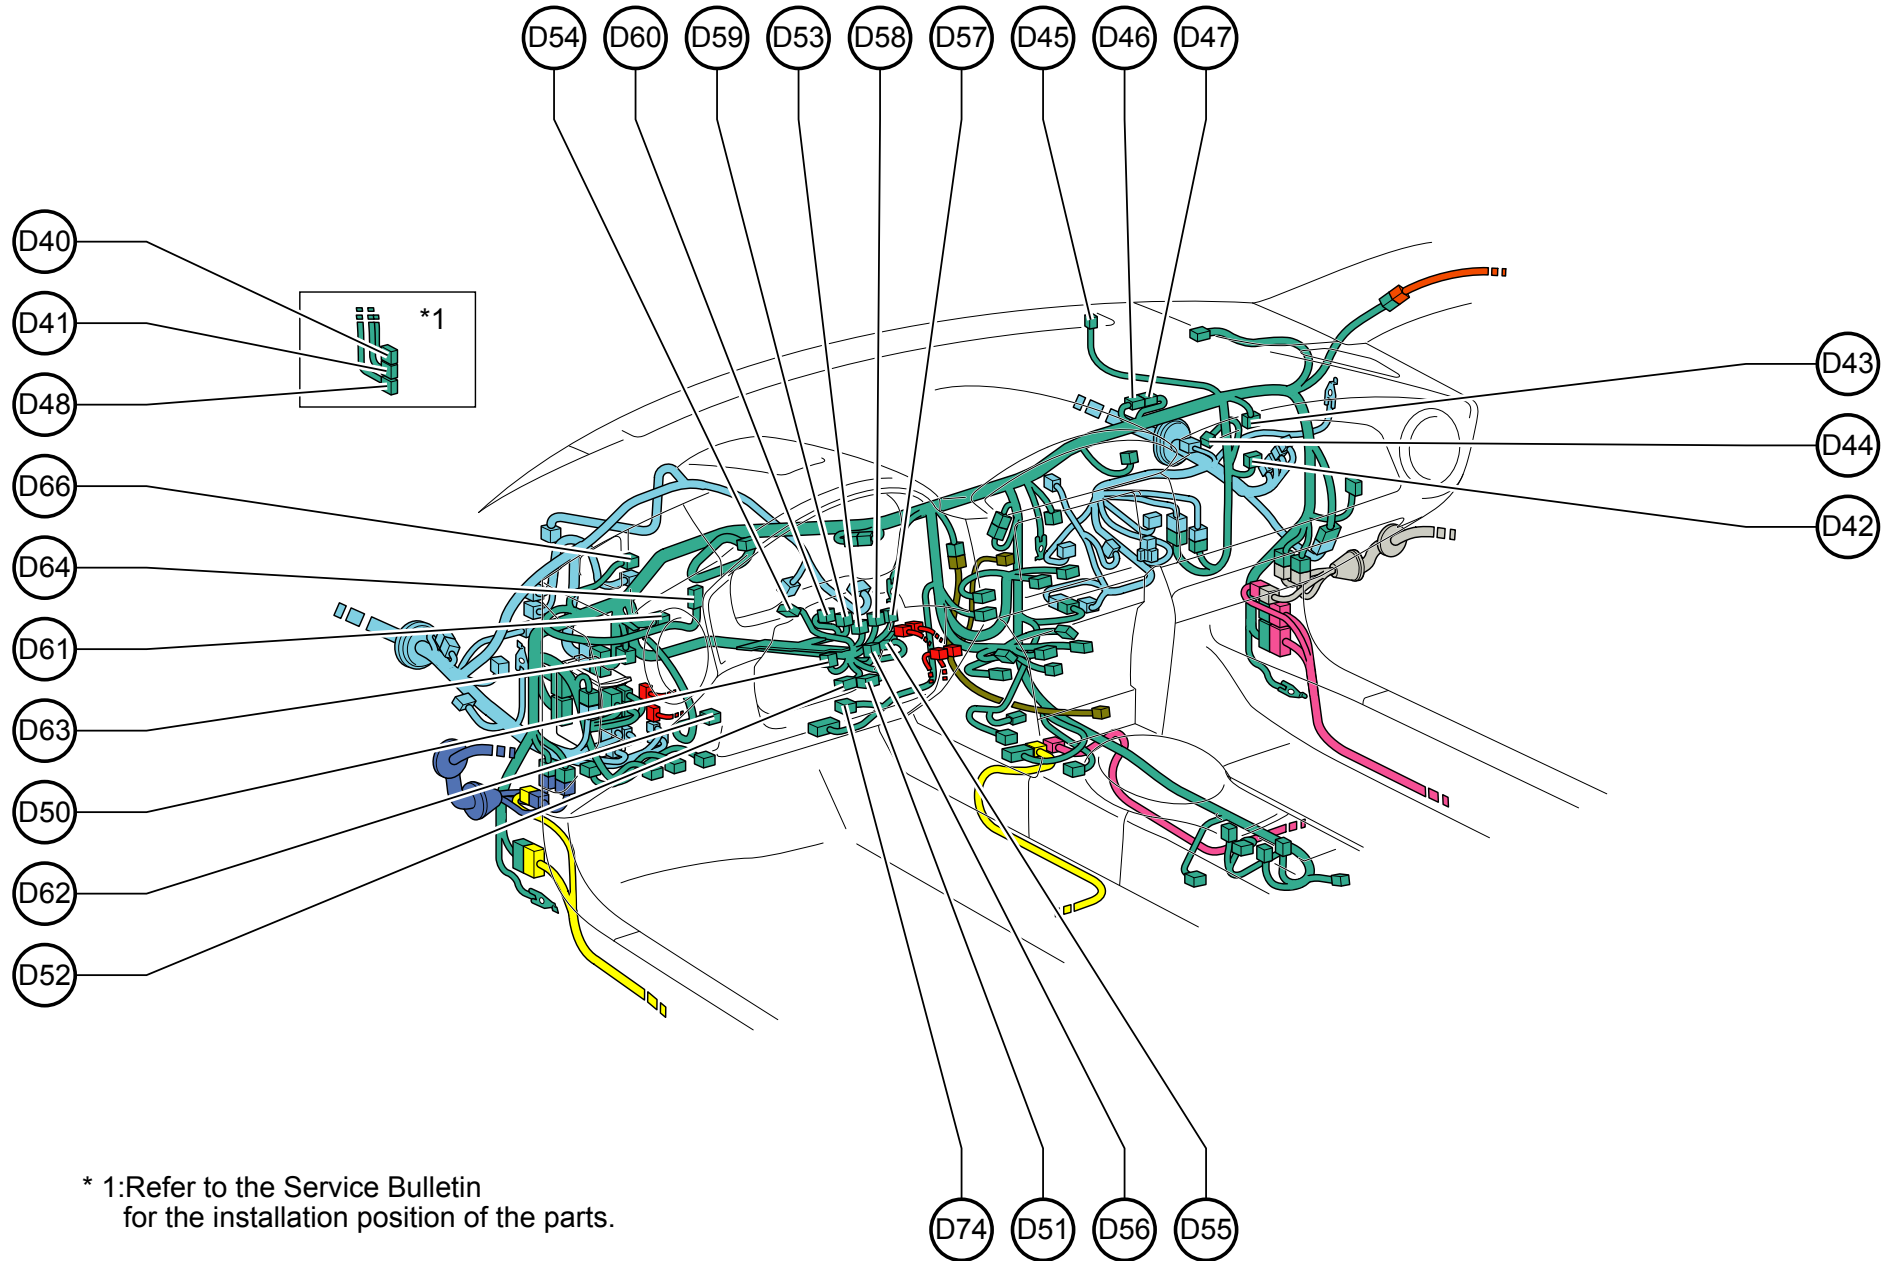


Position of Parts in Instrument Panel <LHD>


- D 40 Certification ECU Assembly
- D 41 Certification ECU Assembly
- D 42 Shift Lock Release Button Cover
- D 43 Junction Connector
- D 44 No. 1 Power Outlet Socket Assembly
- D 45 Automatic Light Control Sensor
- D 46 Junction Connector
- D 47 Junction Connector
- D 48 Certification ECU Assembly
- D 50 Headlight Dimmer Switch Assembly
- D 51 Spiral Cable with Sensor Sub-Assembly
- D 52 Spiral Cable with Sensor Sub-Assembly
- D 53 Un-Lock Warning Switch Assembly (Ignition Switch Lock Cylinder Assembly)
- D 54 Transponder Key Amplifier
- D 55 Ignition or Starter Switch Assembly
- D 56 Steering Sensor
- D 57 Windshield Wiper Switch Assembly
- D 58 Windshield Wiper Switch Assembly
- D 59 Steering Lock Actuator Assembly
- D 60 Key Inter Lock Solenoid (Ignition Switch Lock Cylinder Assembly)
- D 61 Turn Signal Flasher Assembly
- D 62 Lower No. 1 Instrument Panel Airbag Assembly
- D 63 Option Connector
- D 64 Trip Switch
- D 66 Front No. 2 Speaker Assembly LH
- D 74 No. 1 Cooler Thermistor

Position of Parts in Instrument Panel <LHD>


D 40
White

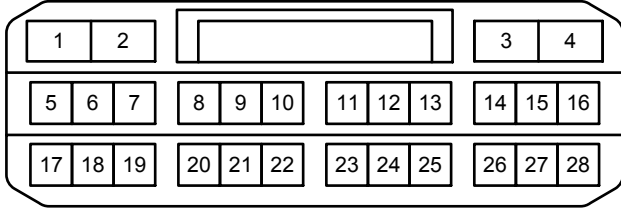


D 41
White

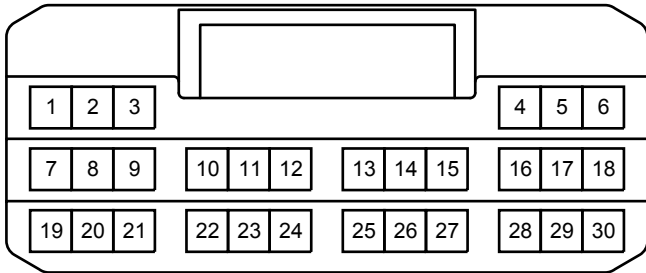


D 42
White

 

D 43
White

 


D 44
White

 


D 45
White



 
D 46
Black




D 47
Black

 

D 48
White

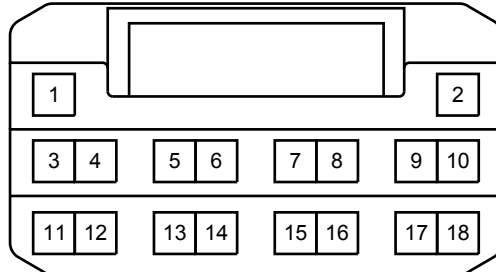


D 50
White

 

D 51
White



 
D 52
White




D 53
White



 
D 54
Black




D 55
White

 


D 56
White

 


D 57
White

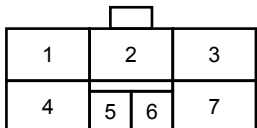

D 58
White

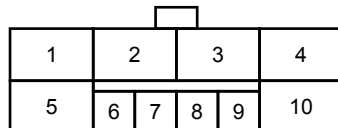

D 59
Black

 

Position of Parts in Instrument Panel <LHD>

