


INSTALLATION

HINT:


- Use the same procedures for the LH side and RH side.
- The procedures listed below are for the LH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

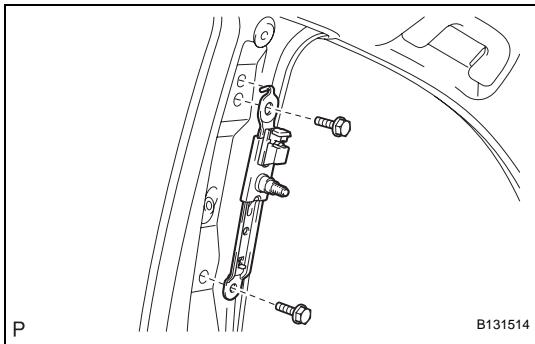

1. INSTALL FRONT SHOULDER BELT ANCHOR ADJUSTER ASSEMBLY

- Align the adjuster positioning hole with the claw, and install the adjuster with the 2 bolts as shown in the illustration.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

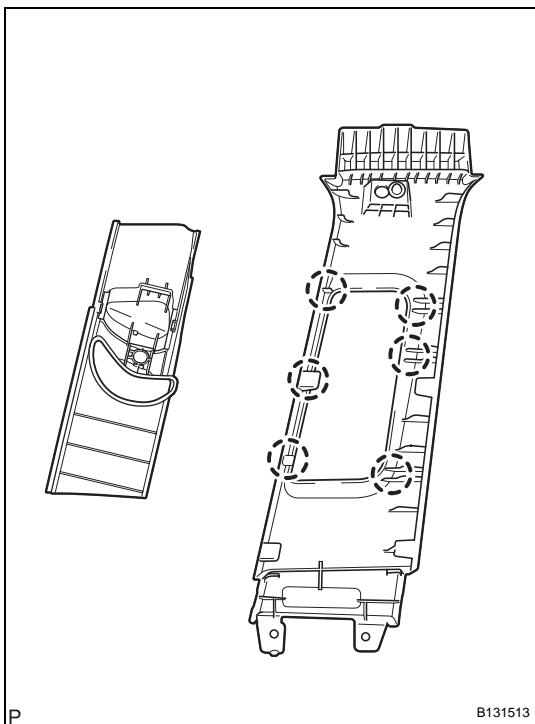

2. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

- Install the plate as shown in the illustration.


HINT:

Make sure the plate is firmly set into the garnish's claws.

3. INSTALL FRONT SEAT OUTER BELT ASSEMBLY LH


NOTICE:

Do not disassemble the retractor.

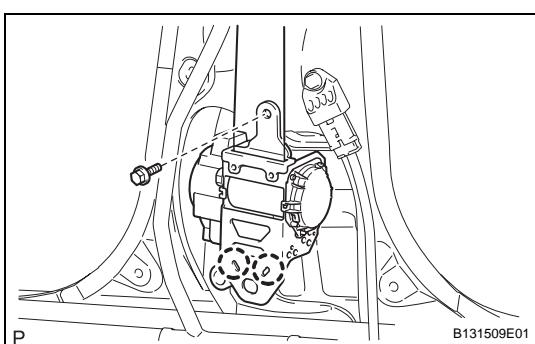


- Align the 2 claws with the seat belt positioning holes, and install the retractor of the outer belt with the bolt as shown in the illustration.

Torque: 8.5 N*m (87 kgf*cm, 75 in.*lbf)

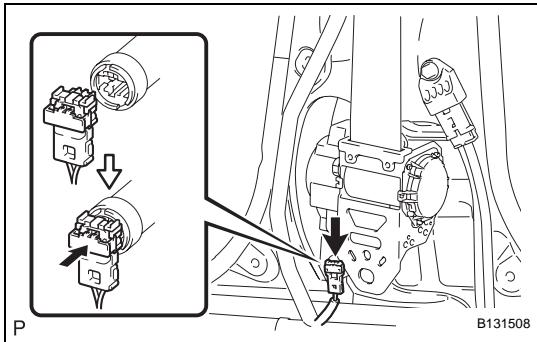


(b) Connect the pretensioner connector as shown in the illustration.

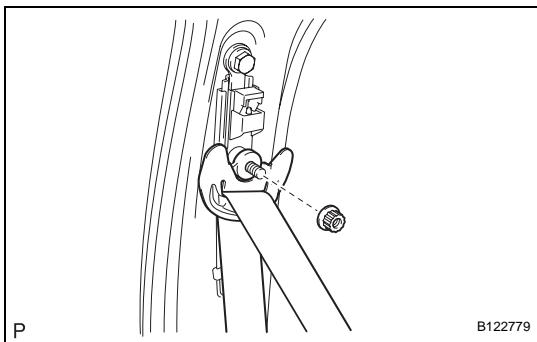


(c) Connect the outer belt with the shoulder anchor's bolt.

Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)

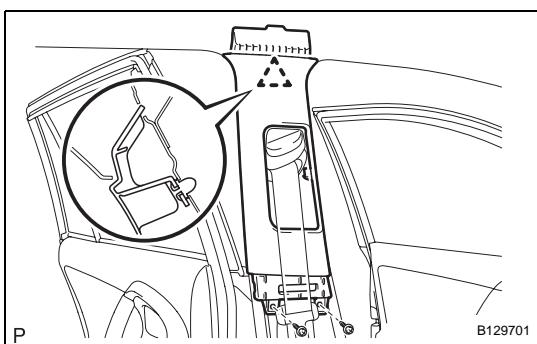

4. INSTALL CENTER PILLAR GARNISH LH

(a) Pass the outer belt anchor through the center pillar garnish.
 (b) Attach the clip.
 (c) Install the garnish with the 2 screws.

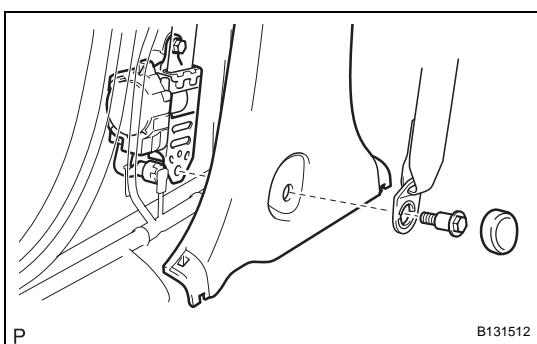

5. INSTALL CENTER PILLAR GARNISH LOWER LH

(a) Attach the 2 claws and 2 clips to install the garnish.
 (b) Connect the floor anchor with the bolt.
Torque: 42 N*m (428 kgf*cm, 31 ft.*lbf)
 (c) Attach the lap belt outer anchor cover.

6. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH

7. INSTALL REAR DOOR SCUFF PLATE LH (See page **IR-57**)

8. INSTALL FRONT DOOR SCUFF PLATE LH (See page **IR-59**)

9. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

10. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

SB