
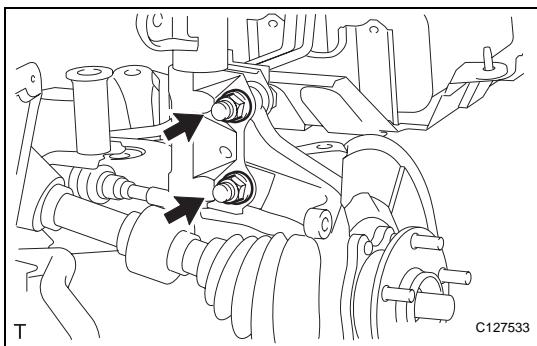


INSTALLATION

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

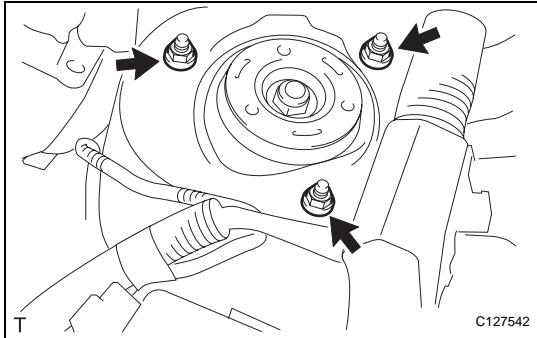

(b) Install the front shock absorber with coil spring to the steering knuckle with the 2 bolt and 2 nuts.

Torque: 240 N*m (2,447 kgf*cm, 177 ft.*lbf)

NOTICE:

Do not tighten the bolts.

2. CONNECT FRONT STABILIZER LINK ASSEMBLY LH (See page [SP-31](#))

3. CONNECT FRONT SPEED SENSOR LH (See page [BC-193](#))

4. INSTALL FRONT WHEEL

Torque: 103 N*m (1,050 kgf*cm, 76 ft.*lbf)

5. STABILIZE SUSPENSION

(a) Lower the vehicle.

(b) Press down on the vehicle several times to stabilize the suspension.

6. INSPECT AND ADJUST FRONT WHEEL ALIGNMENT

(a) Inspect and adjust the front wheel alignment (see page [SP-3](#)).

DISPOSAL

1. DISPOSE OF FRONT SHOCK ABSORBER ASSEMBLY LH

(a) Fully extend the shock absorber piston rod, and clamp it in a vise at an angle.

(b) Using a drill or similar tool, gradually make a hole in area A to discharge the gas inside of the absorber.

CAUTION:

As metal debris may be blown outward by the gas, you must

- Wear protective glasses.
- Cover the area being cut.

NOTICE:

The gas is colorless and harmless.

