





# Audio System for JBL

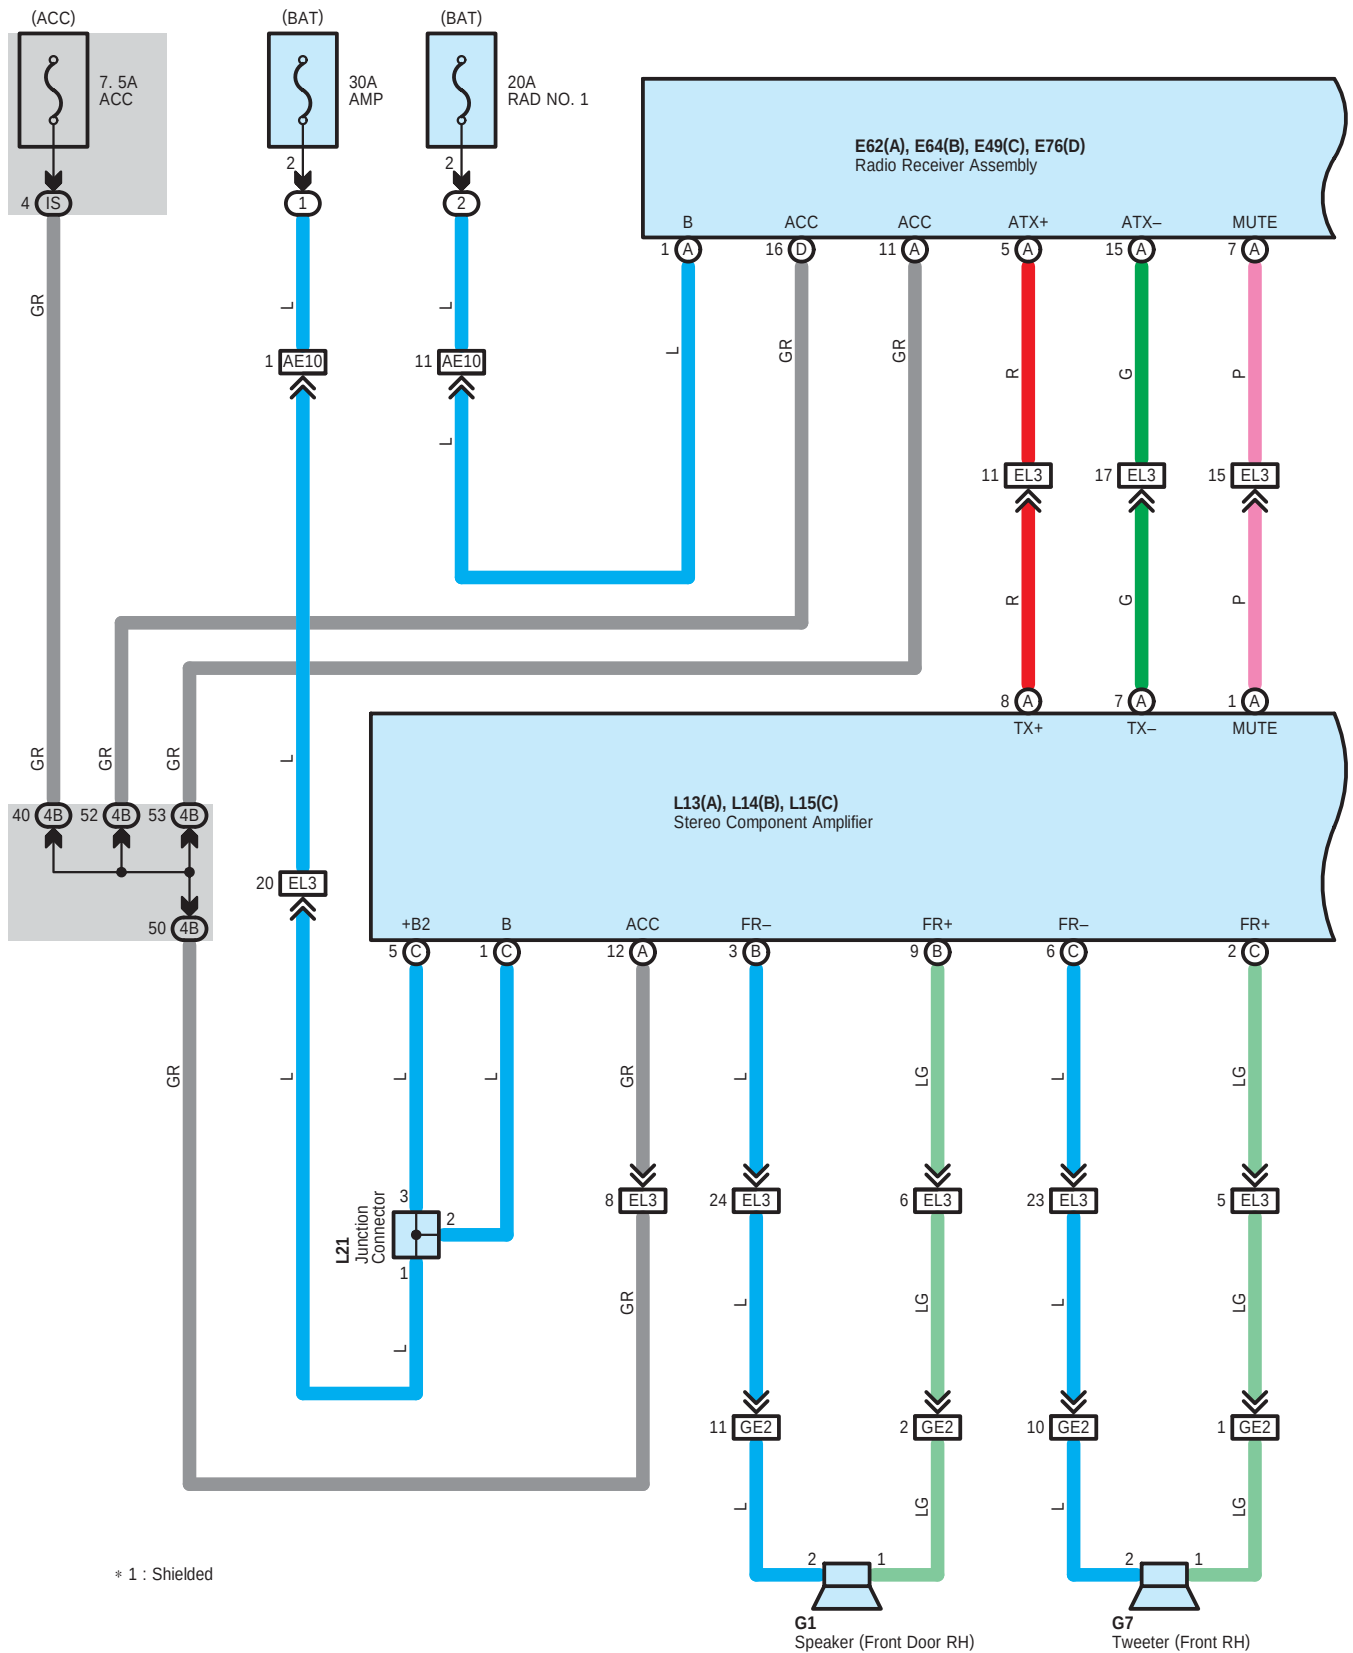


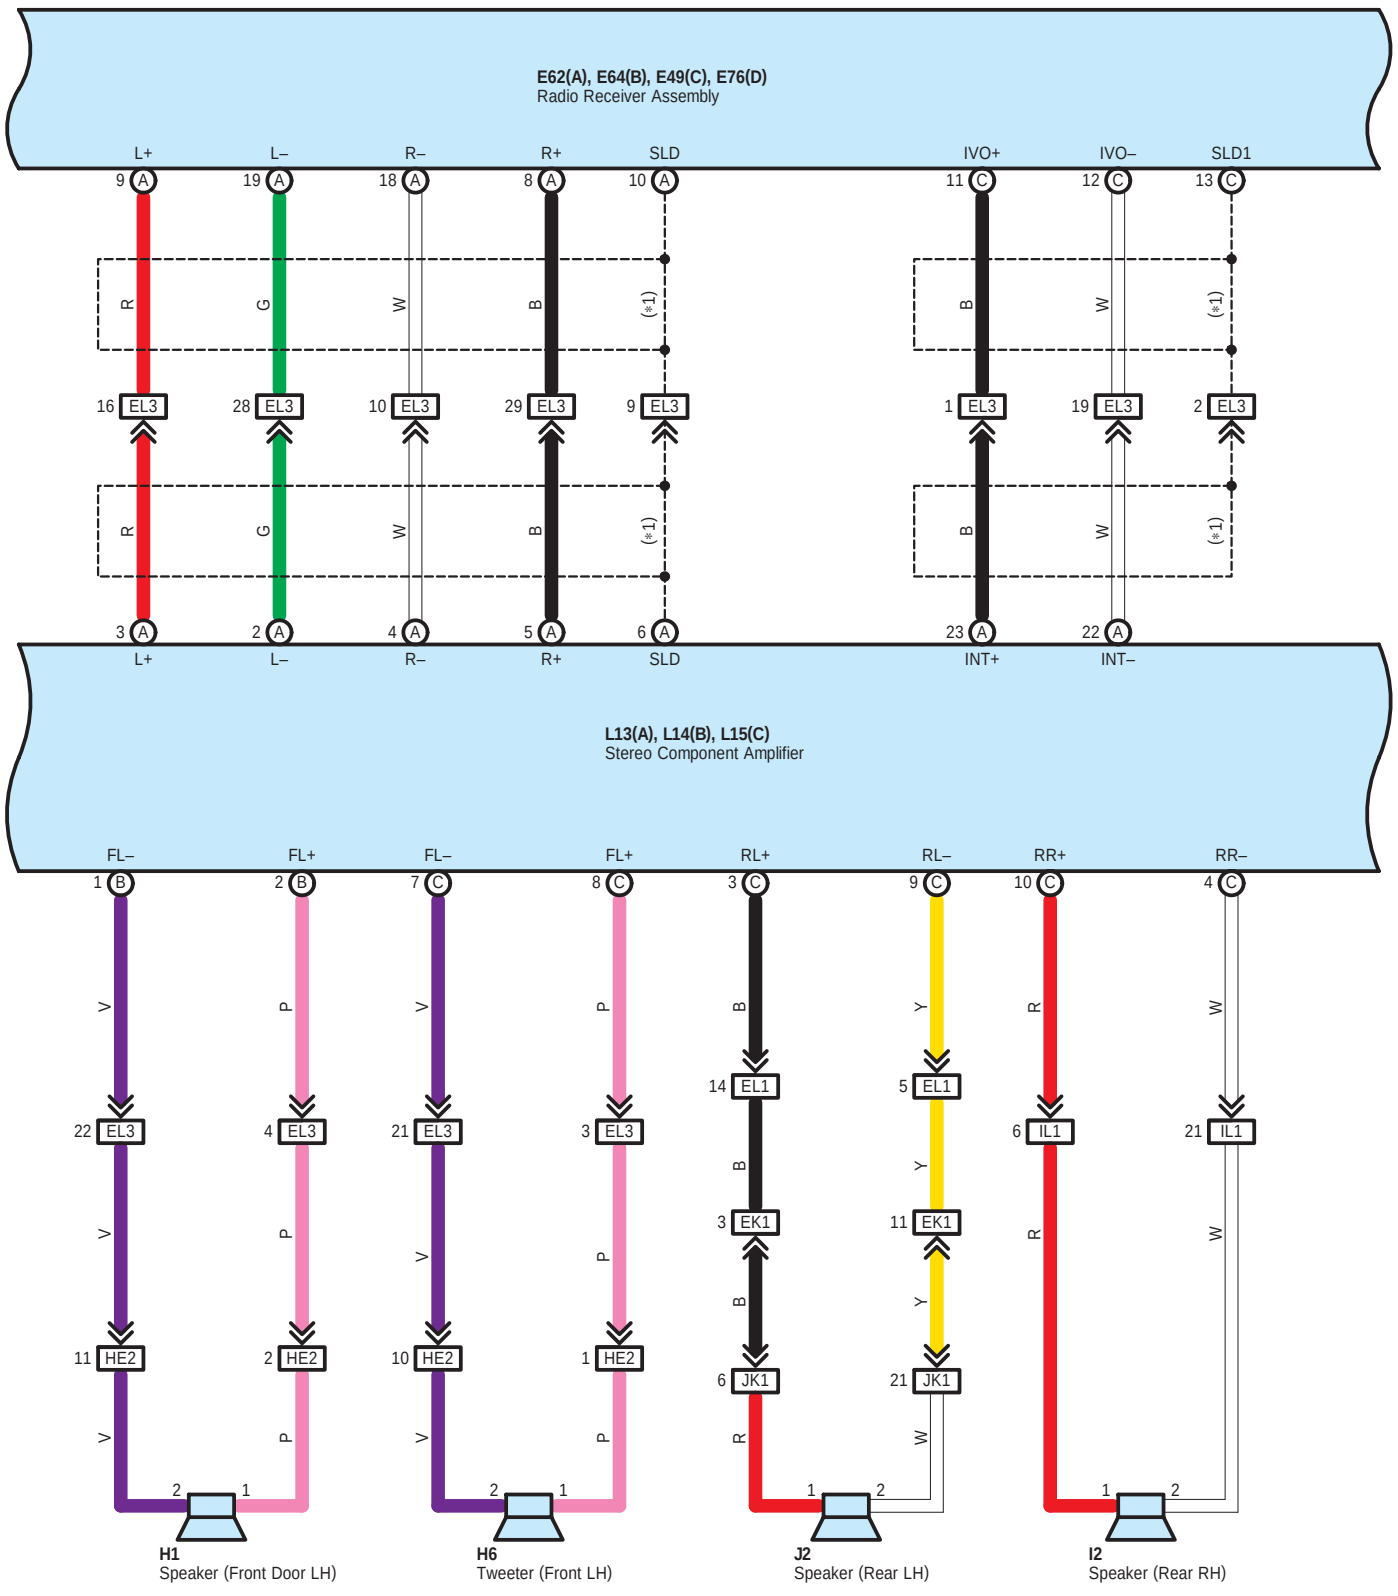


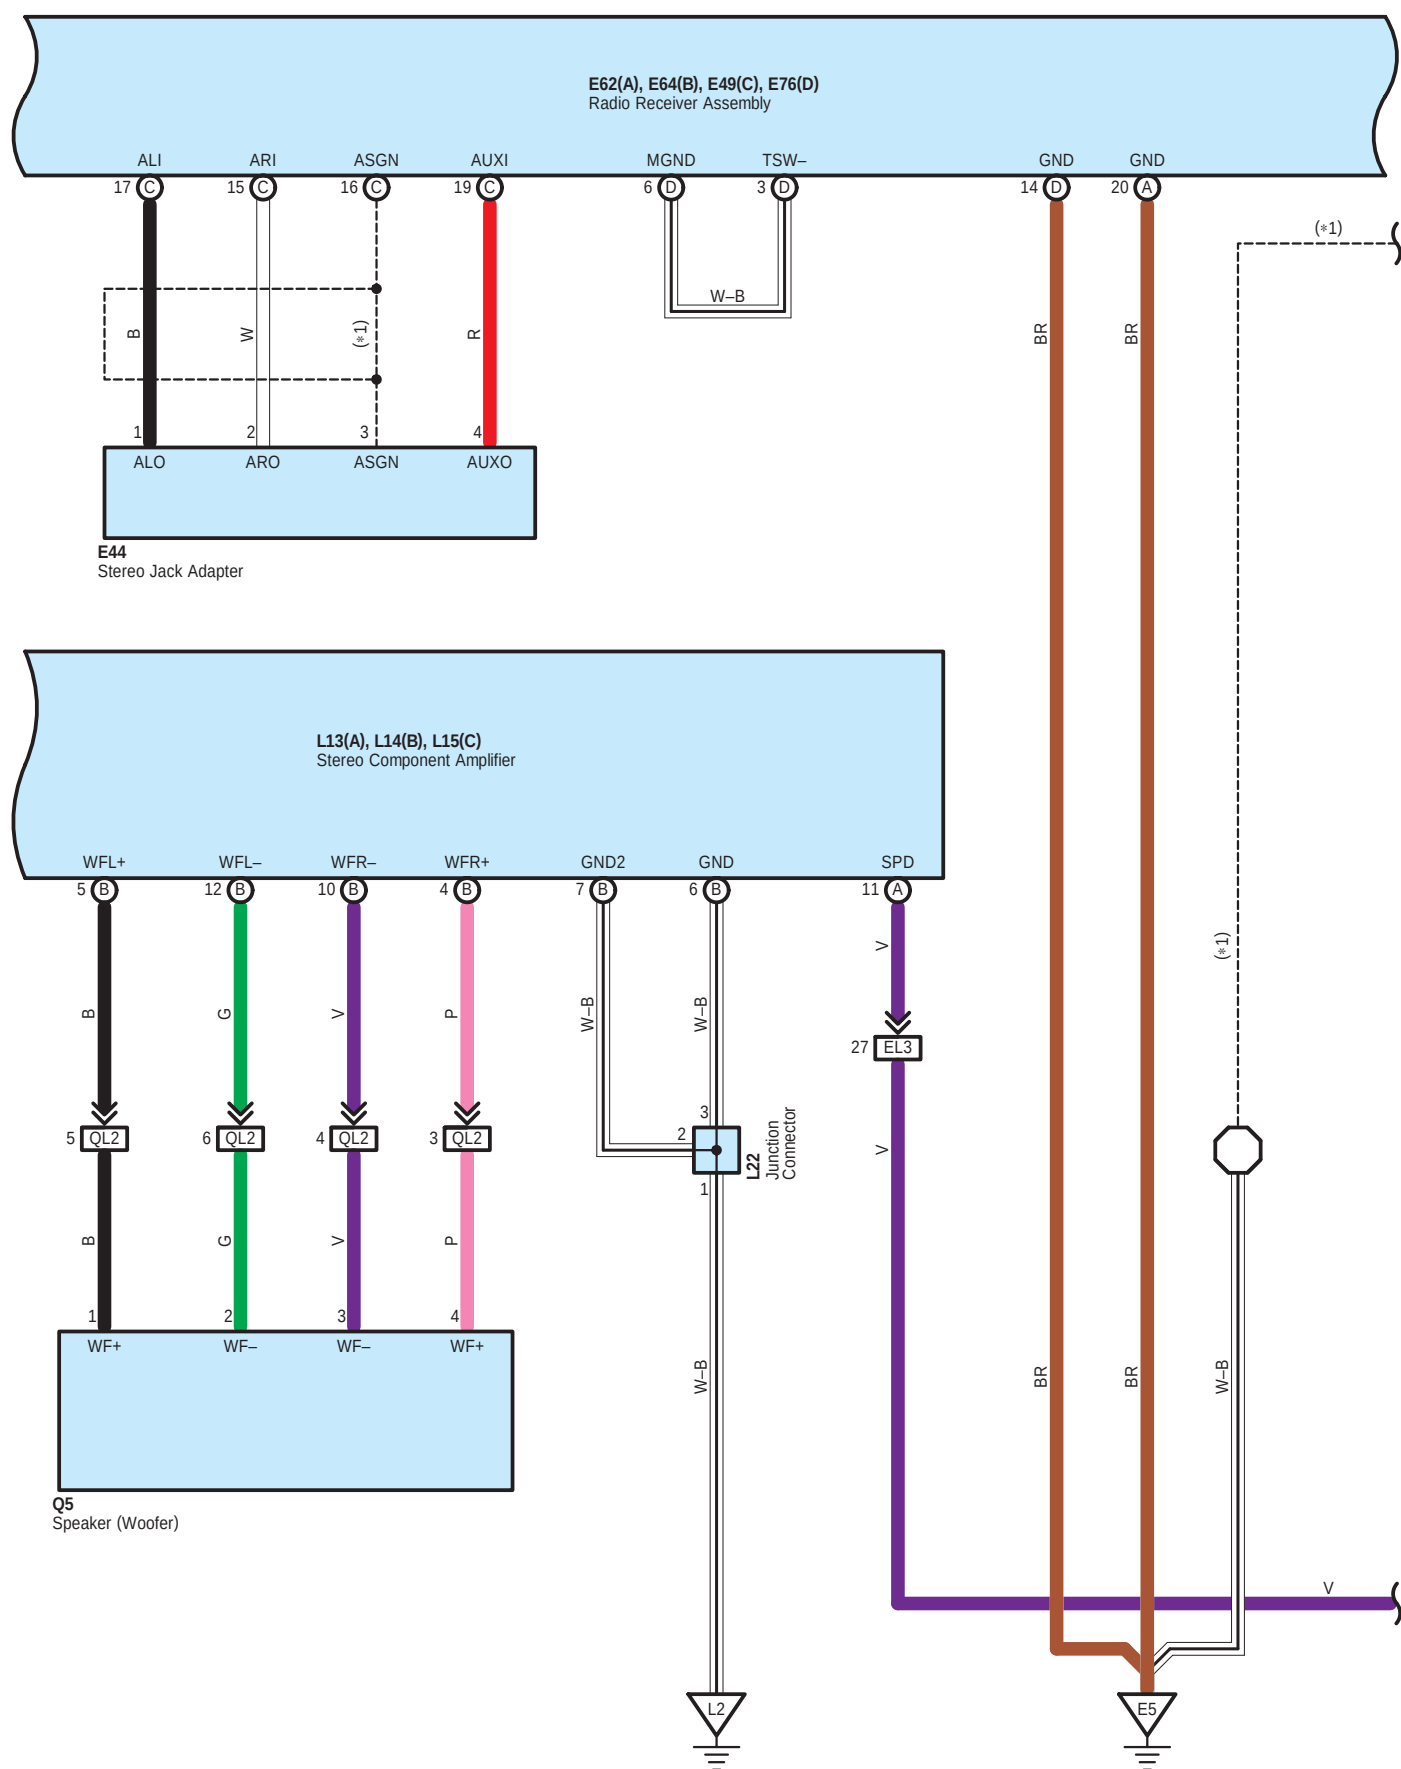

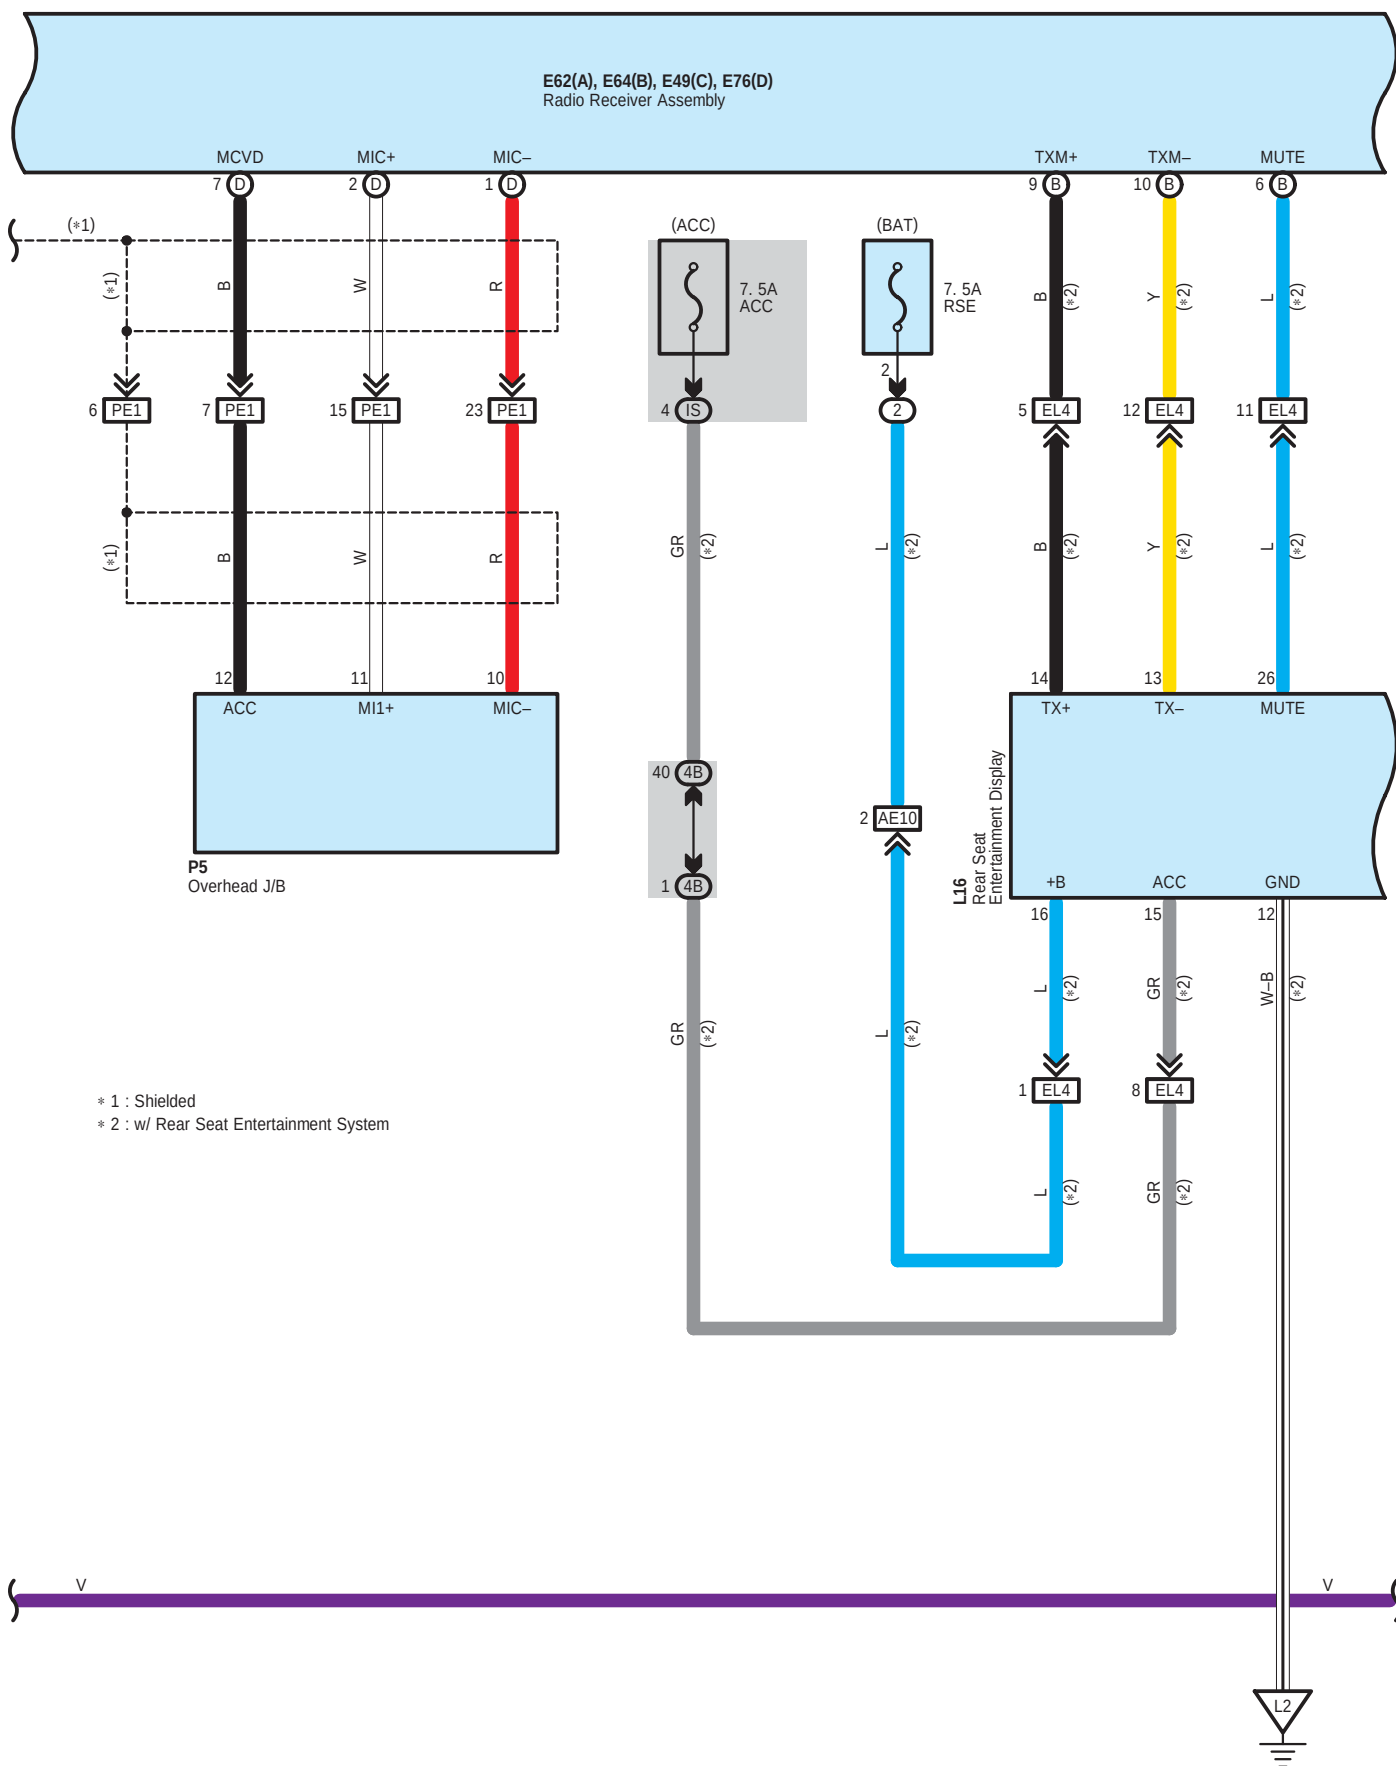

- \* 1 : Shielded
- \* 2 : w/ Rear Seat Entertainment System
- \* 3 : w/ Audio SW in Steering Wheel

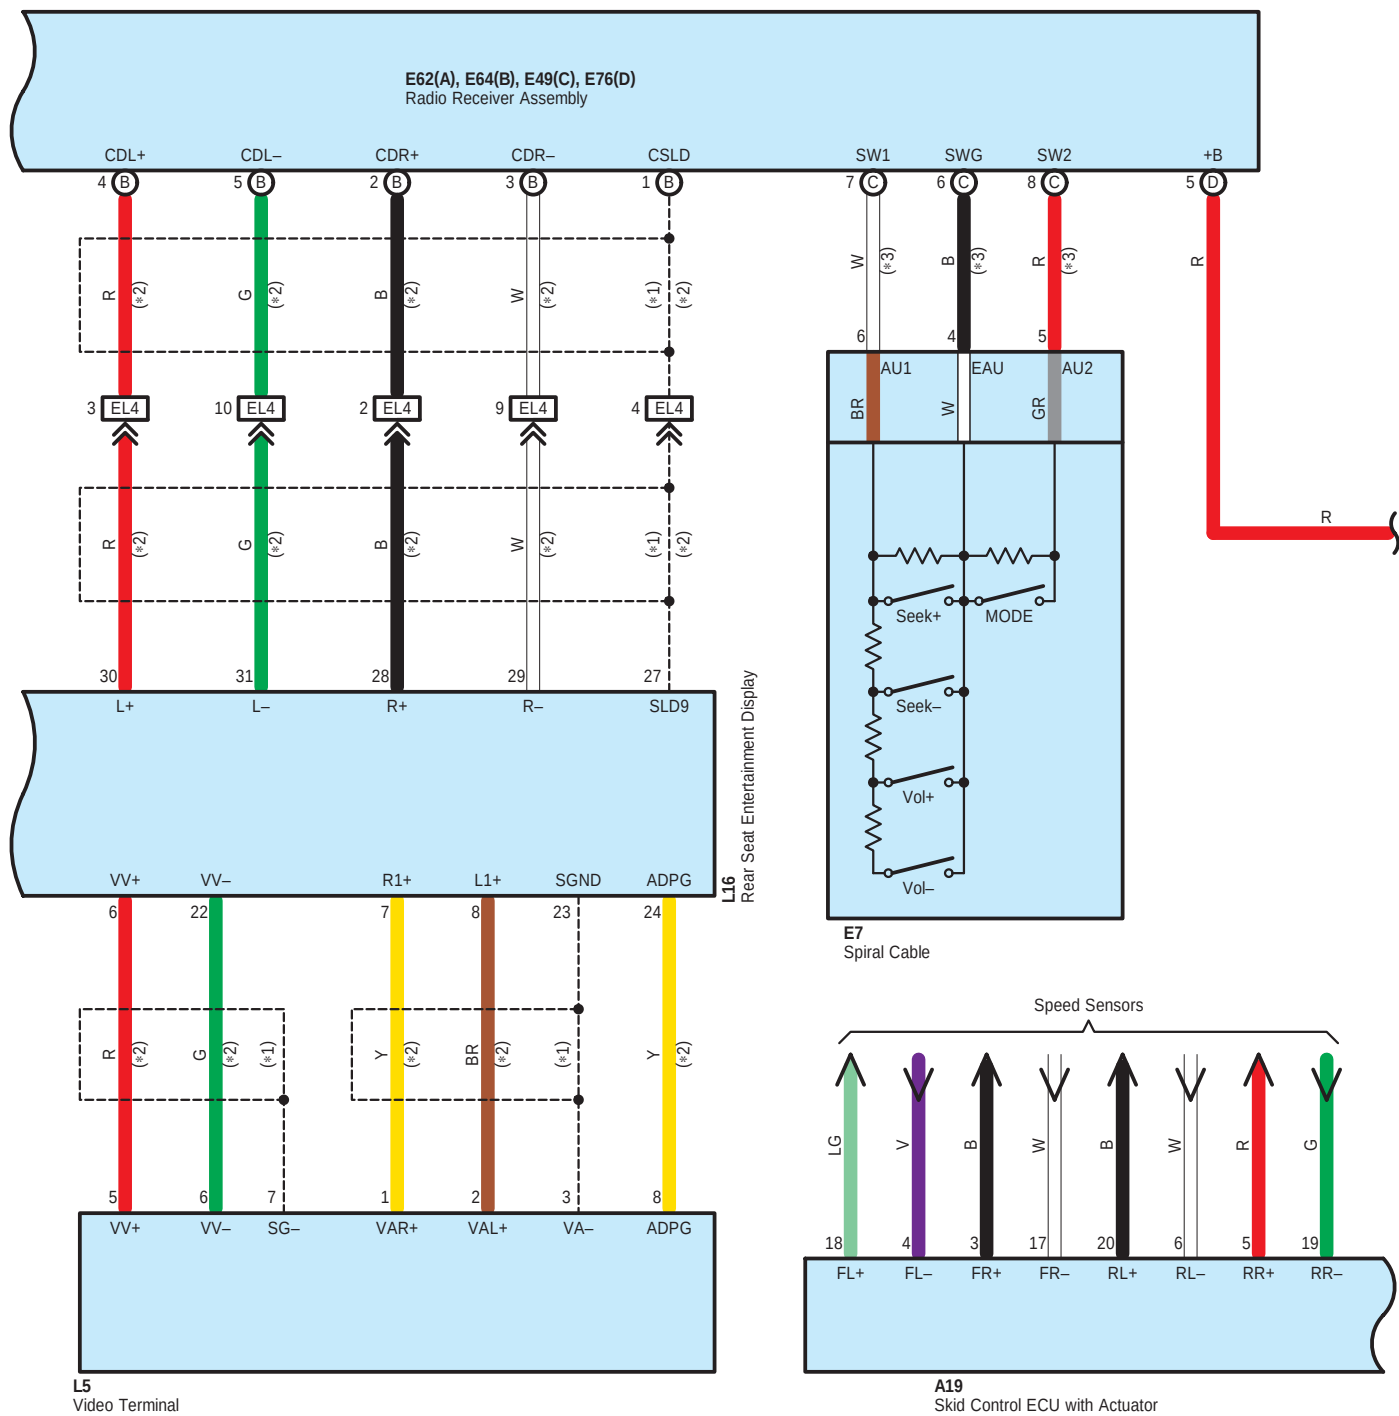

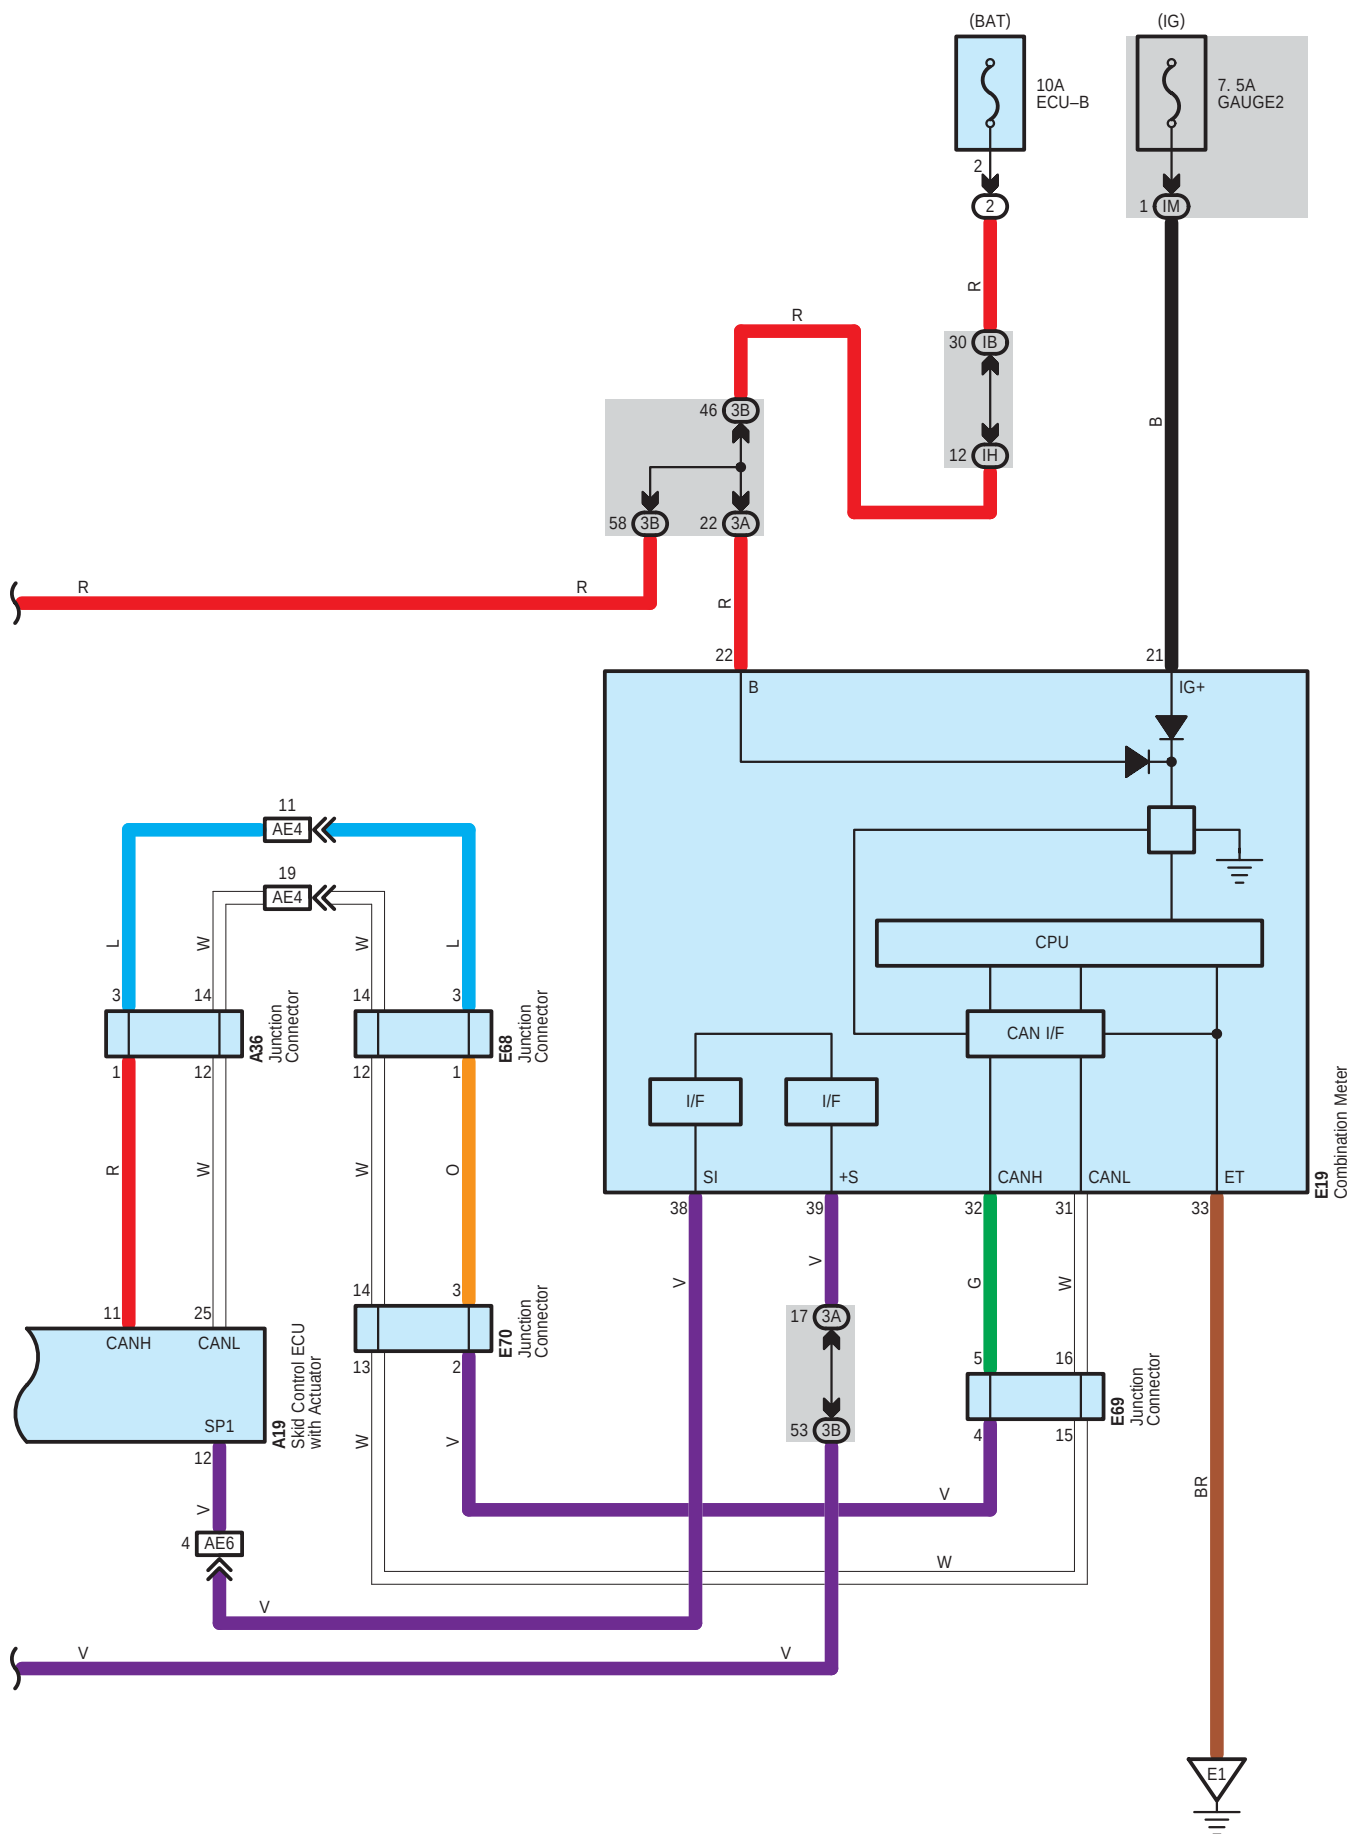

# Audio System for JBL

## ○ : Parts Location

| Code | See Page    | Code | See Page | Code | See Page |
|------|-------------|------|----------|------|----------|
| A19  | 50 (2GR-FE) | E69  | 55       | L13  | A 60     |
|      | 52 (2AZ-FE) | E70  | 55       | L14  | B 60     |
| A36  | 56          | E76  | D 55     | L15  | C 60     |
| E7   | 54          | G1   | 58       | L16  | 60       |
| E19  | 54          | G7   | 58       | L21  | 60       |
| E44  | 55          | H1   | 58       | L22  | 60       |
| E49  | C 55        | H6   | 58       | P5   | 61       |
| E62  | A 55        | I2   | 58       | Q5   | 61       |
| E64  | B 55        | J2   | 58       |      |          |
| E68  | 55          | L5   | 57       |      |          |

## ○ : Relay Blocks

| Code | See Page    | Relay Blocks (Relay Block Location)             |
|------|-------------|-------------------------------------------------|
| 1    | 22 (2GR-FE) | Engine Room R/B No.1 (Engine Compartment Left)  |
|      | 23 (2AZ-FE) |                                                 |
| 2    | 26 (2GR-FE) | Engine Room R/B No.2 (Engine Compartment Right) |
|      | 27 (2AZ-FE) |                                                 |

## ○ : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)            |
|------|----------|-----------------------------------------------------------------|
| 3A   | 38       | Instrument Panel Wire and J/B No.3 (Instrument Panel Center)    |
| 3B   |          |                                                                 |
| 4B   | 44       | Instrument Panel Wire and J/B No.4 (Instrument Panel Center)    |
| IB   | 30       | Engine Room Main Wire and Instrument Panel J/B (Cowl Side Left) |
| IH   | 30       | Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left) |
| IM   | 31       |                                                                 |
| IS   |          |                                                                 |

## □ : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)                           |
|------|----------|--------------------------------------------------------------------------------------|
| AE4  | 66       | Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)  |
| AE6  |          |                                                                                      |
| AE10 | 66       | Engine Room Main Wire and Instrument Panel Wire (Right Side of the Instrument Panel) |
| EK1  | 66       | Instrument Panel Wire and Floor Wire (Left Kick Panel)                               |
| EL1  | 66       | Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)                         |
| EL3  |          |                                                                                      |
| EL4  |          |                                                                                      |
| GE2  | 66       | Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)                      |
| HE2  | 66       | Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)                       |
| IL1  | 67       | Rear Door No.1 RH Wire and Floor No.2 Wire (Right Center Pillar)                     |
| JK1  | 67       | Rear Door No.1 LH Wire and Floor Wire (Left Center Pillar)                           |
| PE1  | 66       | Roof Wire and Instrument Panel Wire (Left Side of the Instrument Panel)              |
| QL2  | 67       | Back Door No.3 Wire and Floor No.2 Wire (Right Rear Quarter Panel)                   |

## ▽ : Ground Points

| Code | See Page | Ground Points Location                |
|------|----------|---------------------------------------|
| E1   | 66       | Left Kick Panel                       |
| E5   | 66       | Instrument Panel Reinforcement Center |
| L2   | 67       | Right Quarter Panel                   |

