




# Cooling Fan for 2GR-FE

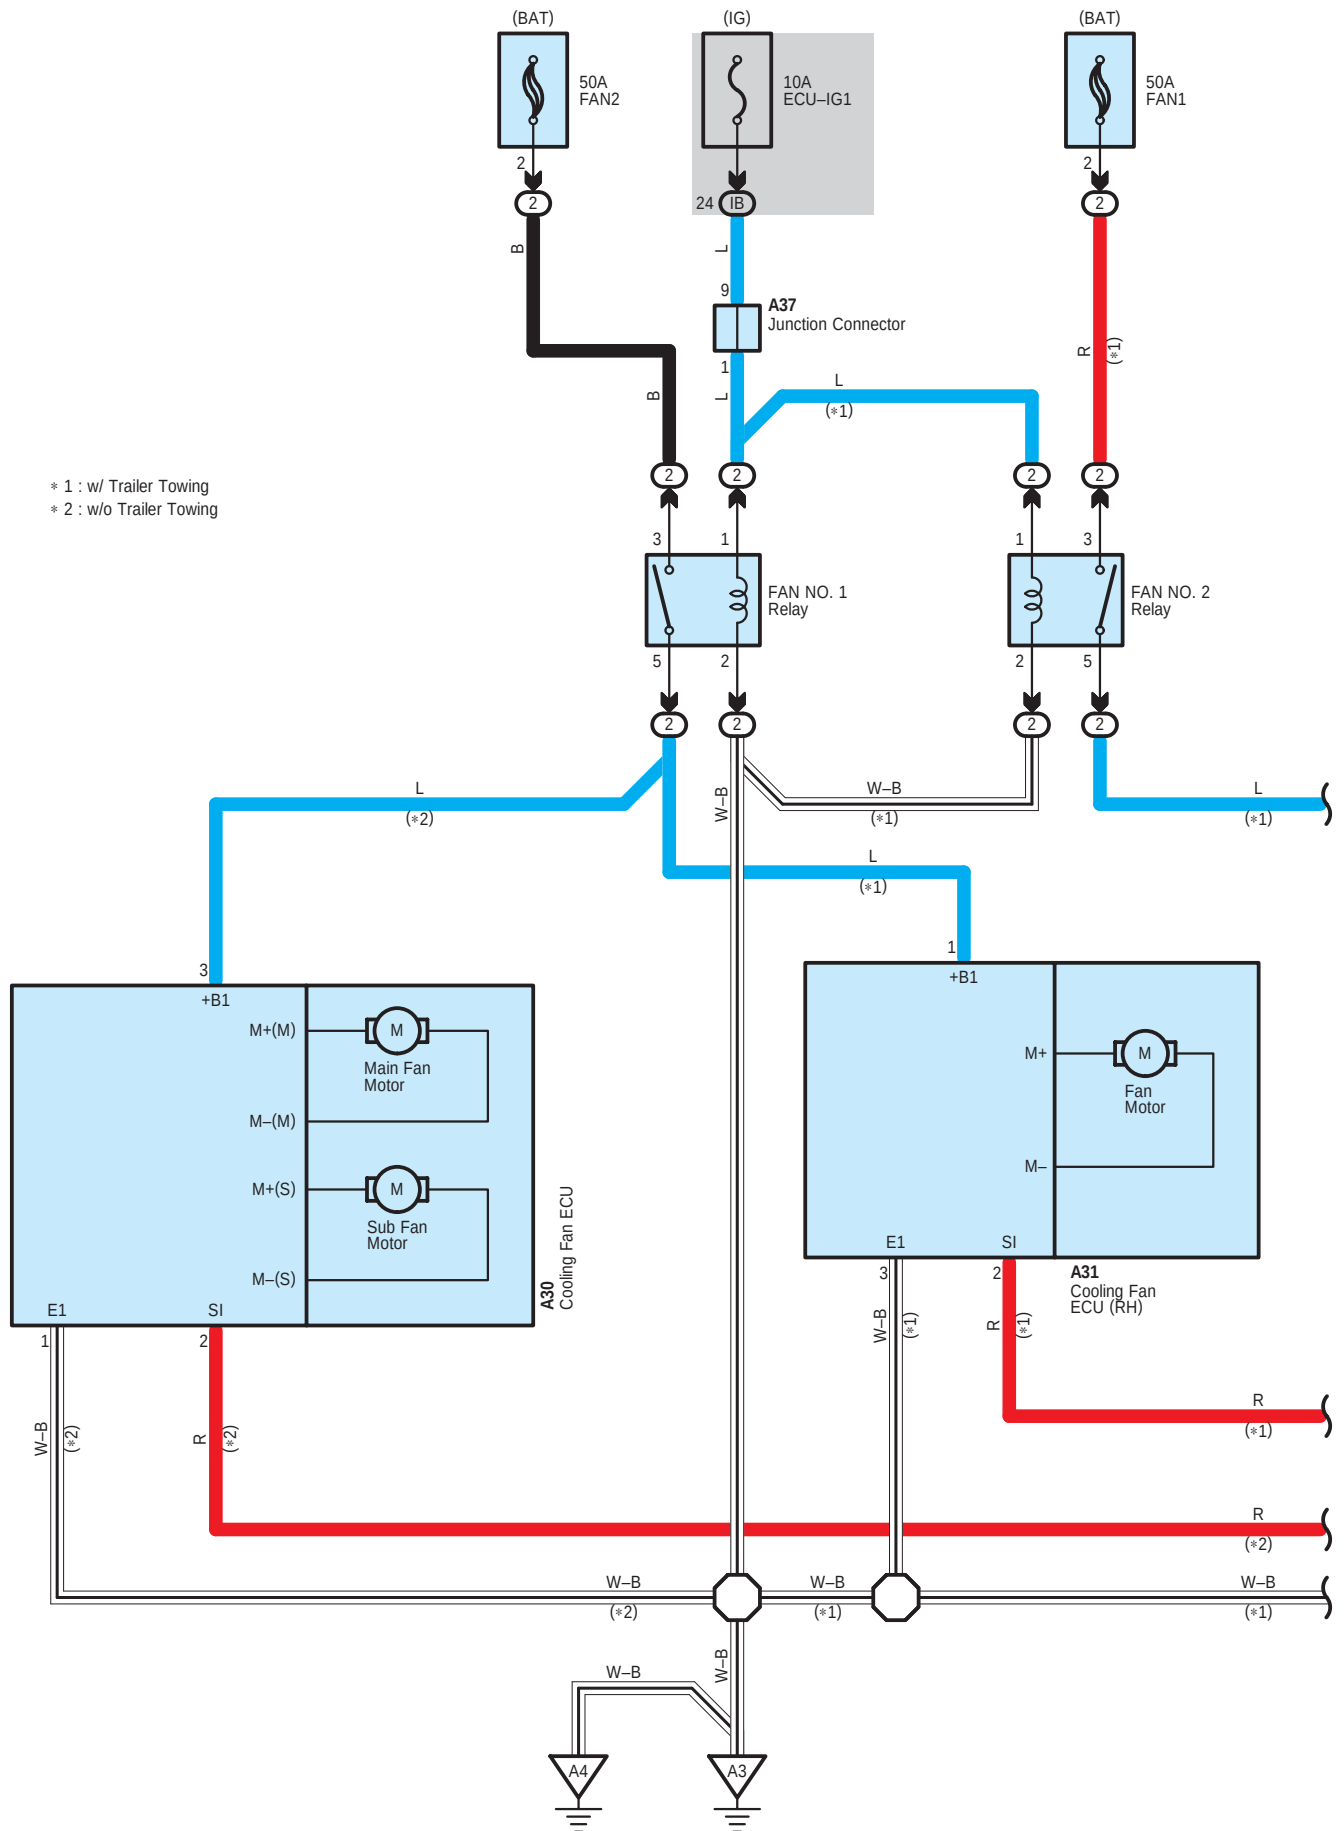

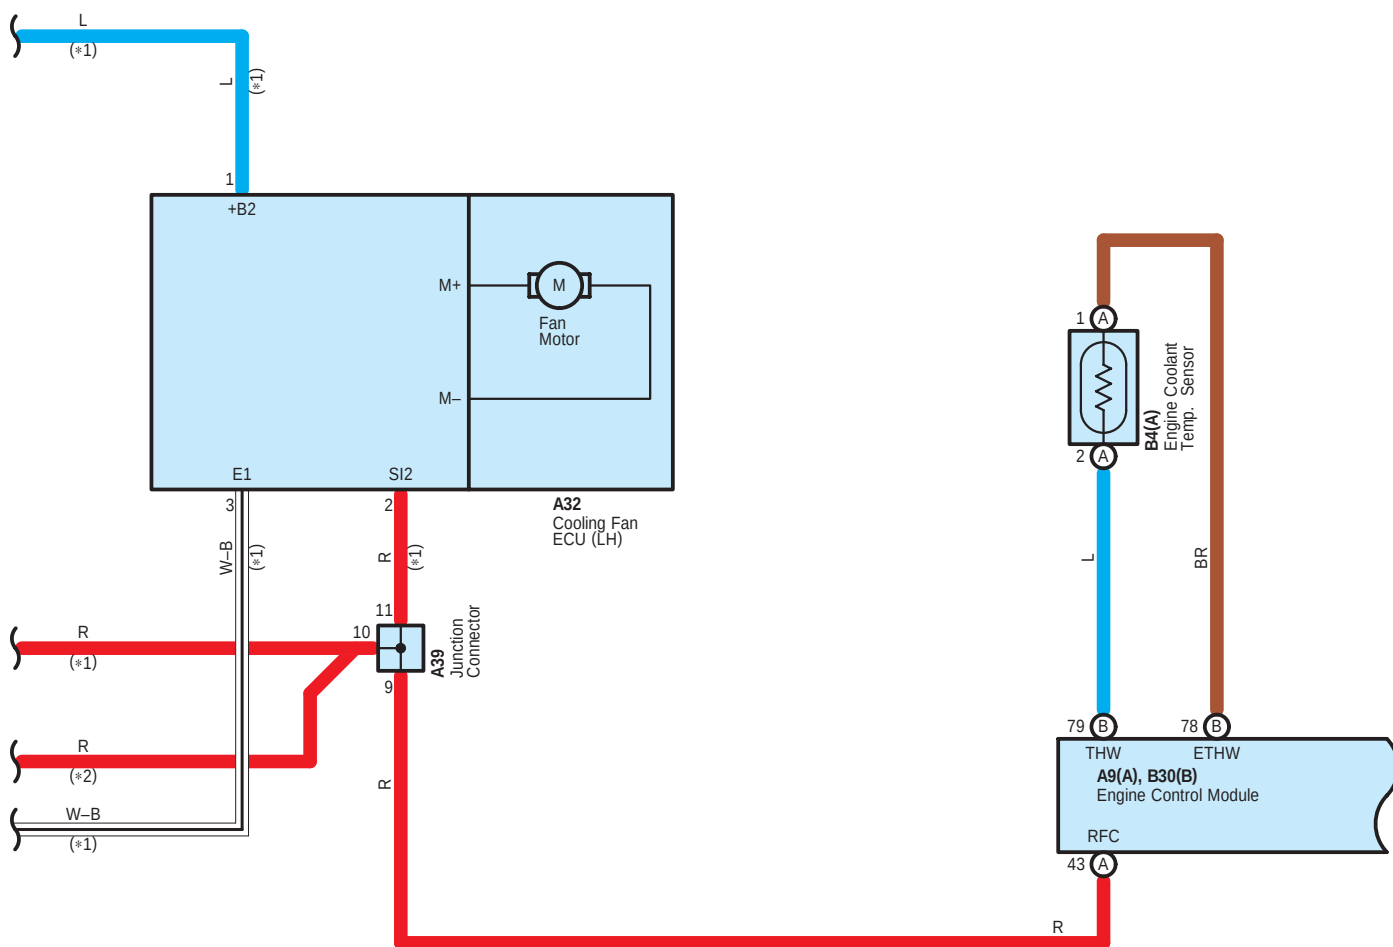

# Cooling Fan for 2GR-FE

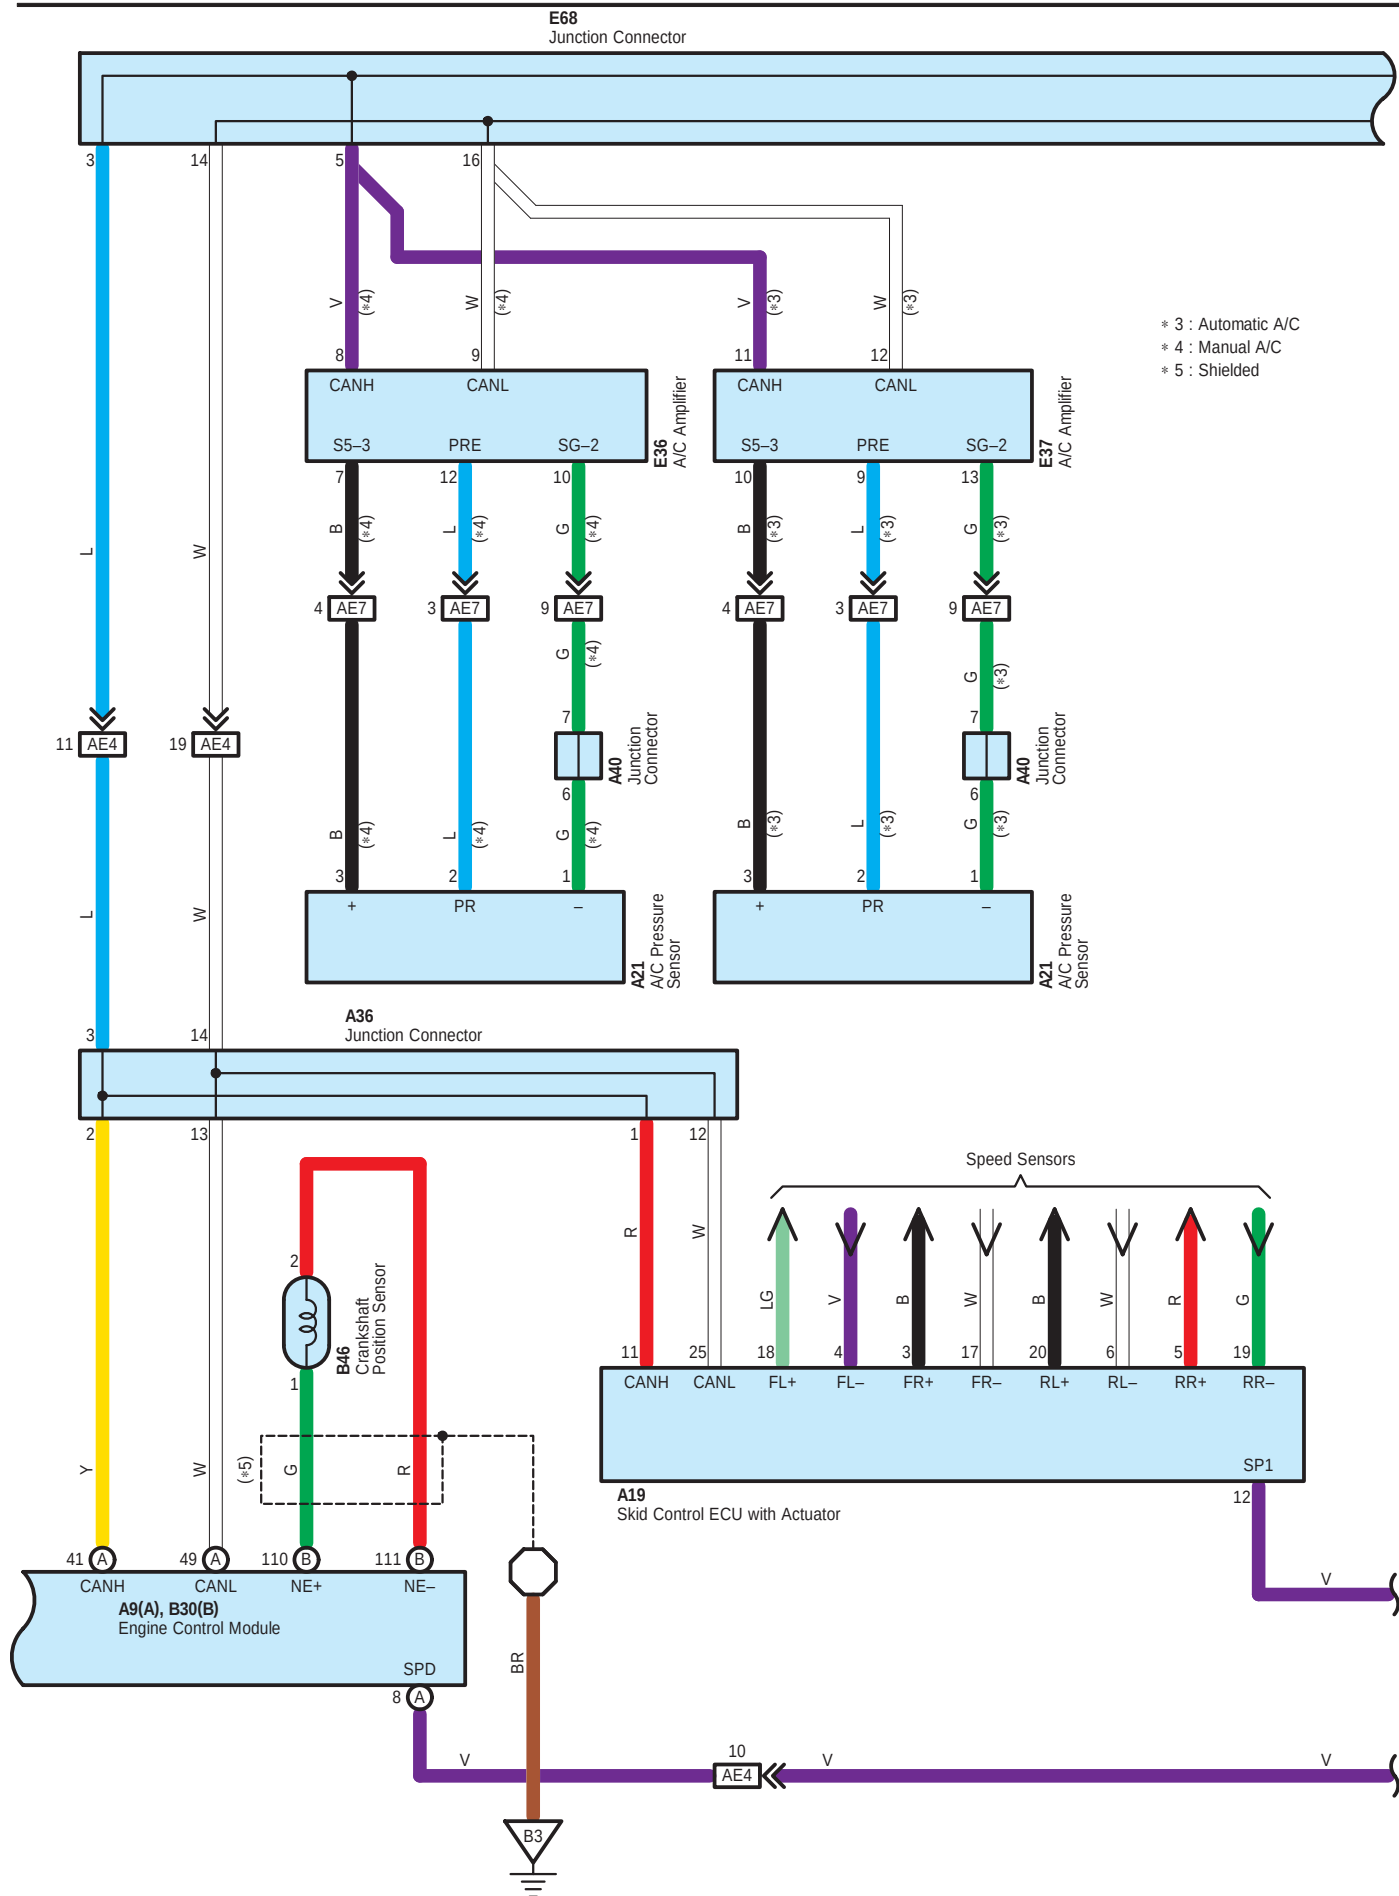



# Cooling Fan for 2GR-FE

## System Outline

In accordance with signals from the engine control module, which calculates the engine coolant temperature, the air conditioner refrigerant pressure and the engine and vehicle speeds, the cooling fan controller seamlessly controls rotational speed of the cooling fan, to maintain the balance between the cooling performance and the air conditioning performance.

## ○ : Parts Location

| Code |   | See Page    | Code |   | See Page    | Code | See Page |
|------|---|-------------|------|---|-------------|------|----------|
| A9   | A | 50 (2GR-FE) | A37  |   | 56          | E36  | 55       |
| A19  |   | 50 (2GR-FE) | A39  |   | 50 (2GR-FE) | E37  | 55       |
| A21  |   | 50 (2GR-FE) | A40  |   | 50 (2GR-FE) | E68  | 55       |
| A30  |   | 50 (2GR-FE) | B4   | A | 51 (2GR-FE) | E69  | 55       |
| A31  |   | 50 (2GR-FE) | B30  | B | 51 (2GR-FE) | E70  | 55       |
| A32  |   | 50 (2GR-FE) | B46  |   | 51 (2GR-FE) |      |          |
| A36  |   | 56          | E19  |   | 54          |      |          |

## ○ : Relay Blocks

| Code | See Page    | Relay Blocks (Relay Block Location)             |
|------|-------------|-------------------------------------------------|
| 2    | 26 (2GR-FE) | Engine Room R/B No.2 (Engine Compartment Right) |

## ○ : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)            |
|------|----------|-----------------------------------------------------------------|
| 3A   | 38       | Instrument Panel Wire and J/B No.3 (Instrument Panel Center)    |
| 3B   |          |                                                                 |
| IB   | 30       | Engine Room Main Wire and Instrument Panel J/B (Cowl Side Left) |
| IH   | 30       | Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left) |
| IM   | 31       |                                                                 |

## □ : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)                           |
|------|----------|--------------------------------------------------------------------------------------|
| AE4  | 66       | Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)  |
| AE6  |          |                                                                                      |
| AE7  | 66       | Engine Room Main Wire and Instrument Panel Wire (Right Side of the Instrument Panel) |

## ▽ : Ground Points

| Code | See Page    | Ground Points Location         |
|------|-------------|--------------------------------|
| A3   | 64 (2GR-FE) | Front Right Fender             |
| A4   |             |                                |
| B3   | 64 (2GR-FE) | Left Side of the Cylinder Head |
| E1   | 66          | Left Kick Panel                |

