


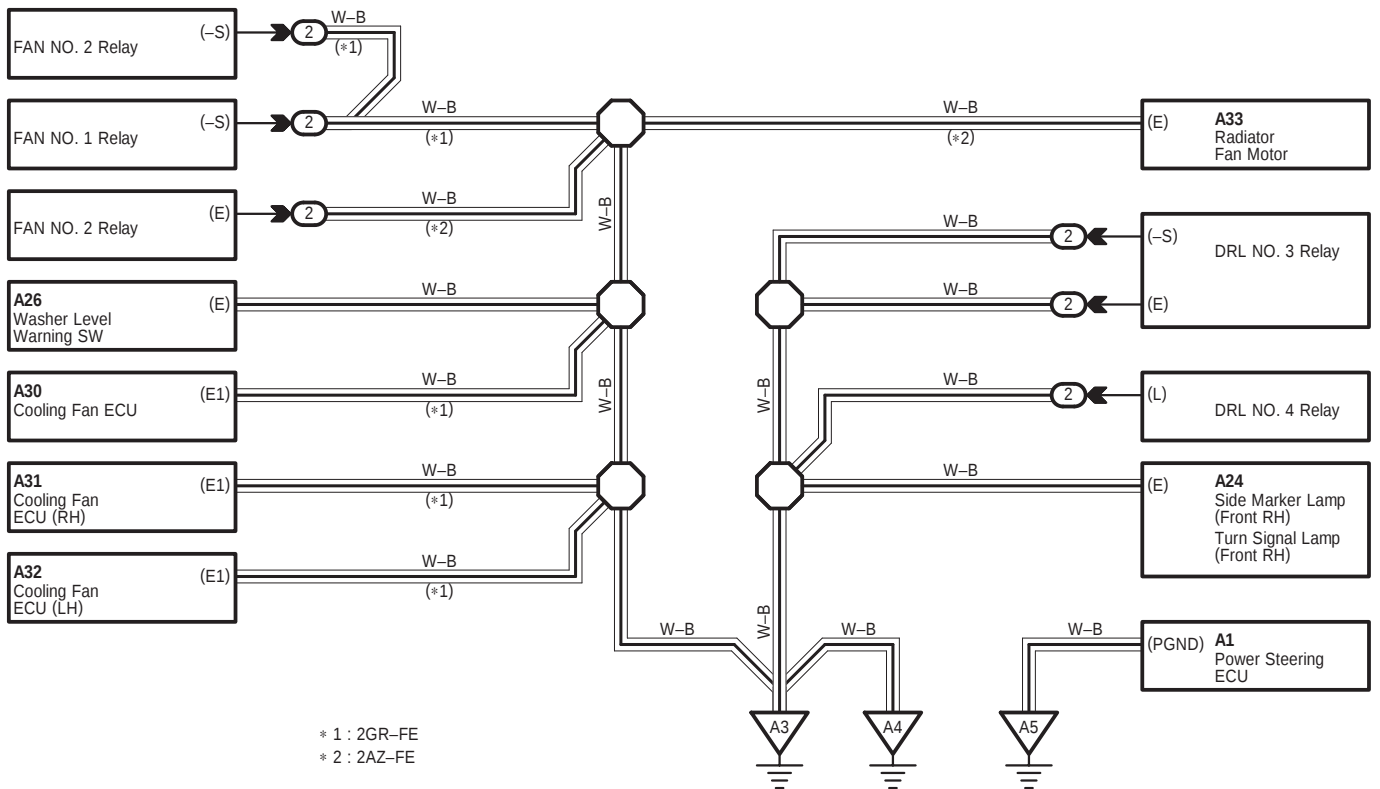



I GROUND POINT

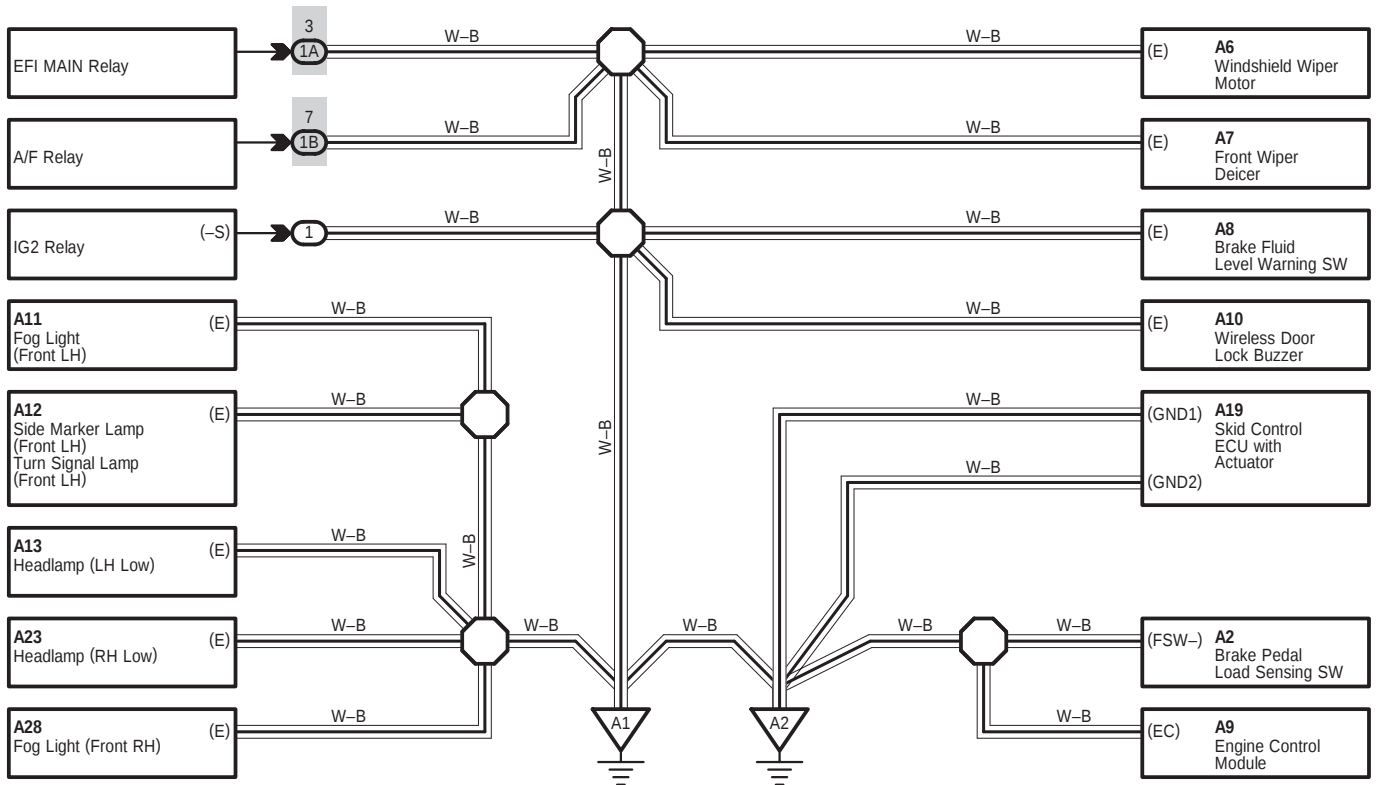

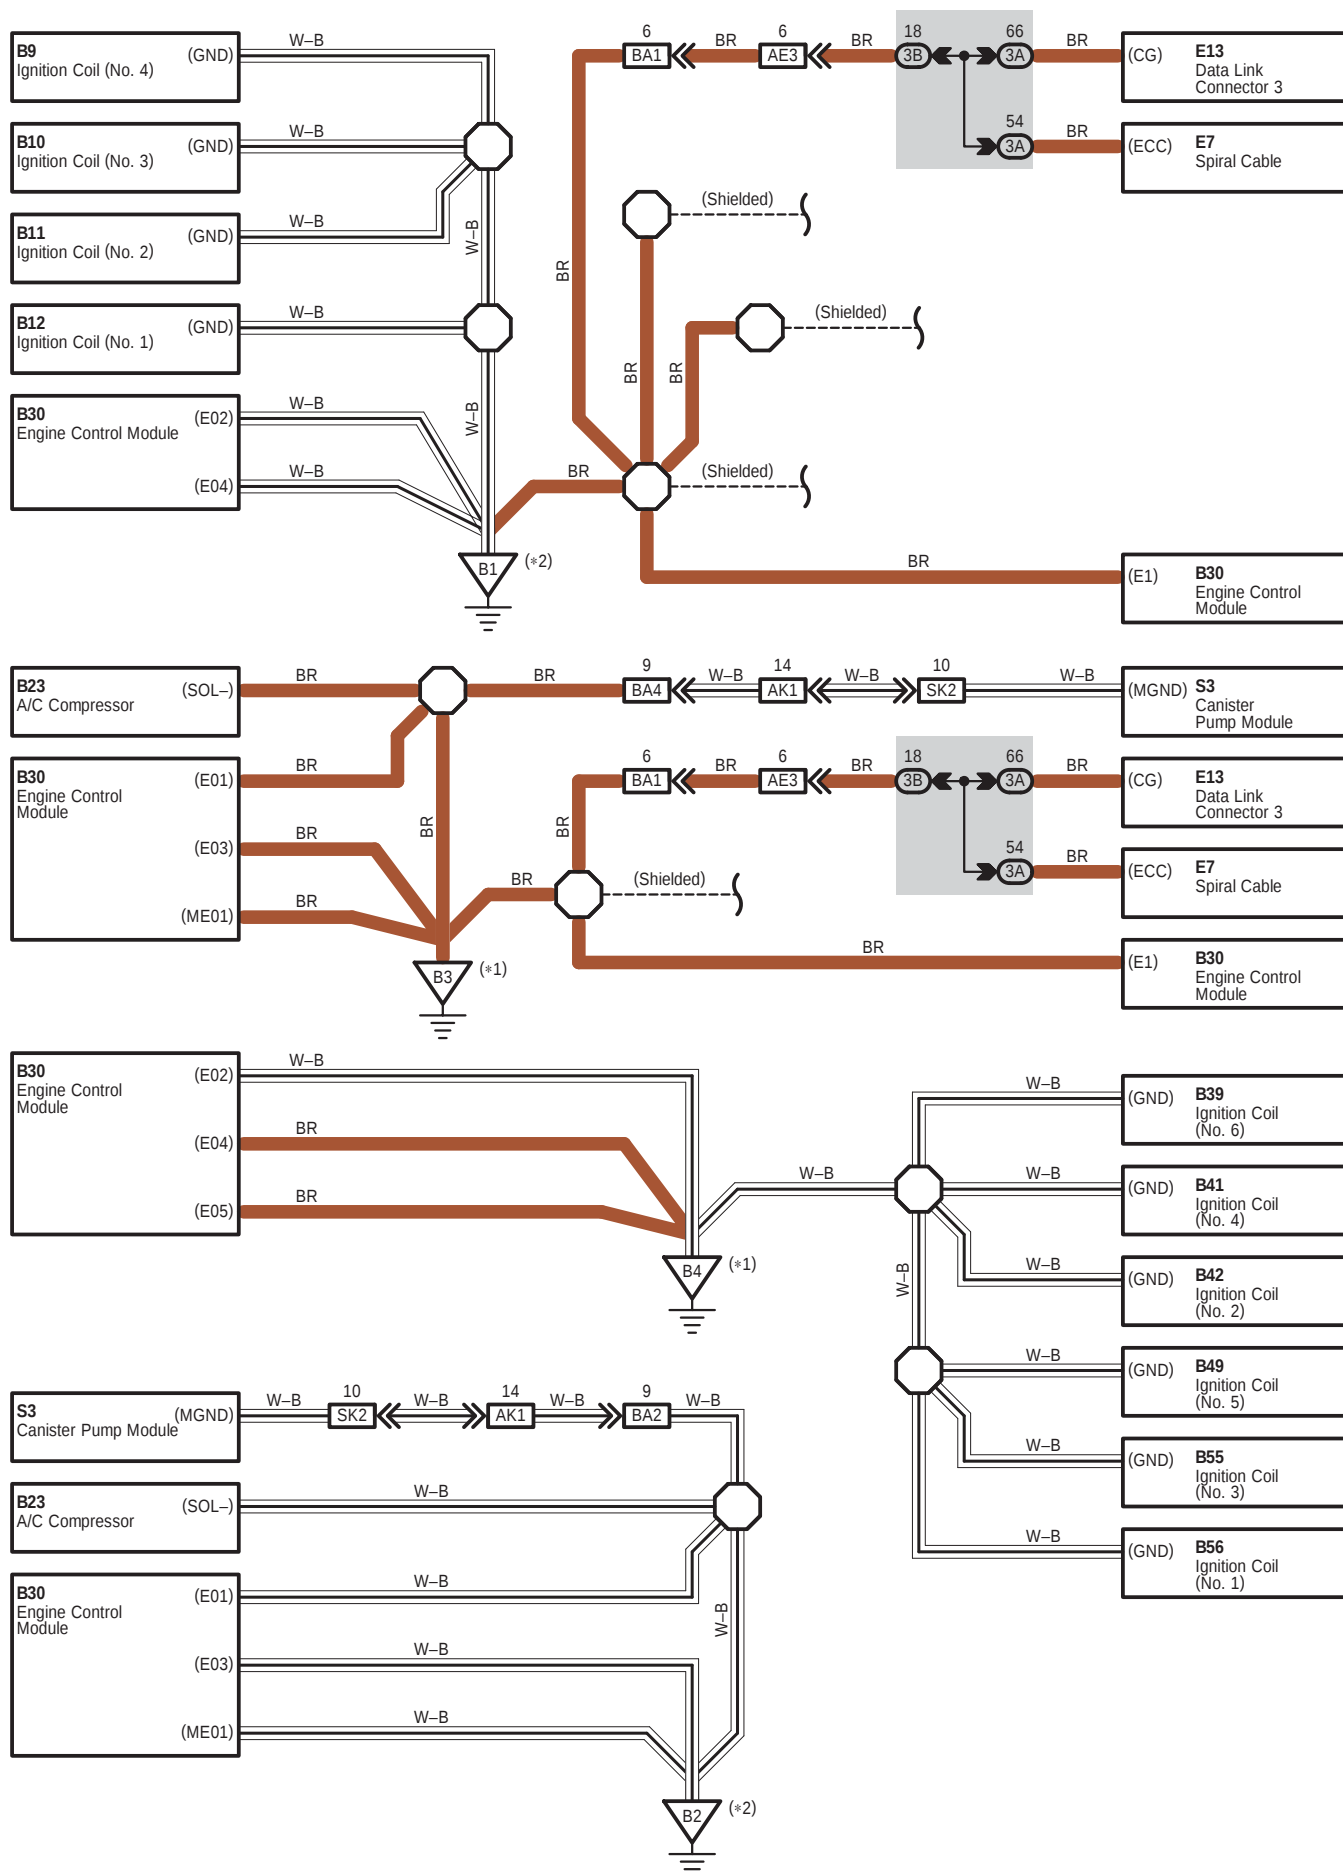


I GROUND POINT

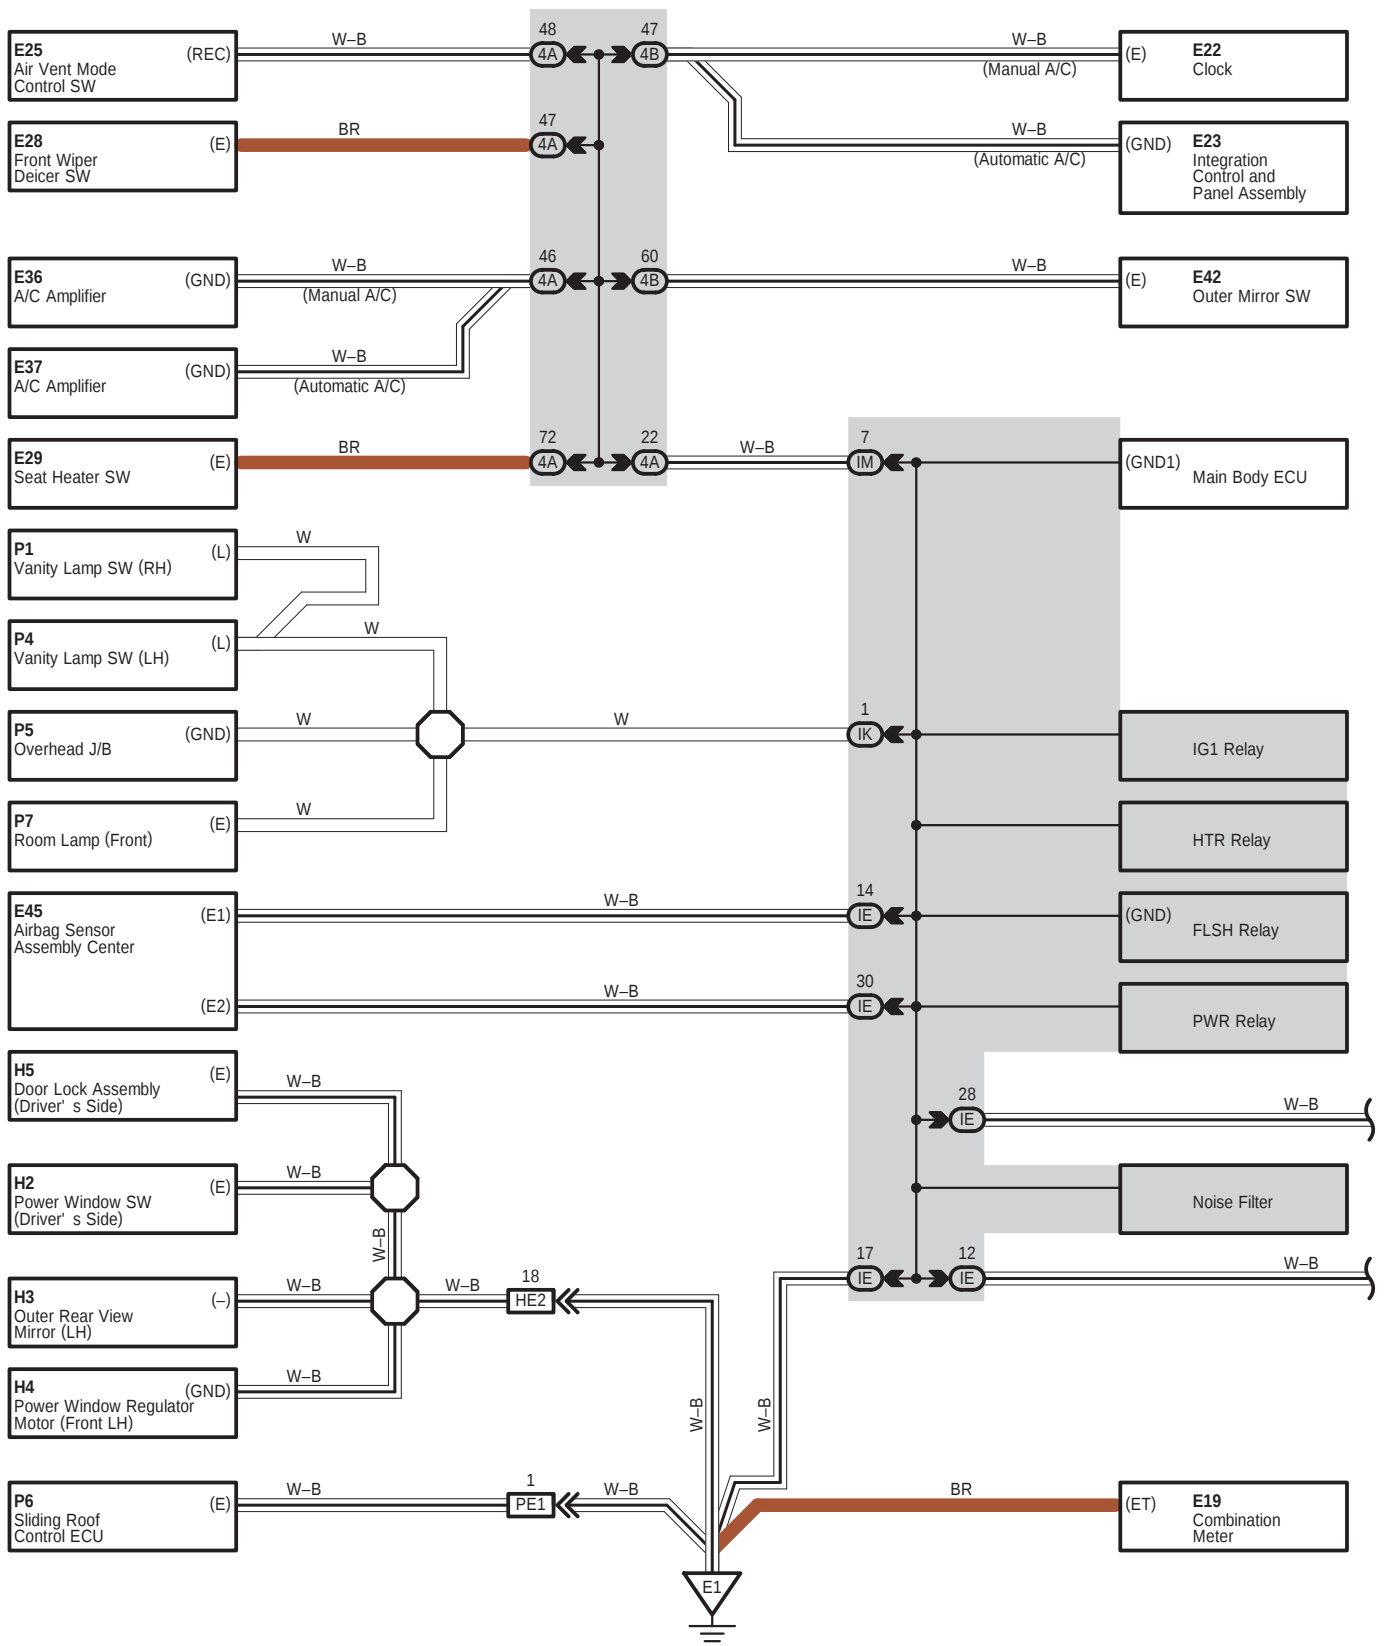

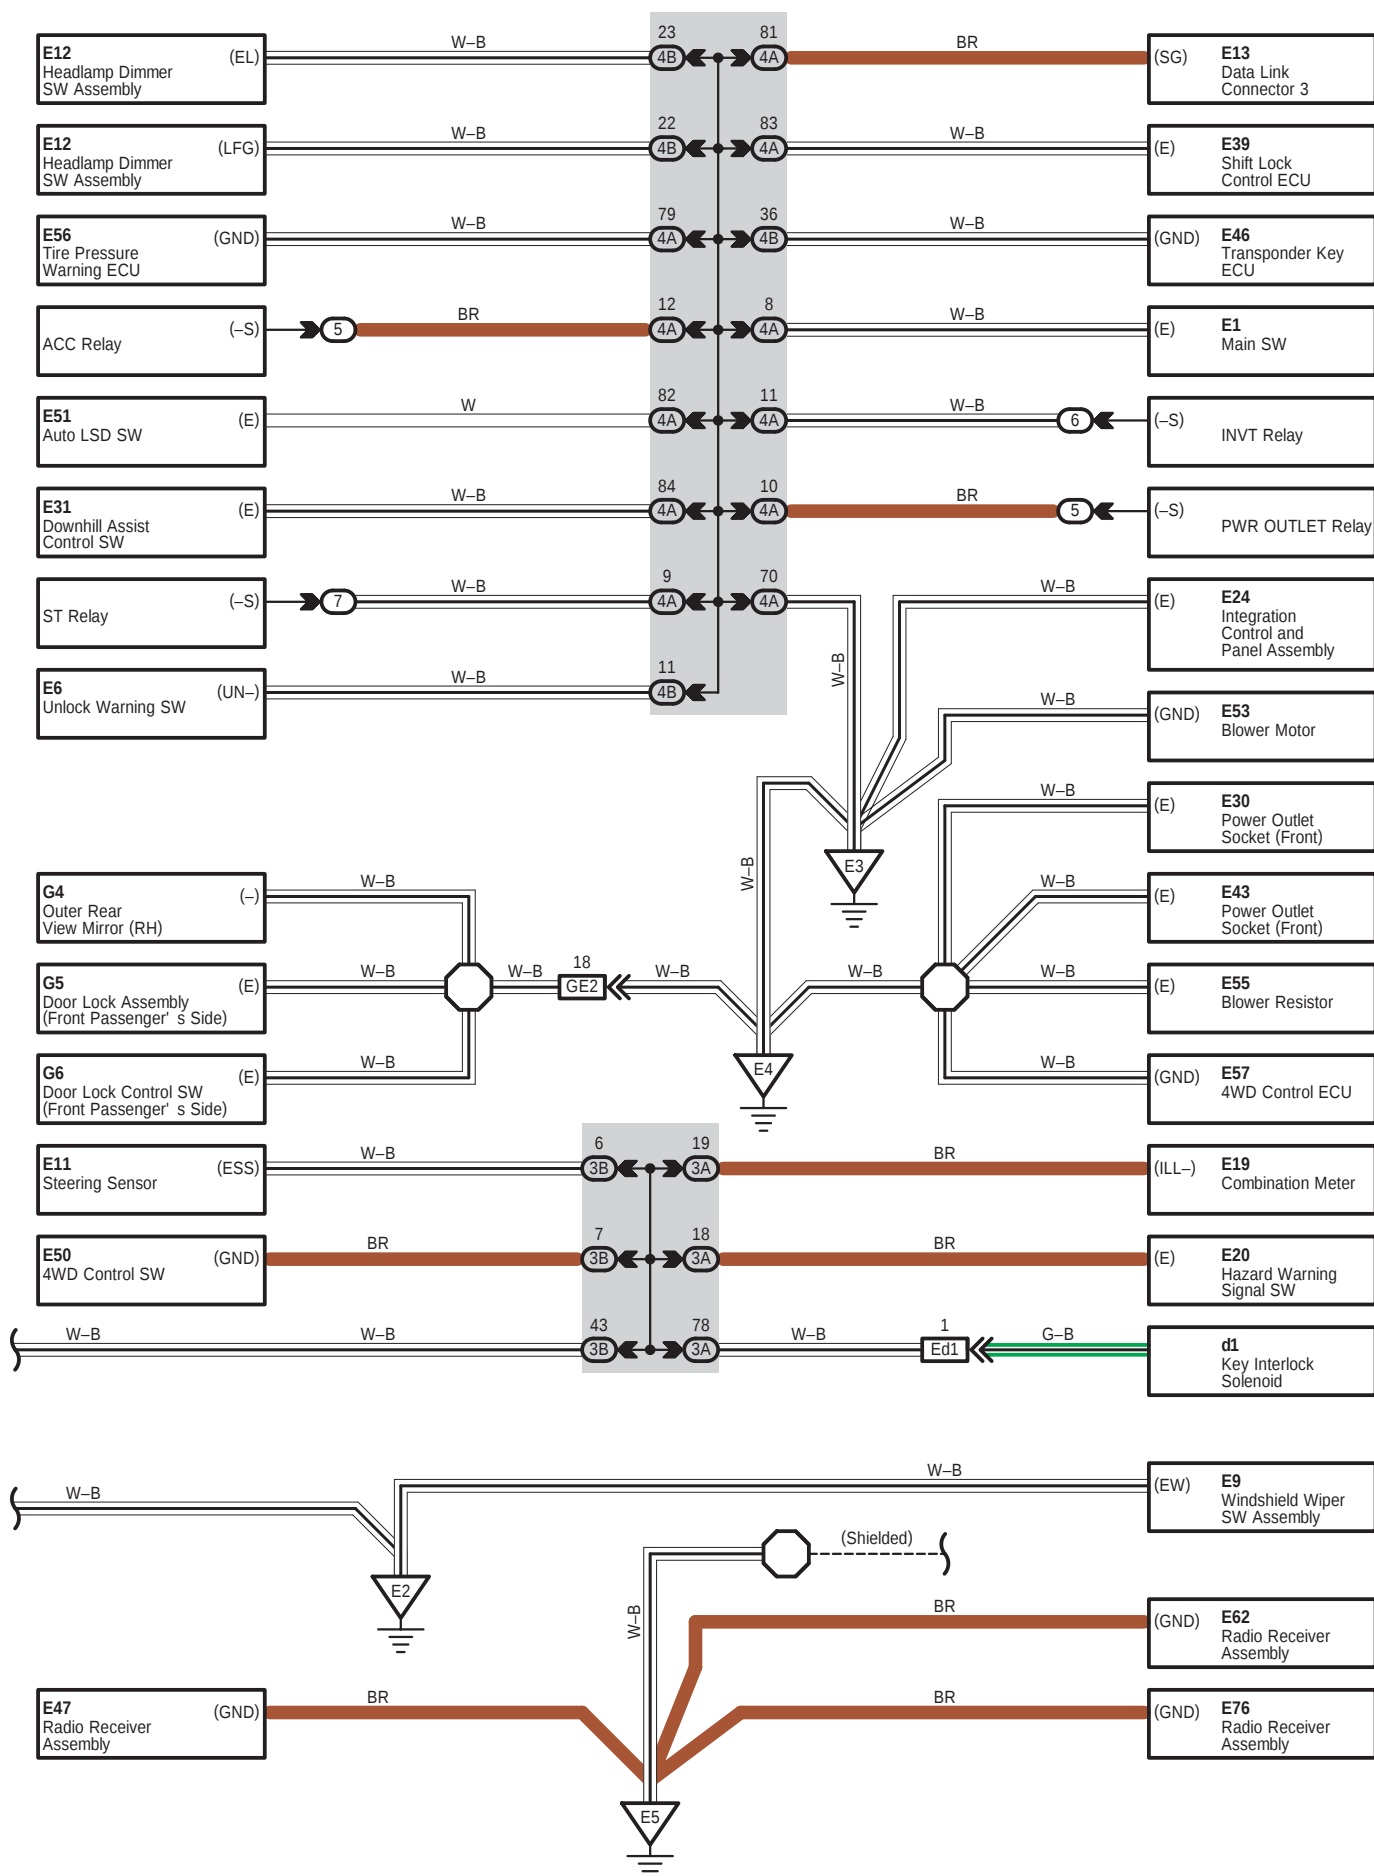

I GROUND POINT

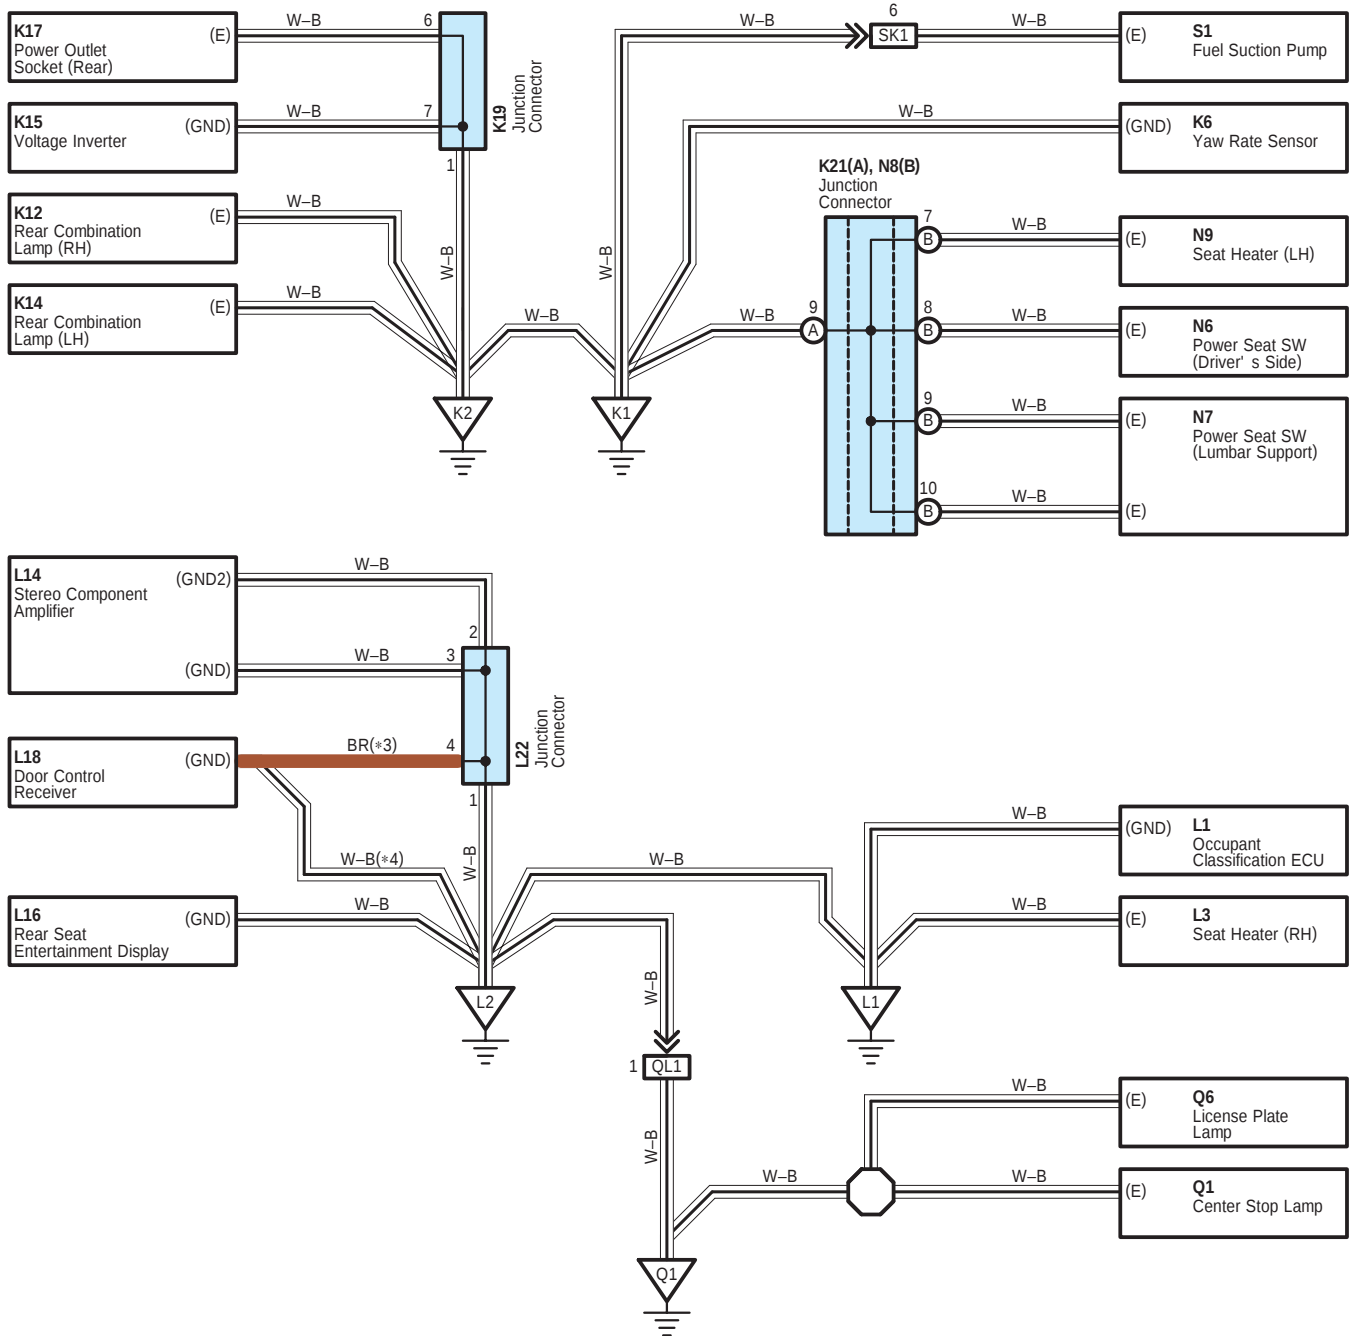

* 3 : Audio System (JBL)
 * 4 : Audio System (Except JBL)

☐ : Parts Location

Code	See Page	Code	See Page	Code	See Page
K19	59	L22	60		
K21	A 62	N8	B 62		

☐ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22 (2GR-FE)	Engine Room R/B No.1 (Engine Compartment Left)
	23 (2AZ-FE)	
2	26 (2GR-FE)	Engine Room R/B No.2 (Engine Compartment Right)
	27 (2AZ-FE)	
5	28	R/B No.5 (Cowl Side Left)
6	28	R/B No.6 (Cowl Side Left)
7	29	R/B No.7 (Cowl Side Left)

☐ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1B		
3A	38	Instrument Panel Wire and J/B No.3 (Instrument Panel Center)
3B		
4A	44	Instrument Panel Wire and J/B No.4 (Instrument Panel Center)
4B		
IE	30	Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)
IK	30	Roof Wire and Instrument Panel J/B (Cowl Side Left)
IM	31	Instrument Panel Wire and Instrument Panel J/B (Cowl Side Left)

☐ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
AE3	66	Engine Room Main Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
AK1	66	Engine Room Main Wire and Floor Wire (Left Kick Panel)
BA1	64 (2GR-FE)	Engine Wire and Engine Room Main Wire (Inside of the Engine Room R/B No.1 and Engine Room J/B No.1)
	65 (2AZ-FE)	
BA2	65 (2AZ-FE)	
BA4	64 (2GR-FE)	
Ed1	66	Instrument Panel Wire and Solenoid Wire (Steering Column)
GE2	66	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
HE2	66	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
PE1	66	Roof Wire and Instrument Panel Wire (Left Side of the Instrument Panel)
QL1	67	Back Door No.2 Wire and Floor No.2 Wire (Right Rear Quarter Panel)
SK1	66	Fuel Gauge Wire and Floor Wire (Under the Console Box)
SK2		

I GROUND POINT



: Ground Points

Code	See Page	Ground Points Location
A1	64 (2GR-FE)	Front Left Fender
	65 (2AZ-FE)	
A2	64 (2GR-FE)	
	65 (2AZ-FE)	
A3	64 (2GR-FE)	Front Right Fender
	65 (2AZ-FE)	
A4	64 (2GR-FE)	
	65 (2AZ-FE)	
A5	66	Left Side of the Instrument Panel
B1	65 (2AZ-FE)	Left Side of the Cylinder Head
B2		
B3	64 (2GR-FE)	
B4		
E1	66	Left Kick Panel
E2	66	Instrument Panel Reinforcement Left
E3	66	Instrument Panel Reinforcement Center
E4	66	Right Kick Panel
E5	66	Instrument Panel Reinforcement Center
K1	67	Left Center Pillar
K2	67	Left Quarter Panel
L1	67	Right Center Pillar
L2	67	Right Quarter Panel
Q1	67	Left Side of the Back Door

