



## D RELAY LOCATIONS

### [Engine Compartment] (Gasoline)

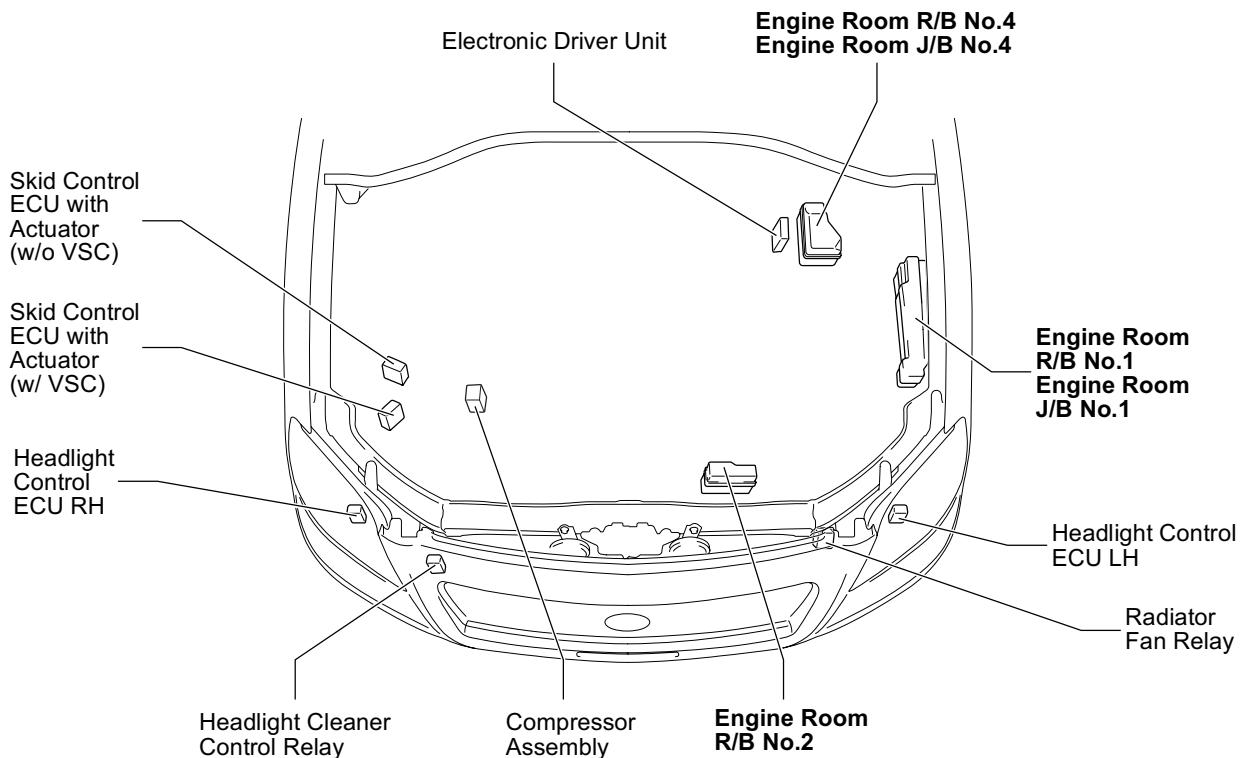


### (1CD-FTV)

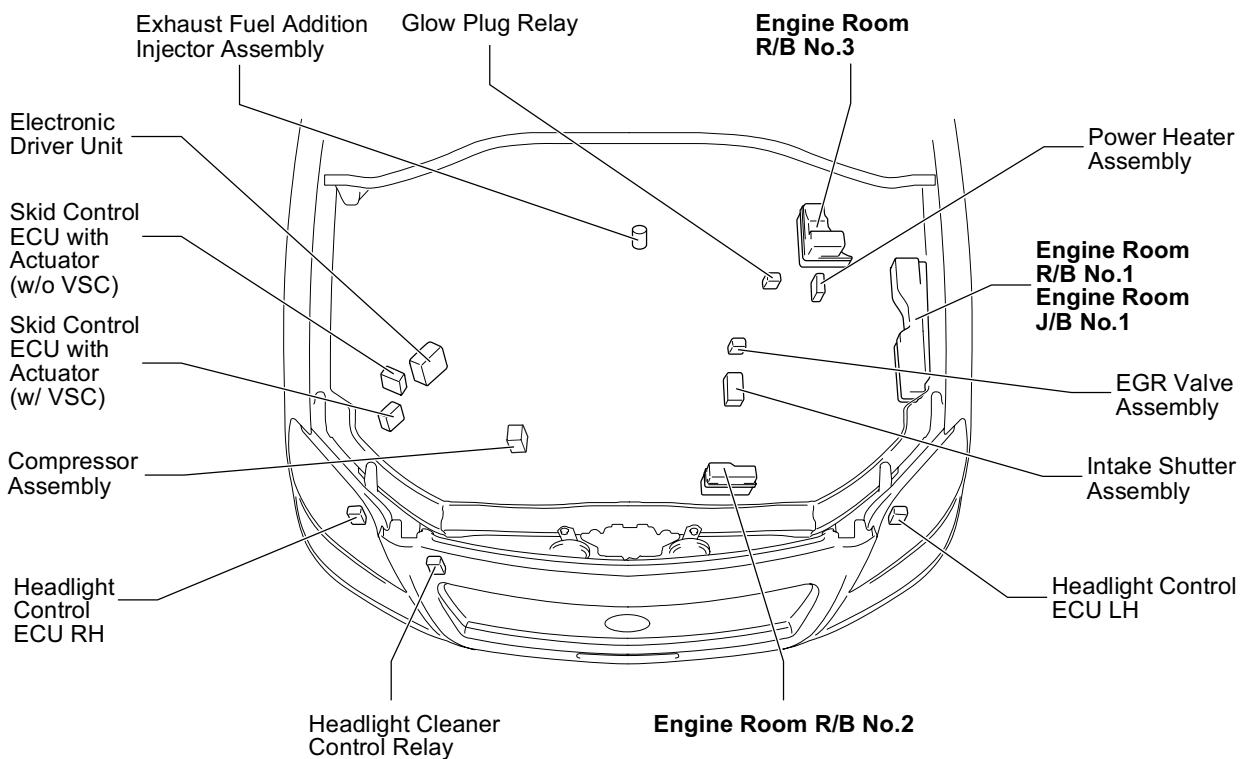


## D RELAY LOCATIONS


### [Engine Compartment] (Gasoline)

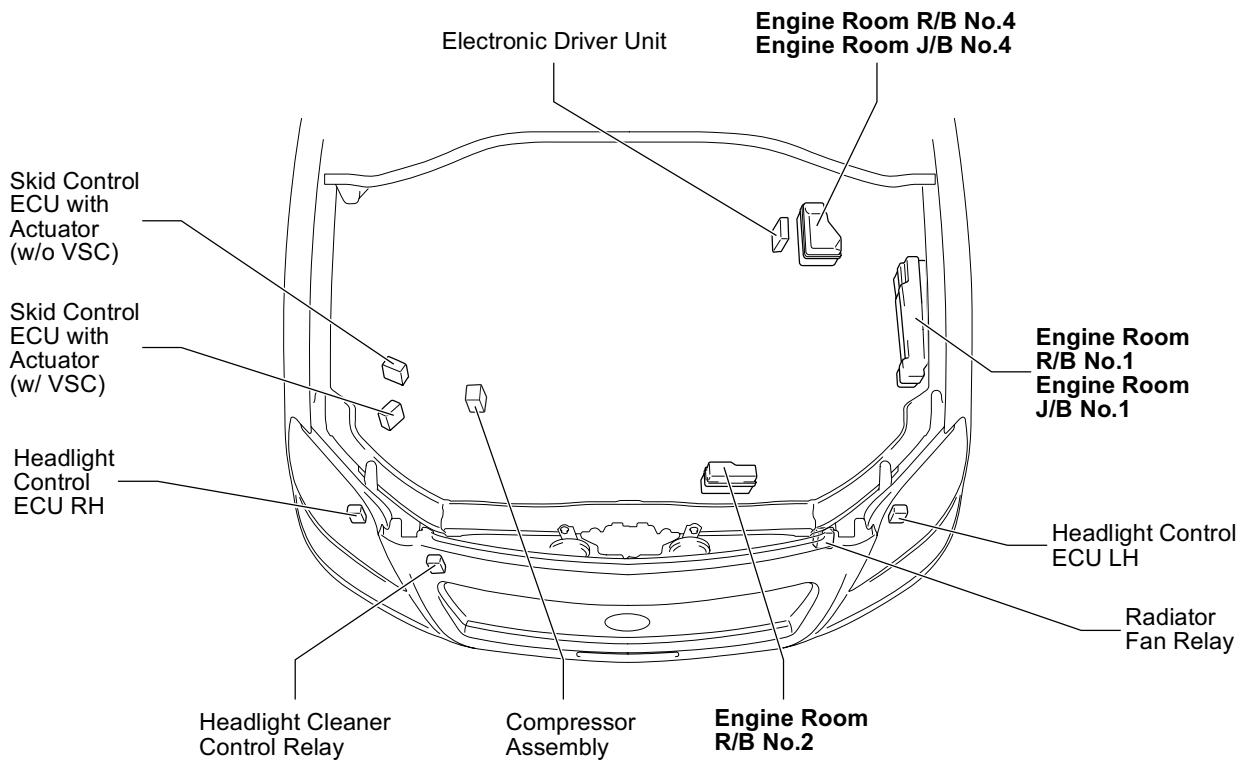


### (1CD-FTV)

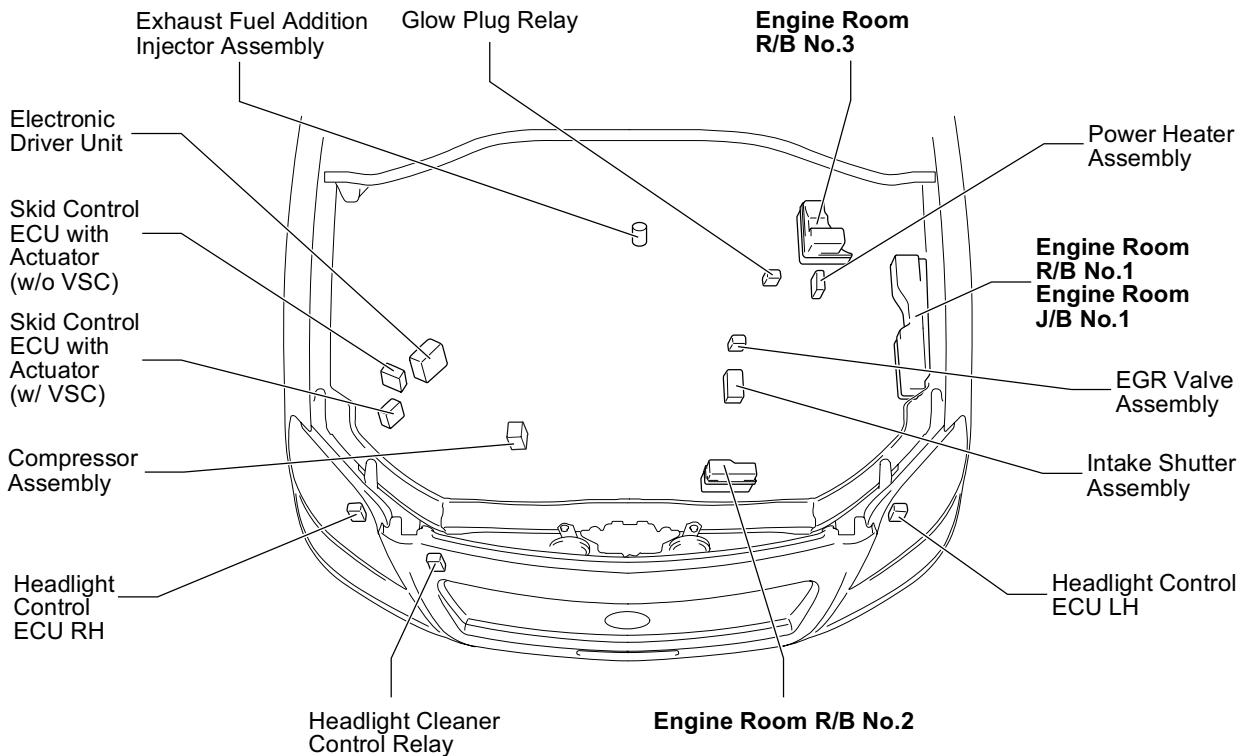

**[Instrument Panel]  
(LHD)**

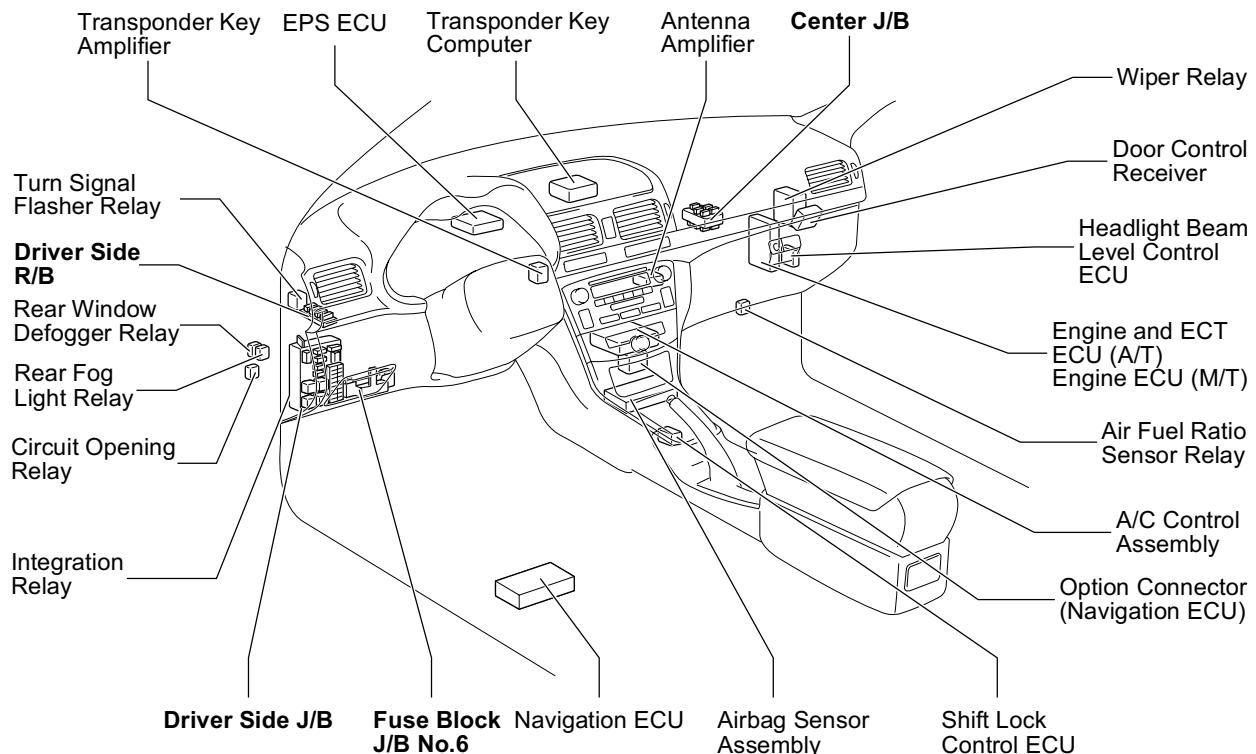


**(RHD)**

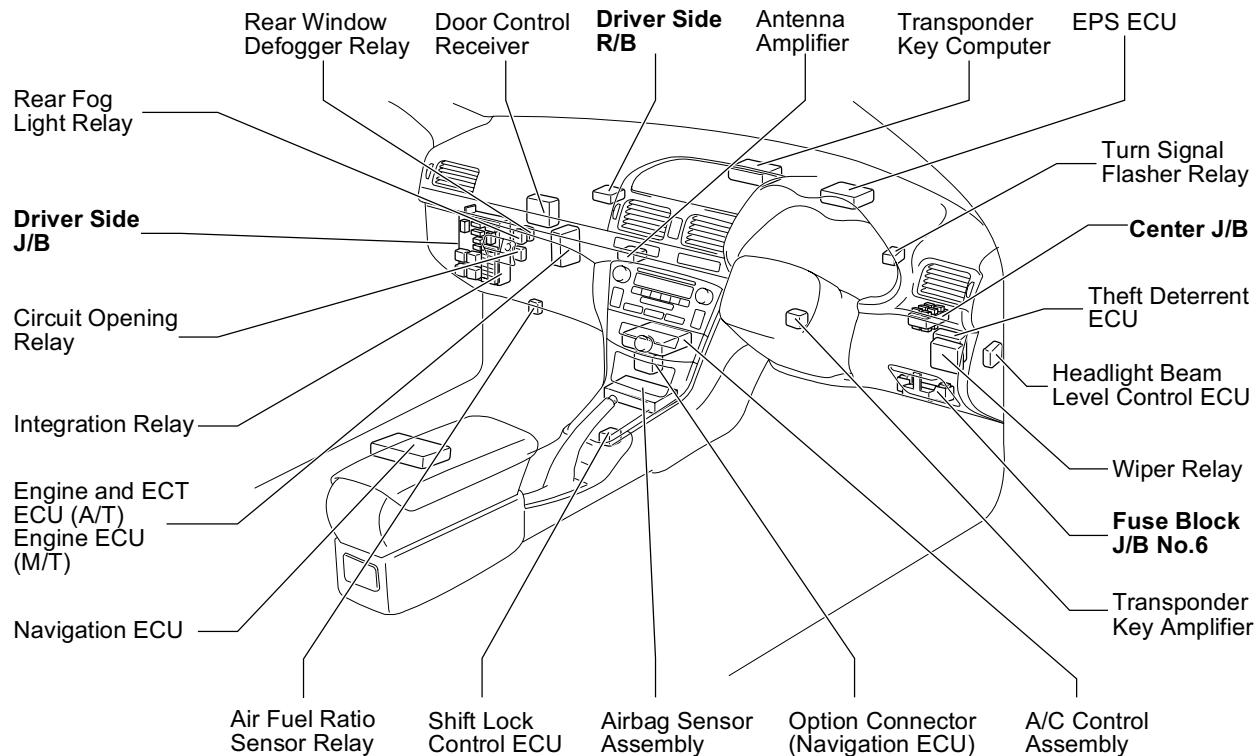


## D RELAY LOCATIONS

---

[Body]  
(S/D)

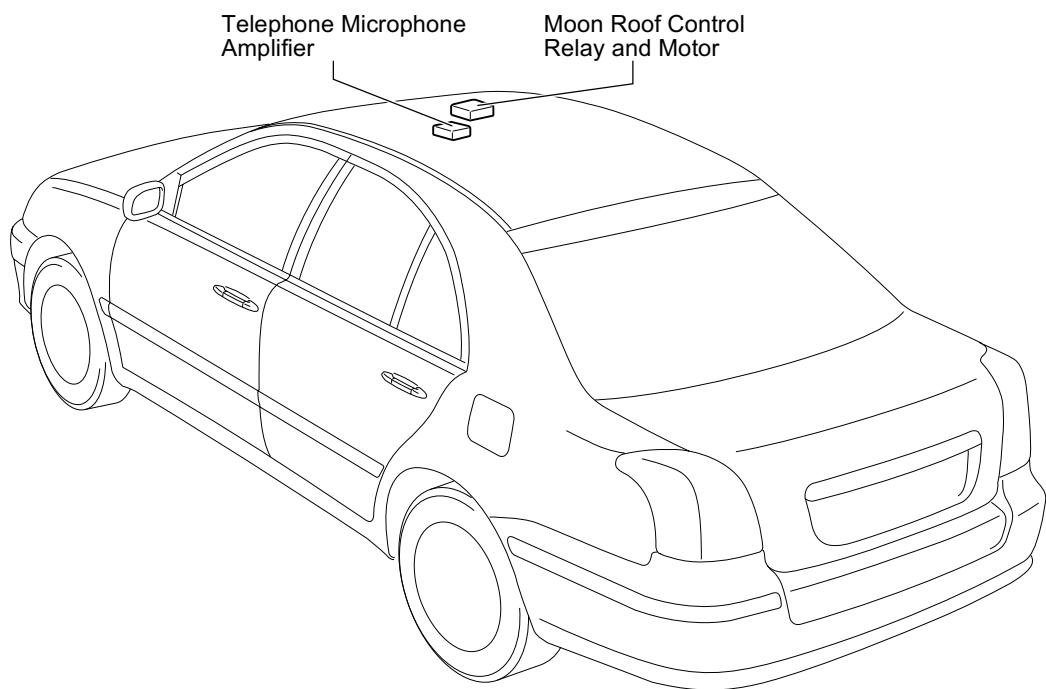


(L/B)

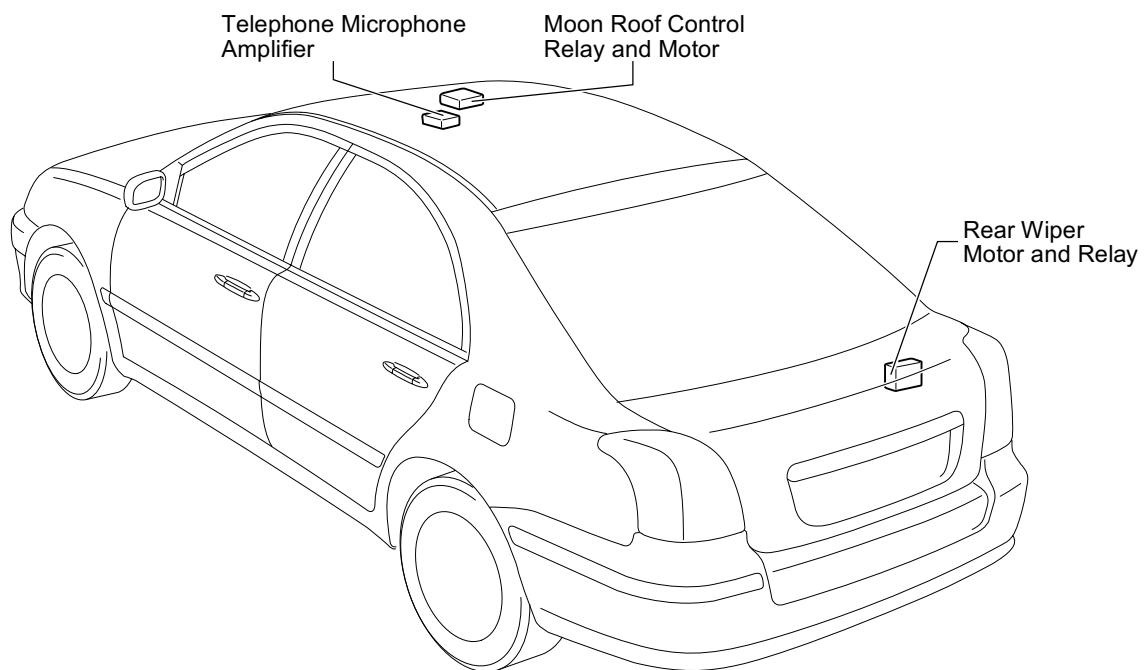


## D RELAY LOCATIONS

---


[Body]  
(S/D)

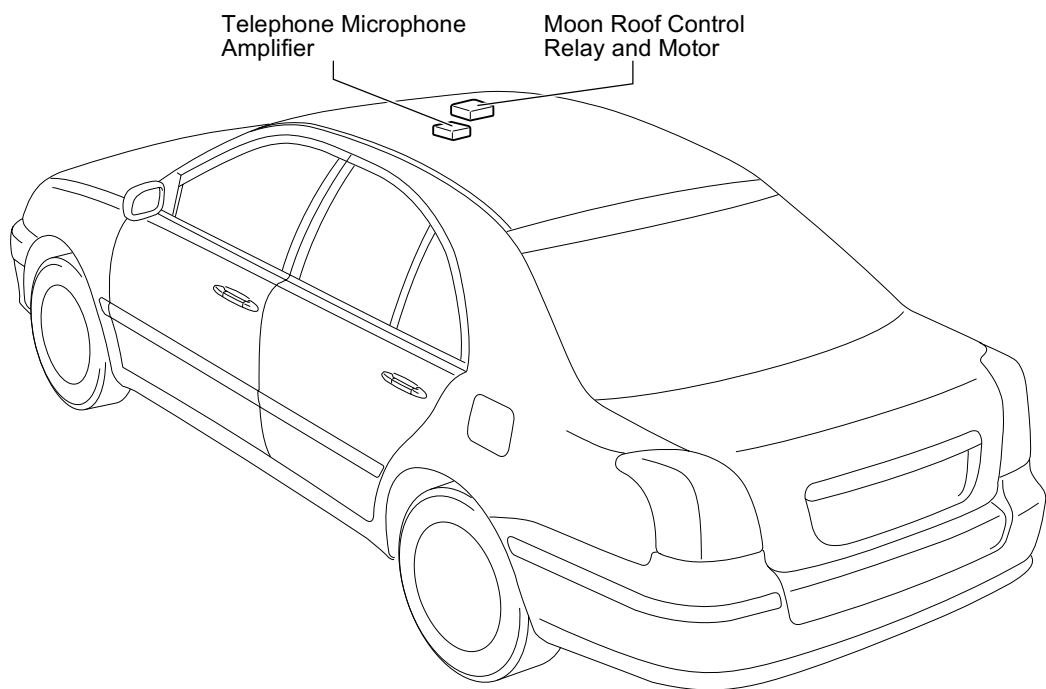

(L/B)

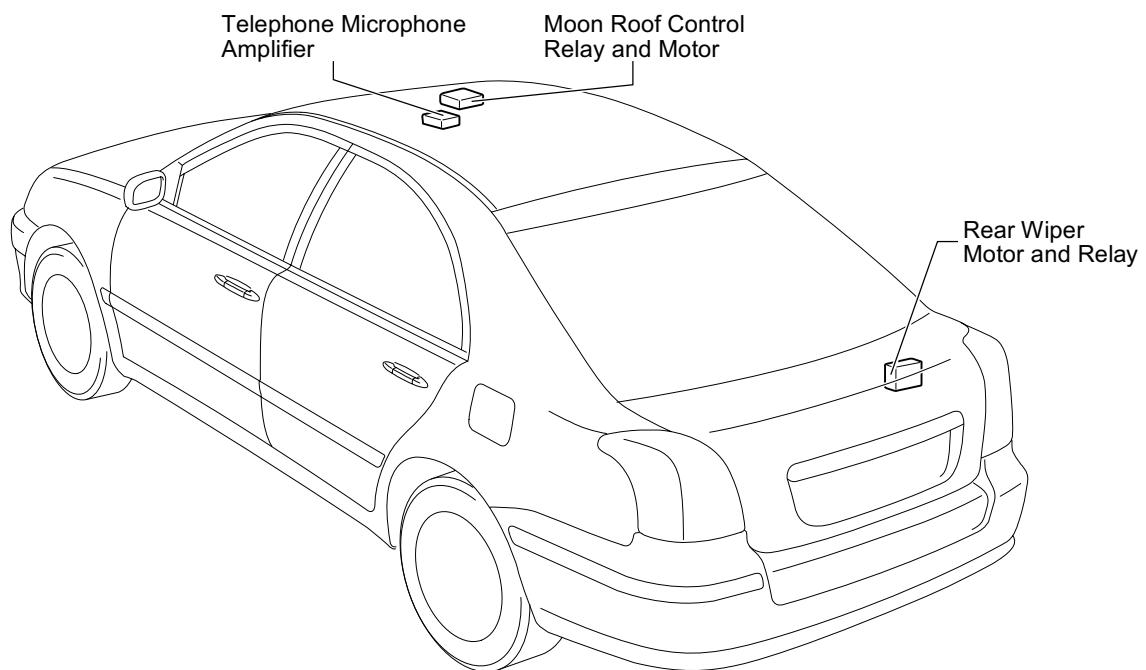


(W/G)

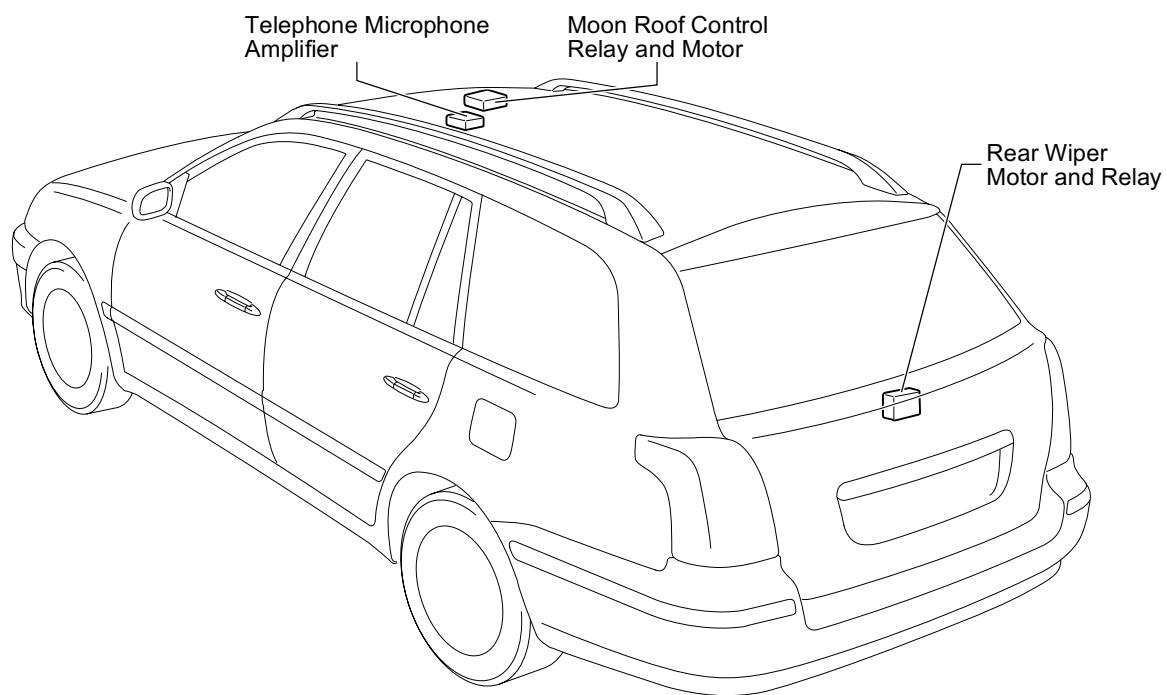

① : Engine Room R/B No.1  
 ② : Engine Room J/B No.1

### Engine Compartment Left (See Page 8)

(1CD-FTV)

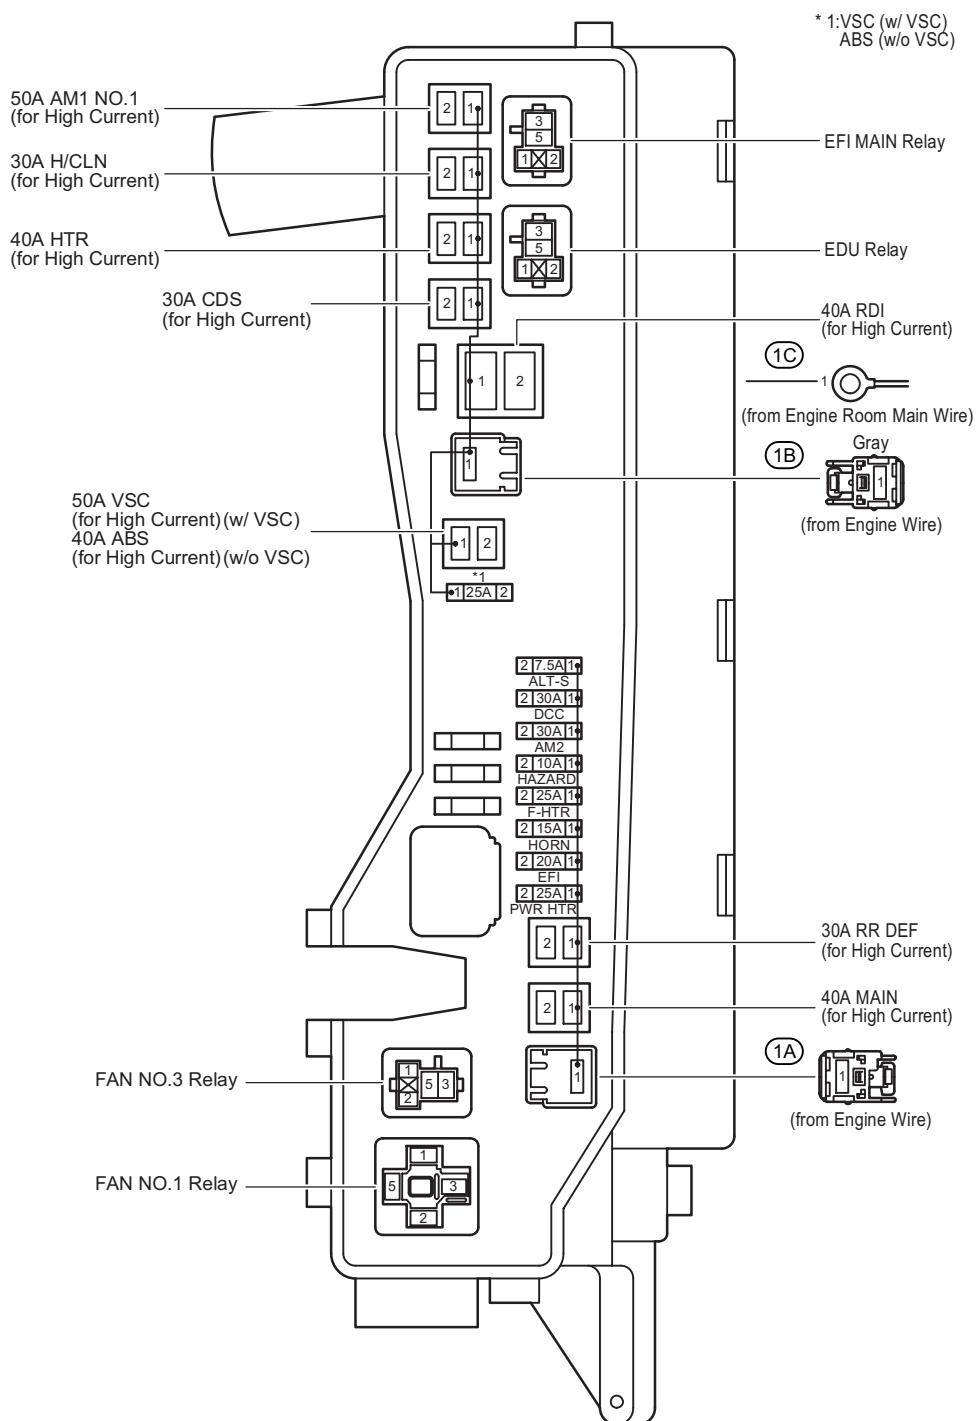


## D RELAY LOCATIONS

① : Engine Room R/B No.1  
 ② : Engine Room J/B No.1

Engine Compartment Left (See Page 8)


(Gasoline)

\* 1:2AZ-FSE, 1AZ-FSE, 1AZ-FE  
 \* 2:1ZZ-FE, 3ZZ-FE

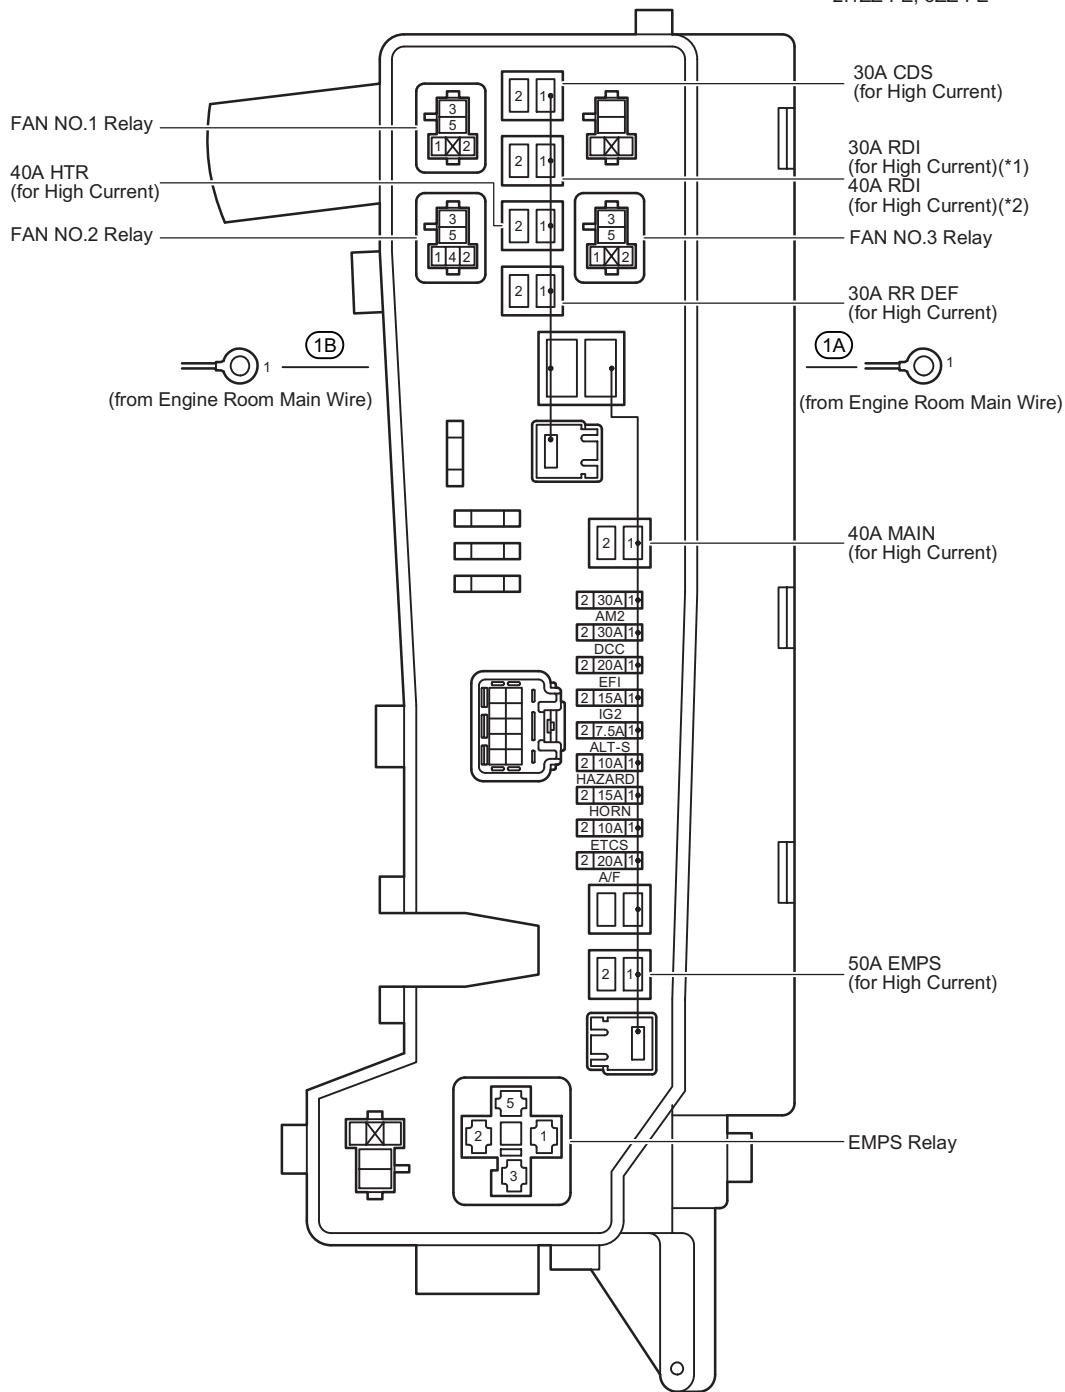


## D RELAY LOCATIONS

② : Engine Room R/B No.2 Near the Radiator Fan (See Page 8)

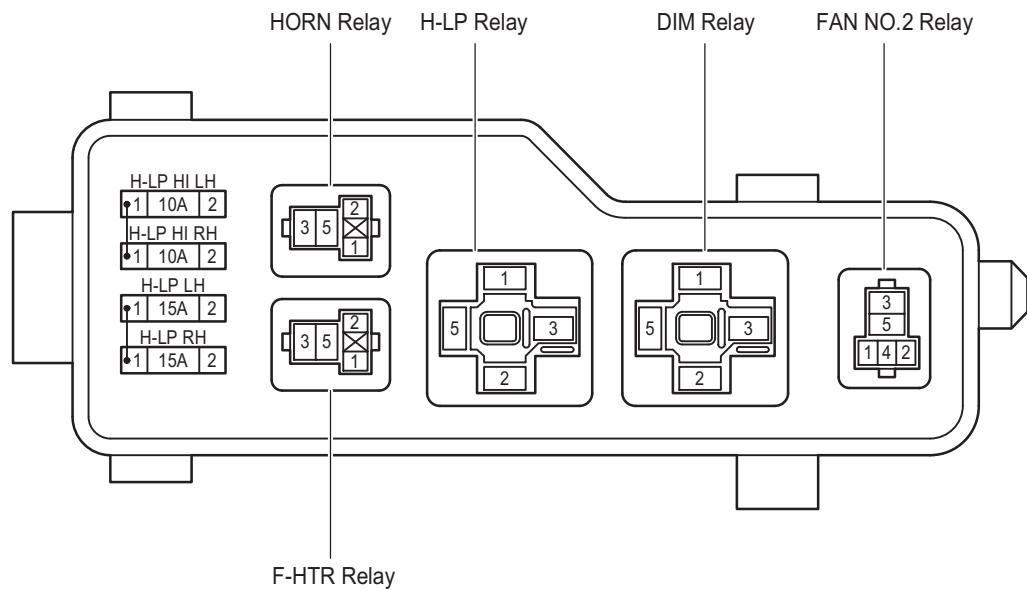


③ : Engine Room R/B No.3 Left Side of the Suspension Tower (See Page 8)  
(1CD-FTV)

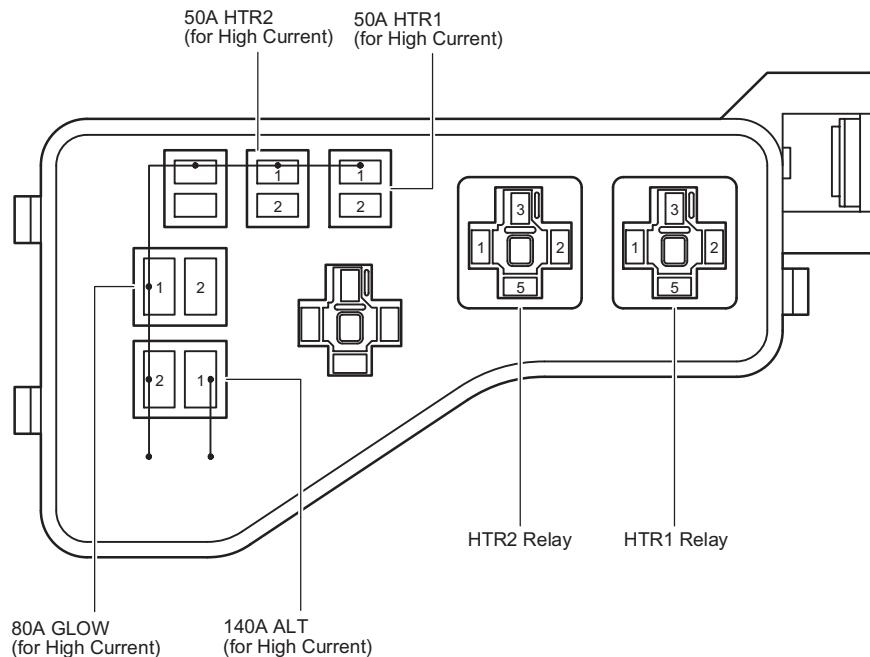


## D RELAY LOCATIONS

② : Engine Room R/B No.2 Near the Radiator Fan (See Page 8)

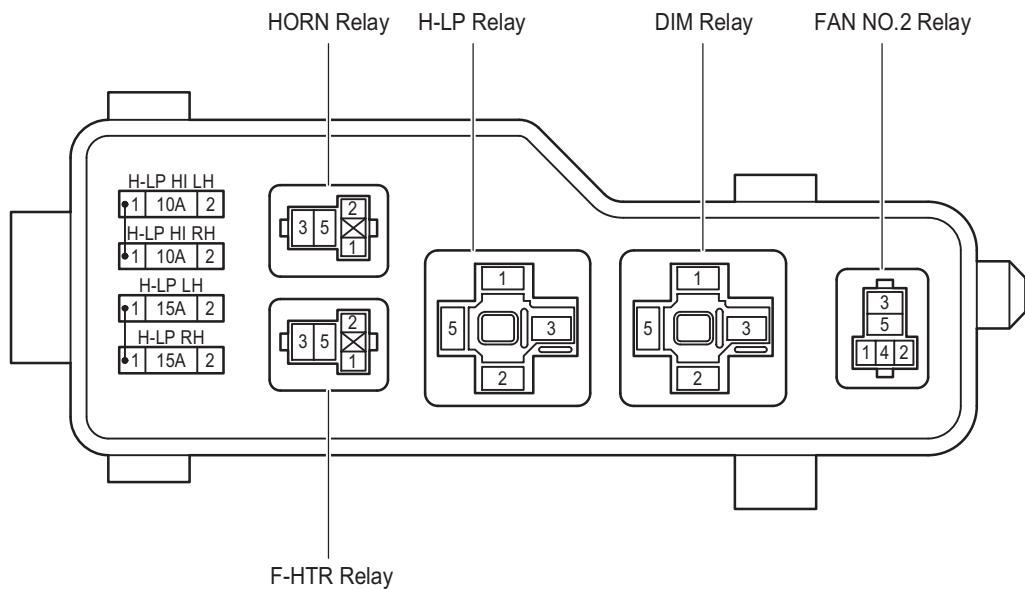

③ : Engine Room R/B No.3 Left Side of the Suspension Tower (See Page 8)  
(1CD-FTV)

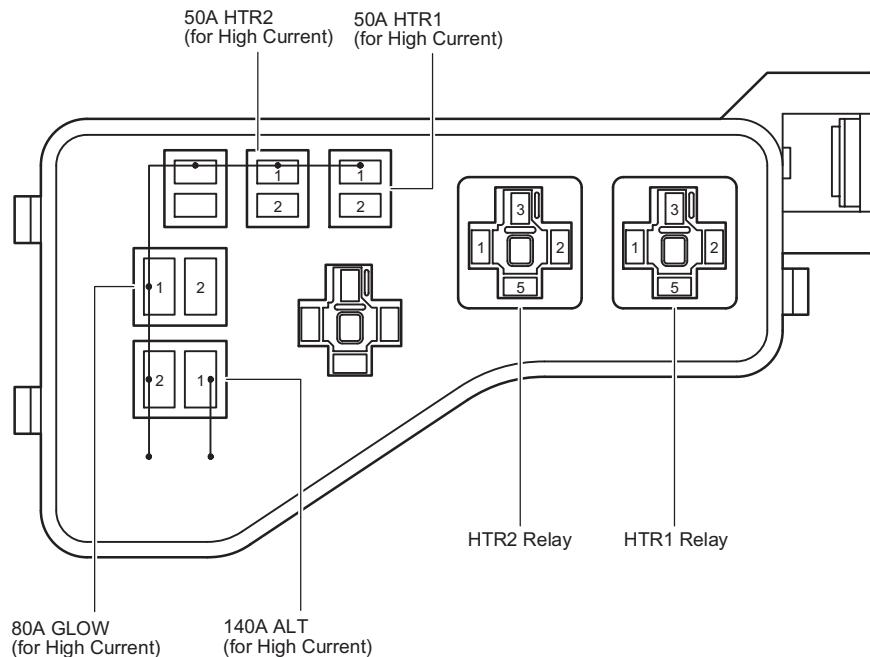


④ : Engine Room R/B No.4

**Left Side of the Suspension Tower (See Page 8)**

## **Gasoline**


- \* 1:VSC (w/ VSC)  
ABS (w/o VSC)
- \* 2:2AZ-FSE, 1AZ-FSE, 1AZ-FE
- \* 3:1ZZ-FE, 3ZZ-FE

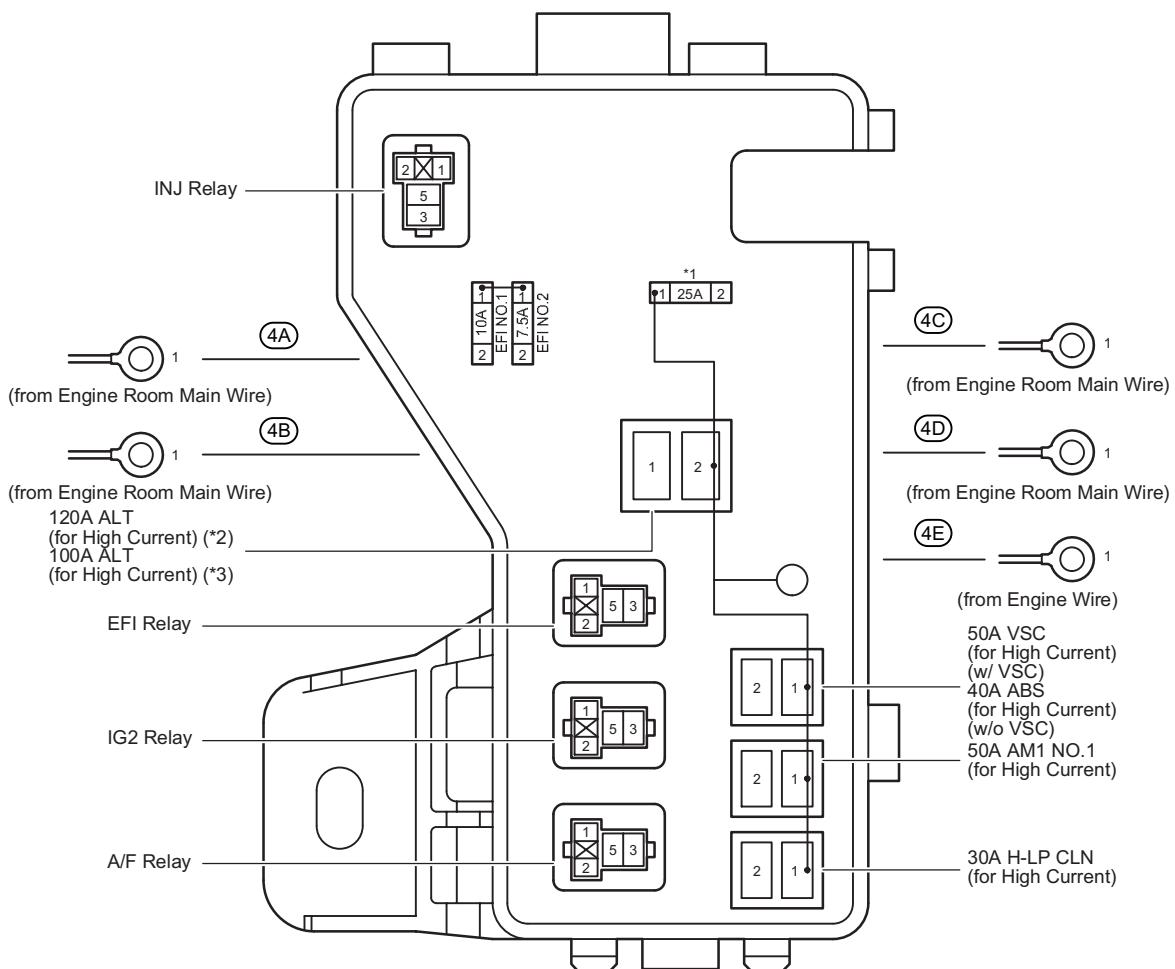


## D RELAY LOCATIONS

⑤ : Driver Side R/B	LHD : Left Side of the Instrument Panel (See Page 9)
	RHD : Instrument Panel Reinforcement LH (See Page 9)

(LHD)

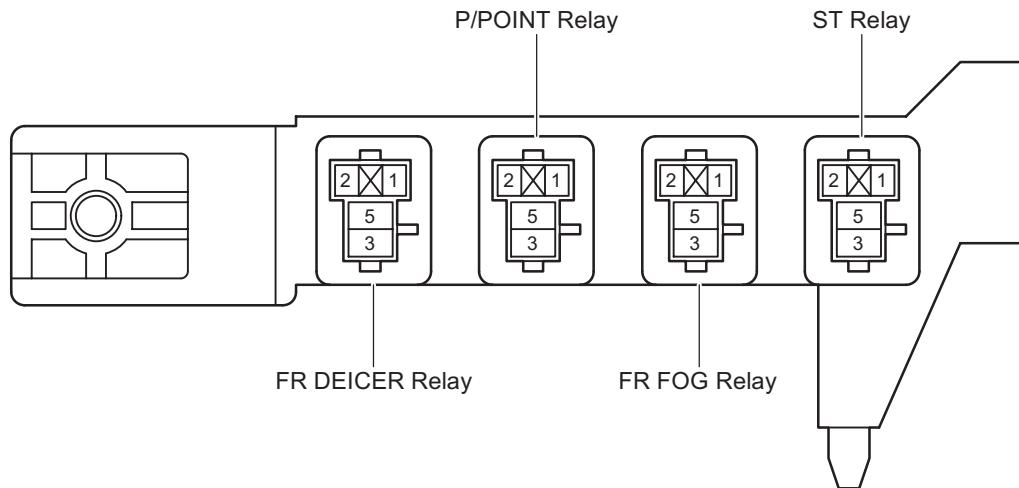

(RHD)

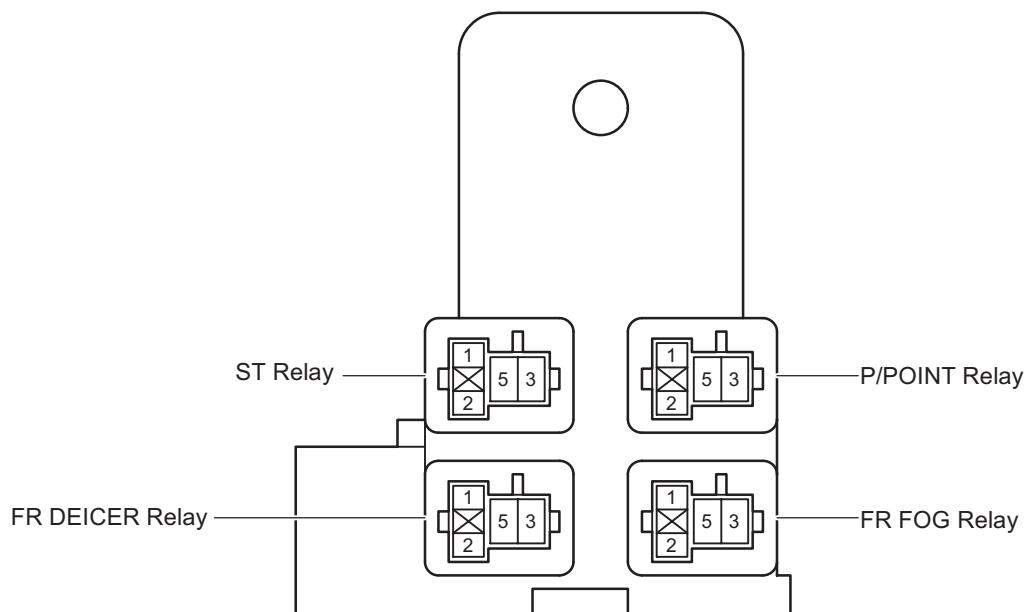


⑥ : Fuse Block

○ : J/B No.6

## Lower Finish Panel (See Page 9)


- \* 1:P-RR P/W (LHD)  
D-RR P/W (RHD)
- \* 2:P-FR P/W (LHD)  
D-FR P/W (RHD)
- \* 3:D-RR P/W (LHD)  
P-RR P/W (RHD)
- \* 4:D-FR P/W (LHD)  
P-FR P/W (RHD)

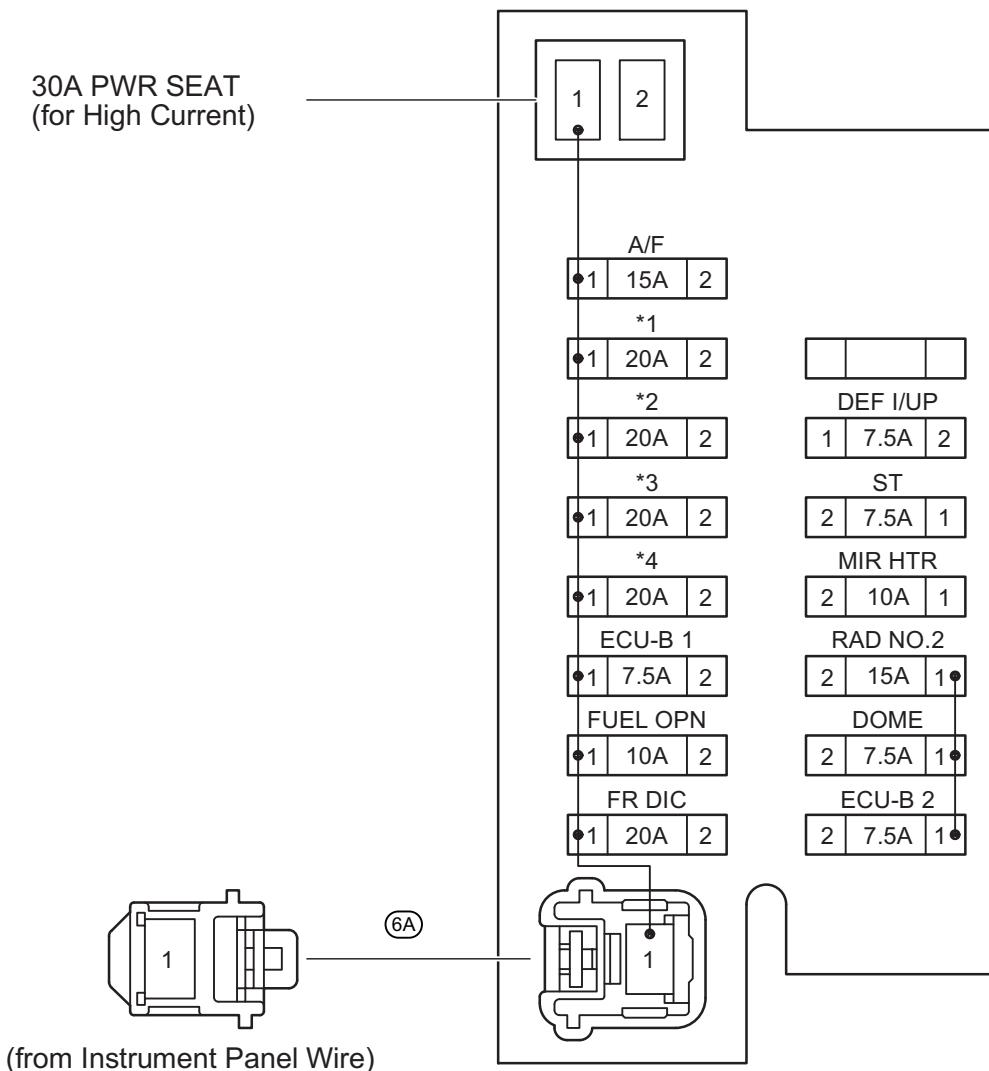

① : Engine Room R/B No.1  
 ② : Engine Room J/B No.1

### Engine Compartment Left (See Page 8)


(1CD-FTV)

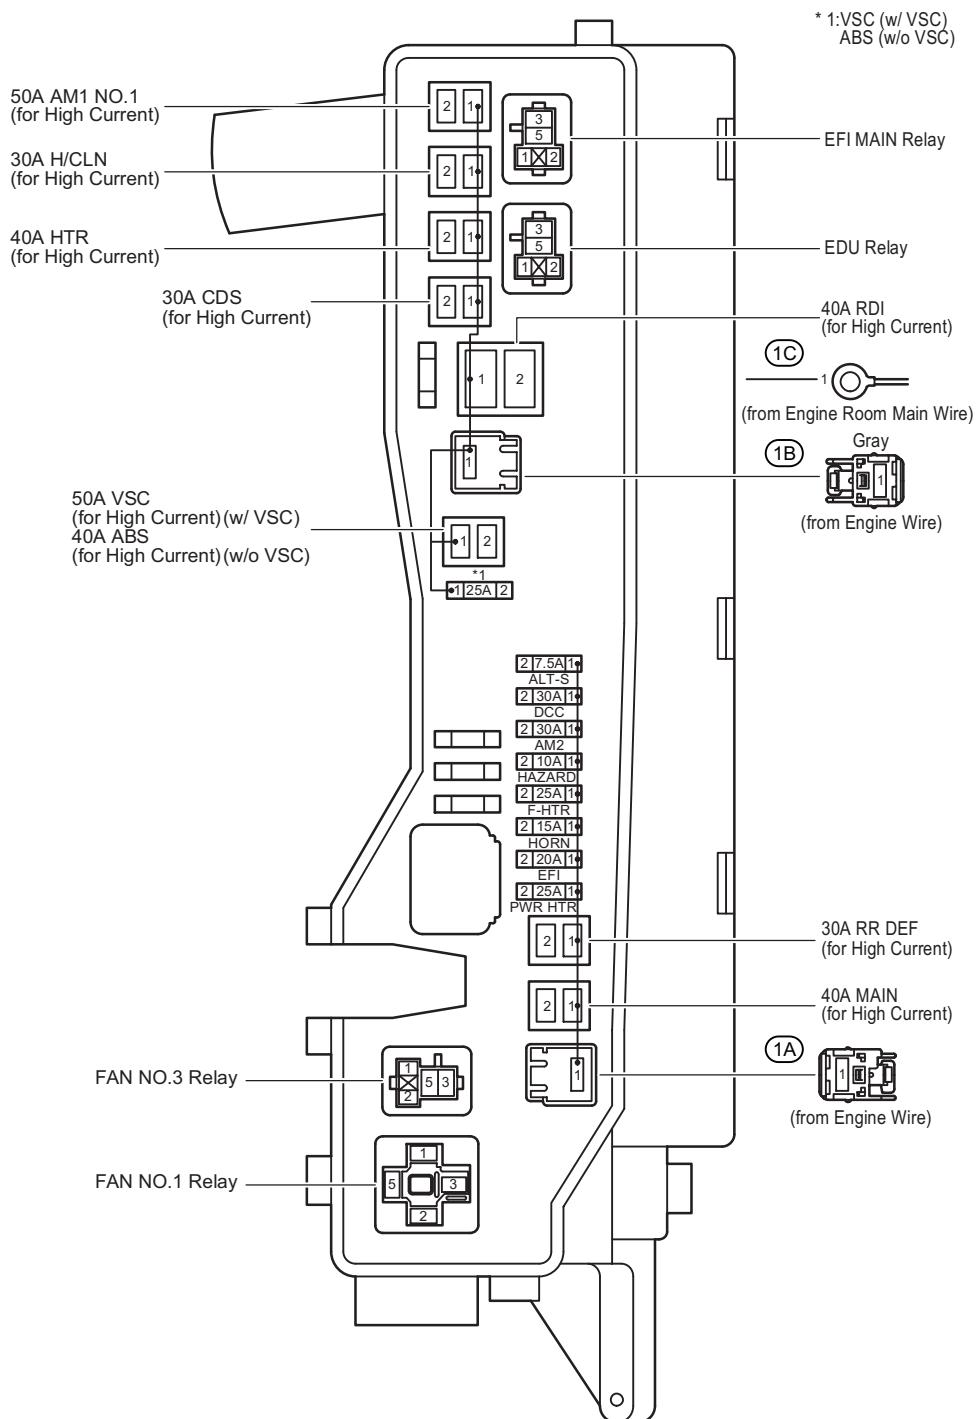

## D RELAY LOCATIONS

① : Engine Room R/B No.1	Engine Compartment Left (See Page 8)
② : Engine Room J/B No.1 (Gasoline)	

\* 1:2AZ-FSE, 1AZ-FSE, 1AZ-FE  
\* 2:1ZZ-FE, 3ZZ-FE

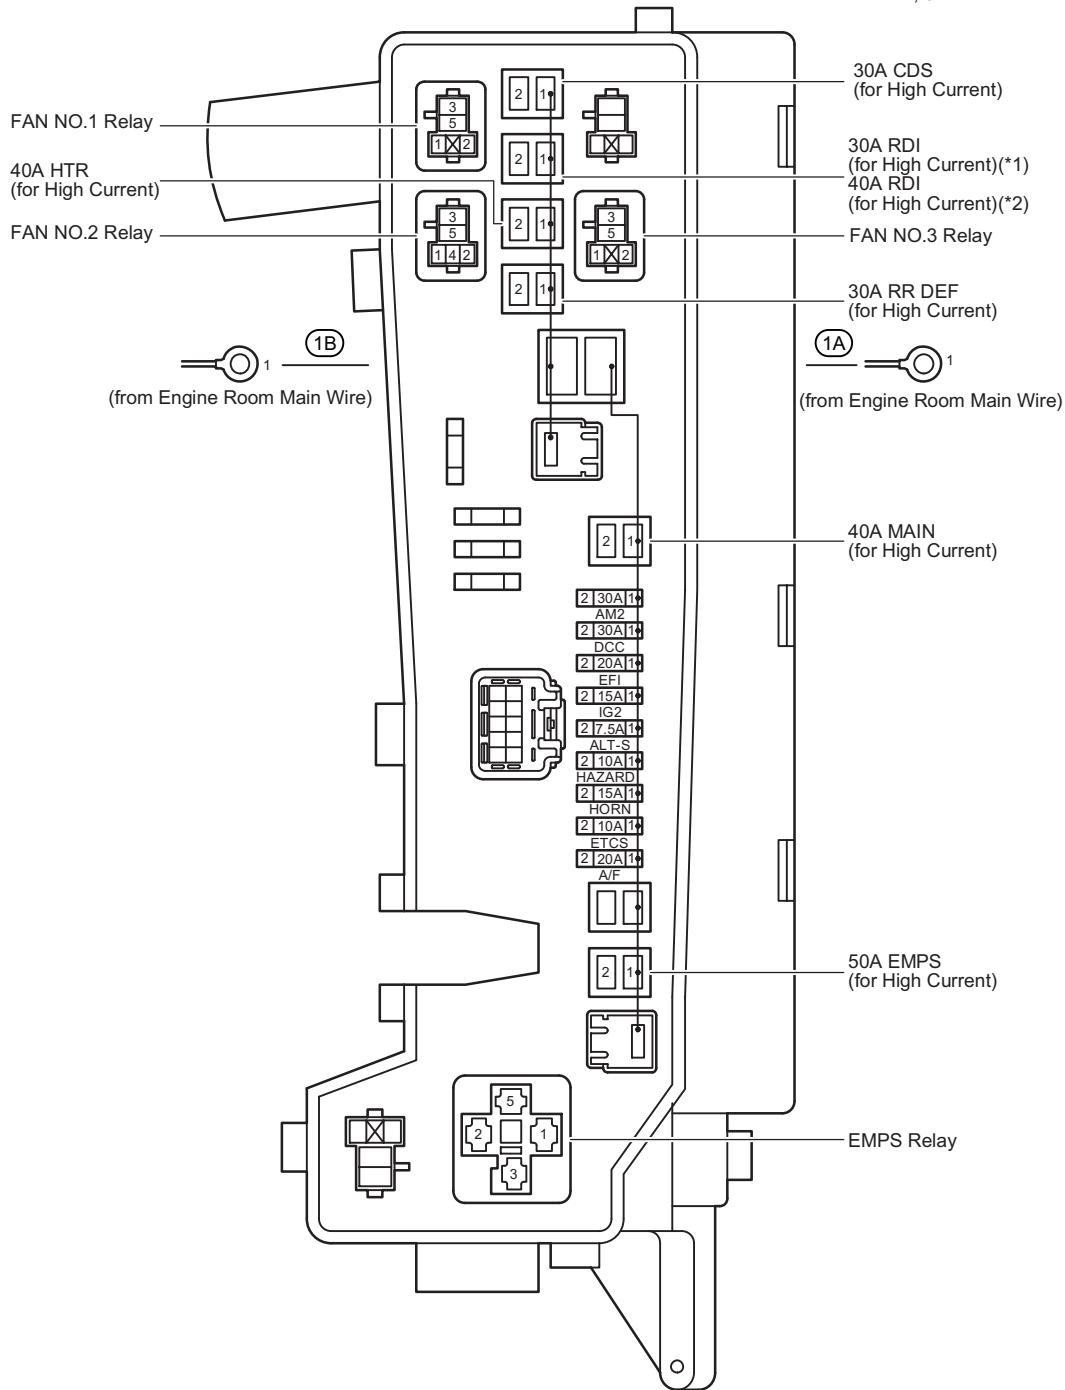


(④ : Engine Room R/B No.4

(⑤ : Engine Room J/B No.4

Left Side of the Suspension Tower (See Page 8)

(Gasoline)


\* 1:VSC (w/ VSC)  
 ABS (w/o VSC)  
 \* 2:2AZ-FSE, 1AZ-FSE, 1AZ-FE  
 \* 3:1ZZ-FE, 3ZZ-FE

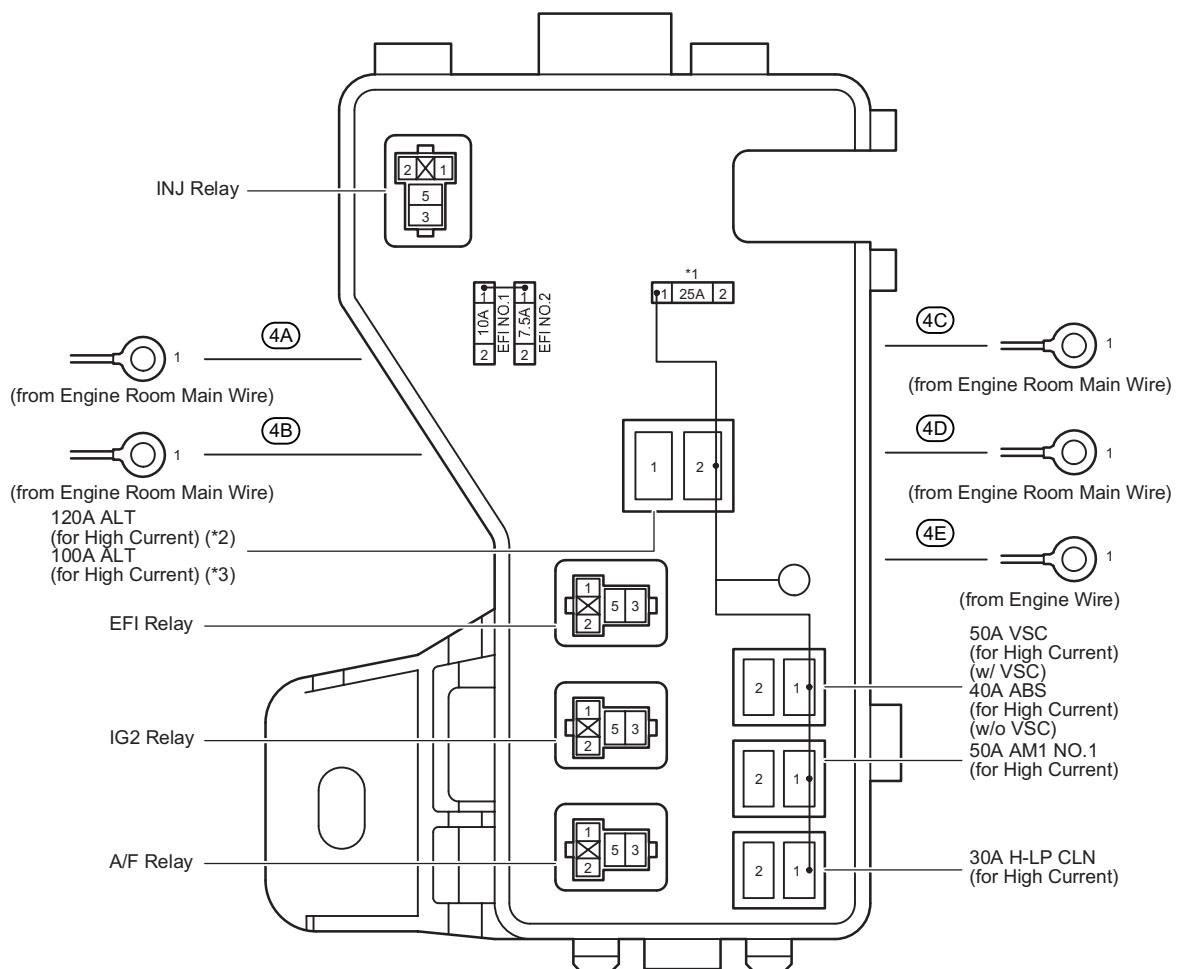

## D RELAY LOCATIONS

□ : Driver Side J/B


Left Side of the Instrument Panel (See Page 9)

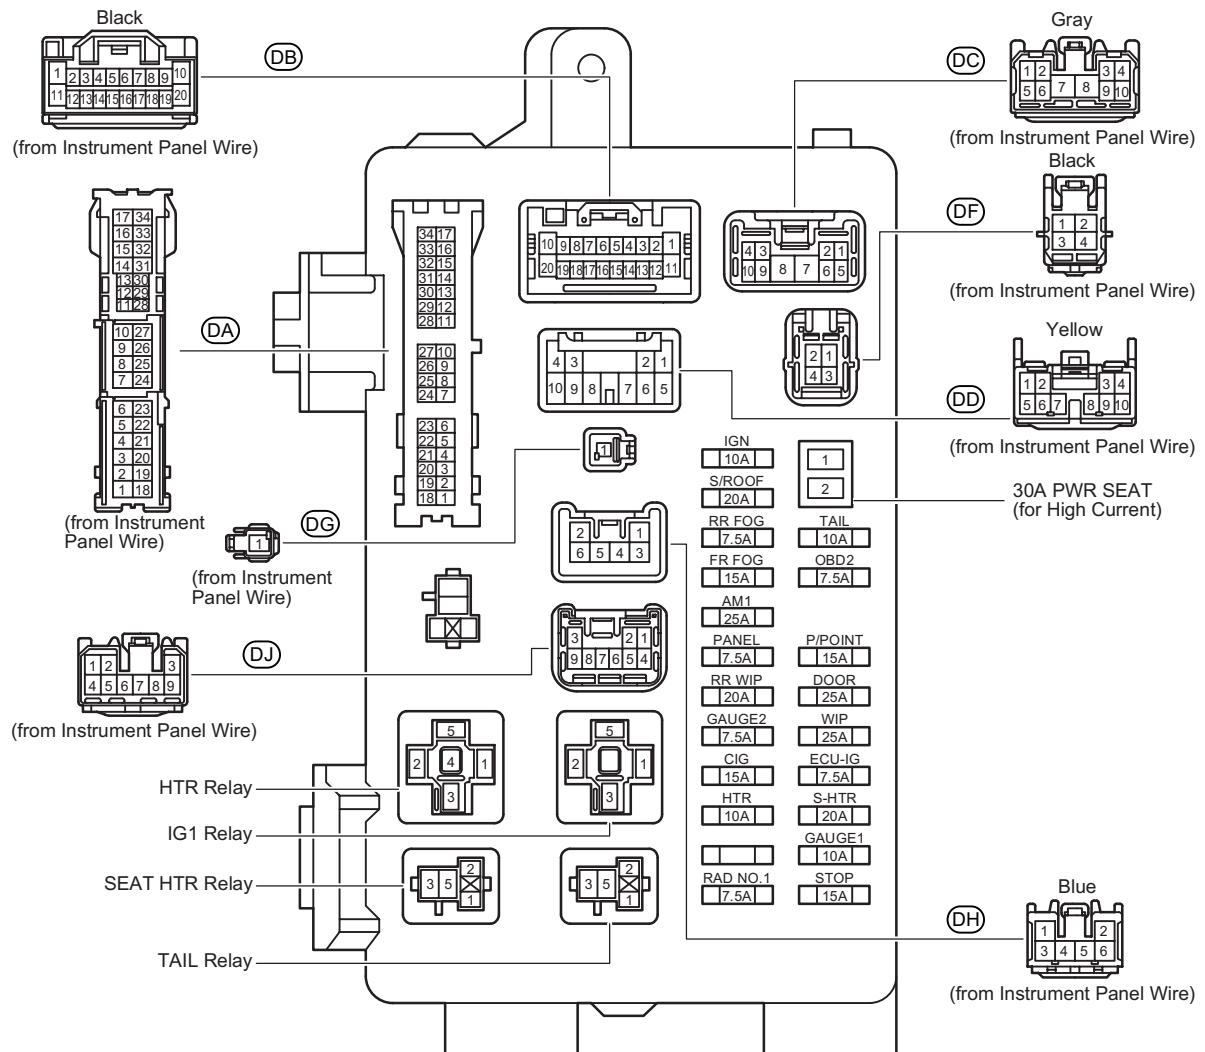

## D RELAY LOCATIONS

□ : Center J/B

Instrument Panel Reinforcement RH (See Page 9)

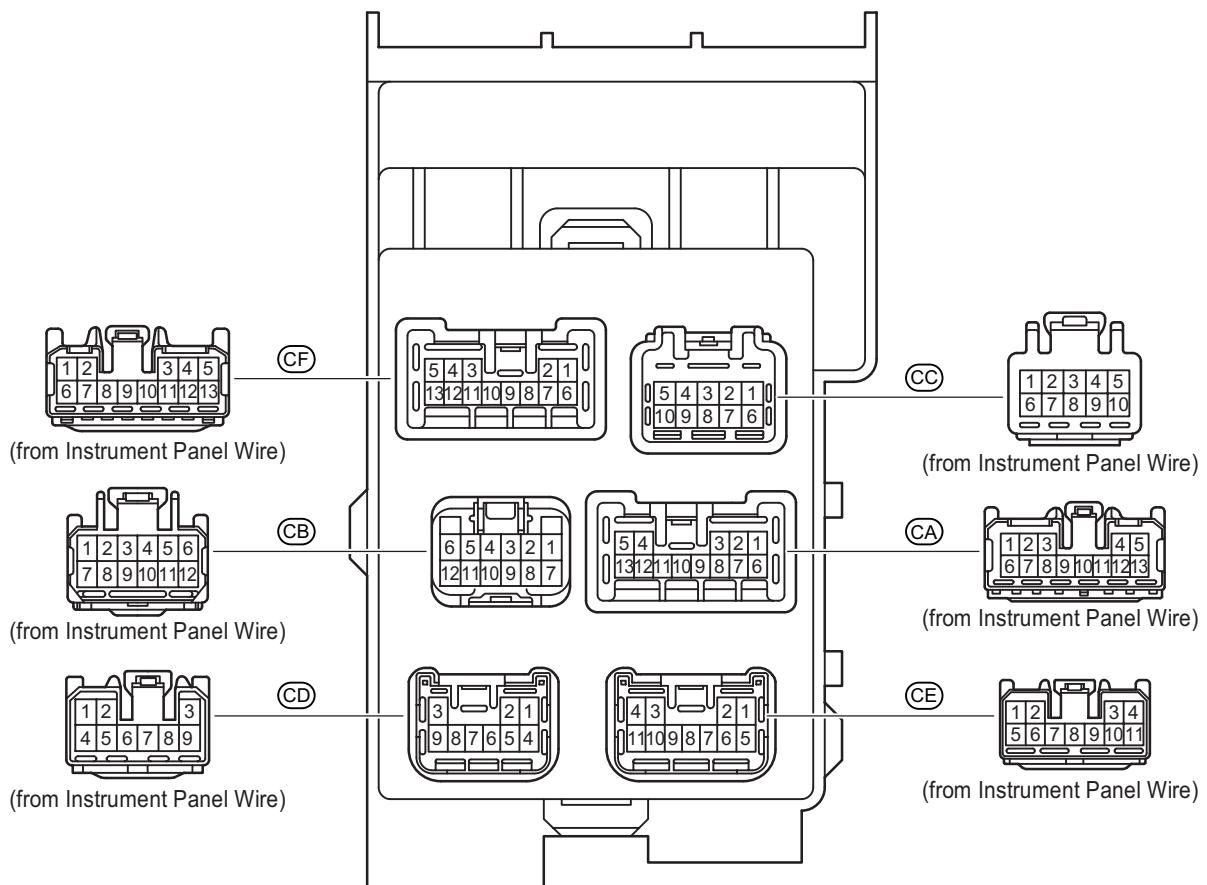

⑥ : Fuse Block

⑦ : J/B No.6

## Lower Finish Panel (See Page 9)

- \* 1:P-RR P/W (LHD)  
D-RR P/W (RHD)
- \* 2:P-FR P/W (LHD)  
D-FR P/W (RHD)
- \* 3:D-RR P/W (LHD)  
P-RR P/W (RHD)
- \* 4:D-FR P/W (LHD)  
P-FR P/W (RHD)

