



F RELAY LOCATIONS UND SYMBOLE


[Engine Compartment]

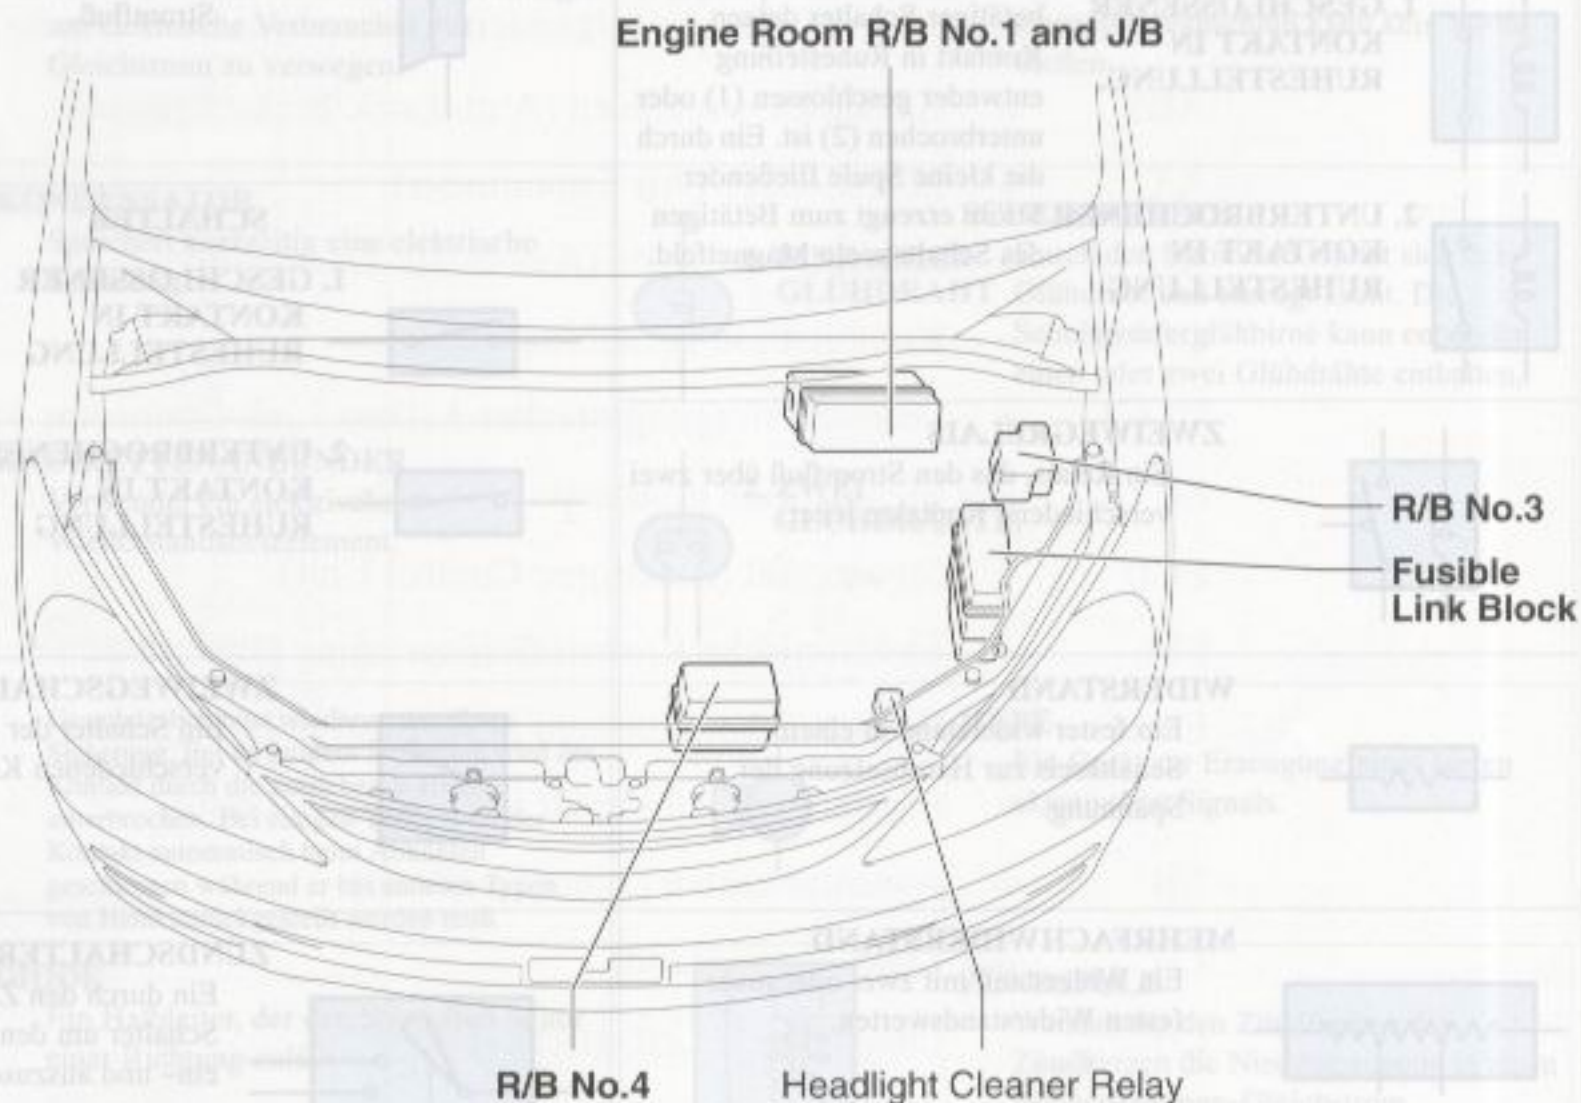


[Body]

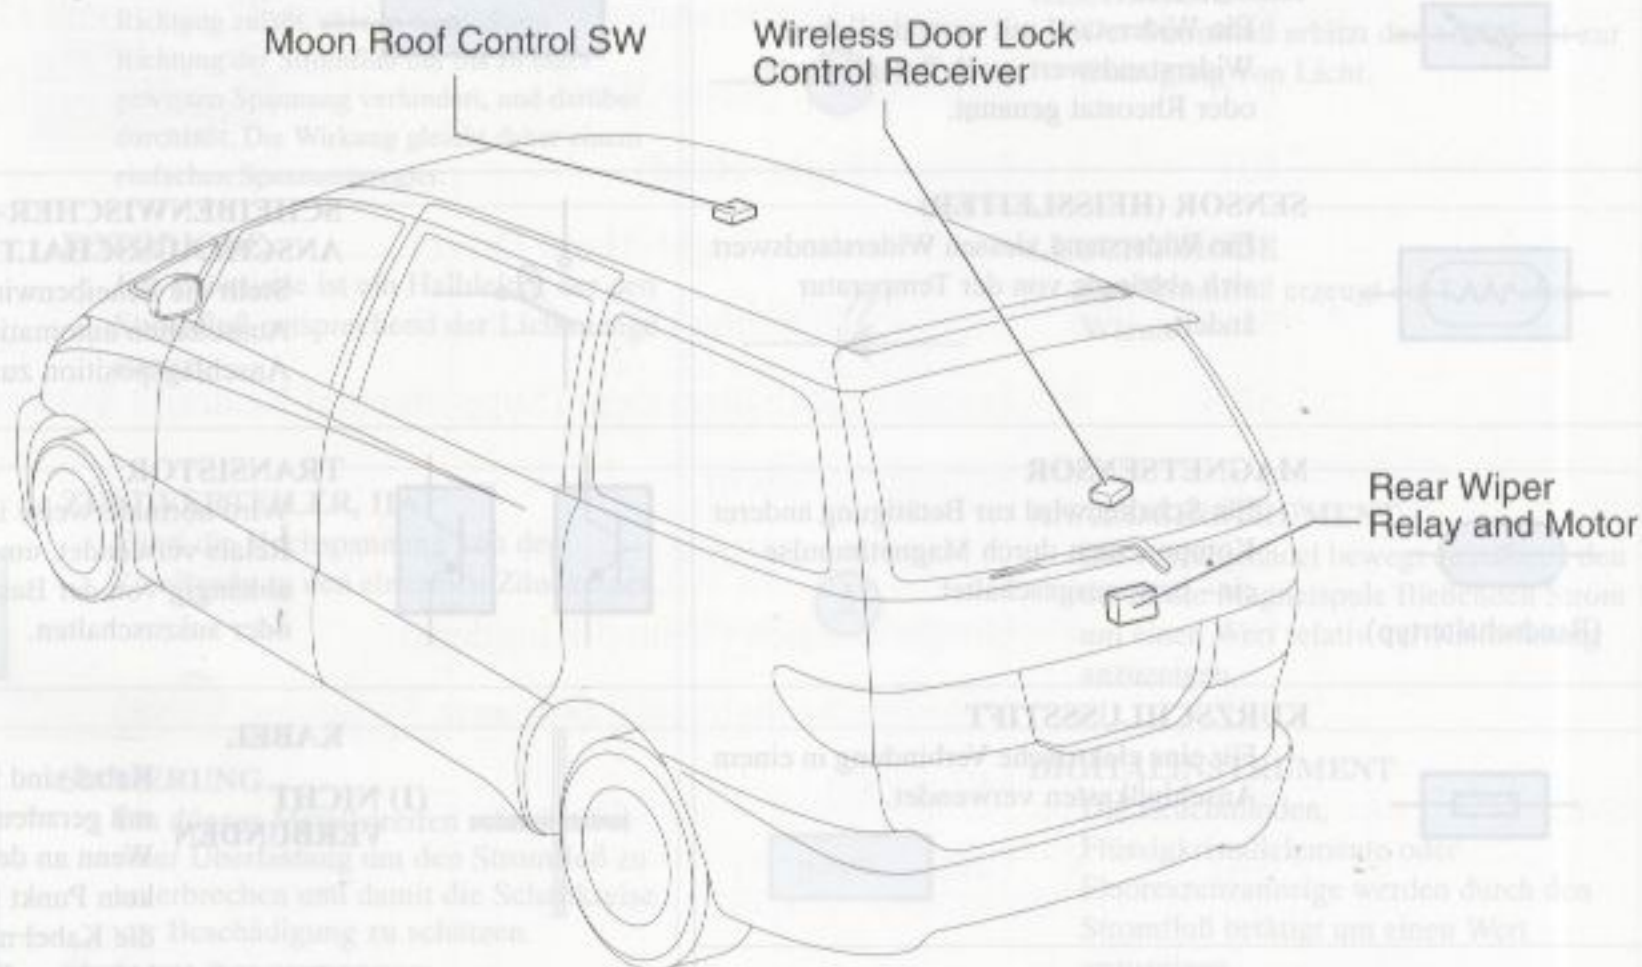

**[Instrument Panel]
(LHD)**

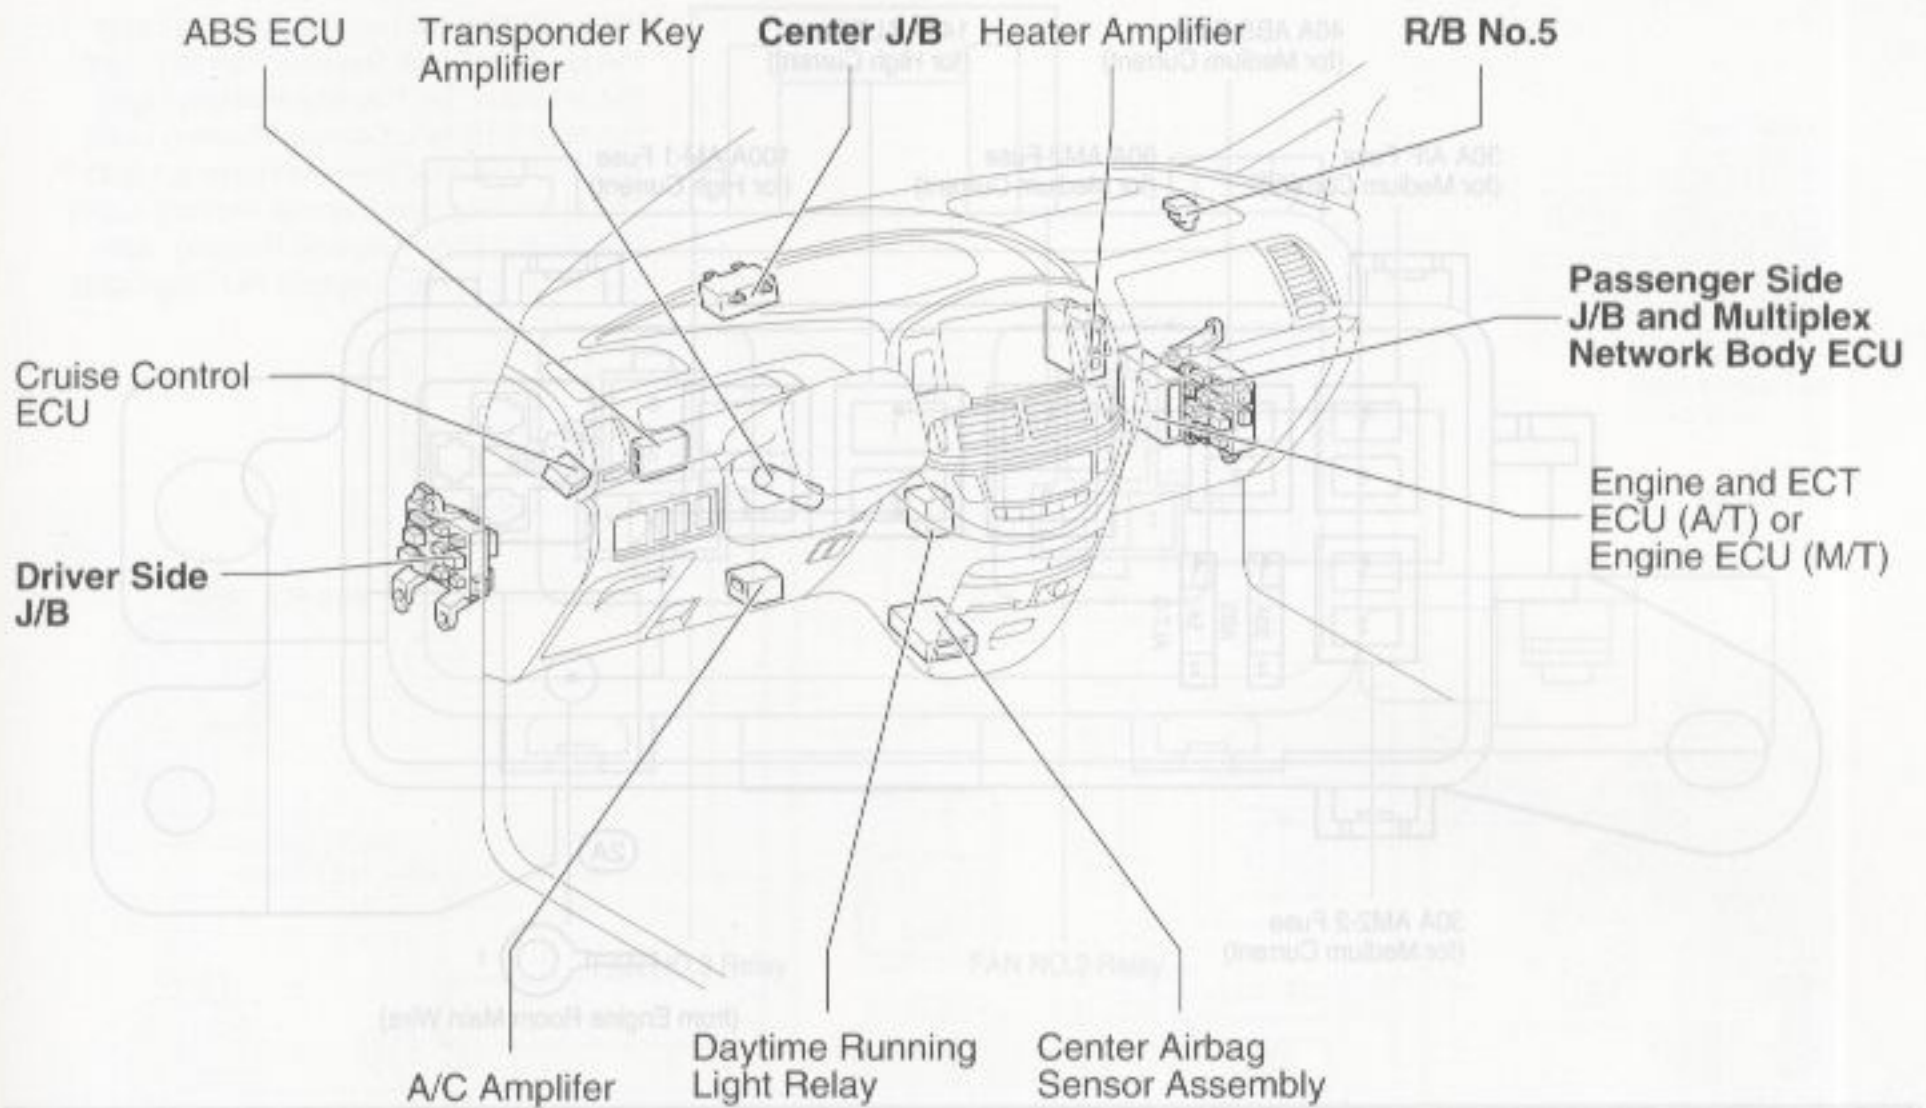


(RHD)

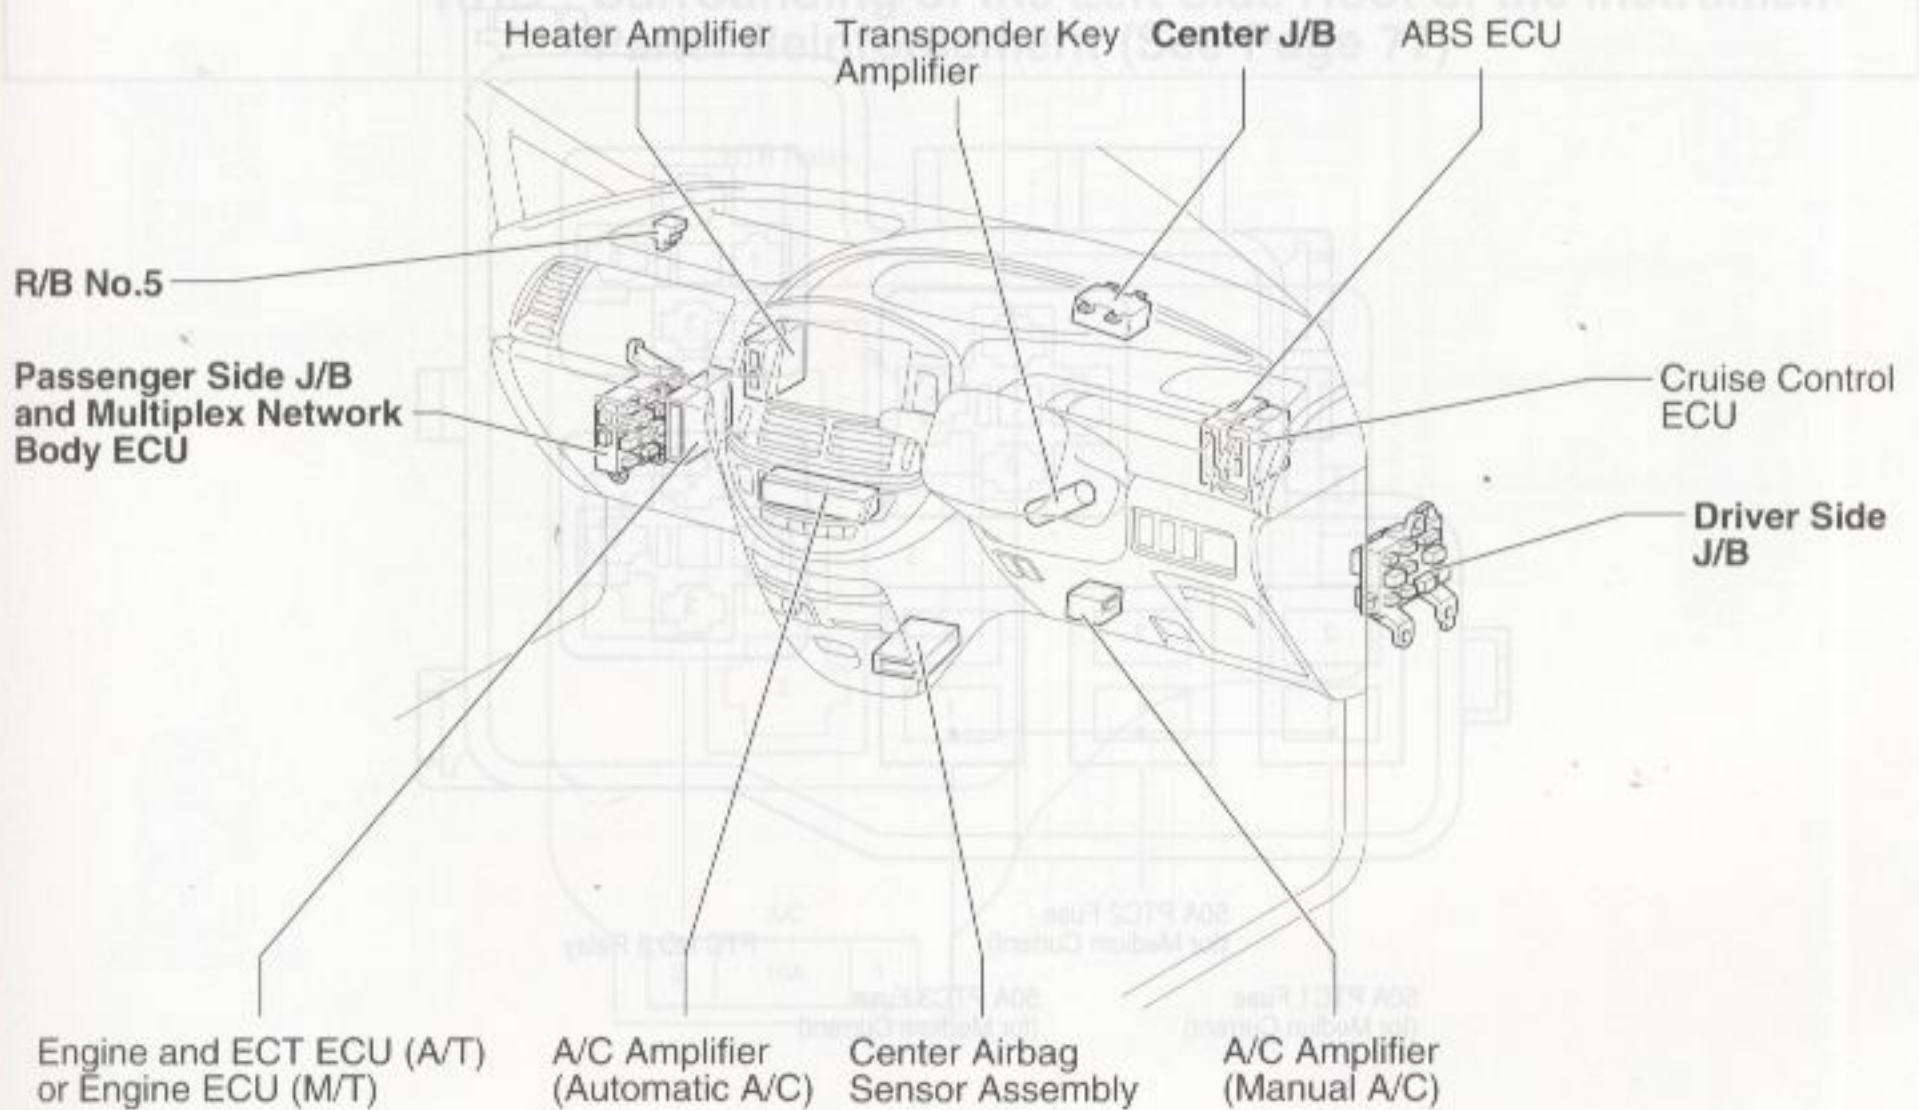

F RELAY LOCATIONS


② : Fusible Link Block

Left of the Battery (See Page 76)

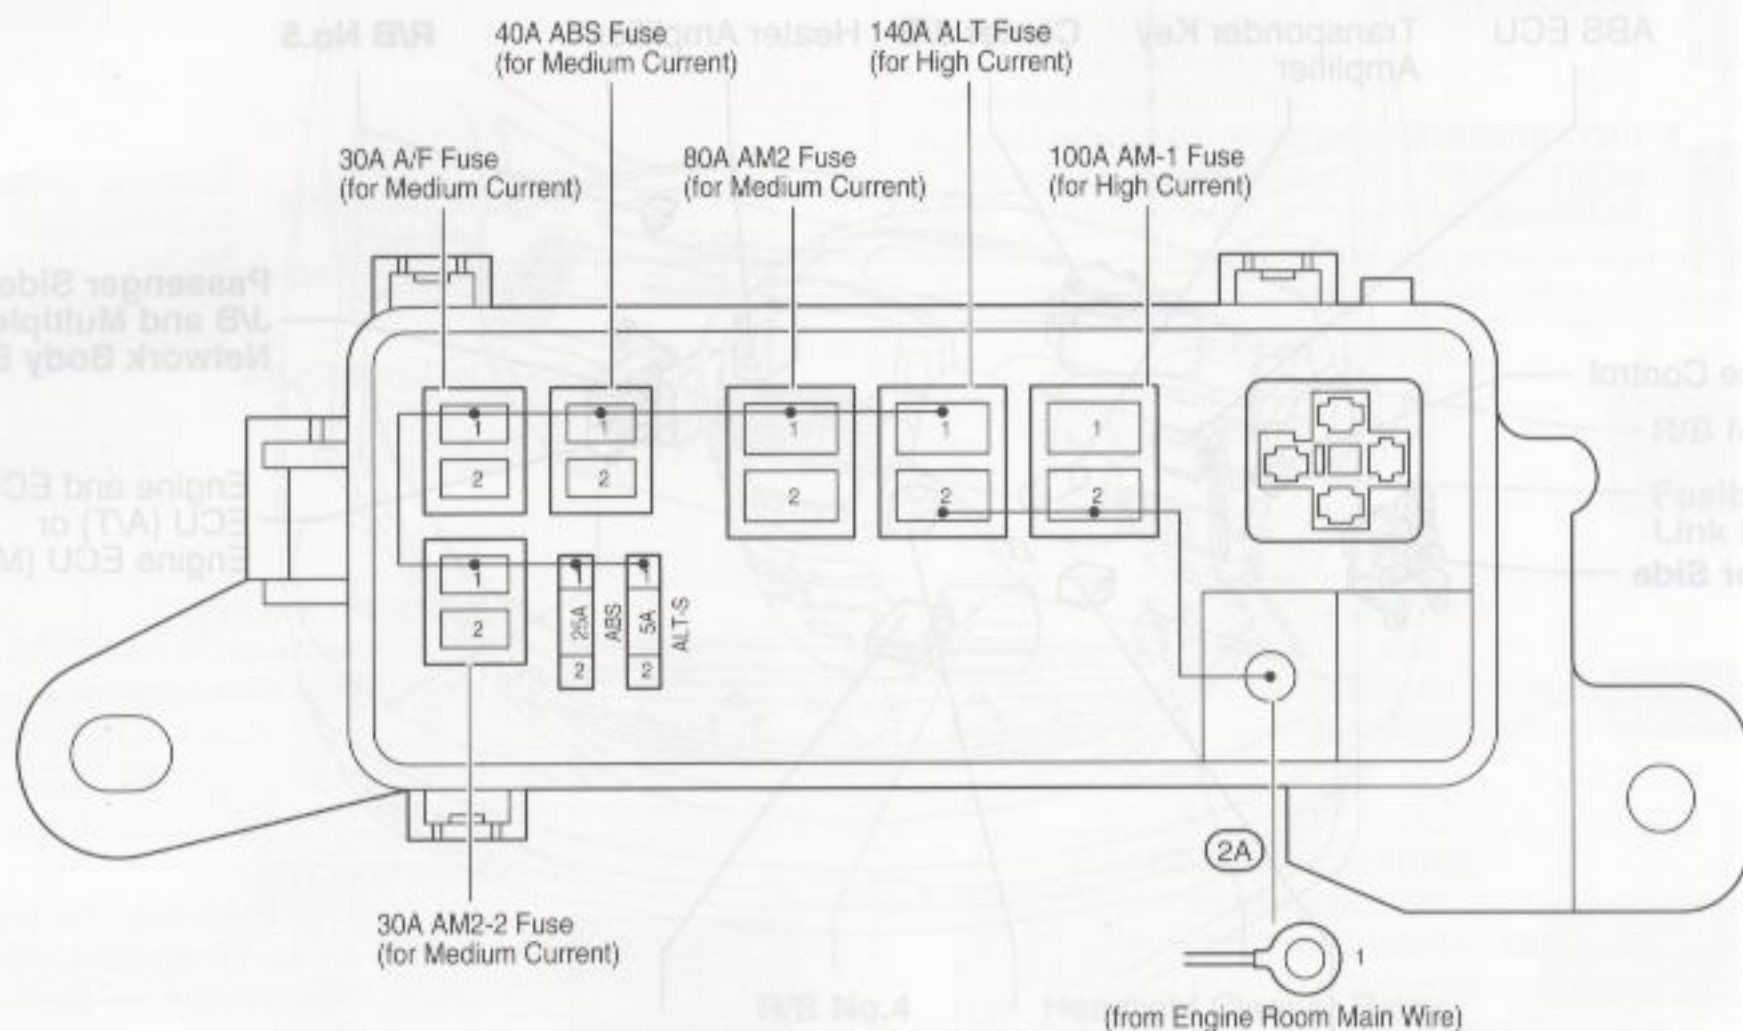


③ : R/B No.3

Front of the Left Suspension Tower (See Page 76)

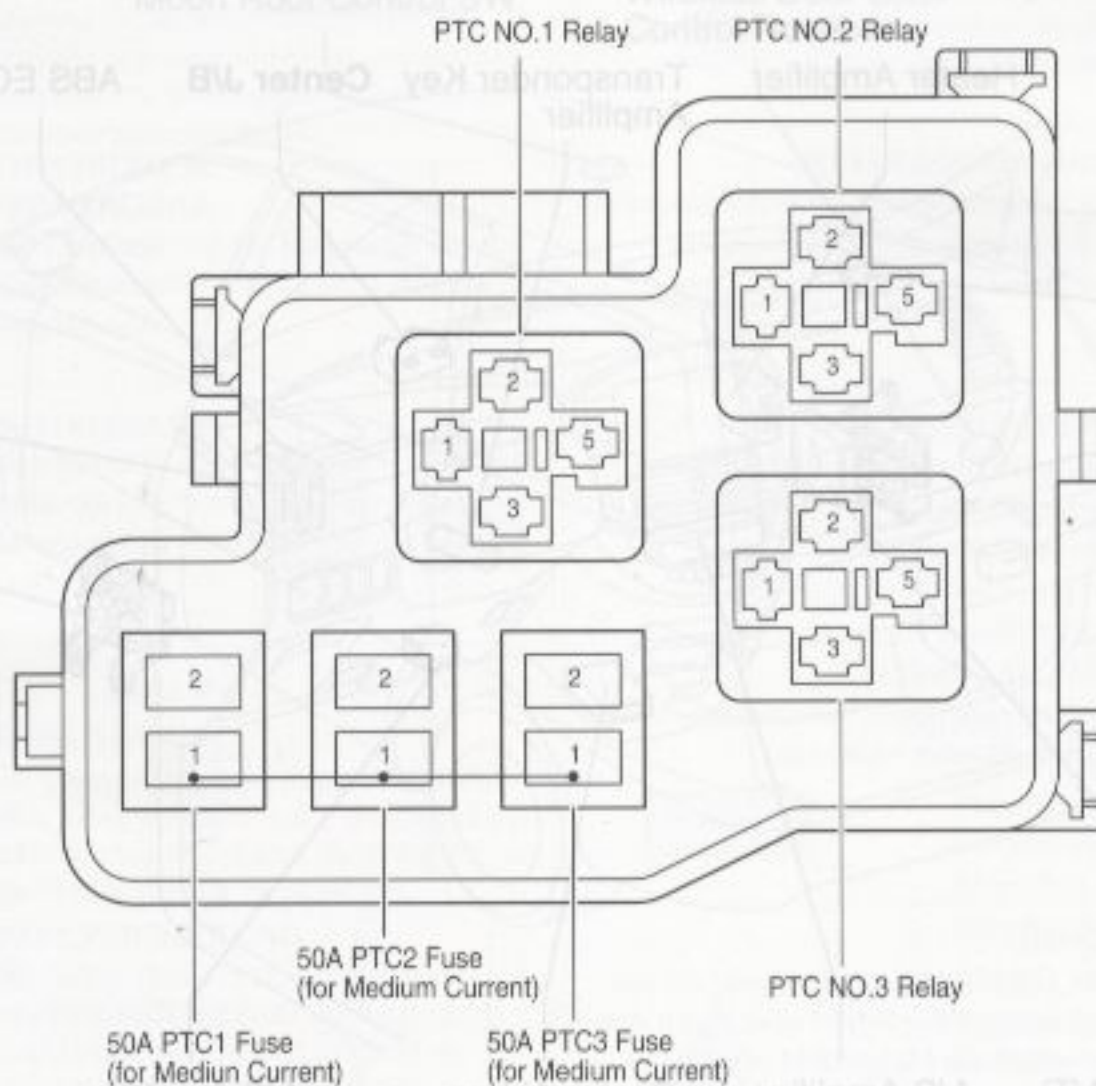


④ : R/B No.4 Surrounding of the Left Radiator Support (See Page 76)

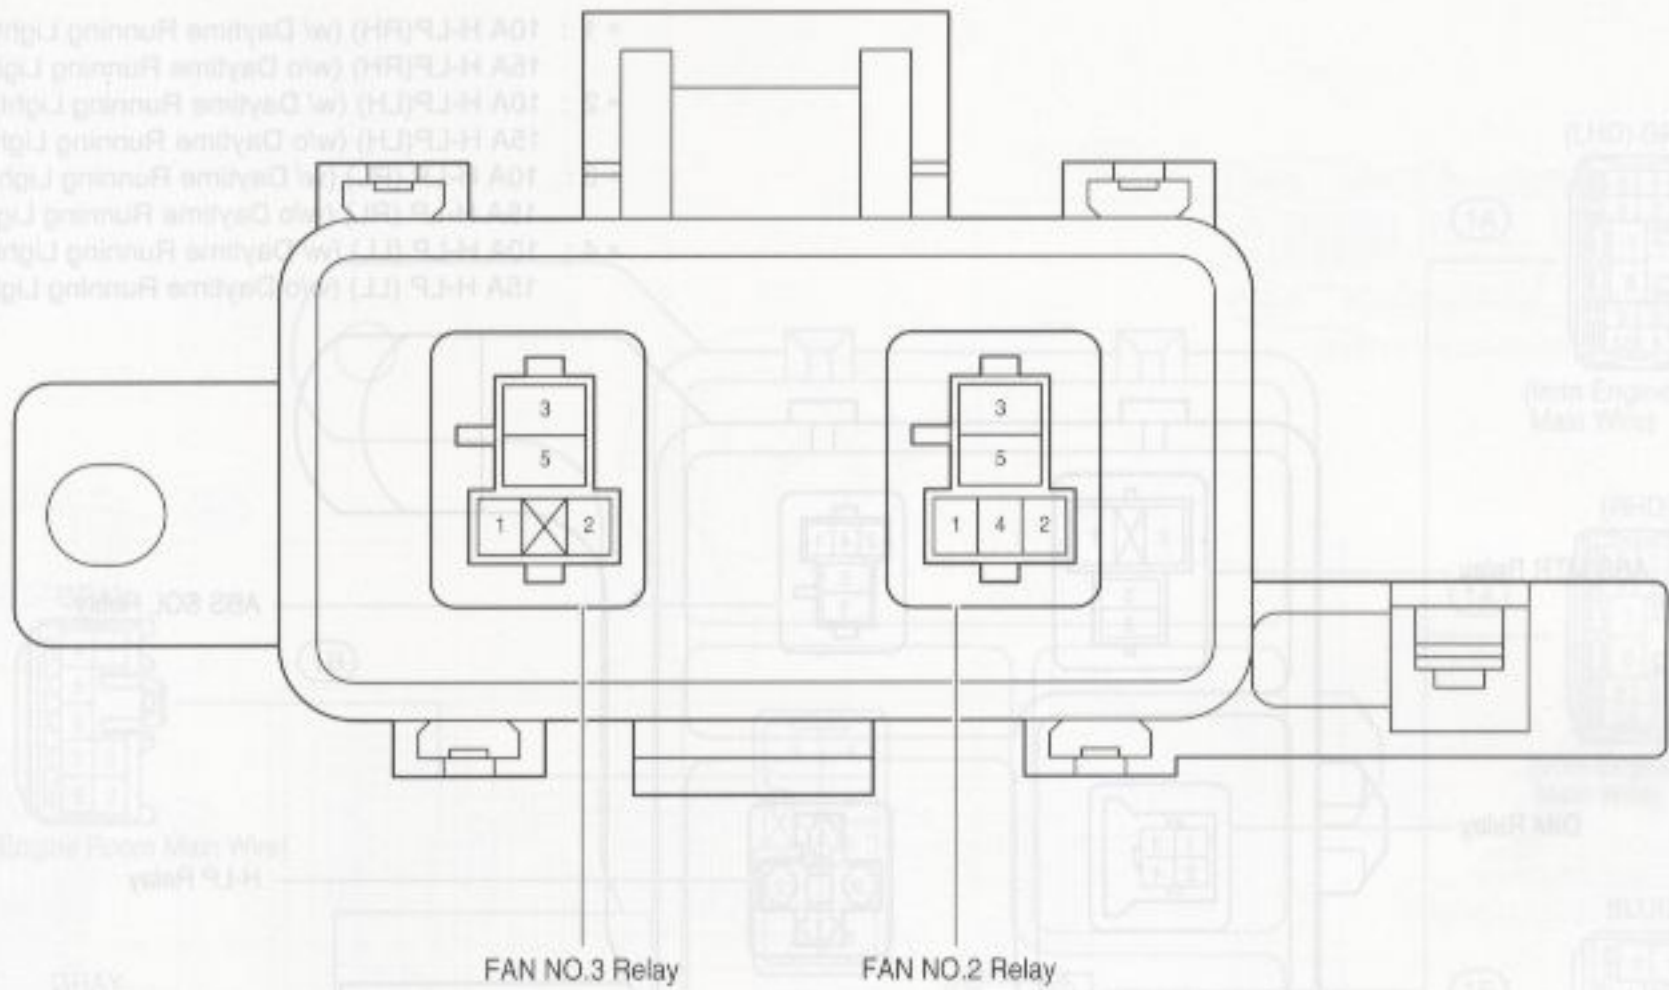

⑤ : R/B No.5


LHD : Surrounding of the Right Side Root of the Instrument Panel Reinforcement (See Page 77)

RHD : Surrounding of the Left Side Root of the Instrument Panel Reinforcement (See Page 77)

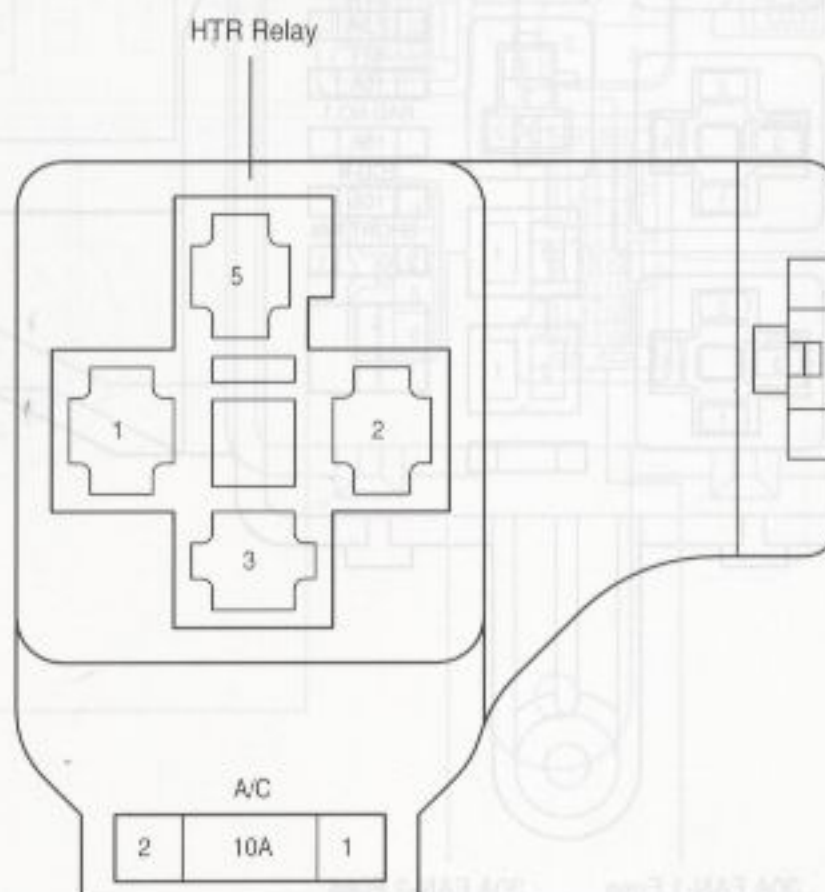


F RELAY LOCATIONS

① : Engine Room R/B No.1 and J/B Left of the Air Cleaner (See Page 76)

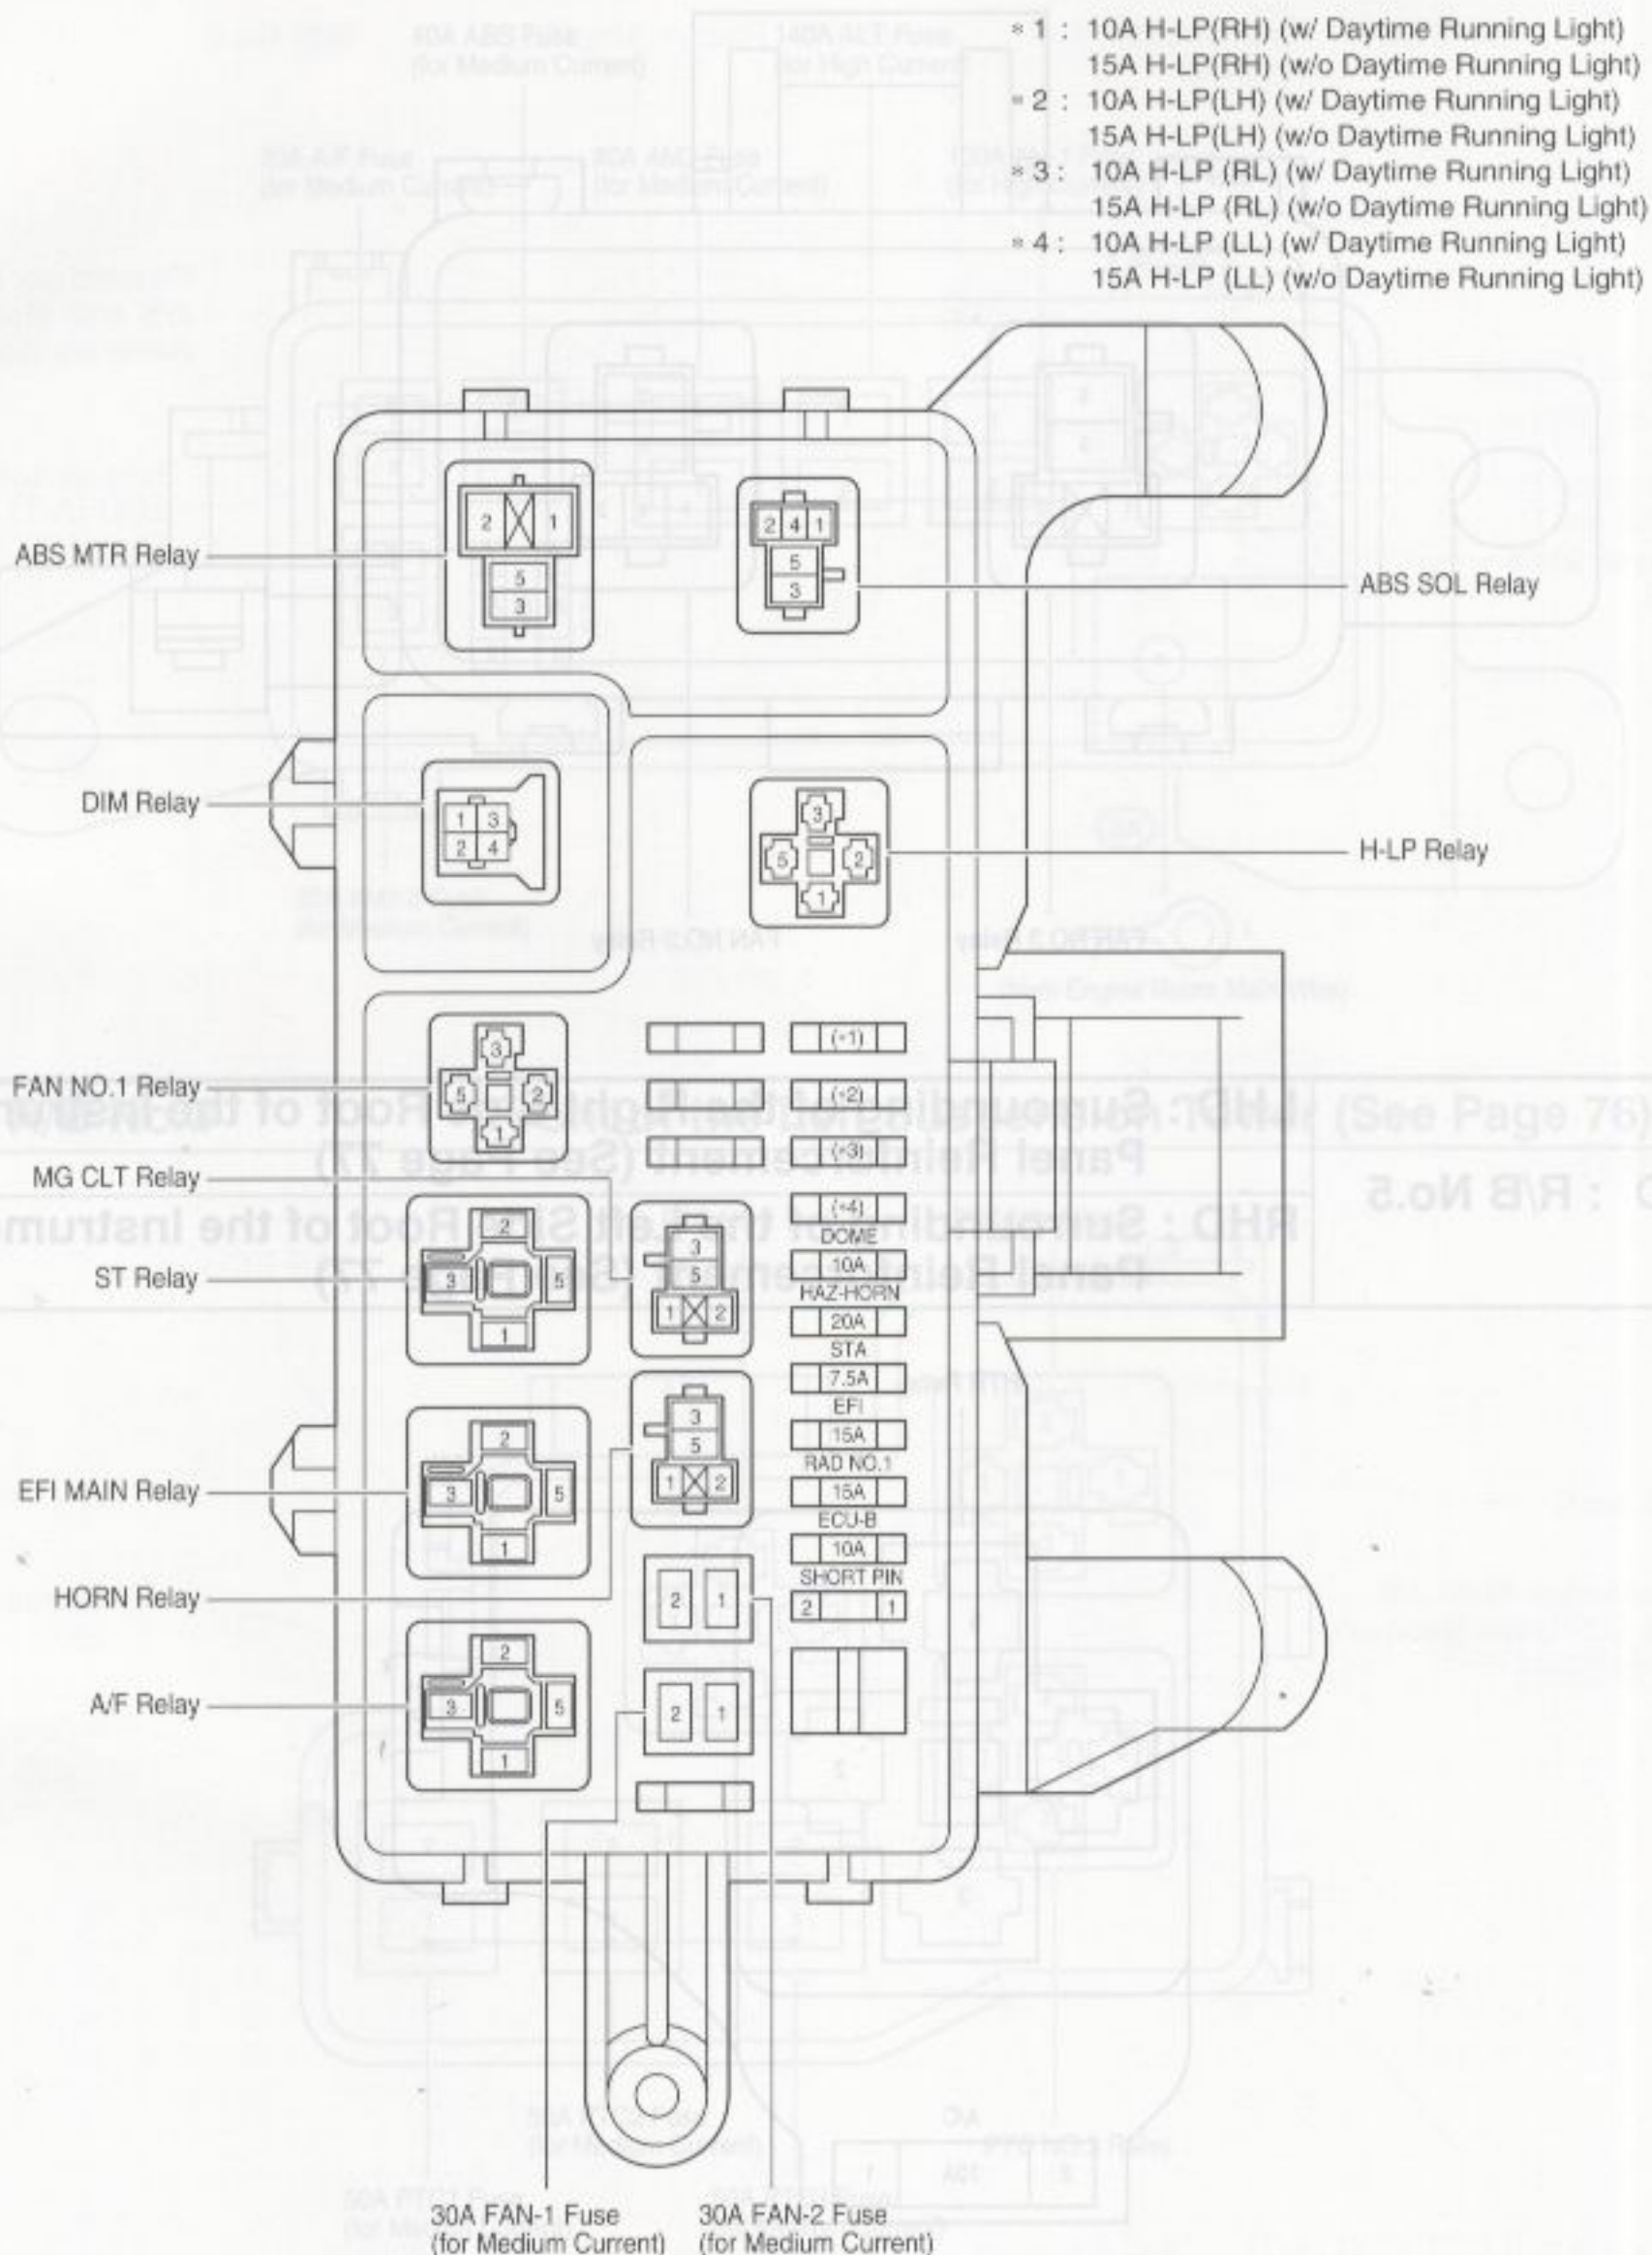


(Inner Circuit : See Page 90)

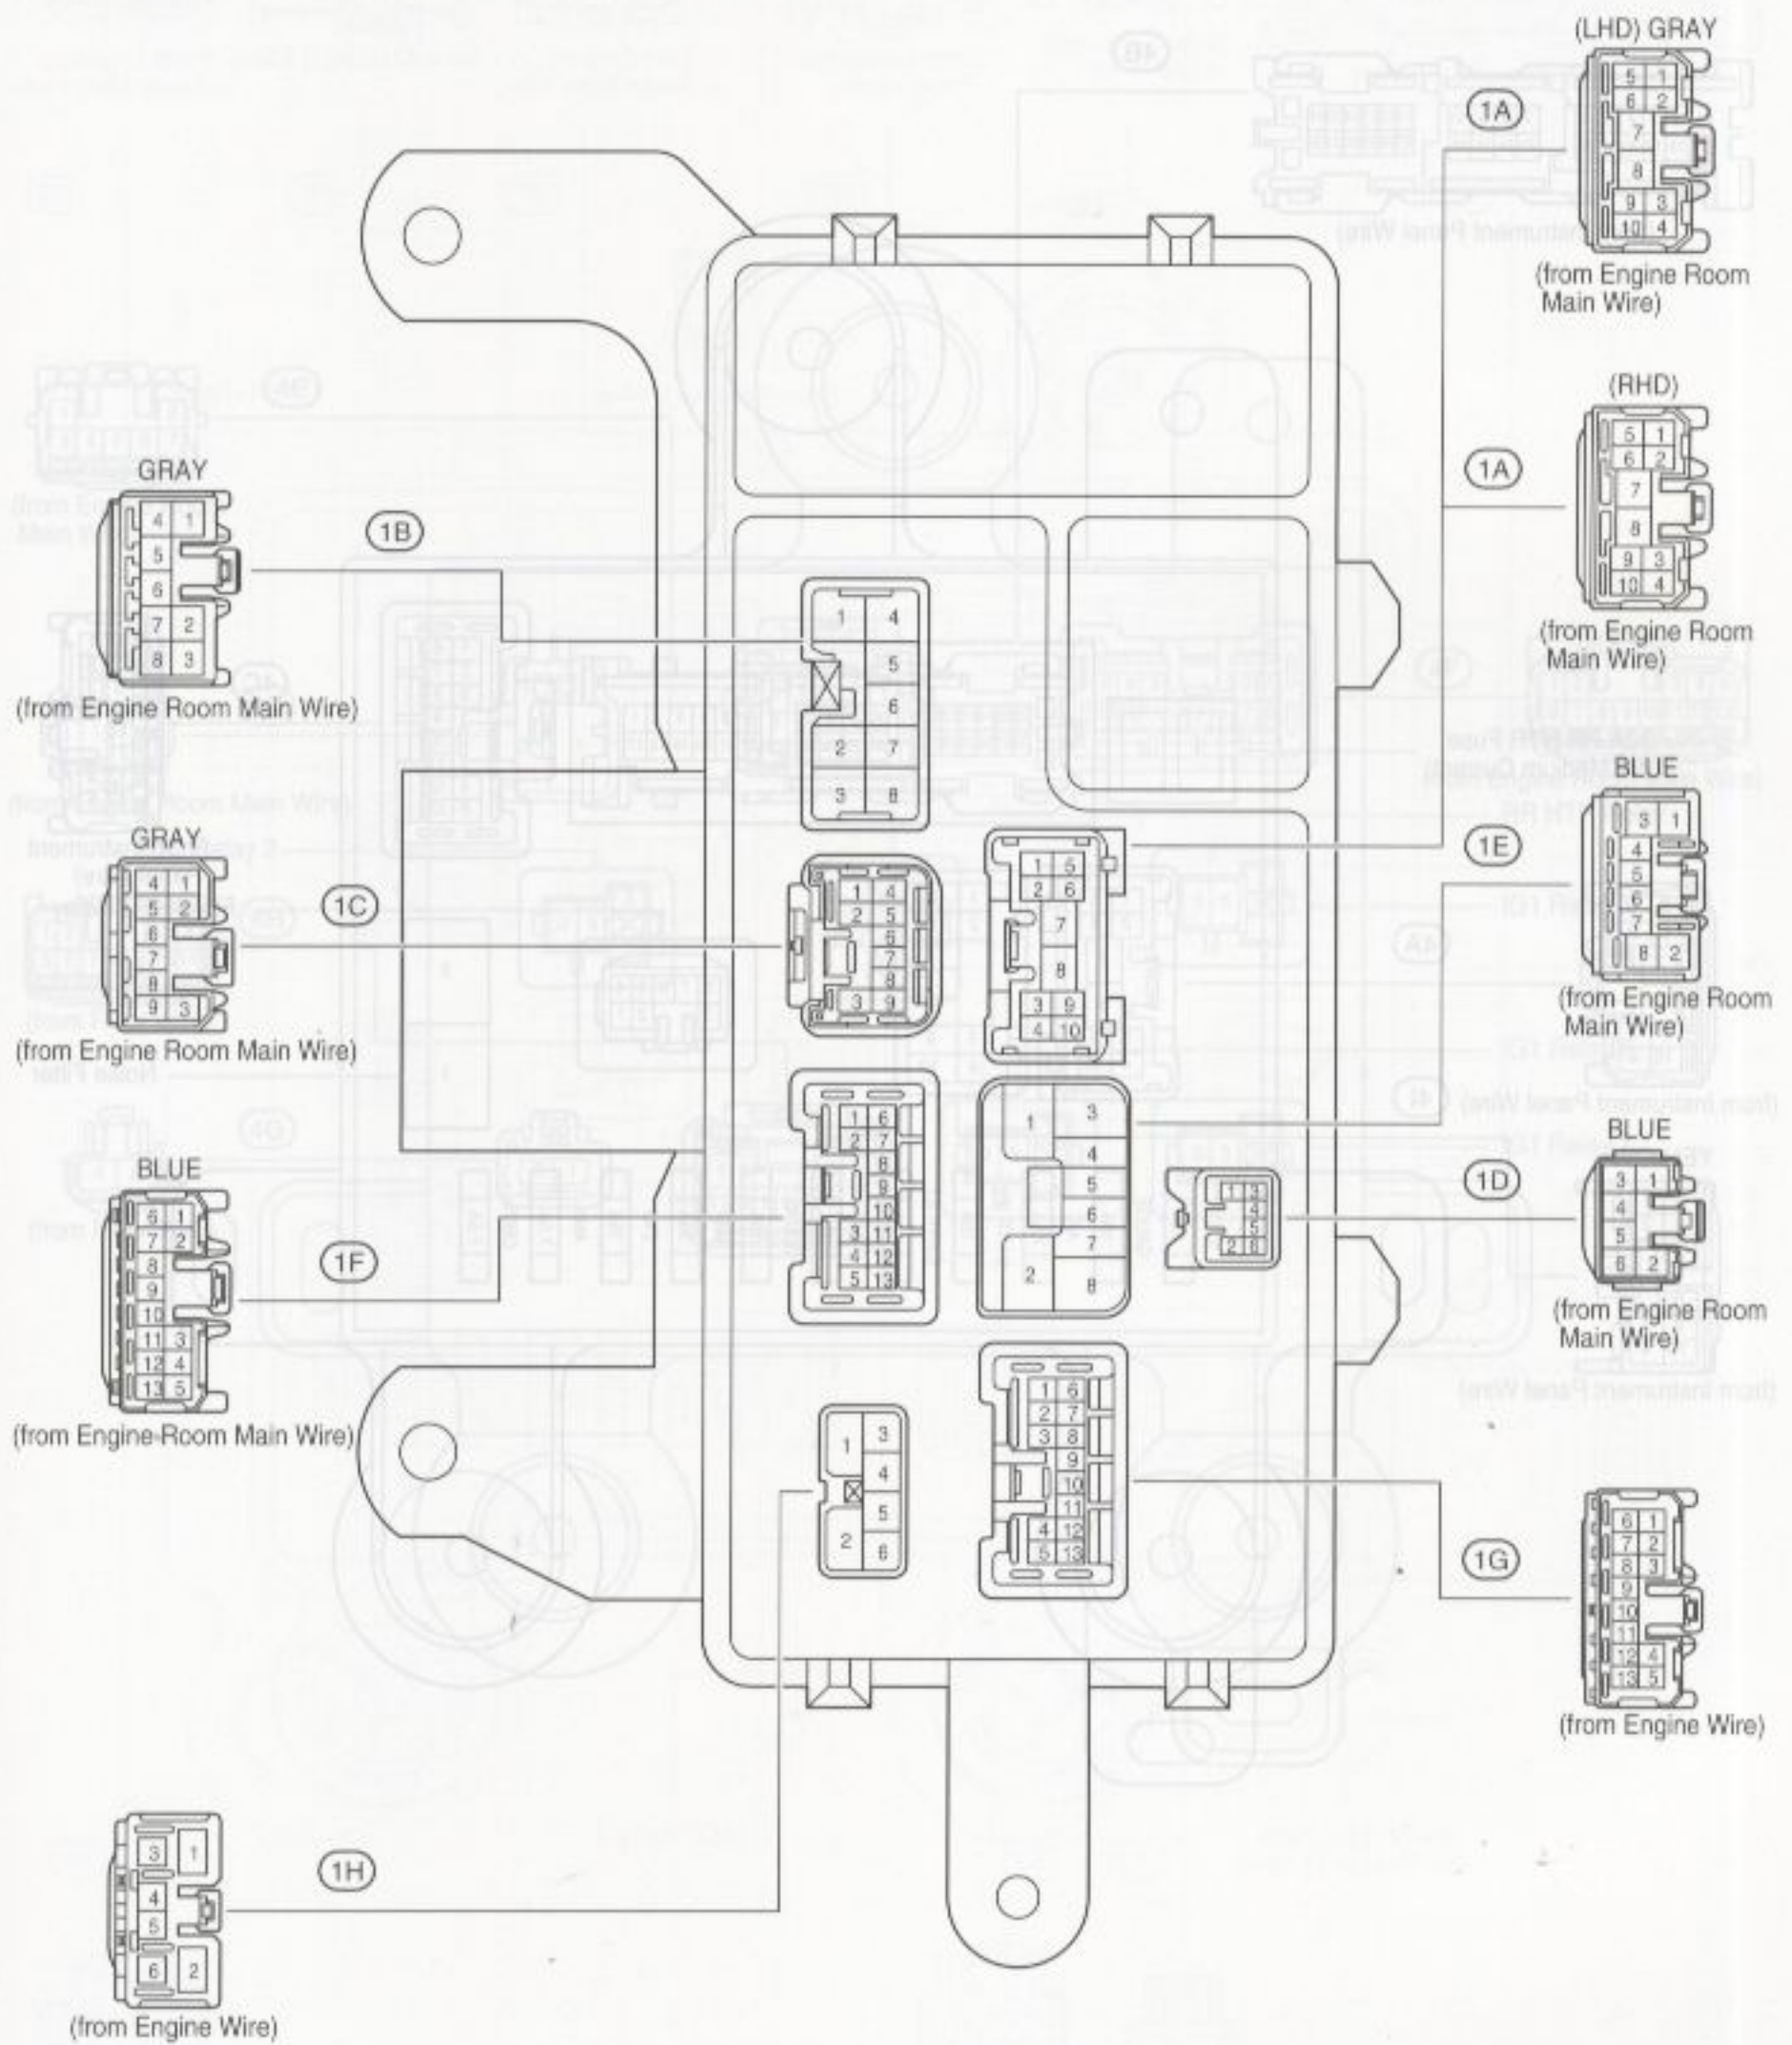


F RELAY LOCATIONS

○ : Driver Side J/B

Cowl Side of the Driver's Seat (See Page 77)

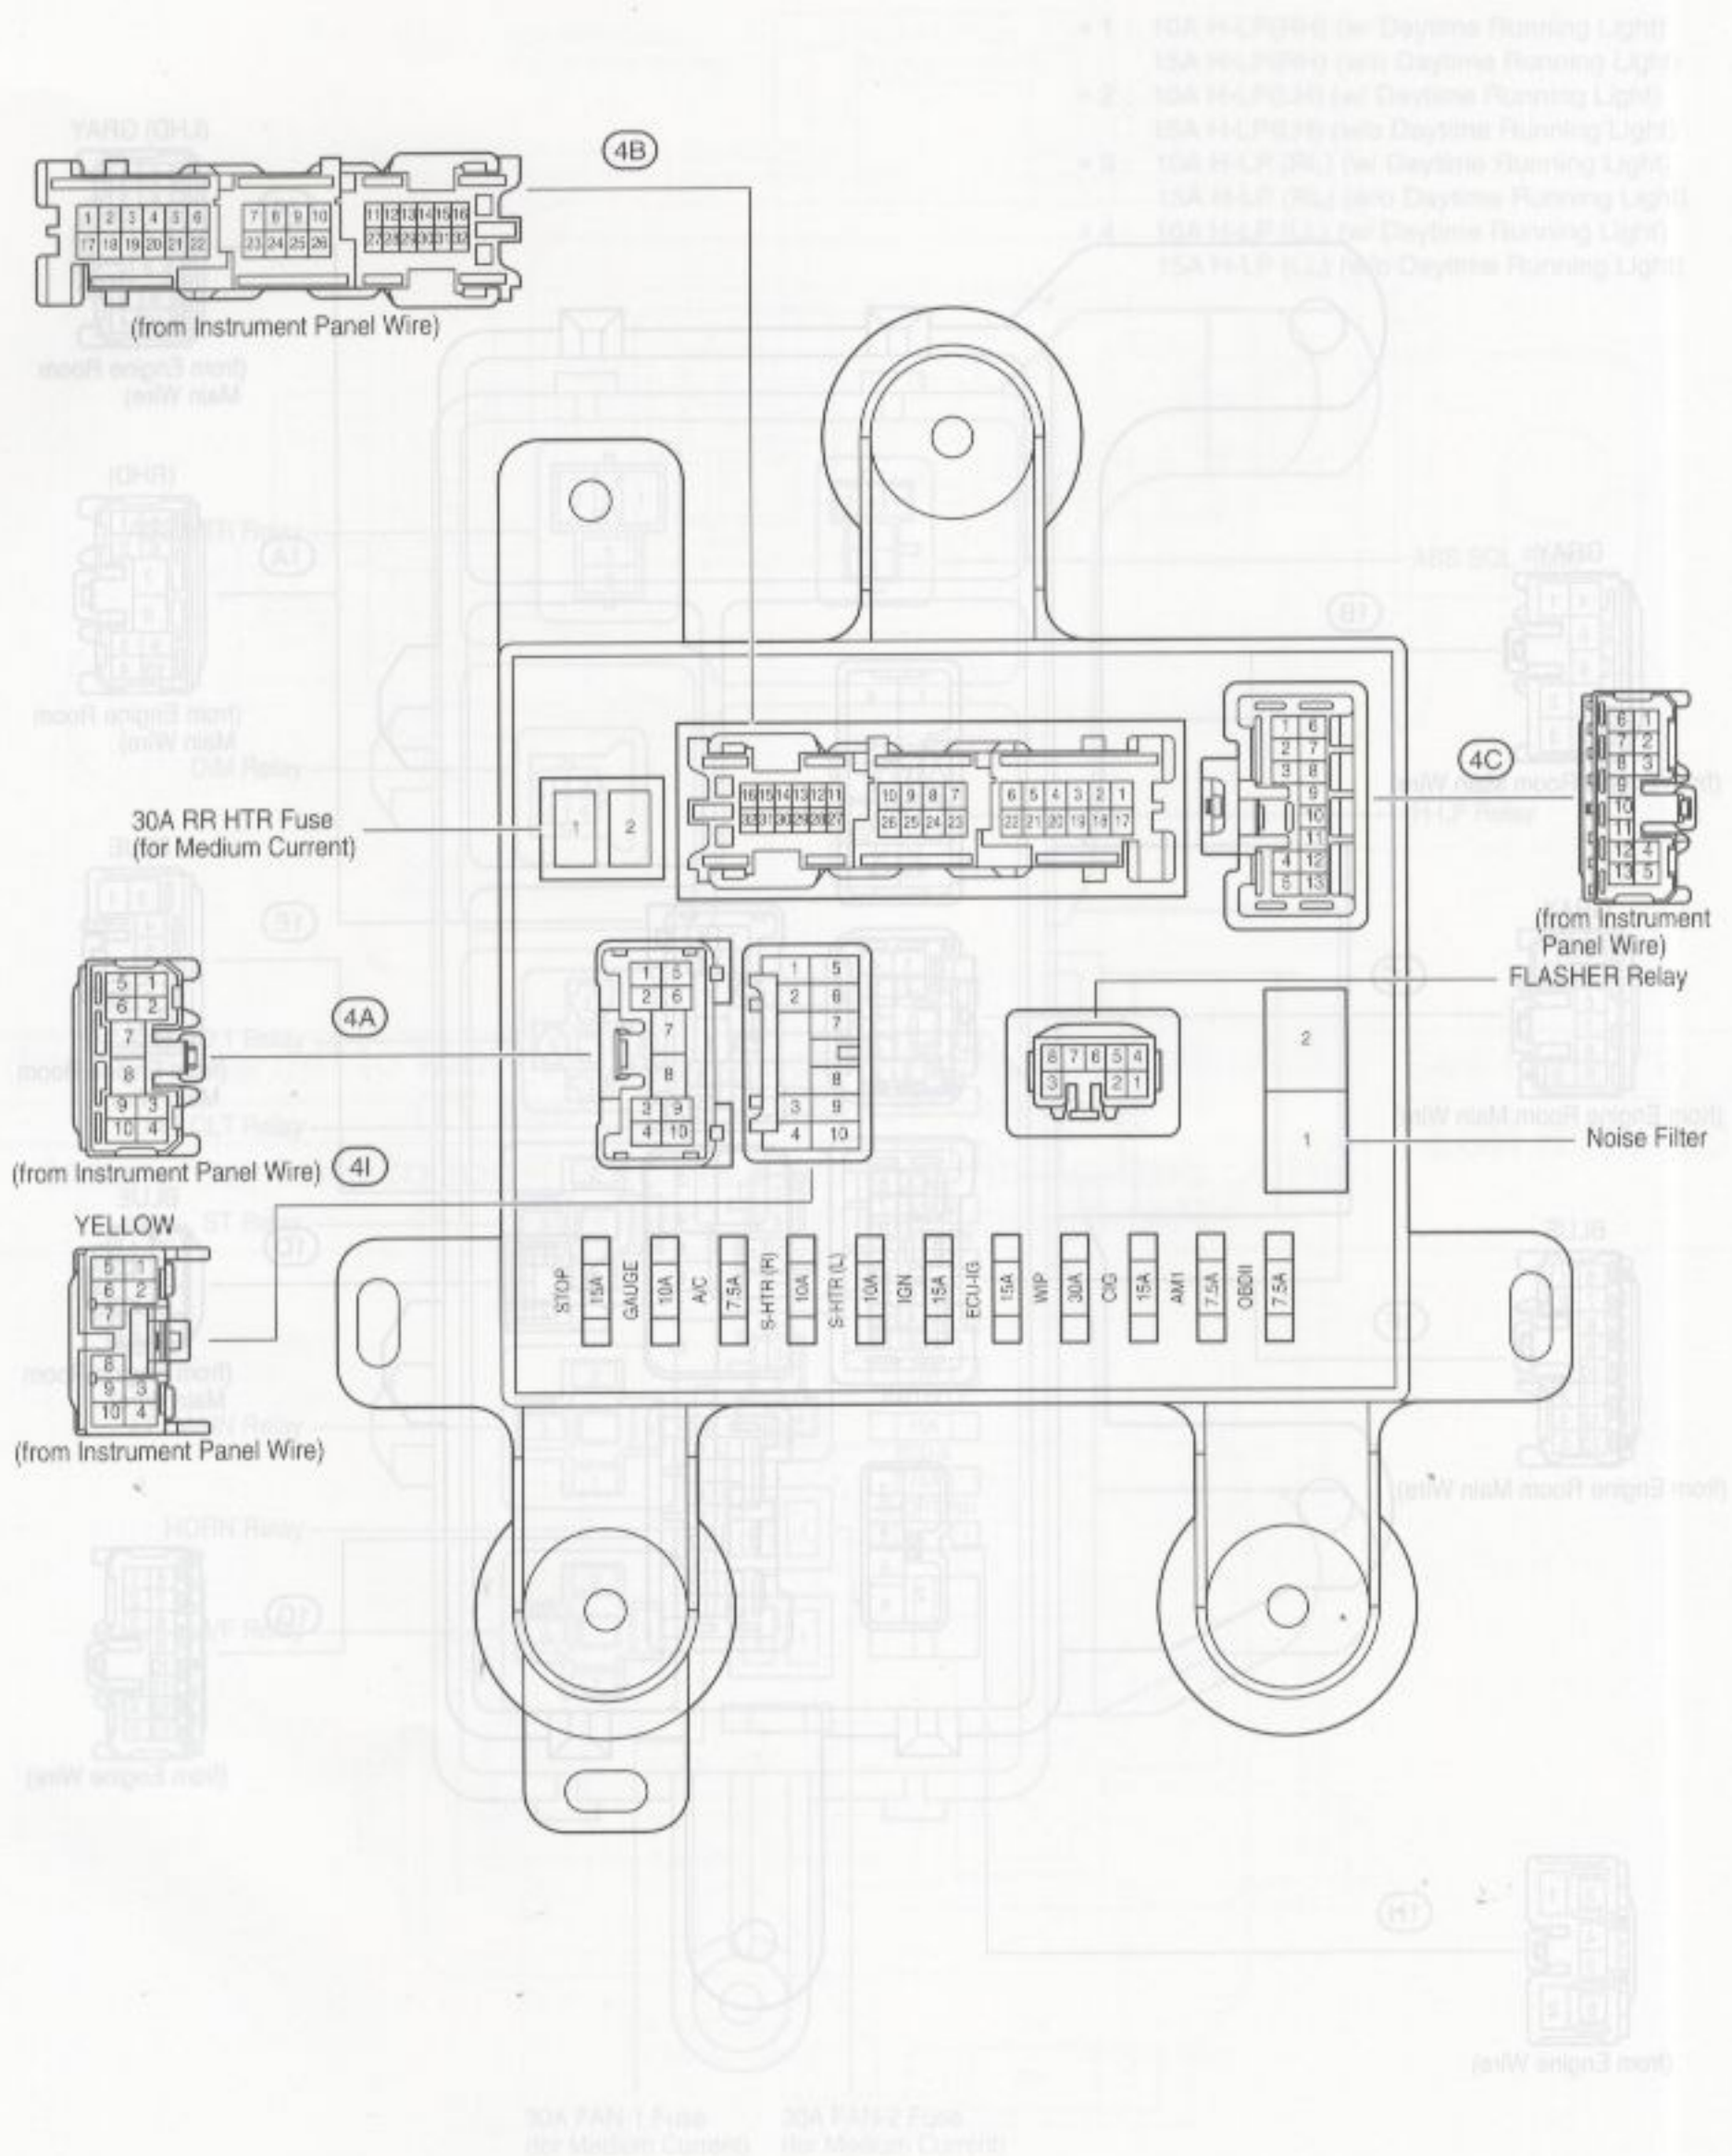


(Inner Circuit : See Page 91)

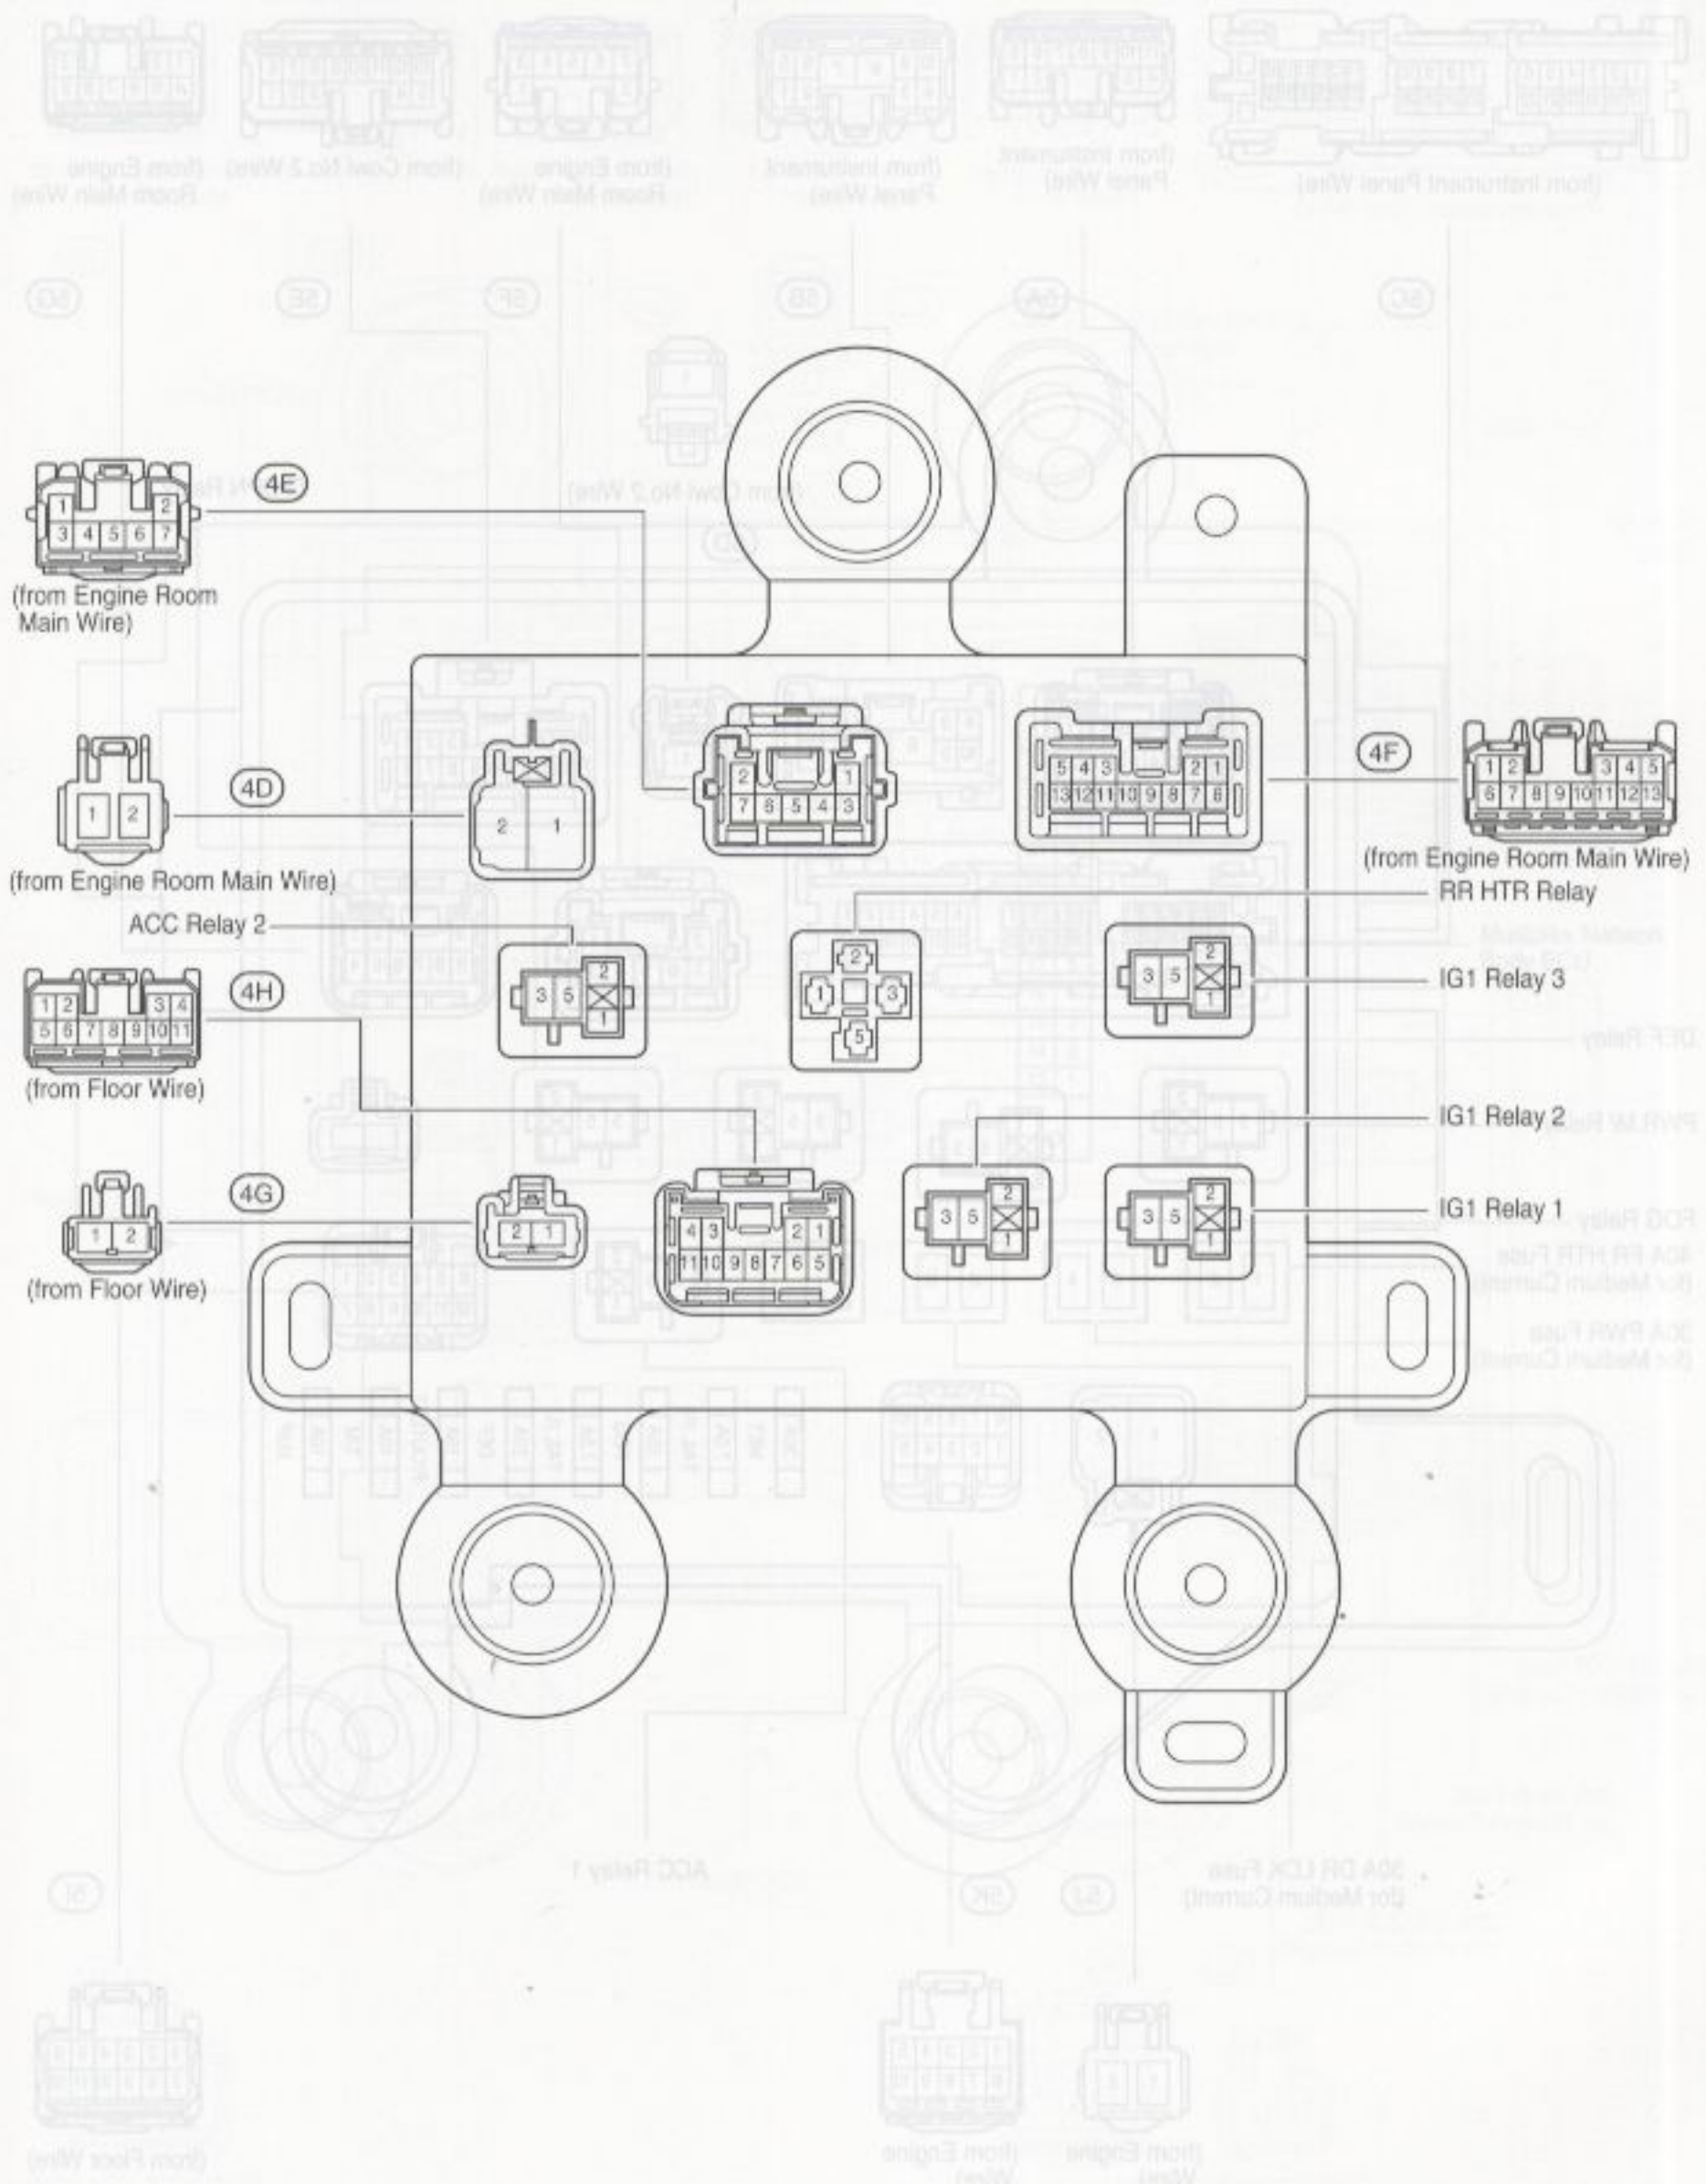

F RELAY LOCATIONS

○ : Passenger Side J/B Cowl Side of the Front Passenger's Seat (See Page 77)

[LHD]

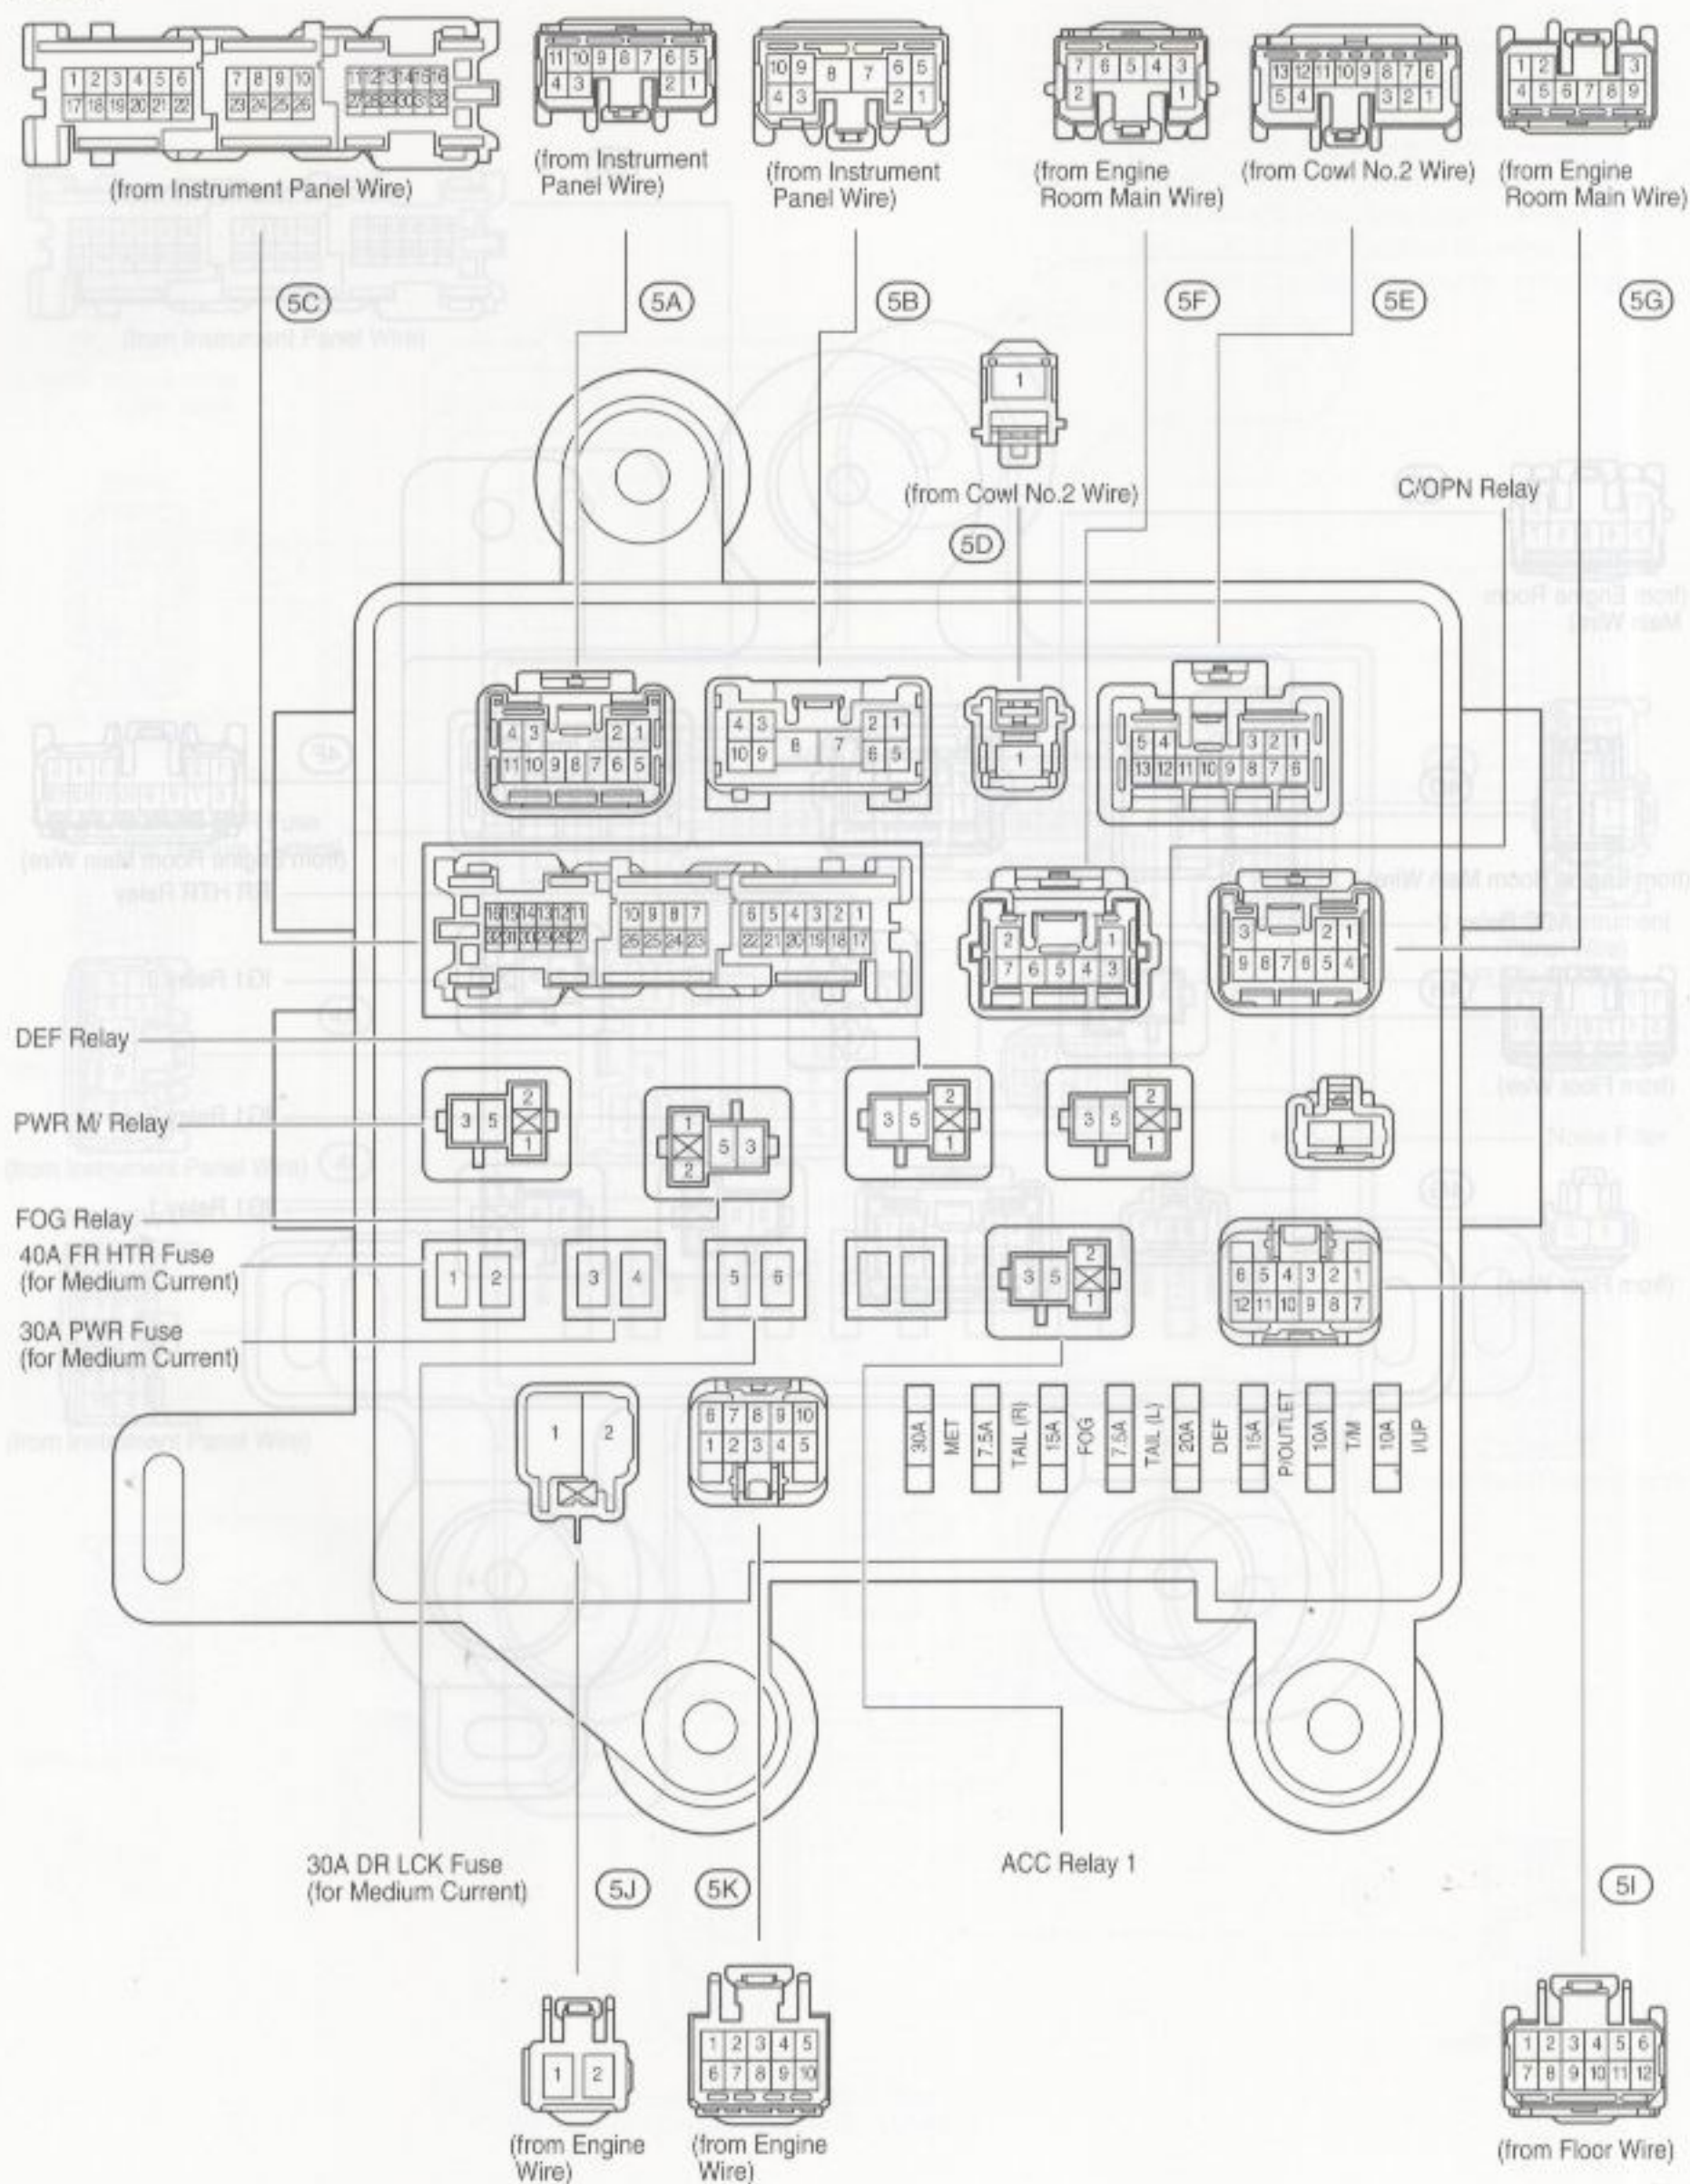




F RELAY LOCATIONS

○ : Passenger Side J/B Cowl Side of the Front Passenger's Seat (See Page 77)


[RHD]

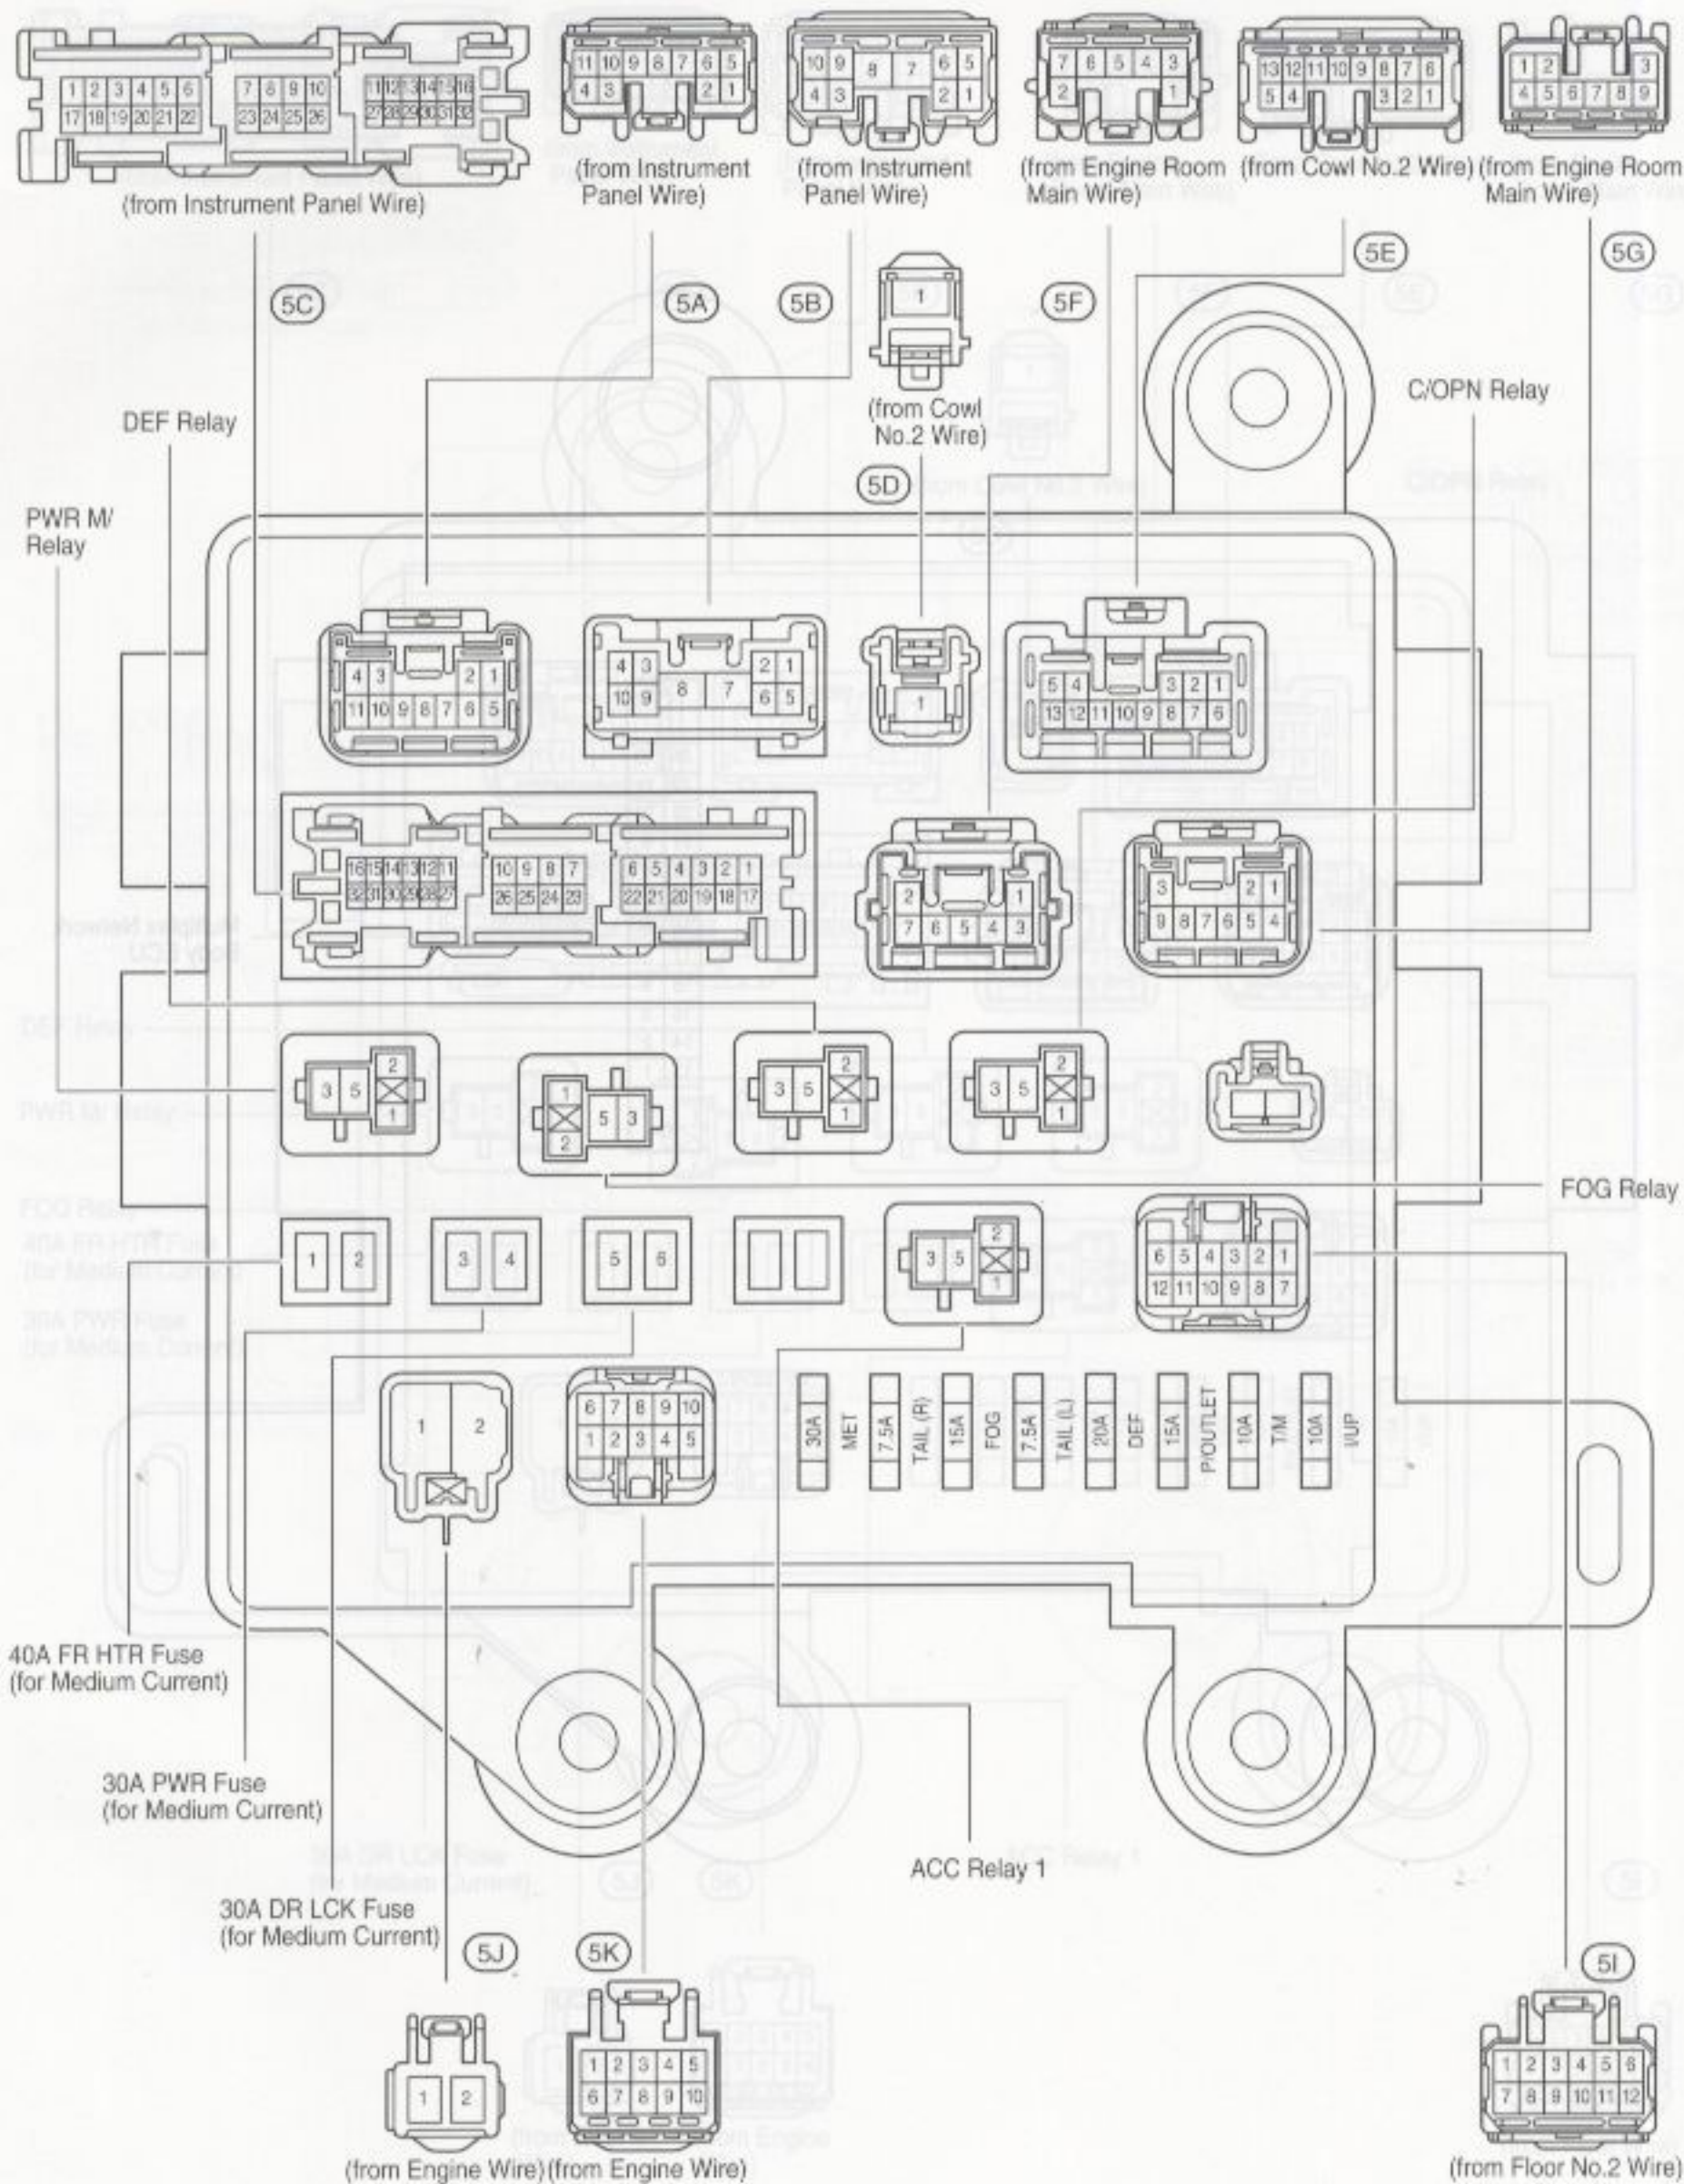

(Inner Circuit : See Page 92)

RHD : Right of the Combination Meter (See Page 77)
LHD : Left of the Combination Meter (See Page 77)

(Inner Circuit : See Page 93)

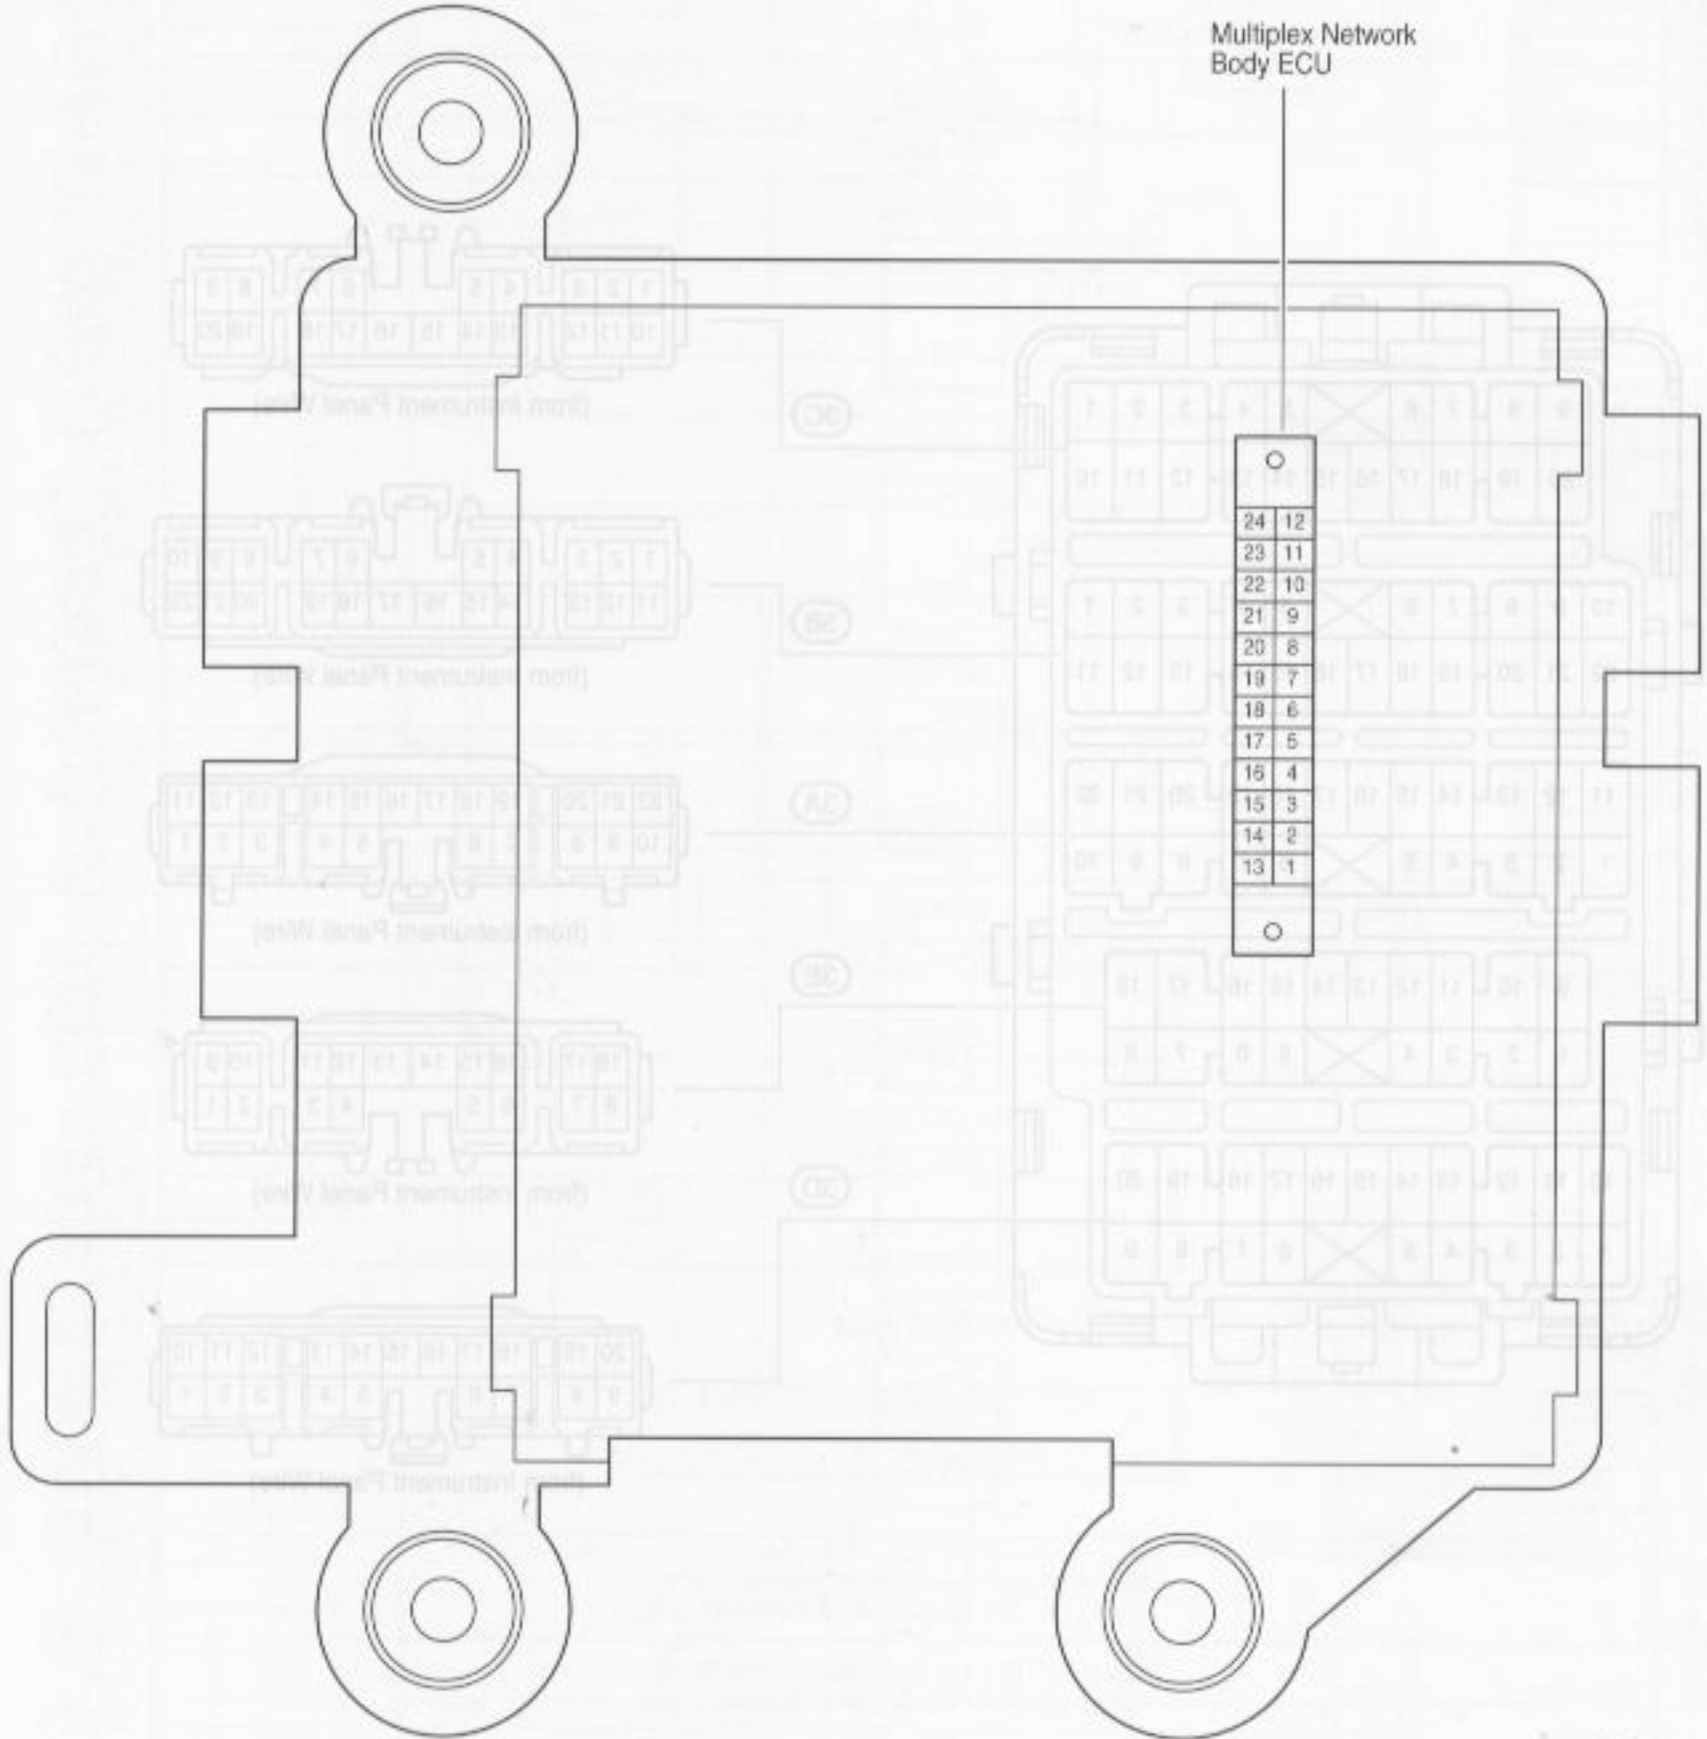


F RELAY LOCATIONS

○ : Center J/B

LHD : Left of the Combination Meter (See Page 77)


RHD : Right of the Combination Meter (See Page 77)

(Inner Circuit : See Page 93)

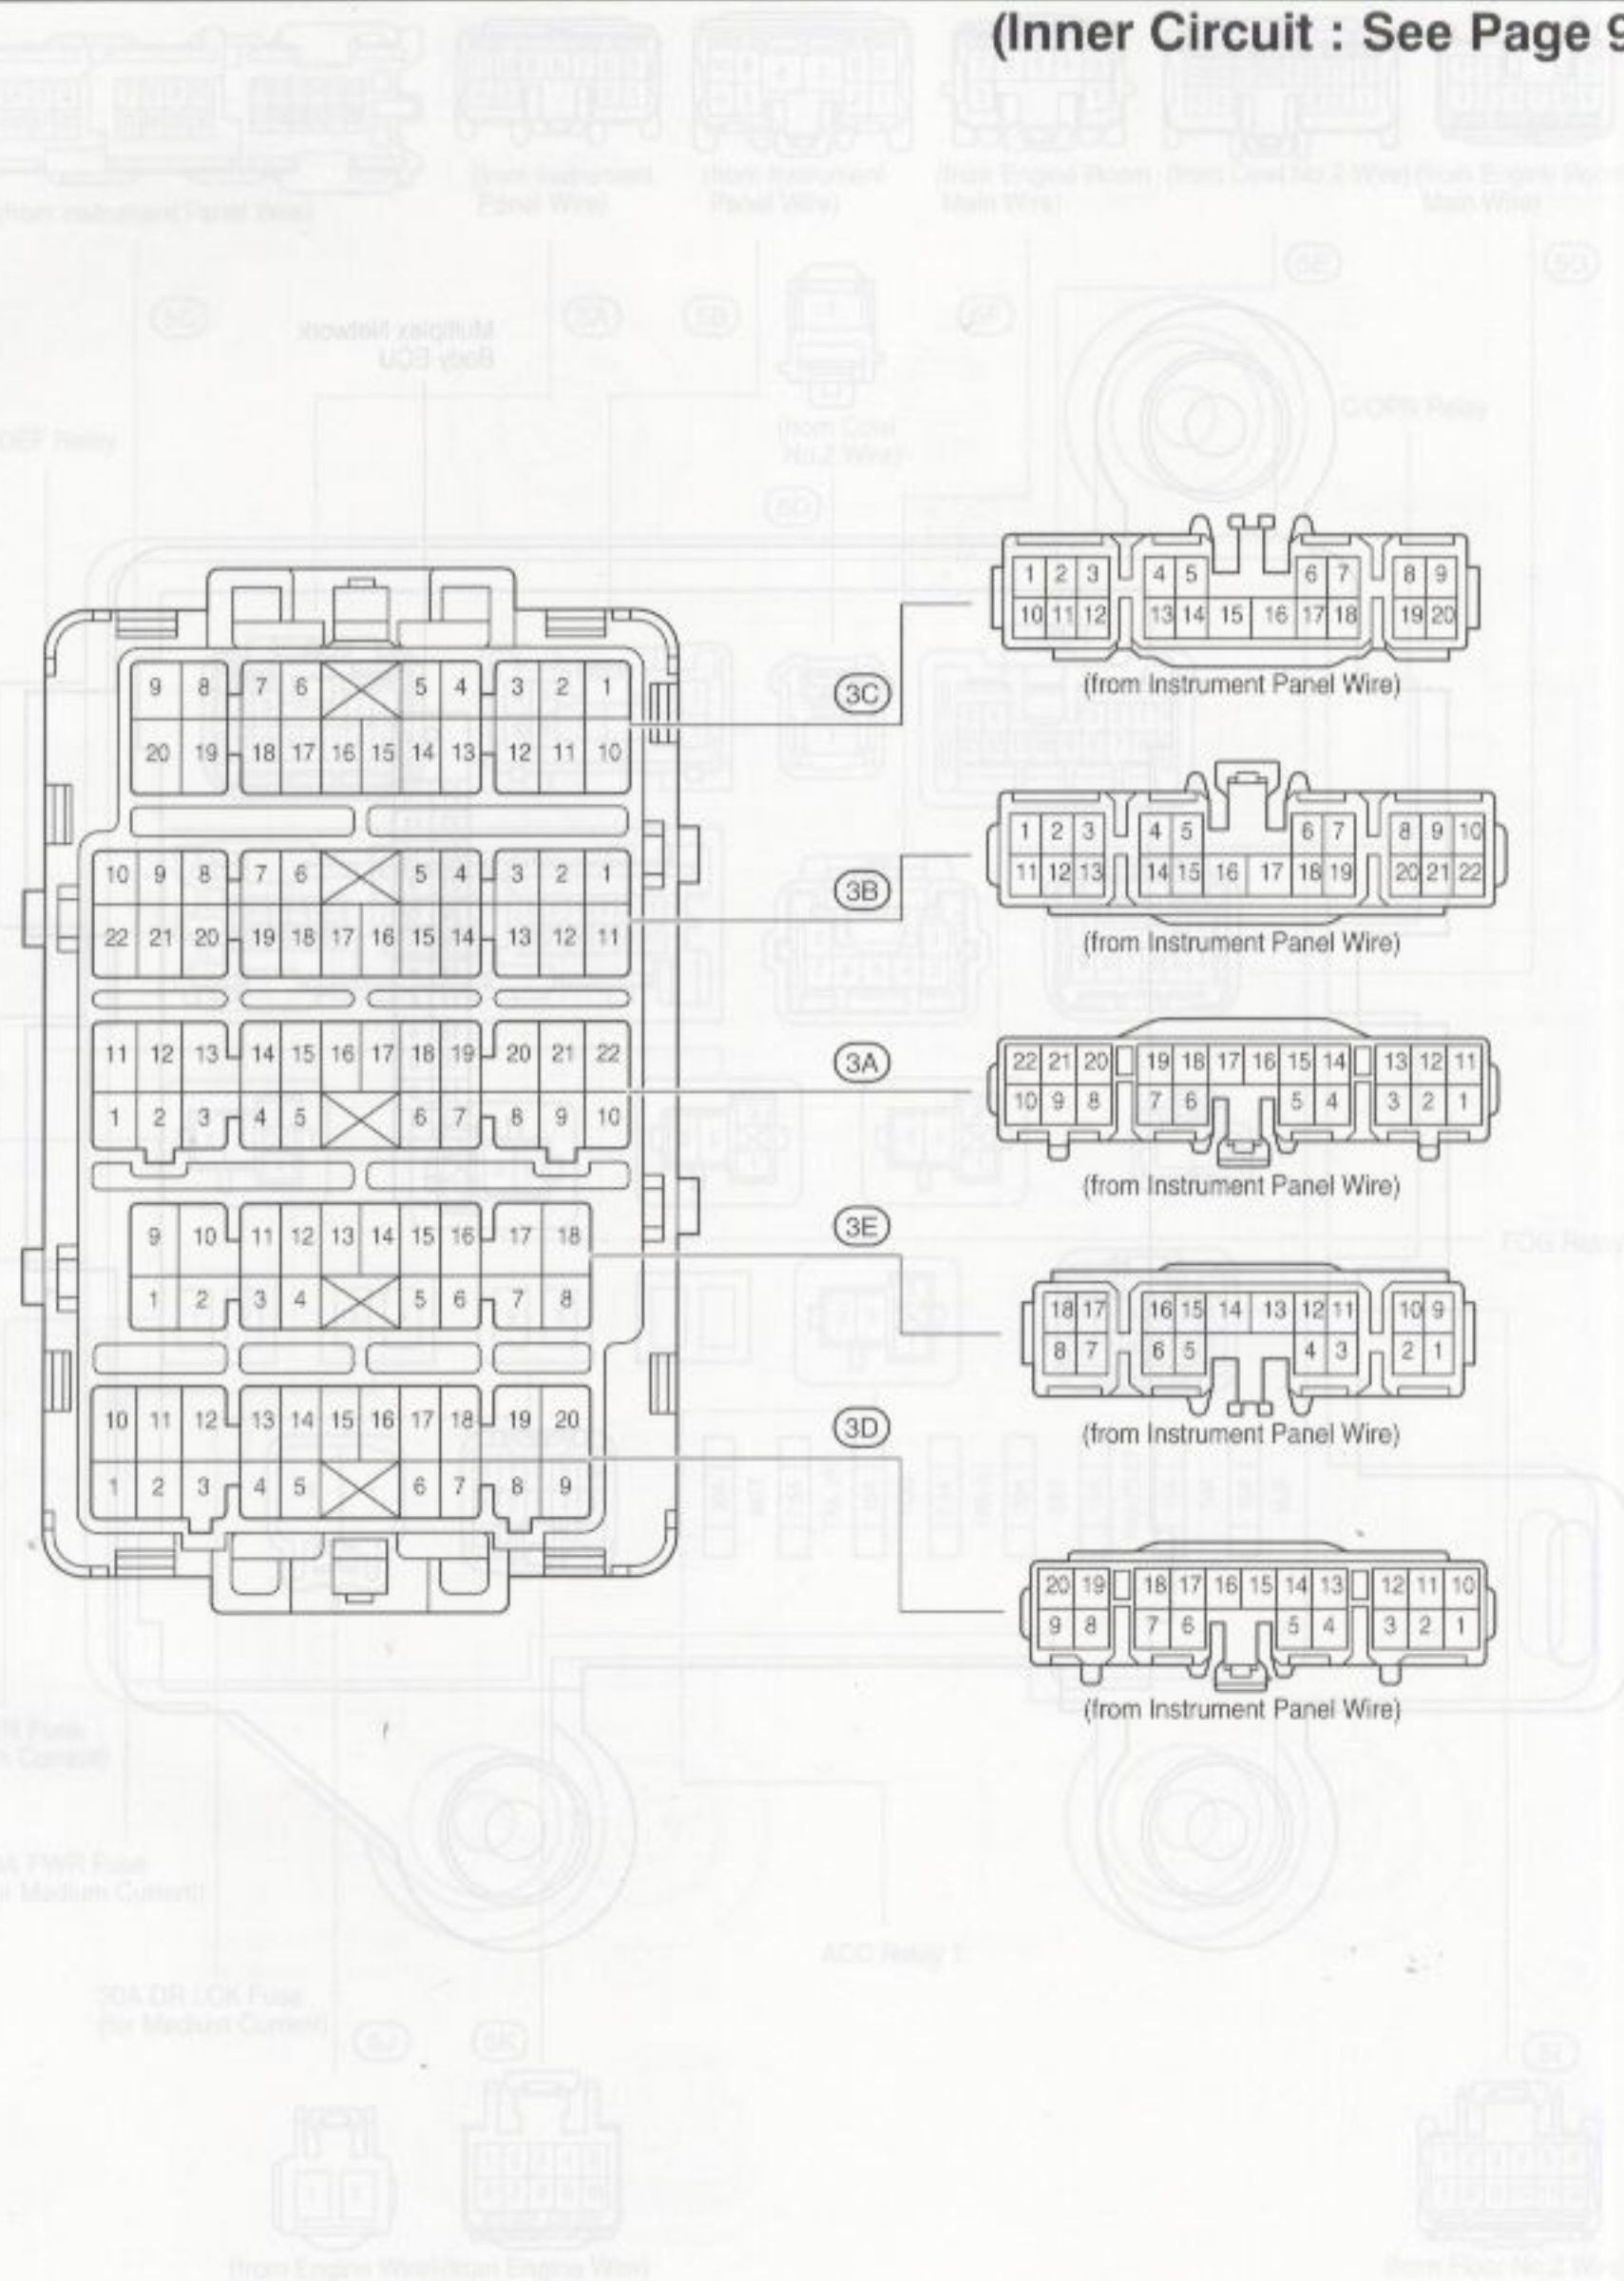


F RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

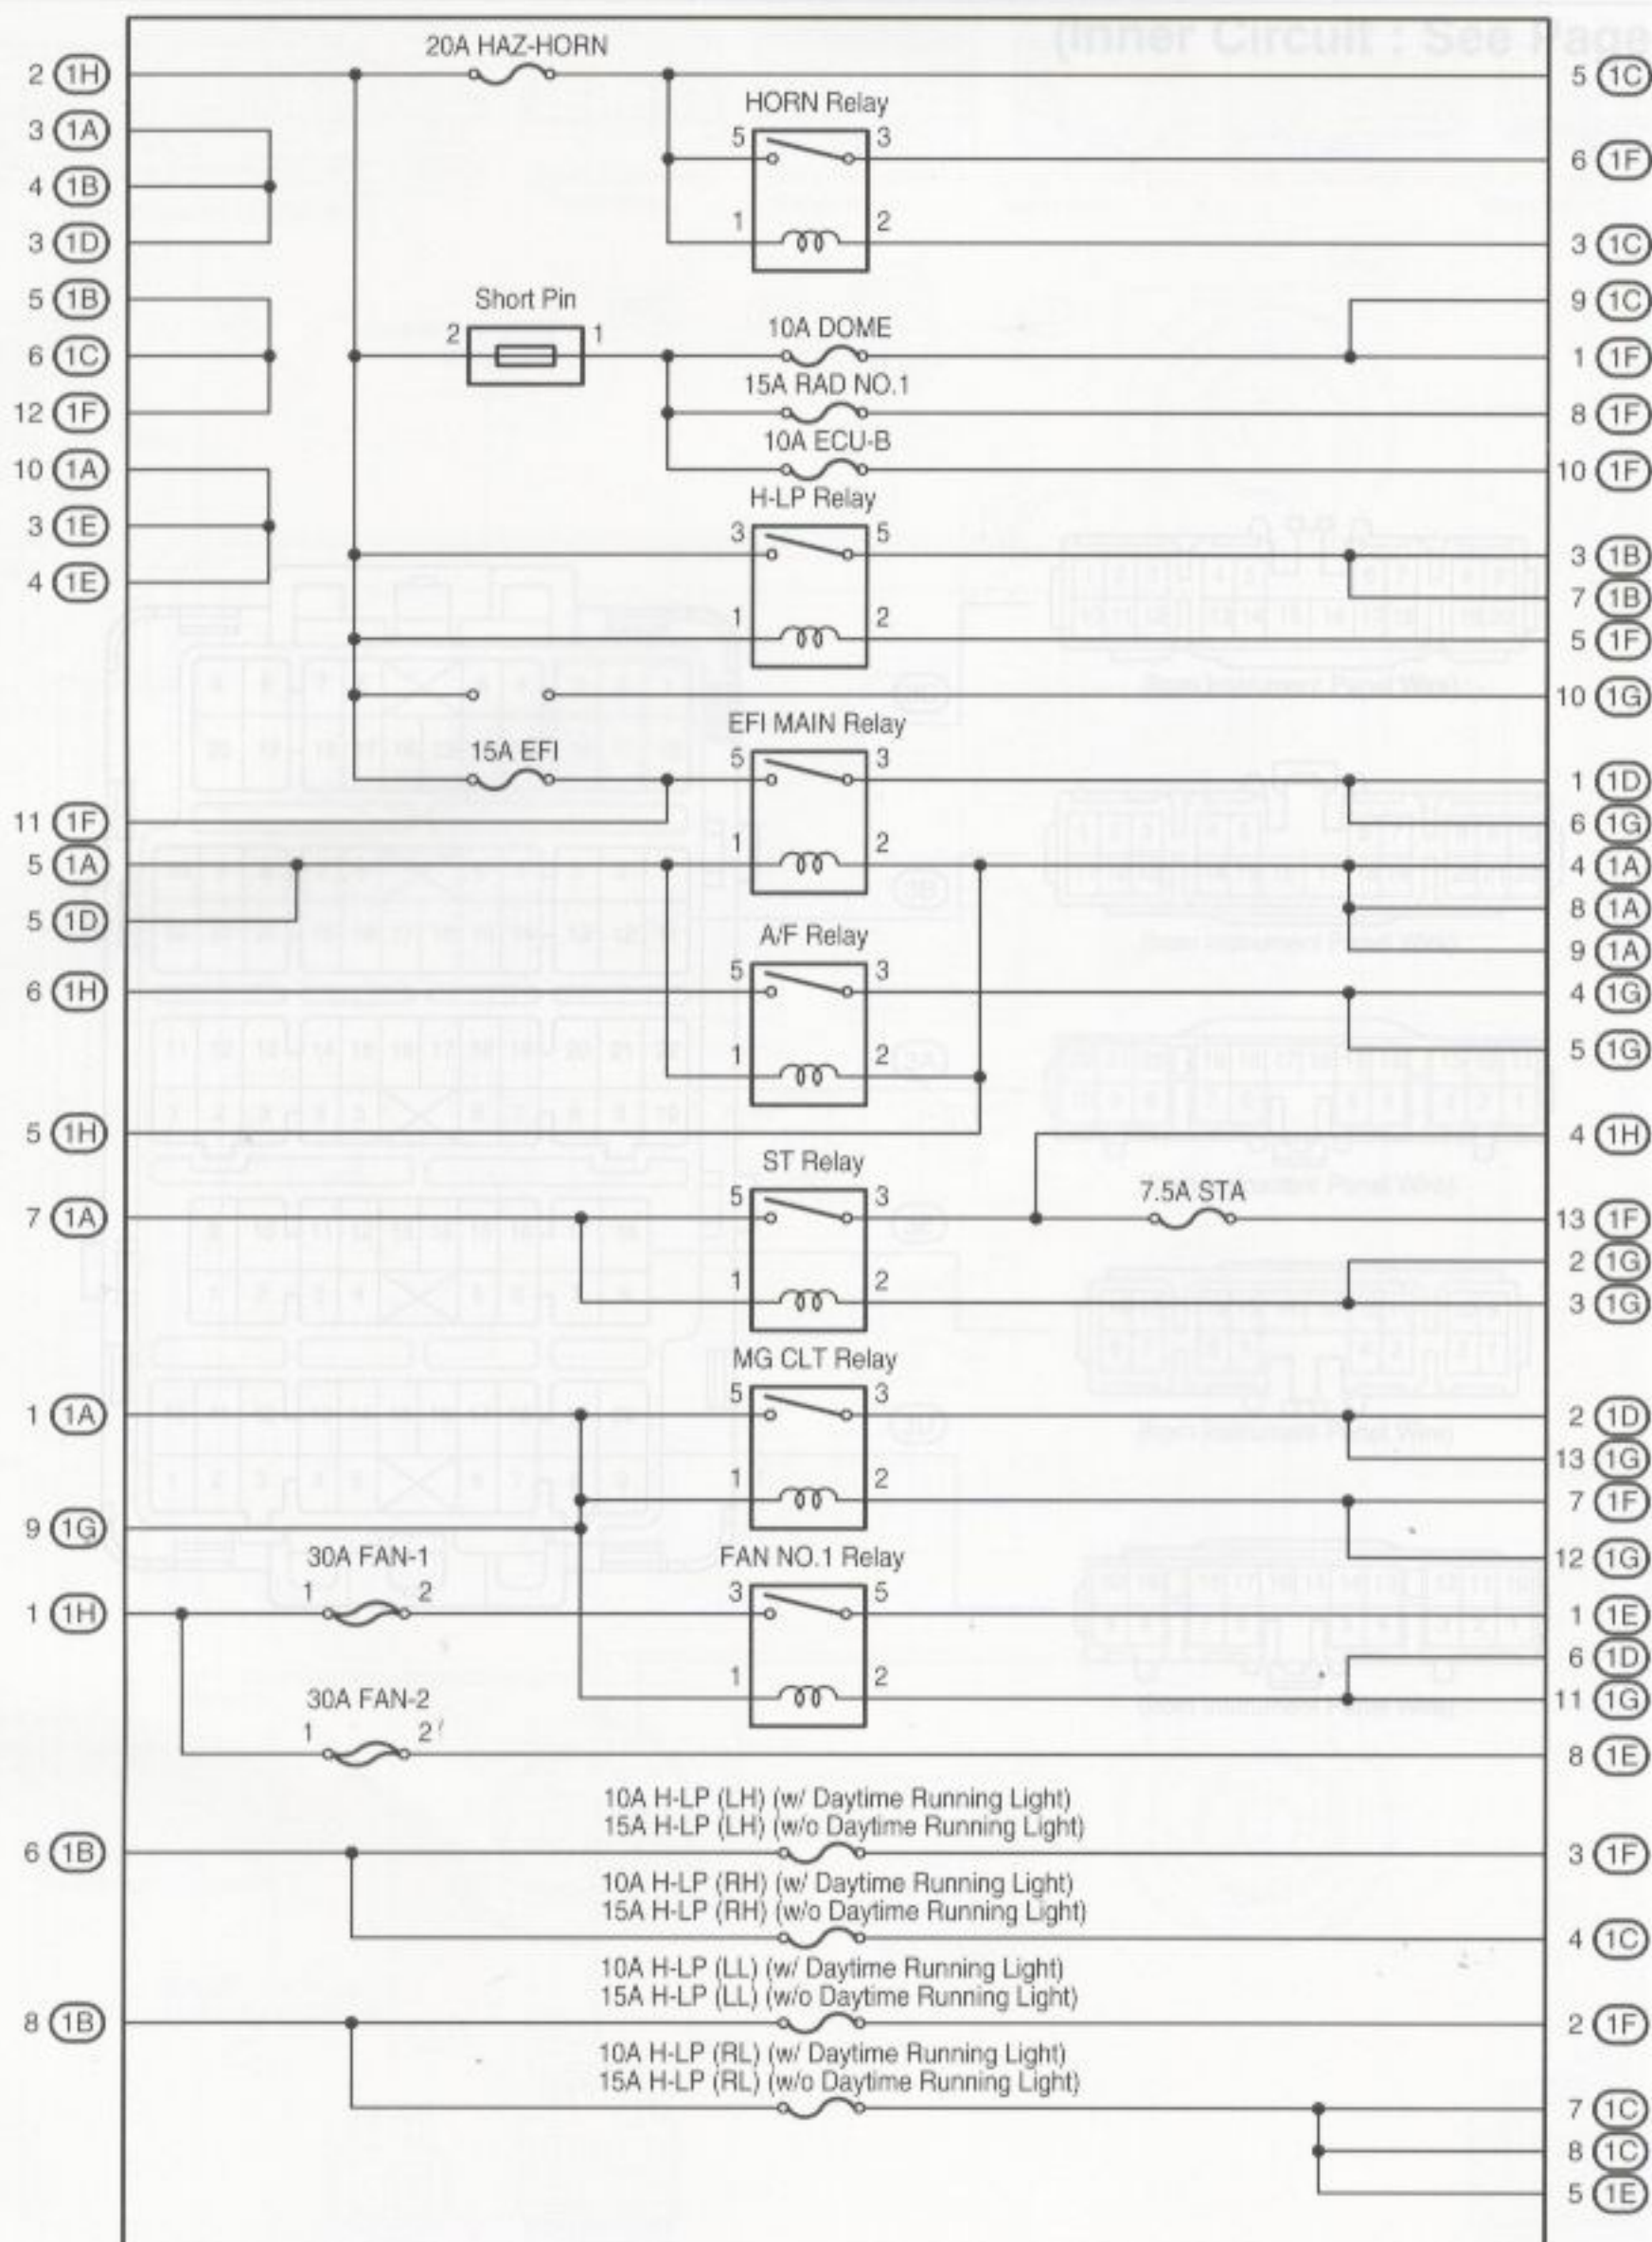


[Driver Side J/B Inner Circuit]

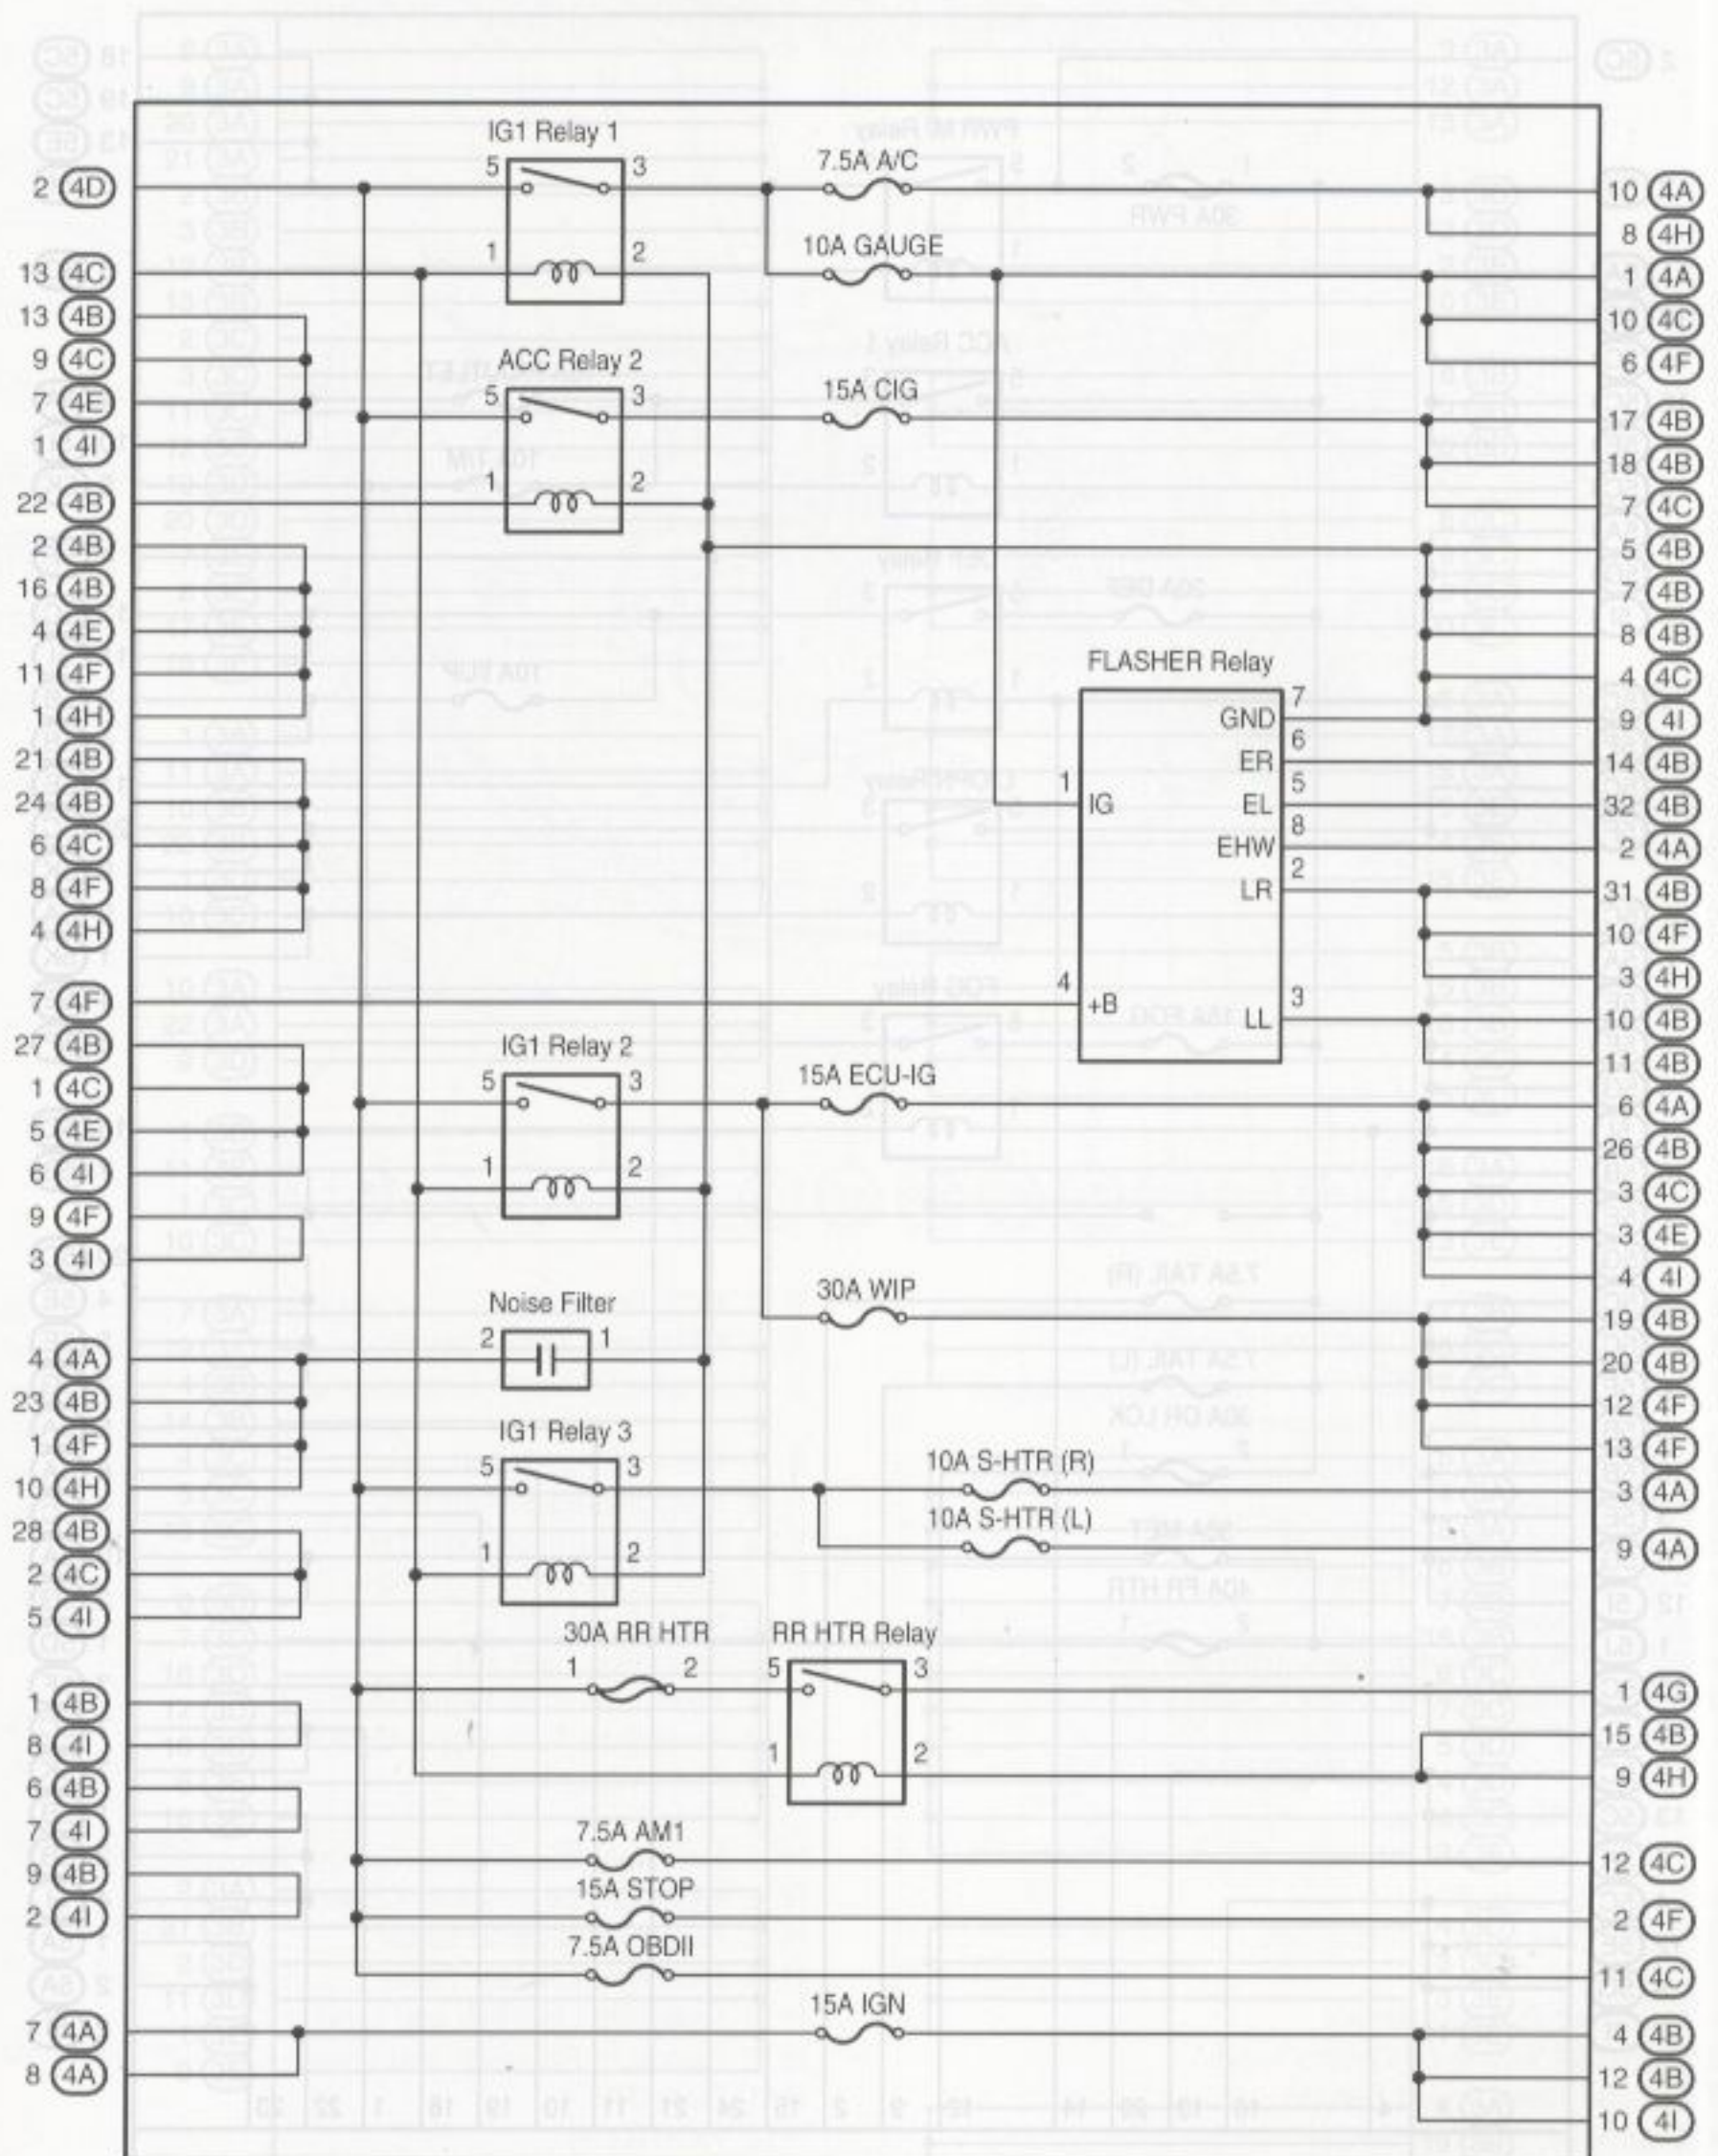

F RELAY LOCATIONS

[Passenger Side J/B Inner Circuit]

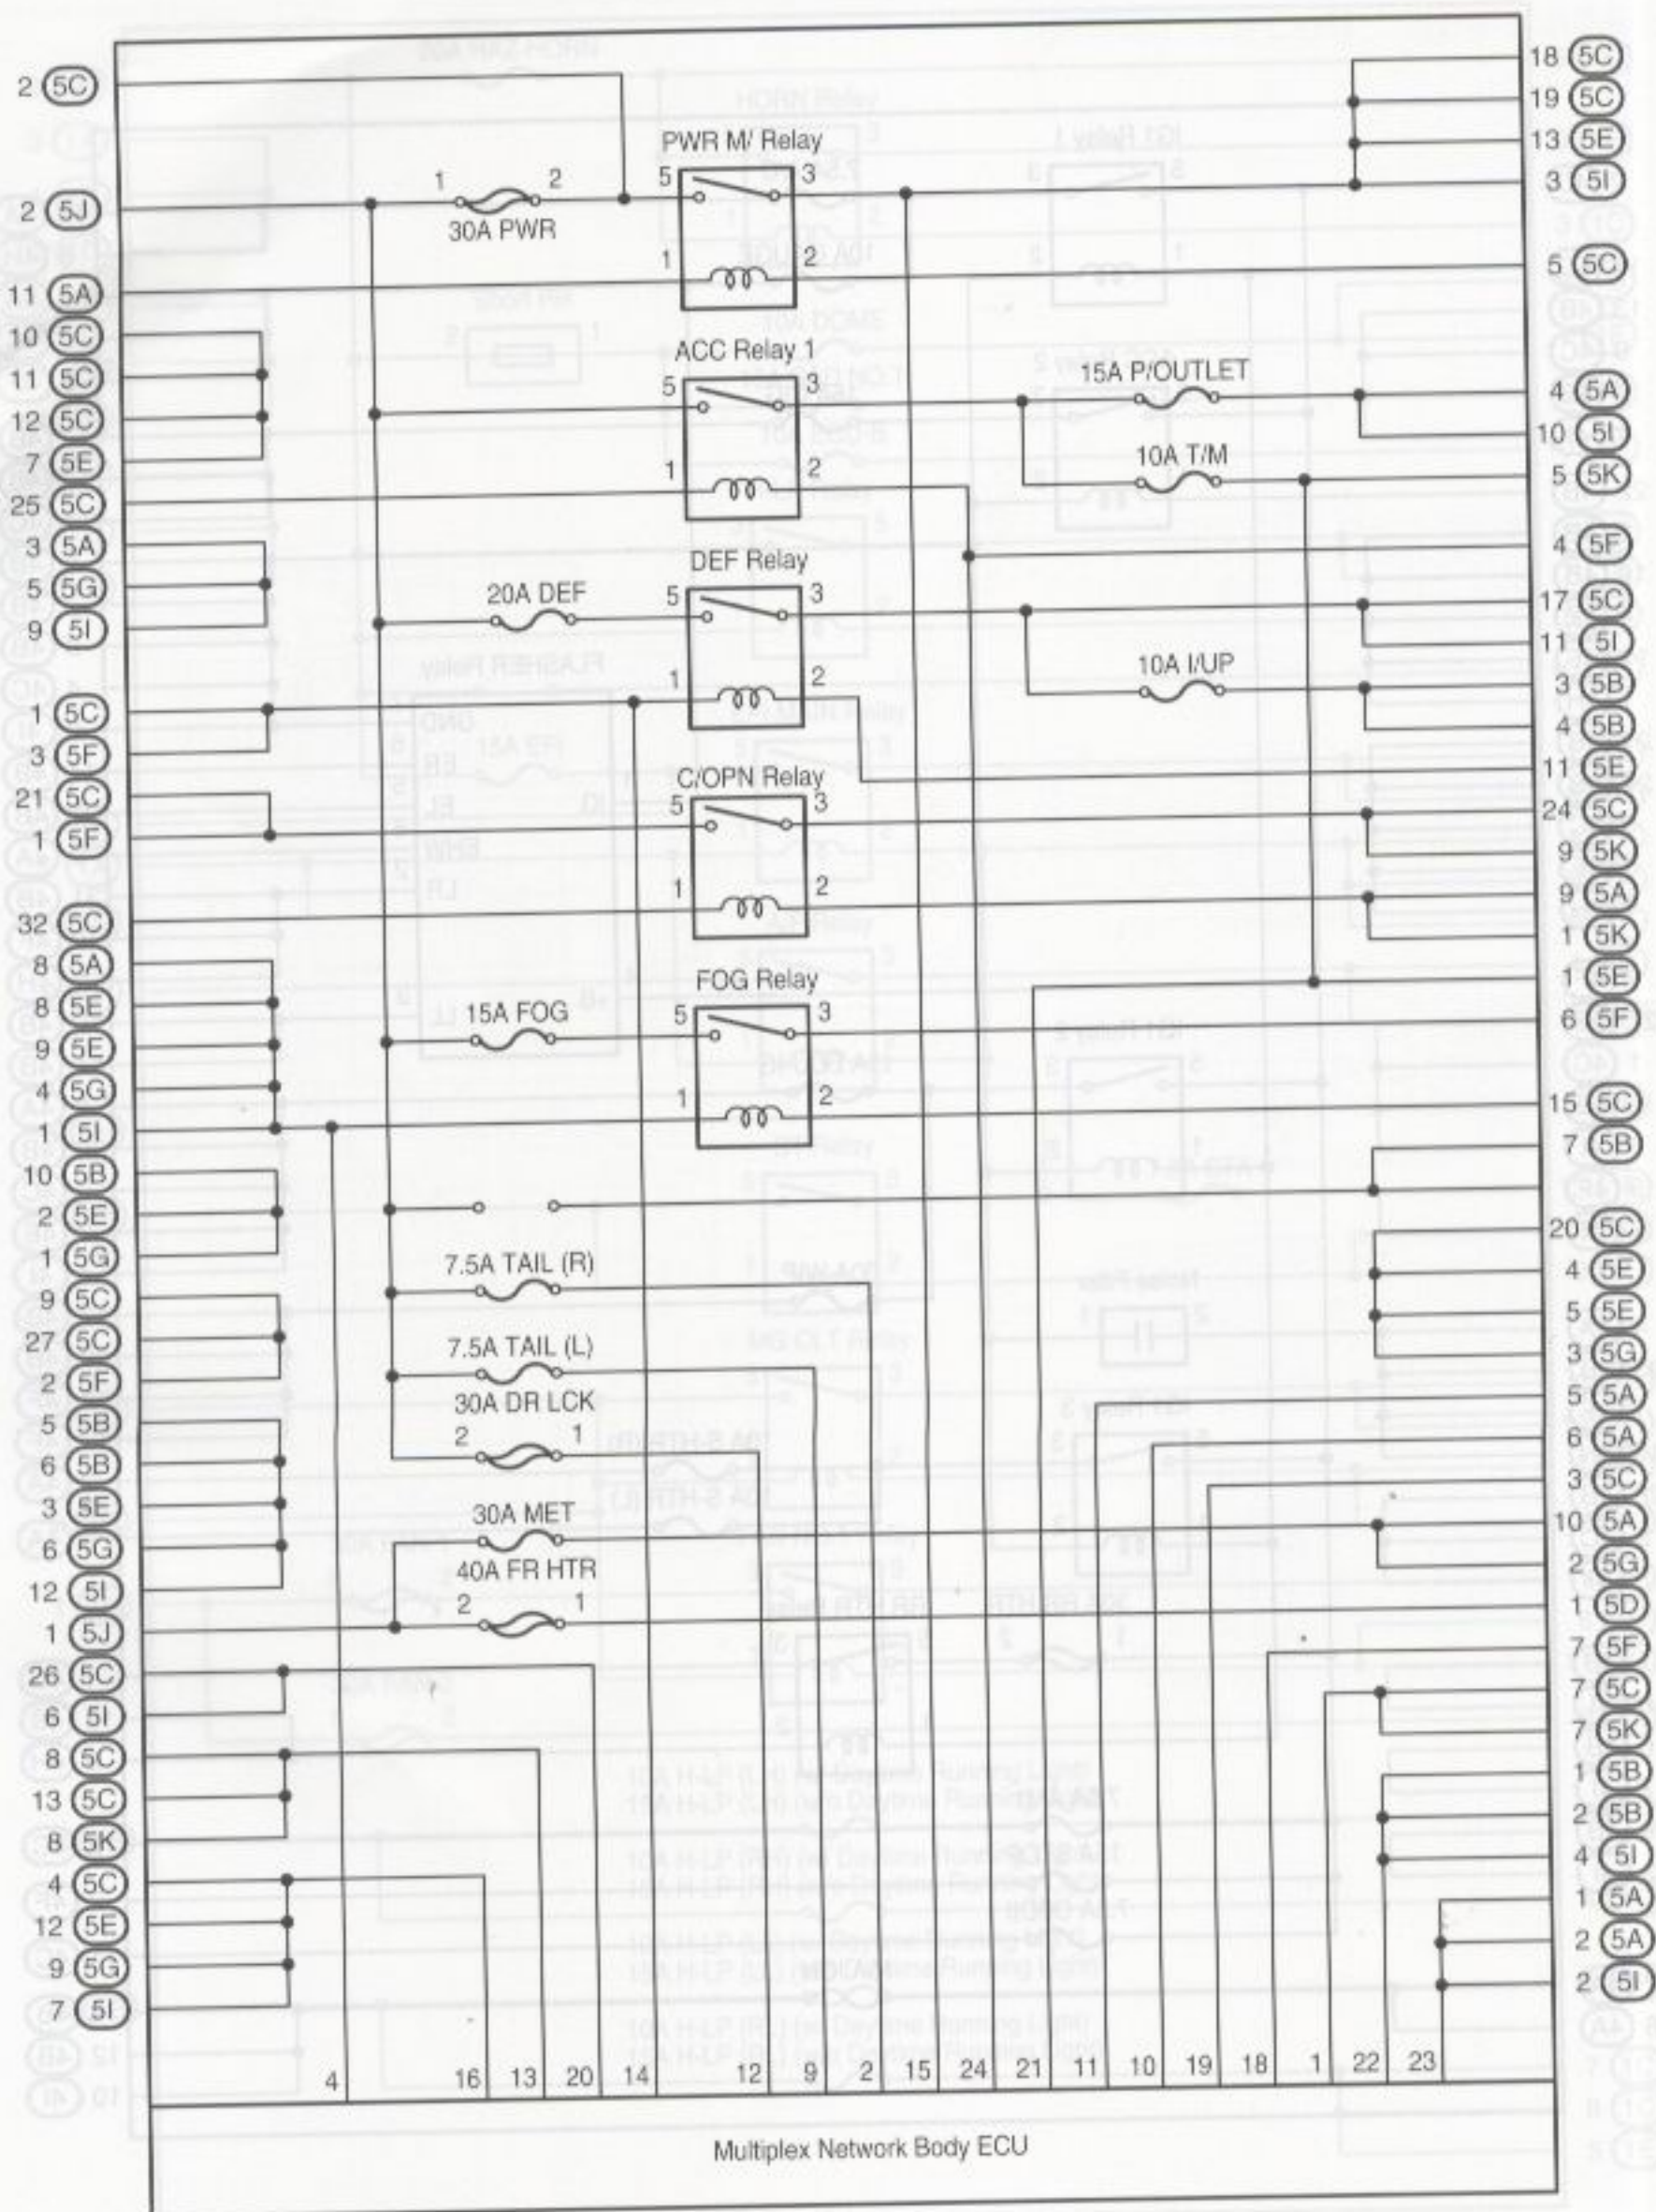

[Center J/B Inner Circuit]

[LHD]

[LHD]

