


HEADLIGHT CLEANER

FROM POWER SOURCE SYSTEM (SEE PAGE 130)

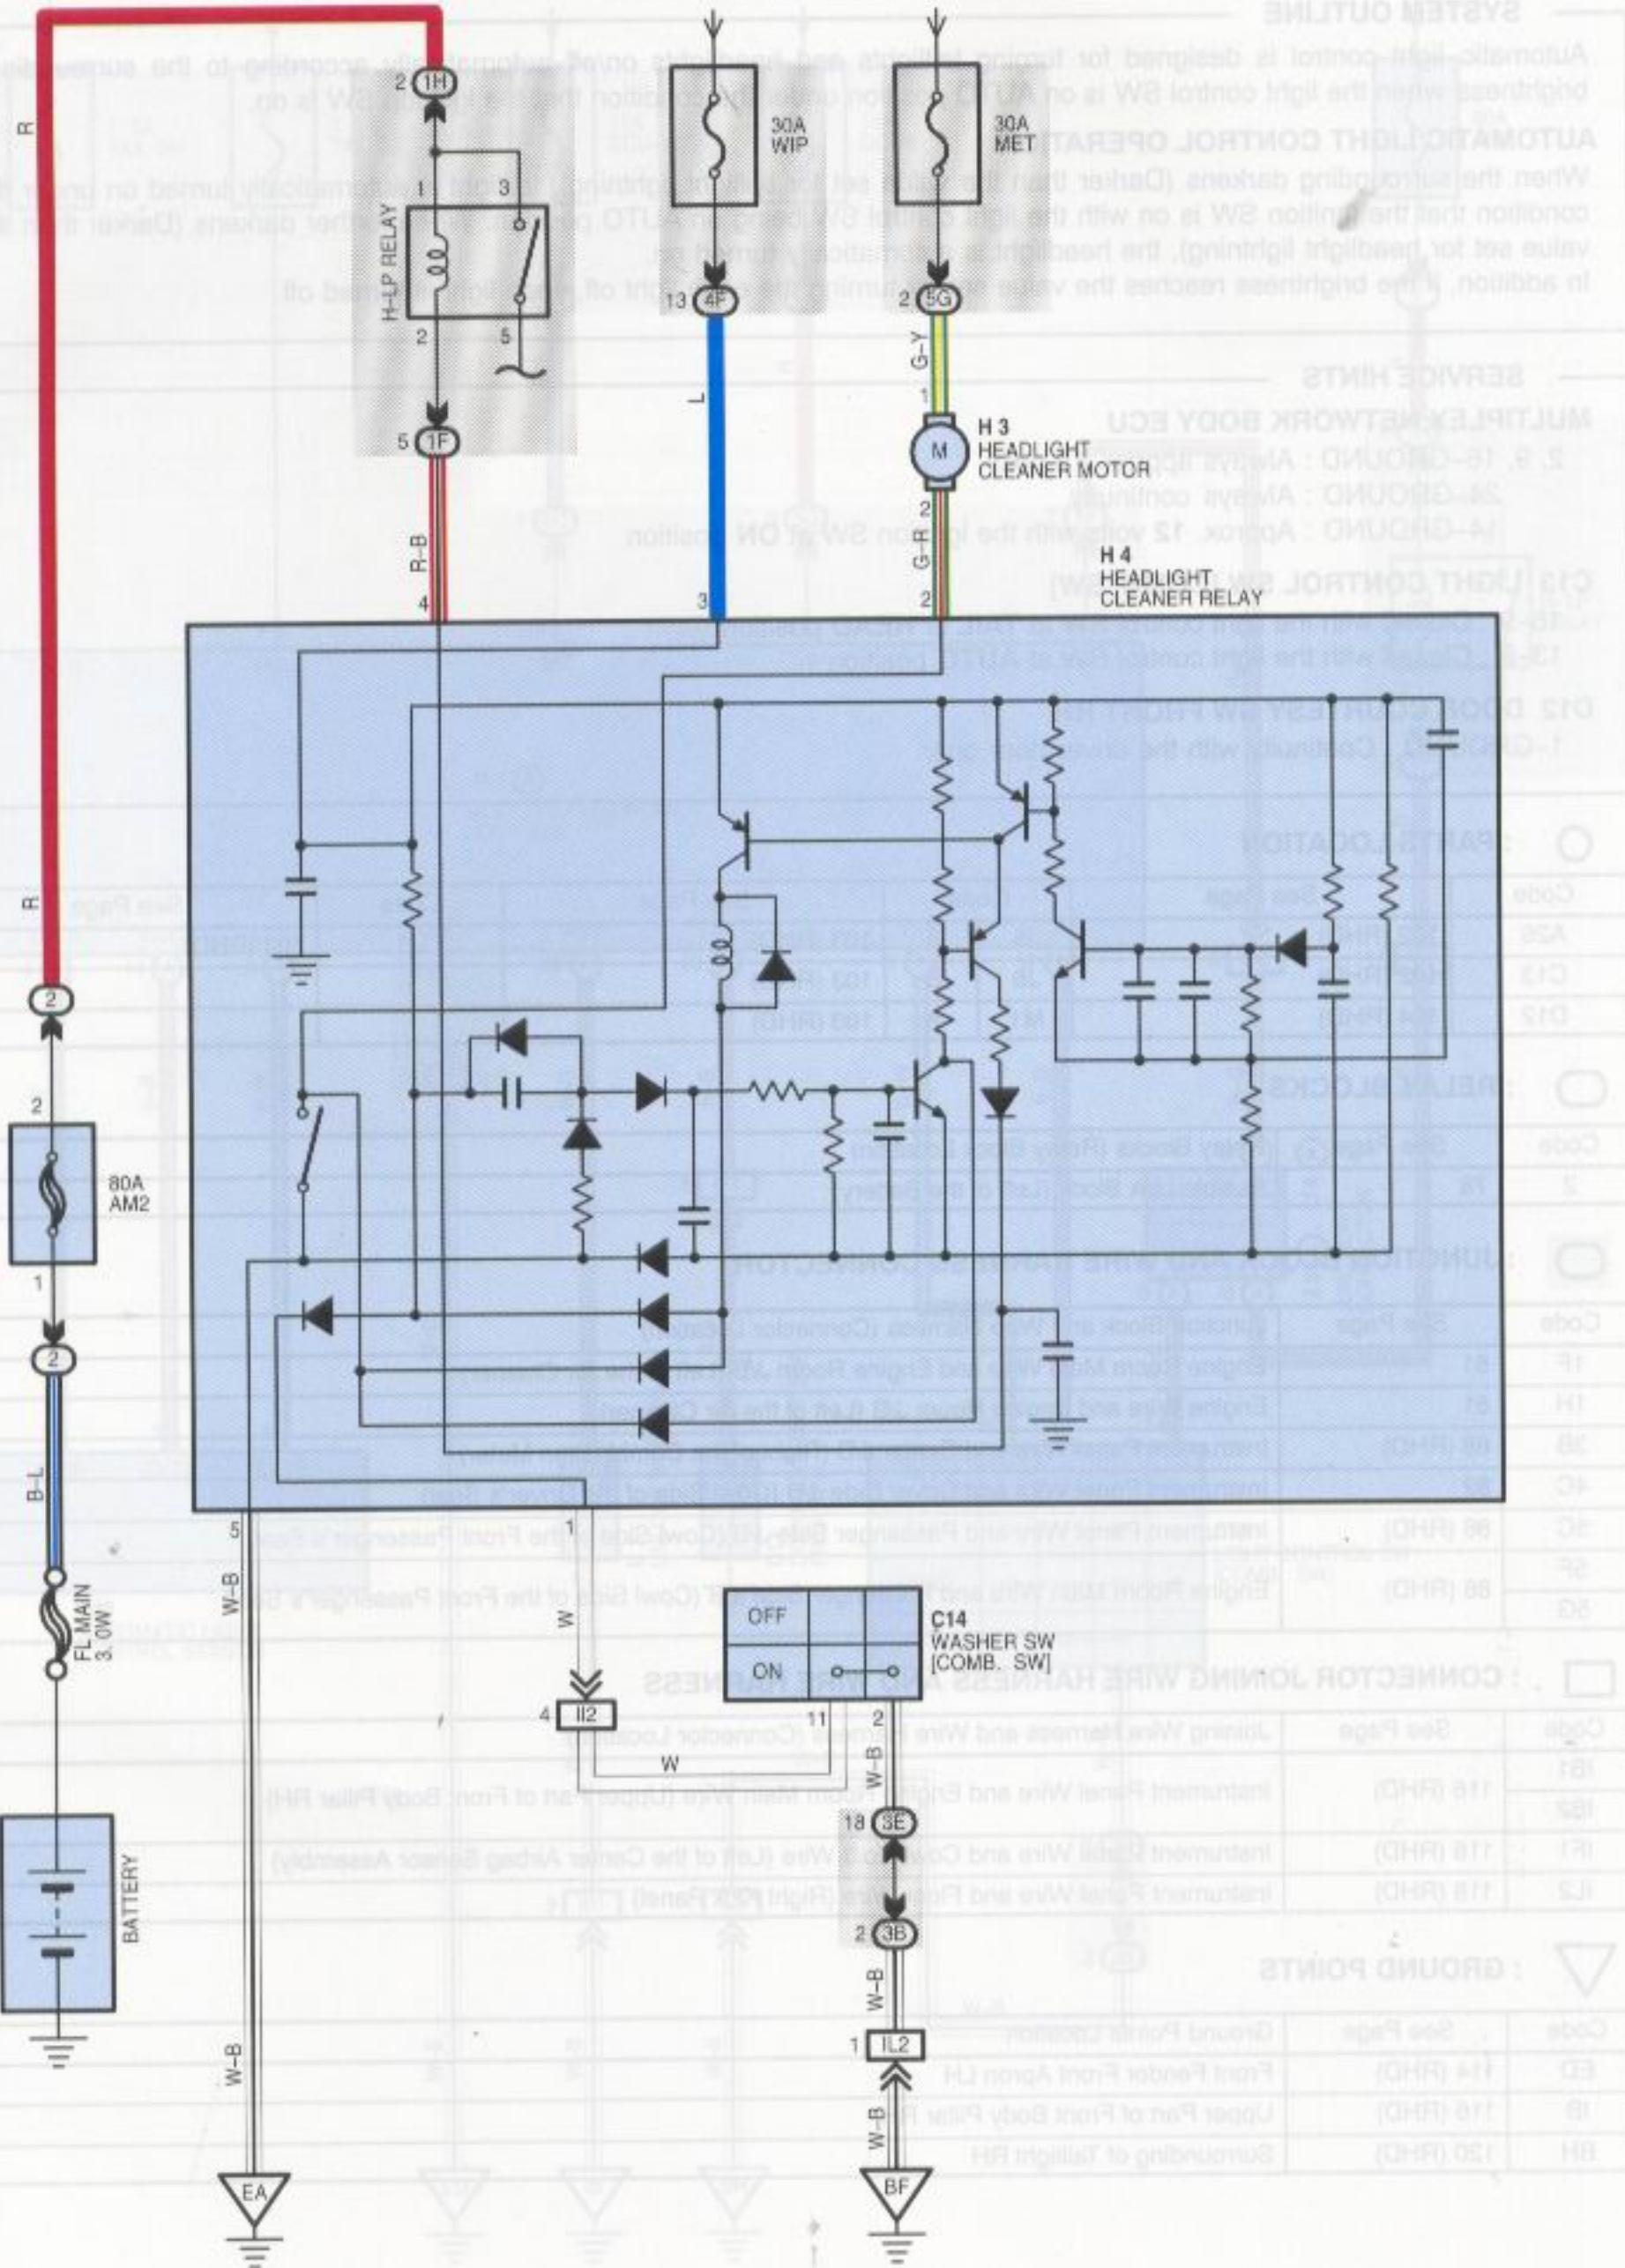

SERVICE HINTS**H4 HEADLIGHT CLEANER RELAY**

1-GROUND : Continuity with the washer SW on

2-GROUND : **12 to 0** volts for **0.5** sec. with the ignition SW on, light control SW at **HEAD** position and the washer SW on

3-GROUND : Approx. **12** volts with the ignition SW at **ON** position

4-GROUND : Approx. **12** volts with the light control SW at **HEAD** position

5-GROUND : Always continuity

O : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C14	96 (LHD)	H3	94 (LHD)	H4	94 (LHD)

O : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	78	Fusible Link Block (Left of the Battery)

O : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1F	81	Engine Room Main Wire and Engine Room J/B (Left of the Air Cleaner)
1H	81	Engine Wire and Engine Room J/B (Left of the Air Cleaner)
3B	88 (LHD)	Instrument Panel Wire and Center J/B (Left of the Combination Meter)
3E		
4F	83	Engine Room Main Wire and Driver Side J/B (Cowl Side of the Driver's Seat)
5G	84 (LHD)	Engine Room Main Wire and Passenger Side J/B (Cowl Side of the Front Passenger's Seat)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II2	110 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Surrounding of the Passenger Side J/B)
IL2	110 (LHD)	Instrument Panel Wire and Floor Wire (Right Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	106 (LHD)	Front Fender Front Apron RH
BF	112 (LHD)	Center of the Back Door

