

HORN WIPER AND WASHER


FROM POWER SOURCE SYSTEM (SEE PAGE 130)

CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness
IB2	118 (LHD)	Instrument Panel Wire and Engine Compartment Wire (Surrounding of the Front Body Panel RH)
ID1	108 (LHD)	Instrument Panel Wire and Floor Wire (Surrounding of the Passenger Side RH)
IS	115 (LHD)	Instrument Panel Wire and Engine Compartment Wire (Surrounding of the Passenger Side RH)
IS2	116 (LHD)	Instrument Panel Wire and Floor Wire (Surrounding of the Passenger Side RH)
BE1	112 (LHD)	Back Door No. 1 Wire and Floor Wire (Surrounding of the Roof Panel)
BE1	120 (RHD)	Back Door No. 1 Wire and Floor Wire (Surrounding of the Roof Panel)
BG1	117 (LHD)	Back Door No. 1 Wire and Back Door No. 2 Wire (Surrounding of the Roof Panel)
BG1	120 (RHD)	Back Door No. 1 Wire and Back Door No. 2 Wire (Surrounding of the Roof Panel)

GROUND POINTS

Code	See Page	Ground Points Location
BH	112 (LHD)	Surrounding of Tailgate RH
BH	120 (RHD)	Surrounding of Tailgate RH

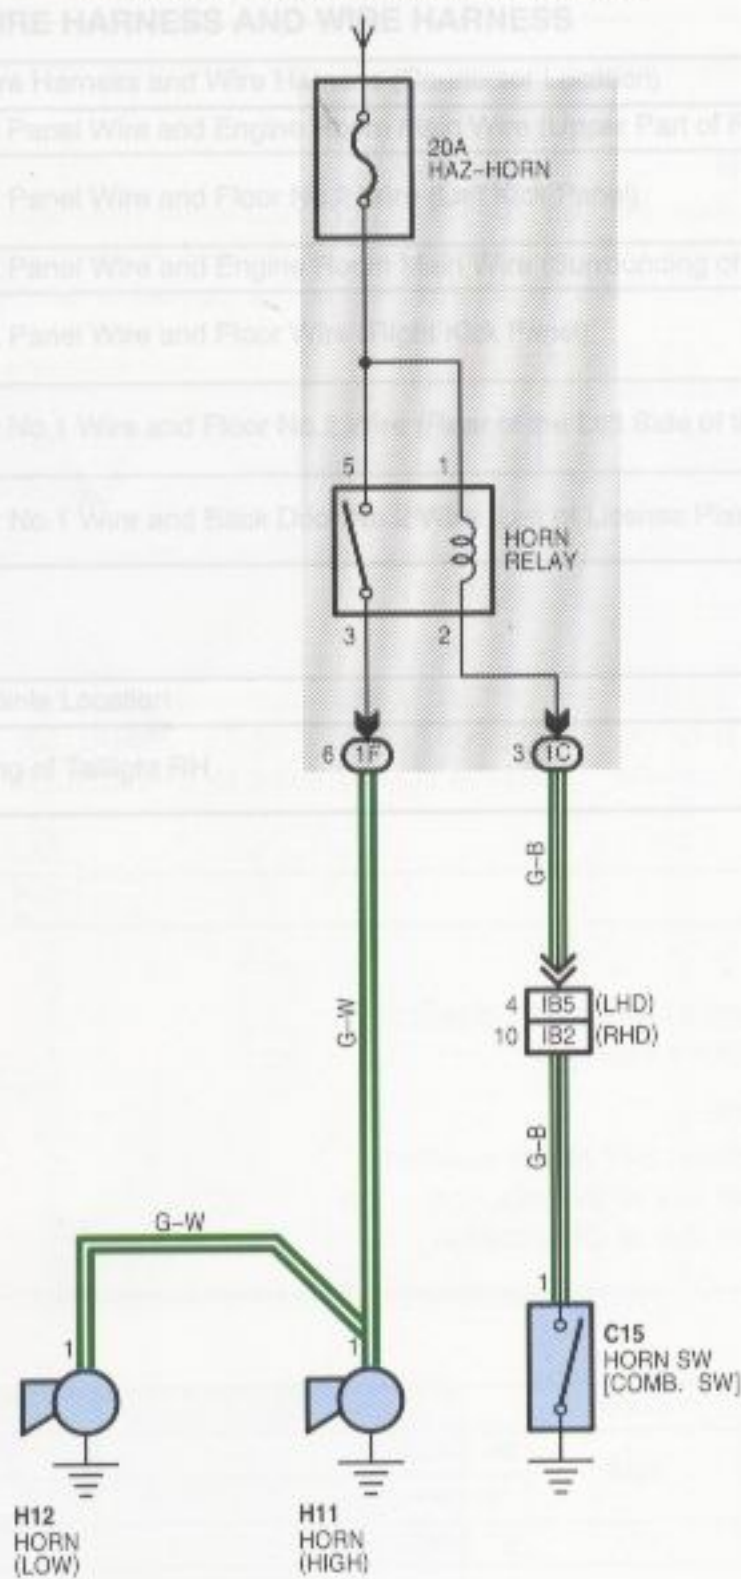

SERVICE HINTS

HORN RELAY

3-5 : Closed horn SW on

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C15	96 (LHD)	H11	94 (LHD)	H12	94 (LHD)
	102 (RHD)		100 (RHD)		100 (RHD)

□ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	81	Engine Room Main Wire and Engine Room J/B (Left of the Air Cleaner)
1F		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	116 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)
IB5	108 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)