



DOUBLE LOCKING (RHD)


FROM POWER SOURCE SYSTEM (SEE PAGE 130)

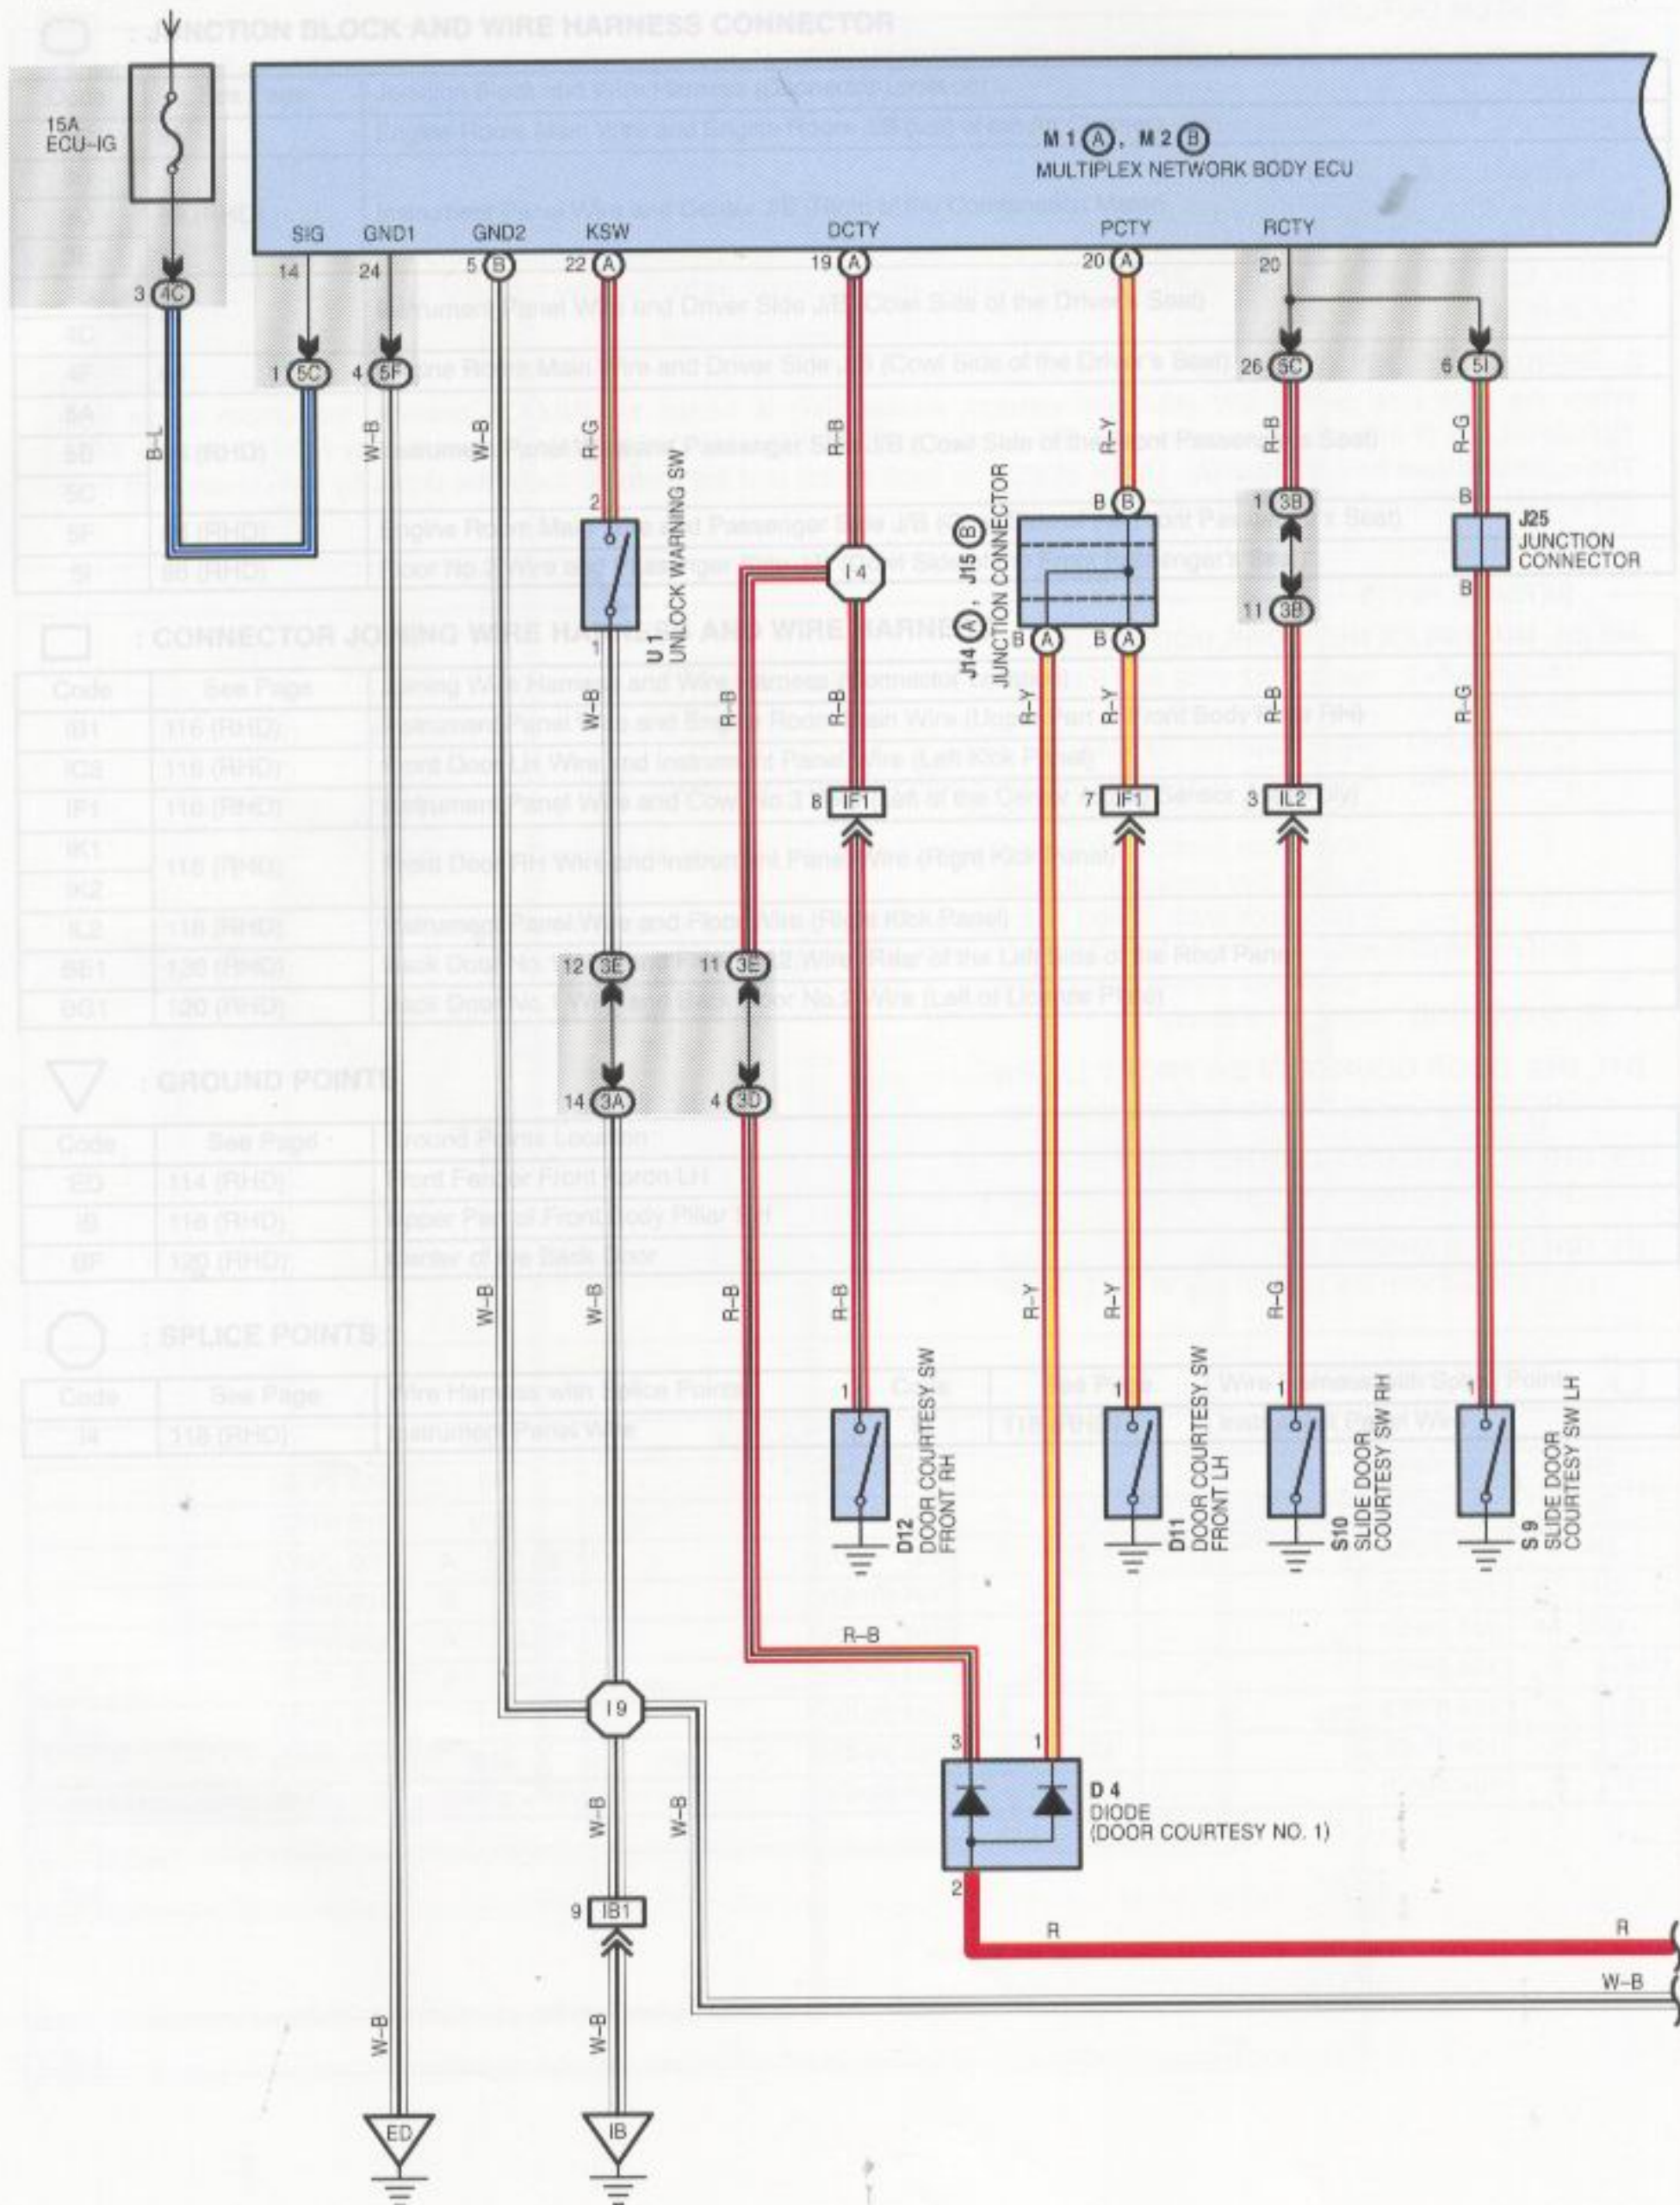


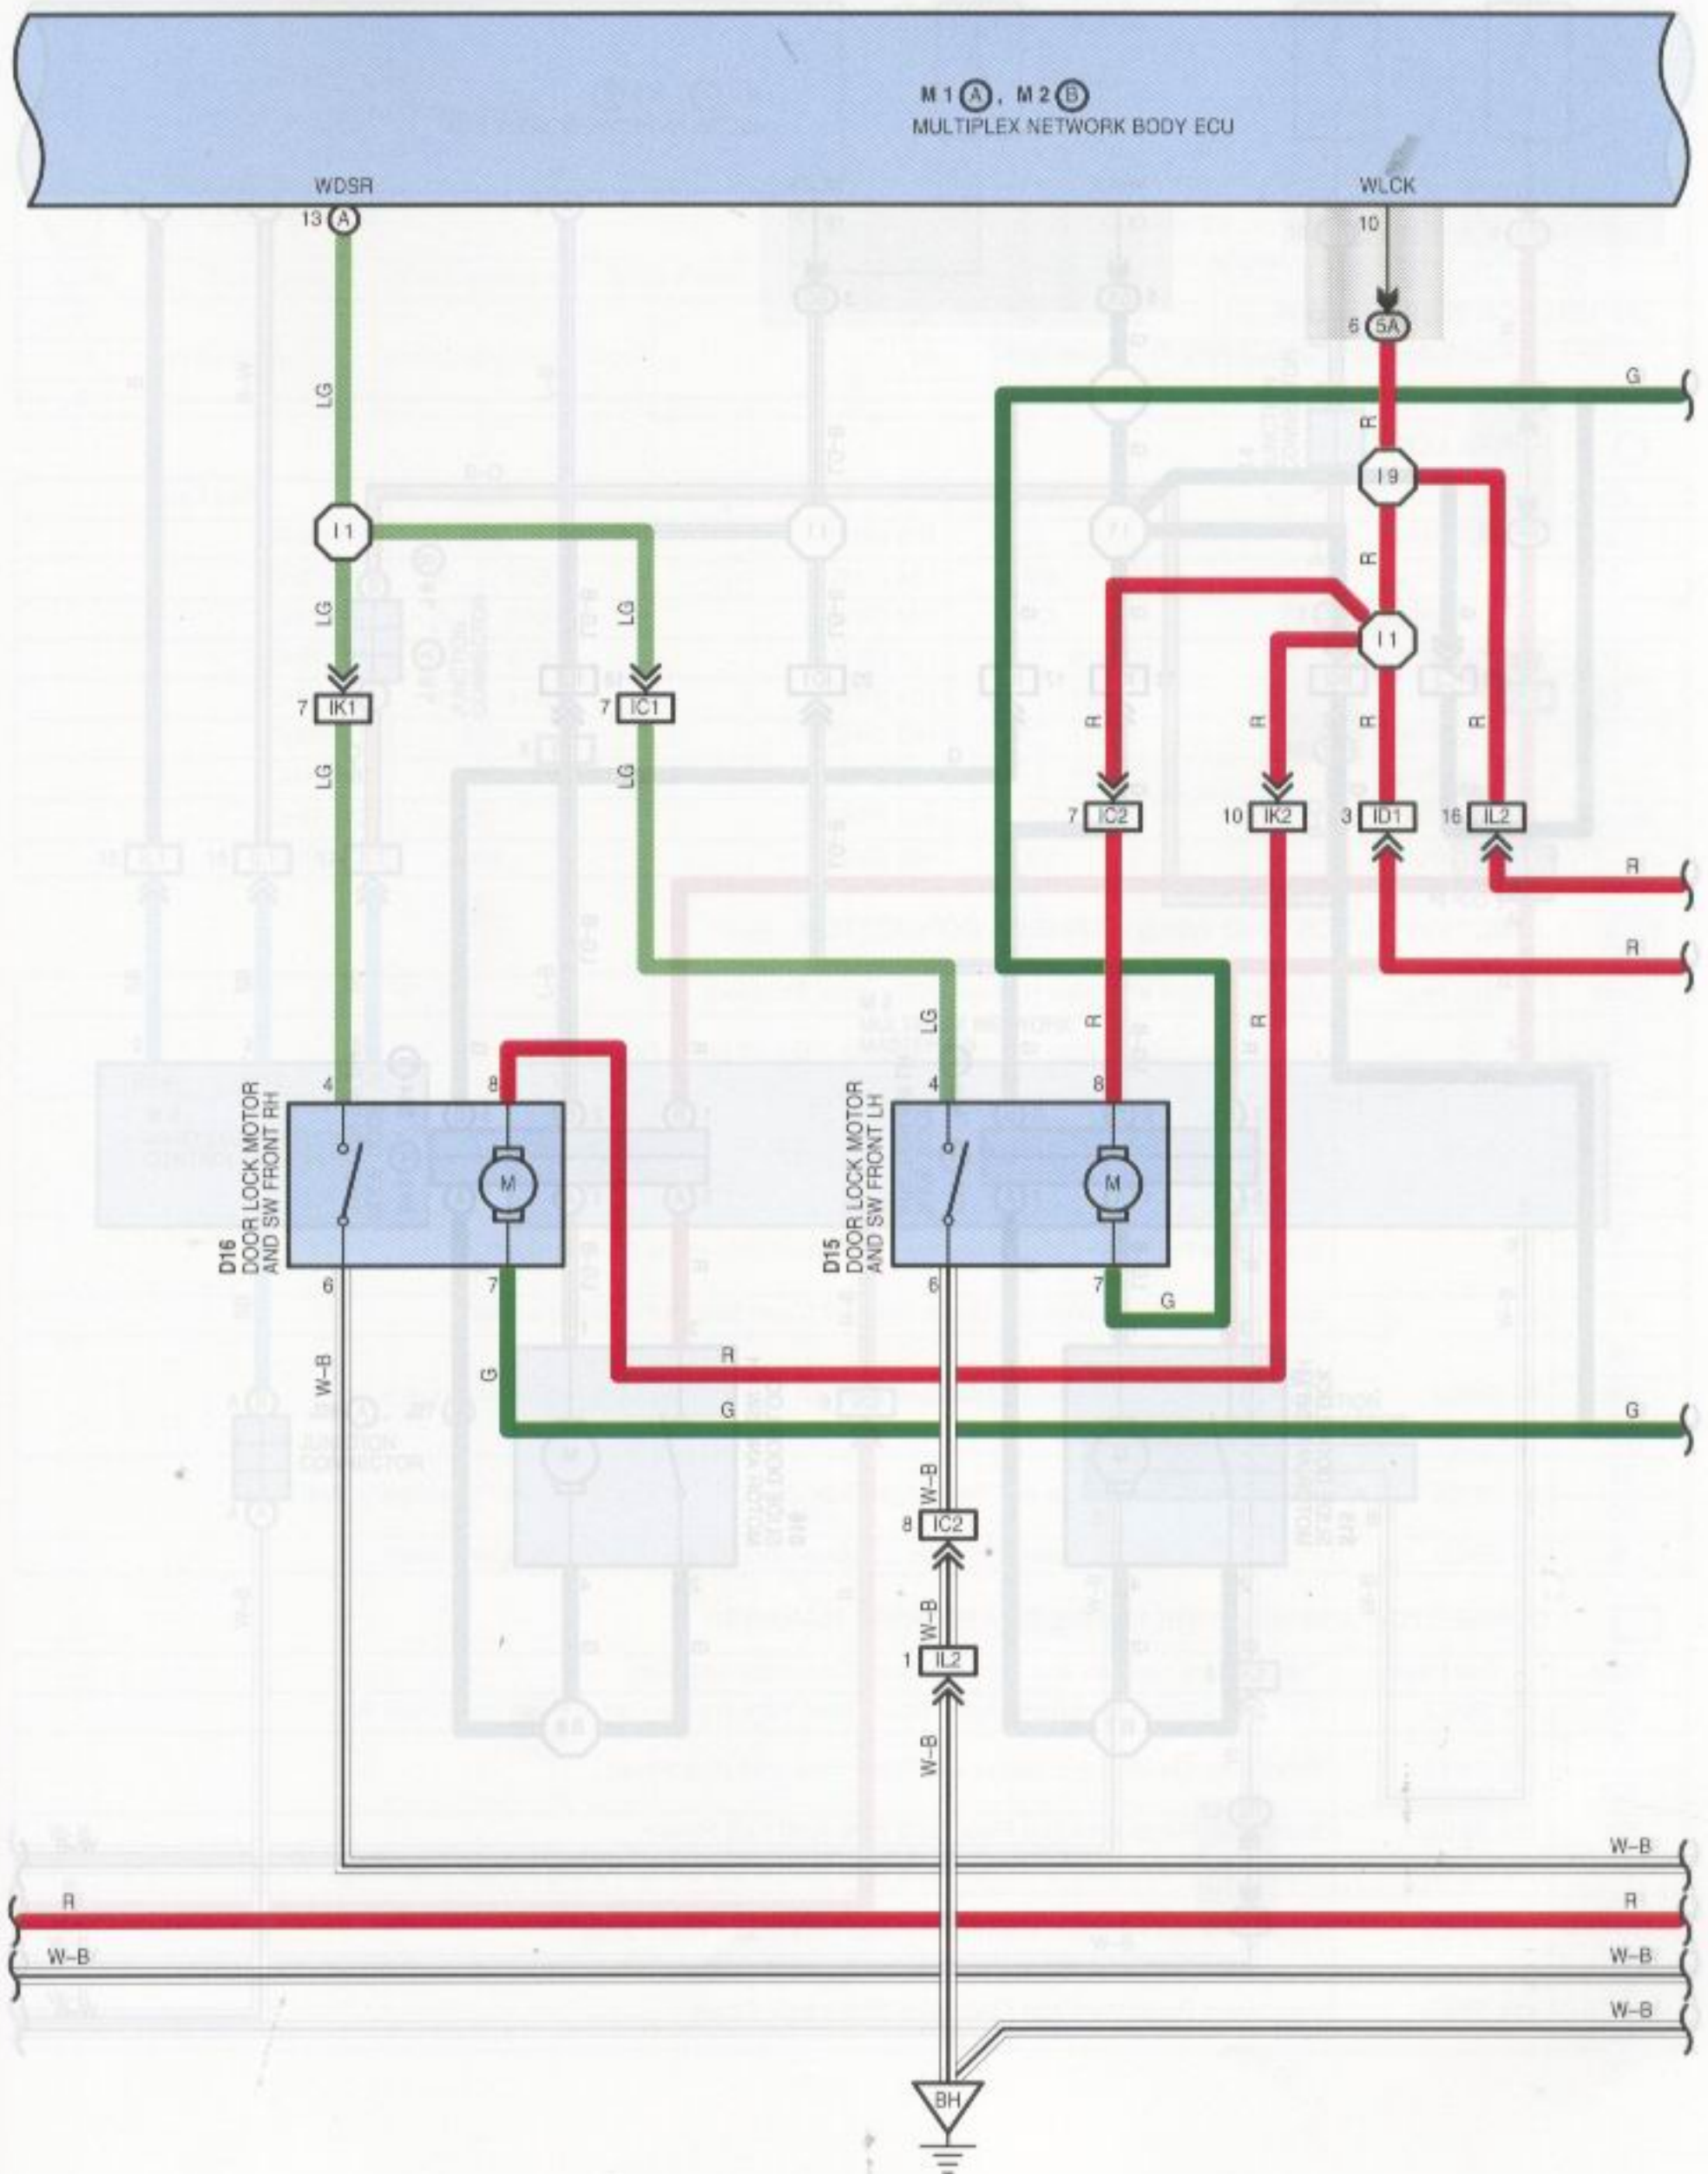

DOUBLE LOCKING

FROM POWER SOURCE SYSTEM (SEE PAGE 136)

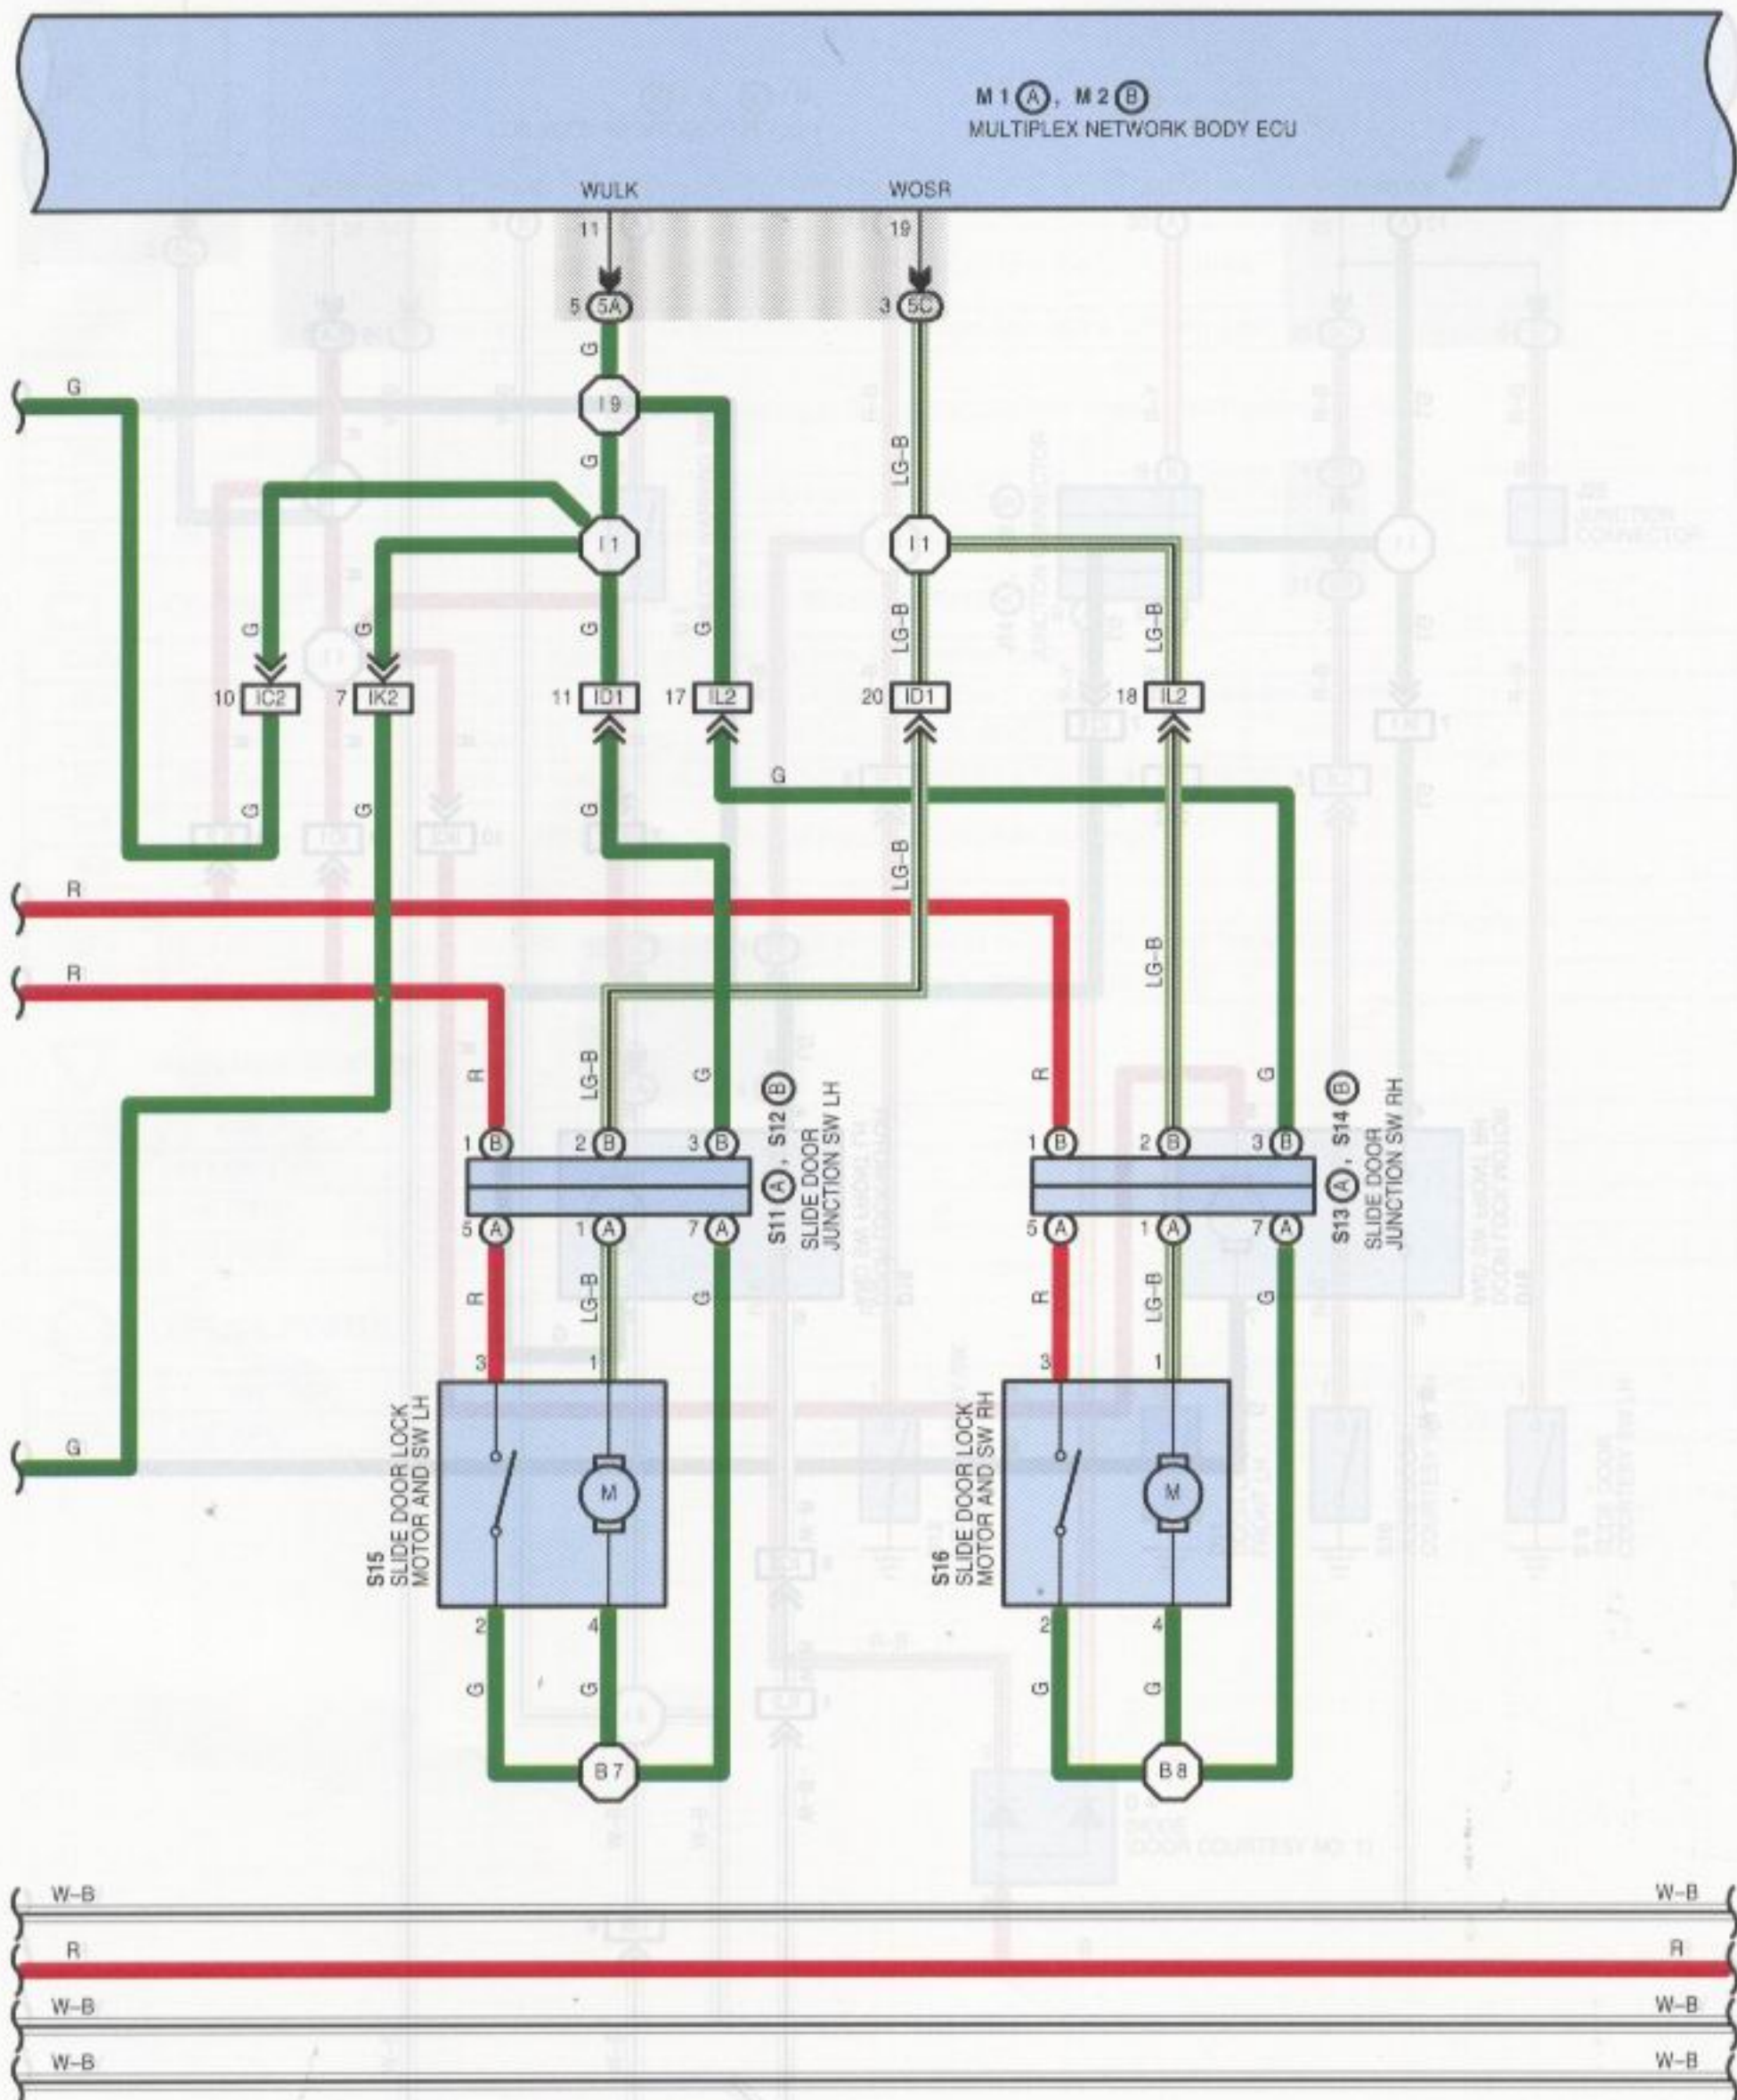

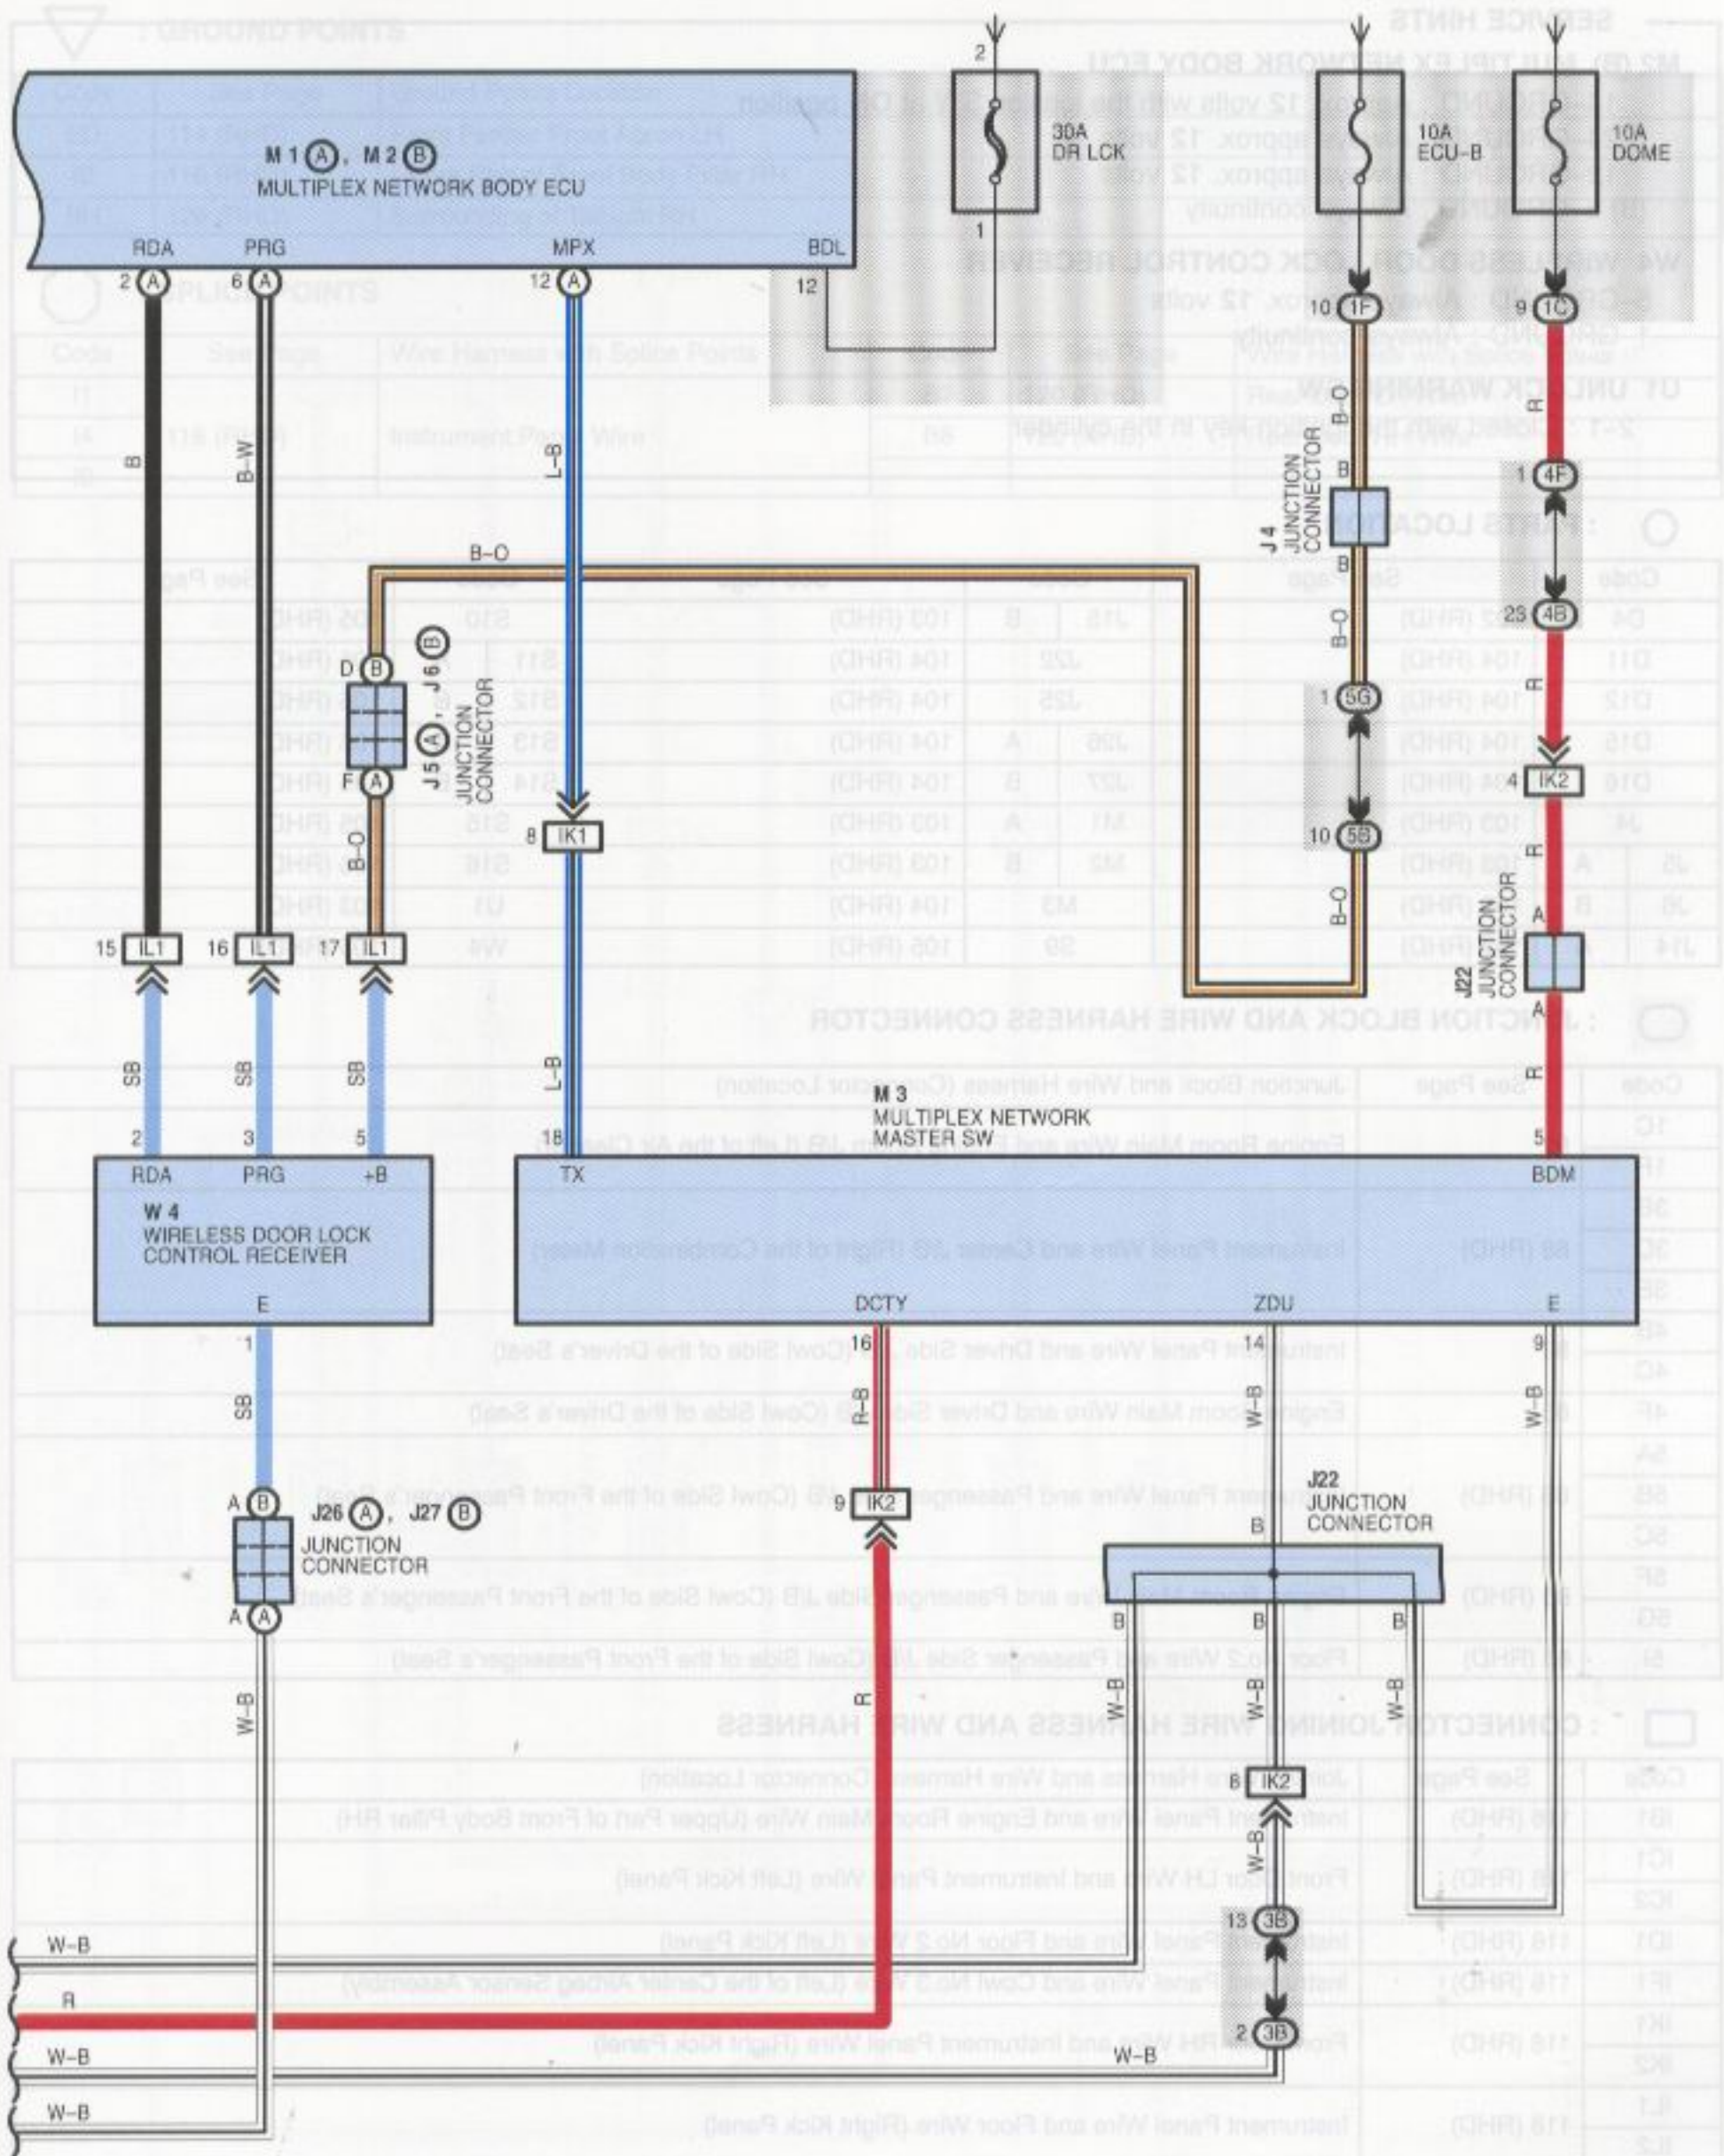

DOUBLE LOCKING

SERVICE HINTS

M2 (B) MULTIPLEX NETWORK BODY ECU

14-GROUND : Approx. 12 volts with the ignition SW at ON position

24-GROUND : Always approx. 12 volts

12-GROUND : Always approx. 12 volts

(B) 5-GROUND : Always continuity

W4 WIRELESS DOOR LOCK CONTROL RECEIVER

5-GROUND : Always approx. 12 volts

1-GROUND : Always continuity

U1 UNLOCK WARNING SW

2-1 : Closed with the ignition key in the cylinder

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
D4	102 (RHD)	J15	B	103 (RHD)	S10
D11	104 (RHD)	J22		104 (RHD)	S11
D12	104 (RHD)	J25		104 (RHD)	S12
D15	104 (RHD)	J26	A	104 (RHD)	S13
D16	104 (RHD)	J27	B	104 (RHD)	S14
J4	103 (RHD)	M1	A	103 (RHD)	S15
J5	A	M2	B	103 (RHD)	S16
J6	B	M3		104 (RHD)	U1
J14	A	S9		105 (RHD)	W4

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	81	Engine Room Main Wire and Engine Room J/B (Left of the Air Cleaner)
1F		
3B	88 (RHD)	Instrument Panel Wire and Center J/B (Right of the Combination Meter)
3D		
3E		
4B	82	Instrument Panel Wire and Driver Side J/B (Cowl Side of the Driver's Seat)
4C		
4F	83	Engine Room Main Wire and Driver Side J/B (Cowl Side of the Driver's Seat)
5A	86 (RHD)	Instrument Panel Wire and Passenger Side J/B (Cowl Side of the Front Passenger's Seat)
5B		
5C		
5F	86 (RHD)	Engine Room Main Wire and Passenger Side J/B (Cowl Side of the Front Passenger's Seat)
5G		
5I	86 (RHD)	Floor No.2 Wire and Passenger Side J/B (Cowl Side of the Front Passenger's Seat)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	116 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)
IC1	116 (RHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC2		
ID1	116 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IF1	116 (RHD)	Instrument Panel Wire and Cowl No.3 Wire (Left of the Center Airbag Sensor Assembly)
IK1	118 (RHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IK2		
IL1	118 (RHD)	Instrument Panel Wire and Floor Wire (Right Kick Panel)
IL2		

▽ : GROUND POINTS

Code	See Page	Ground Points Location
ED	114 (RHD)	Front Fender Front Apron LH
IB	116 (RHD)	Upper Part of Front Body Pillar RH
BH	120 (RHD)	Surrounding of Taillight RH

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I1	118 (RHD)	Instrument Panel Wire	B7	120 (RHD)	Rear Door LH Wire
I4			B8	120 (RHD)	Rear Door RH Wire
I9					

