




I GROUND POINT (LHD) MANUAL A/C EXCEPT COLD AREA SPEC.

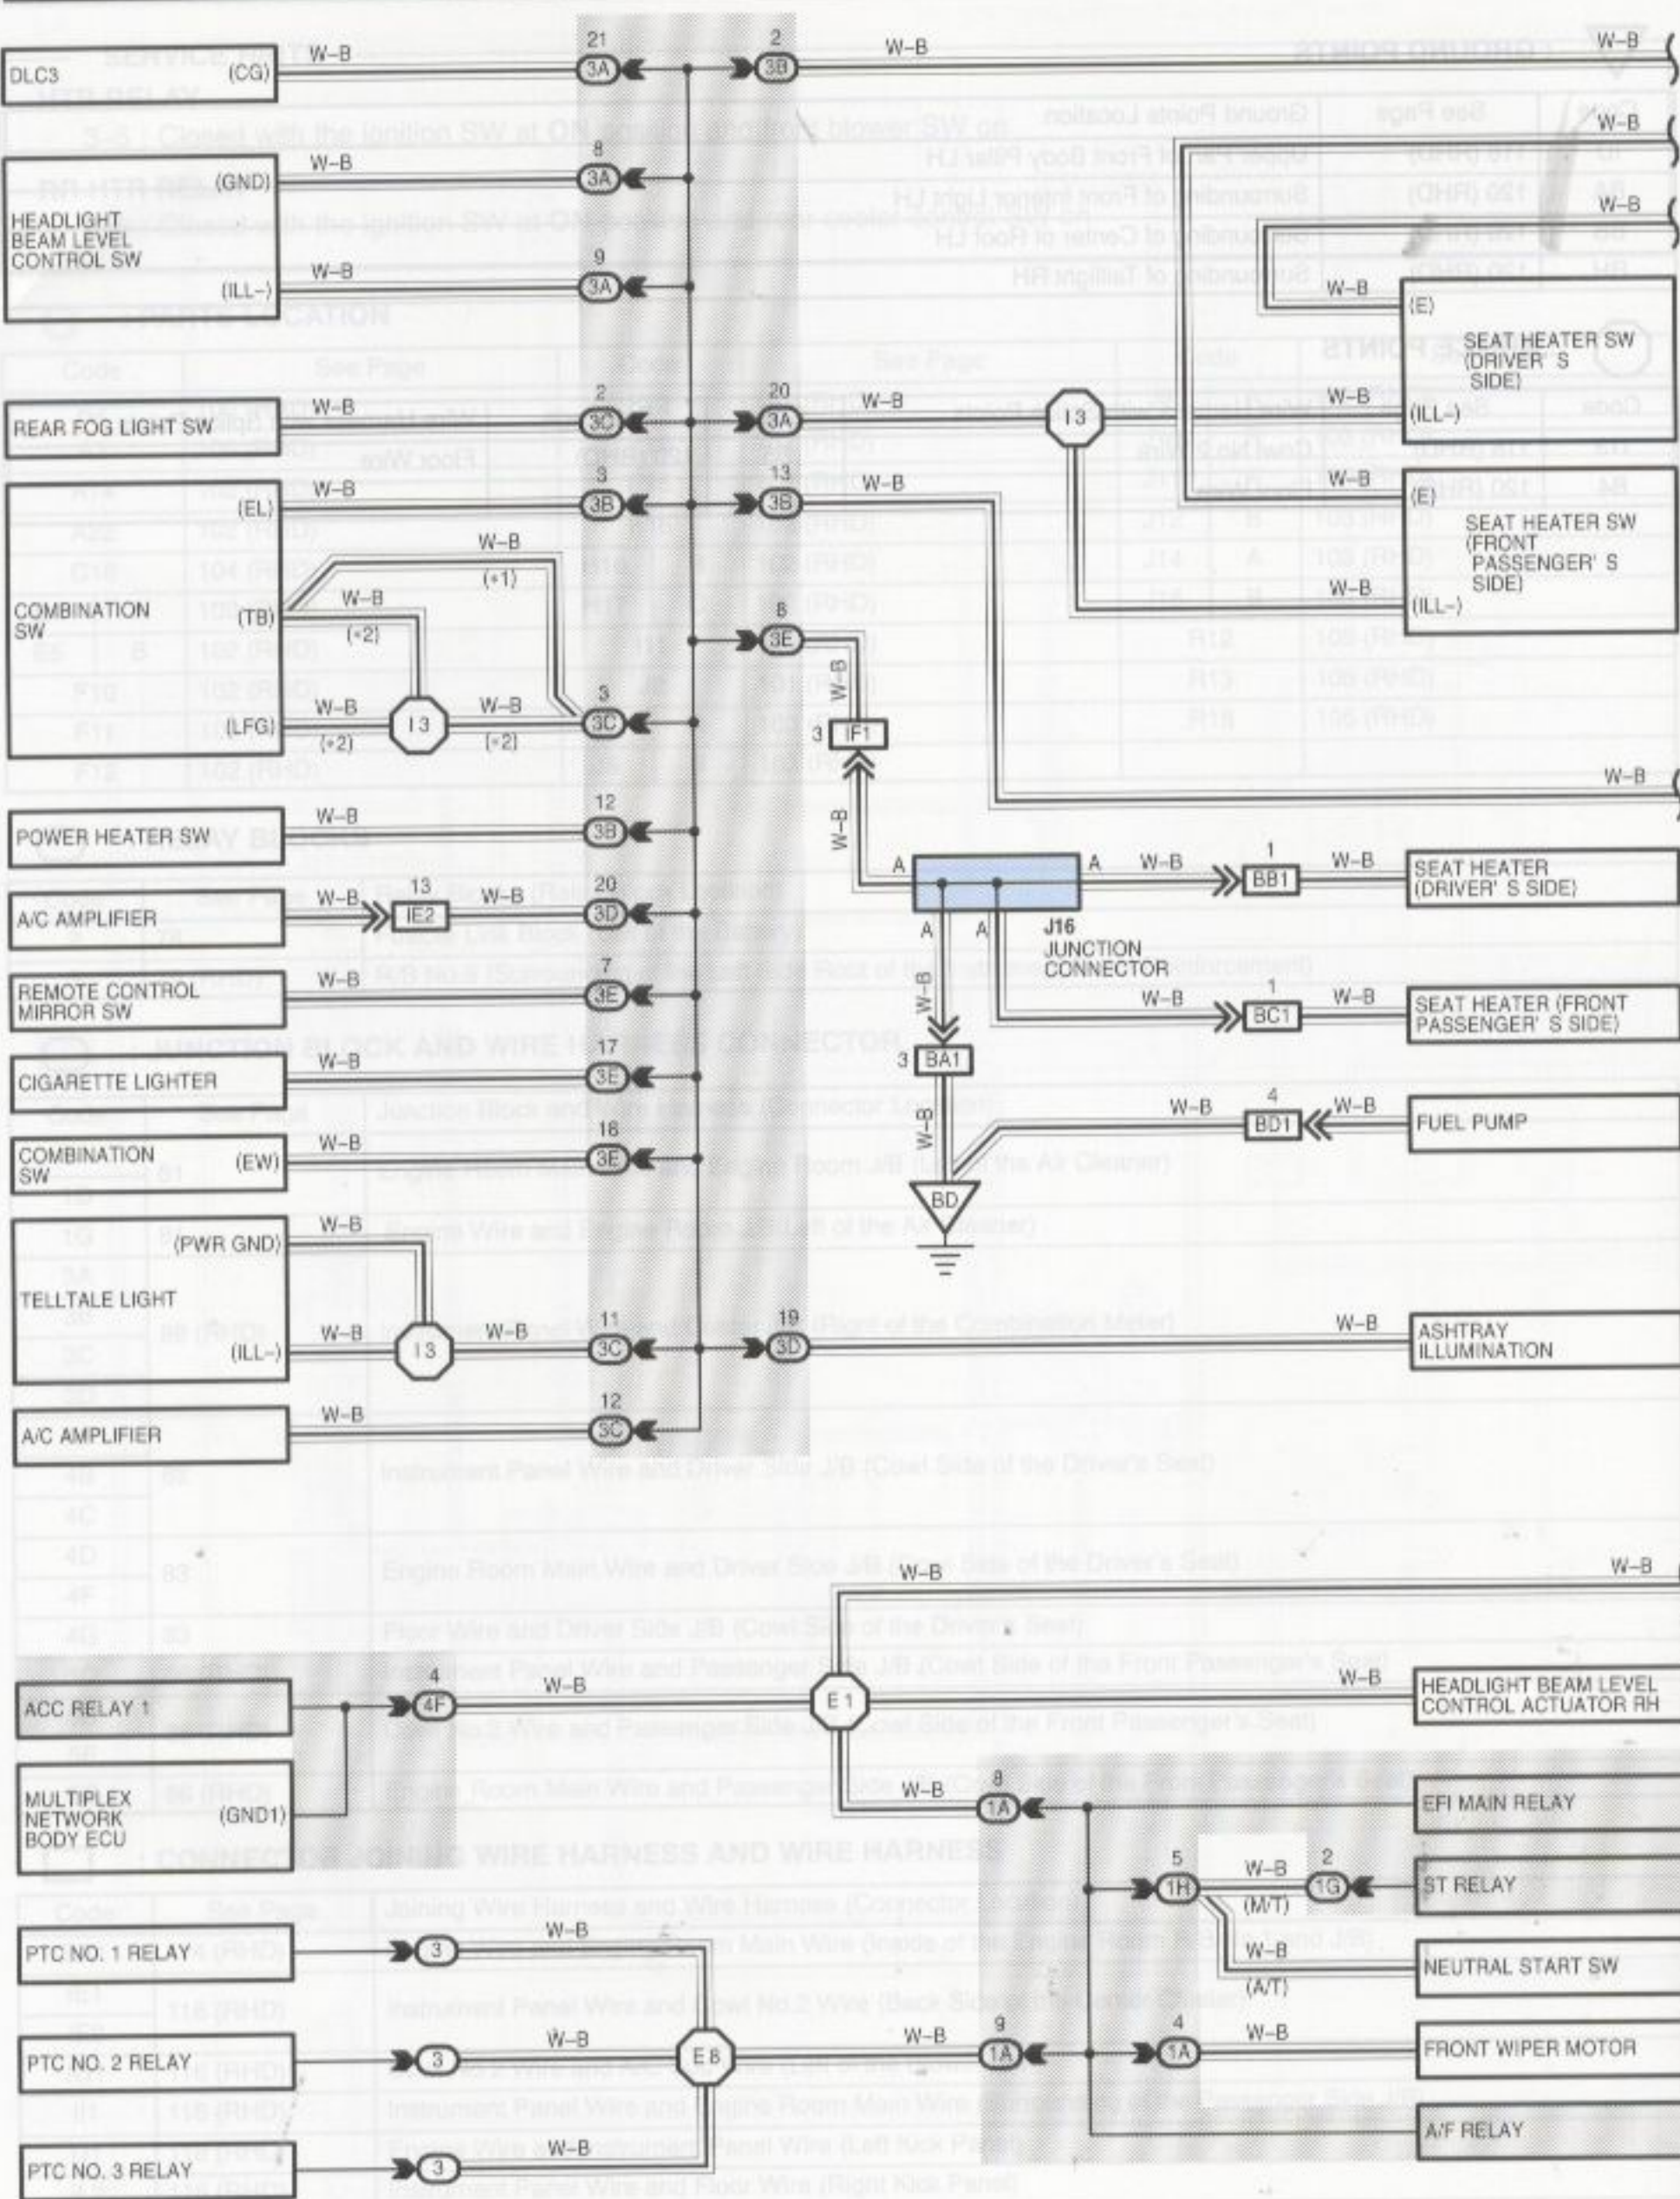

I GROUND POINT (LHD)

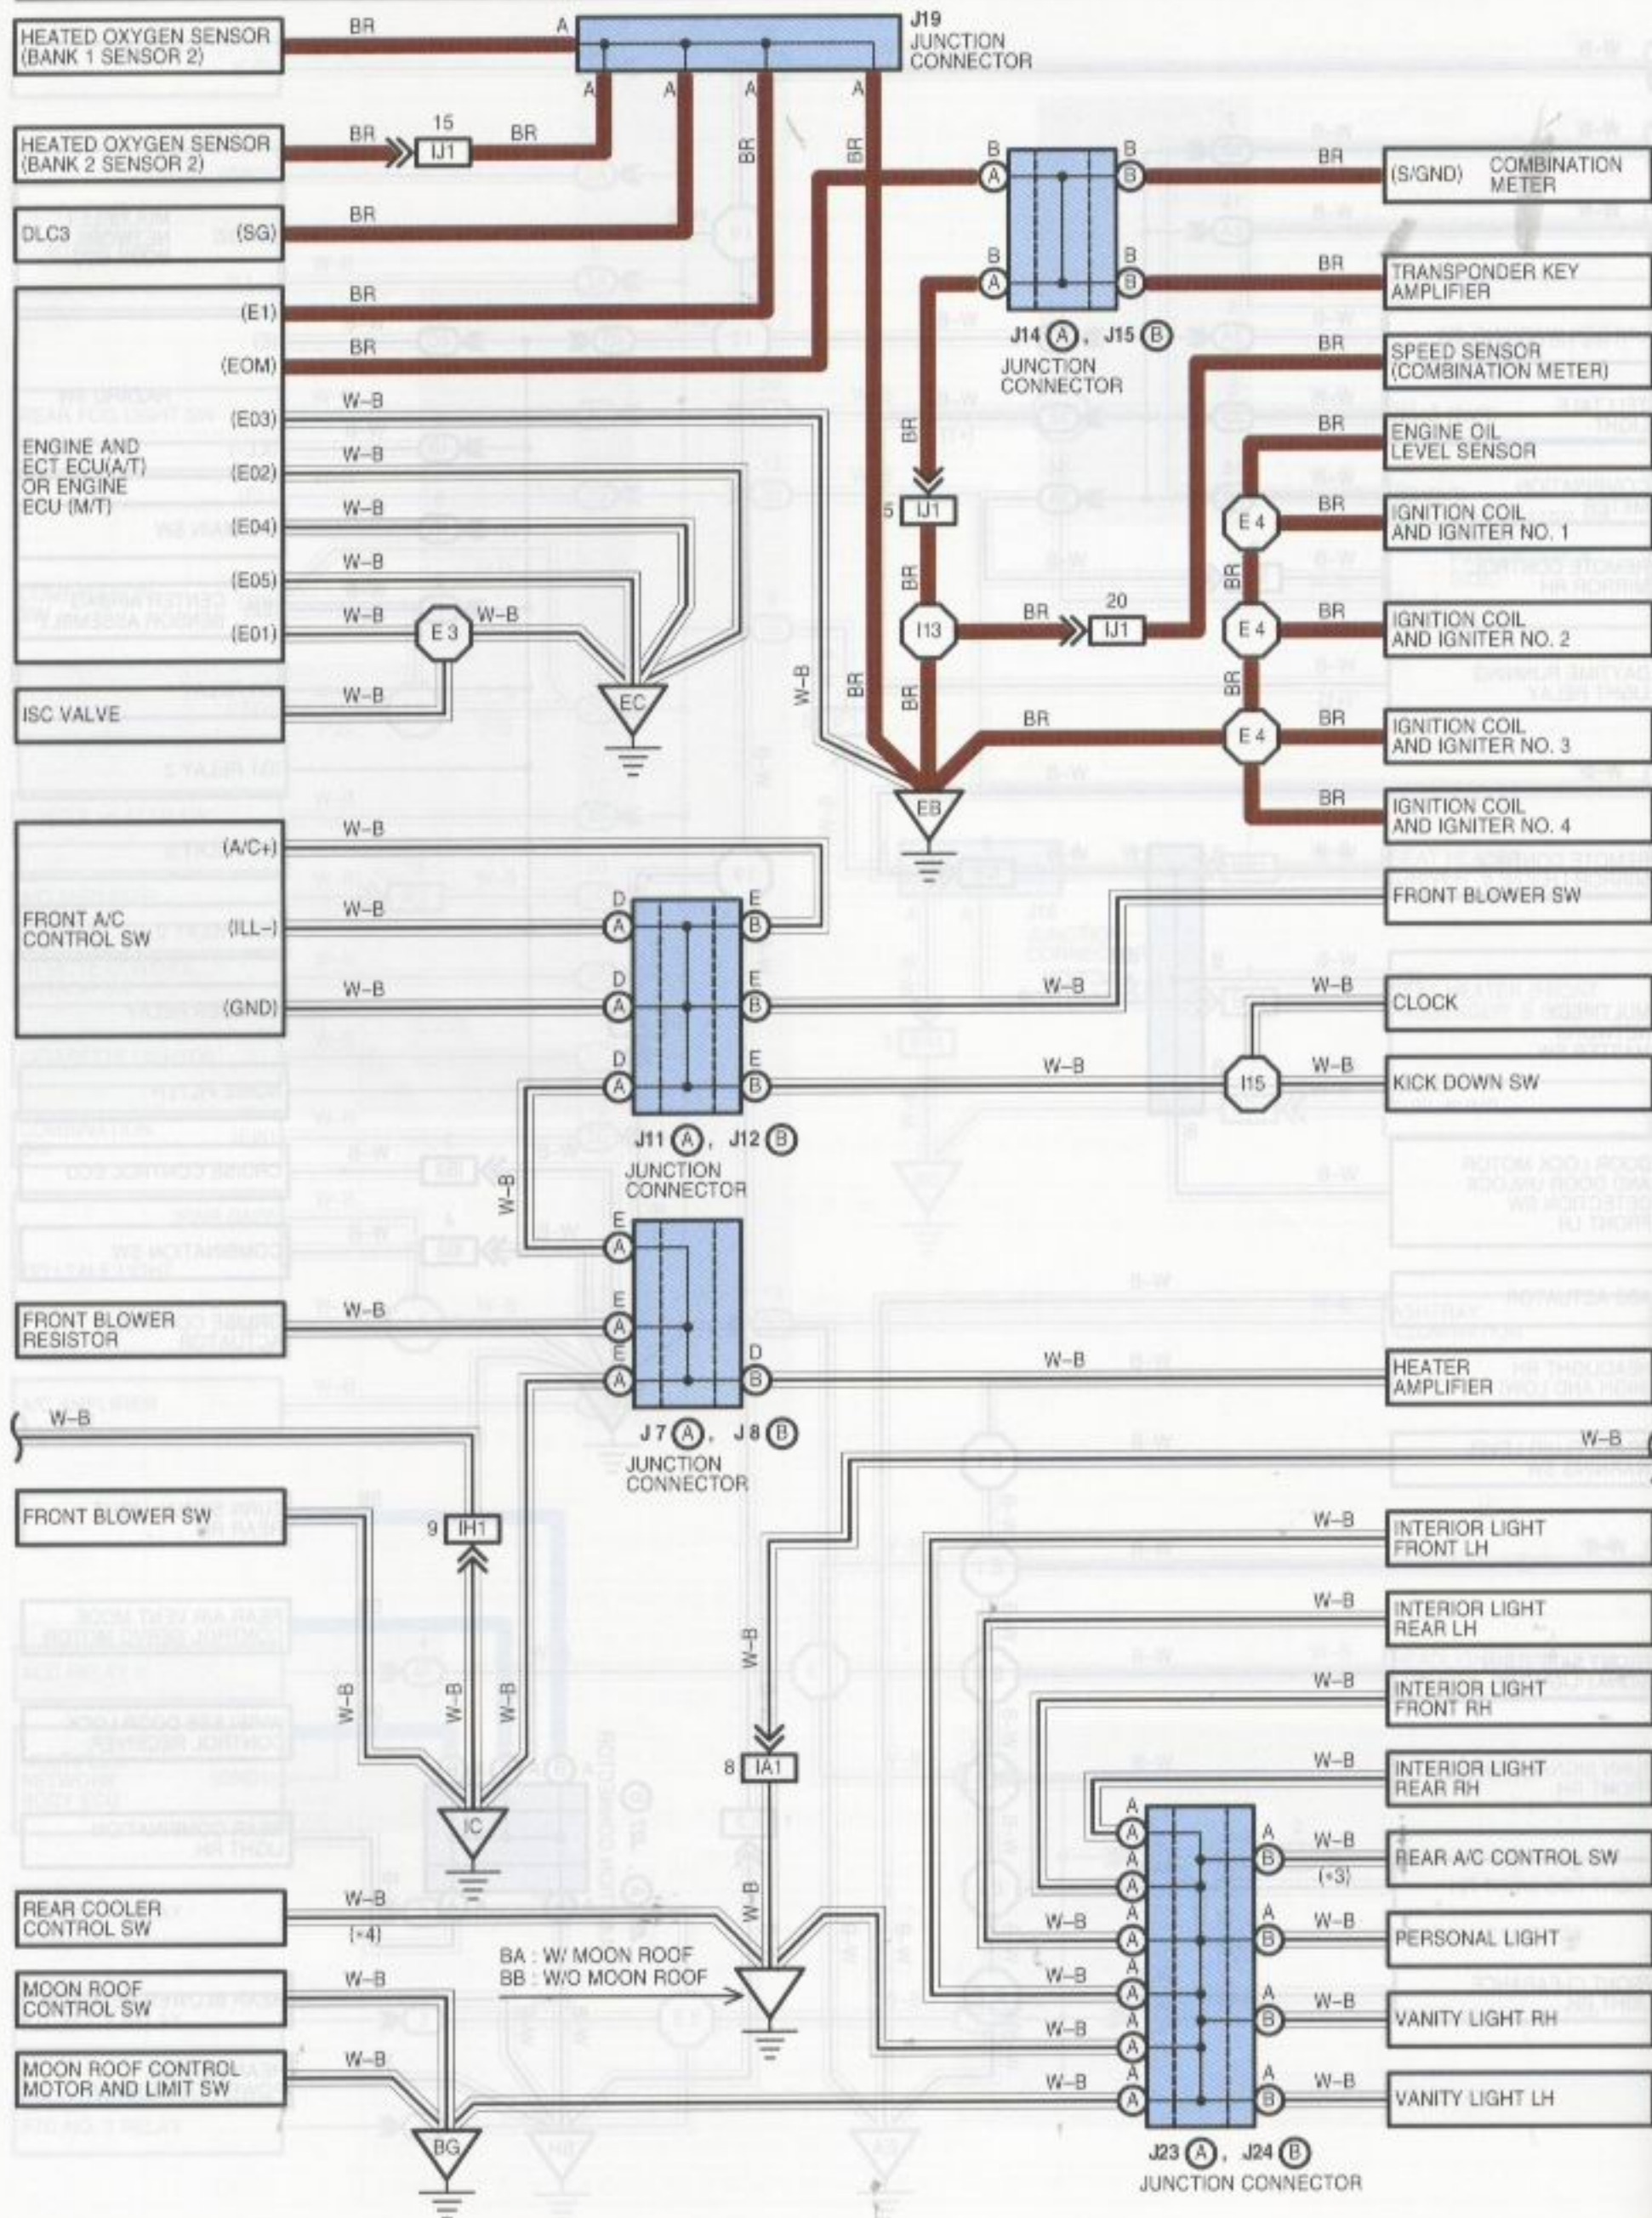

- * 3 : COLD AREA SPEC.
- * 4 : EXCEPT COLD AREA SPEC.
- * 5 : EXCEPT U. K.

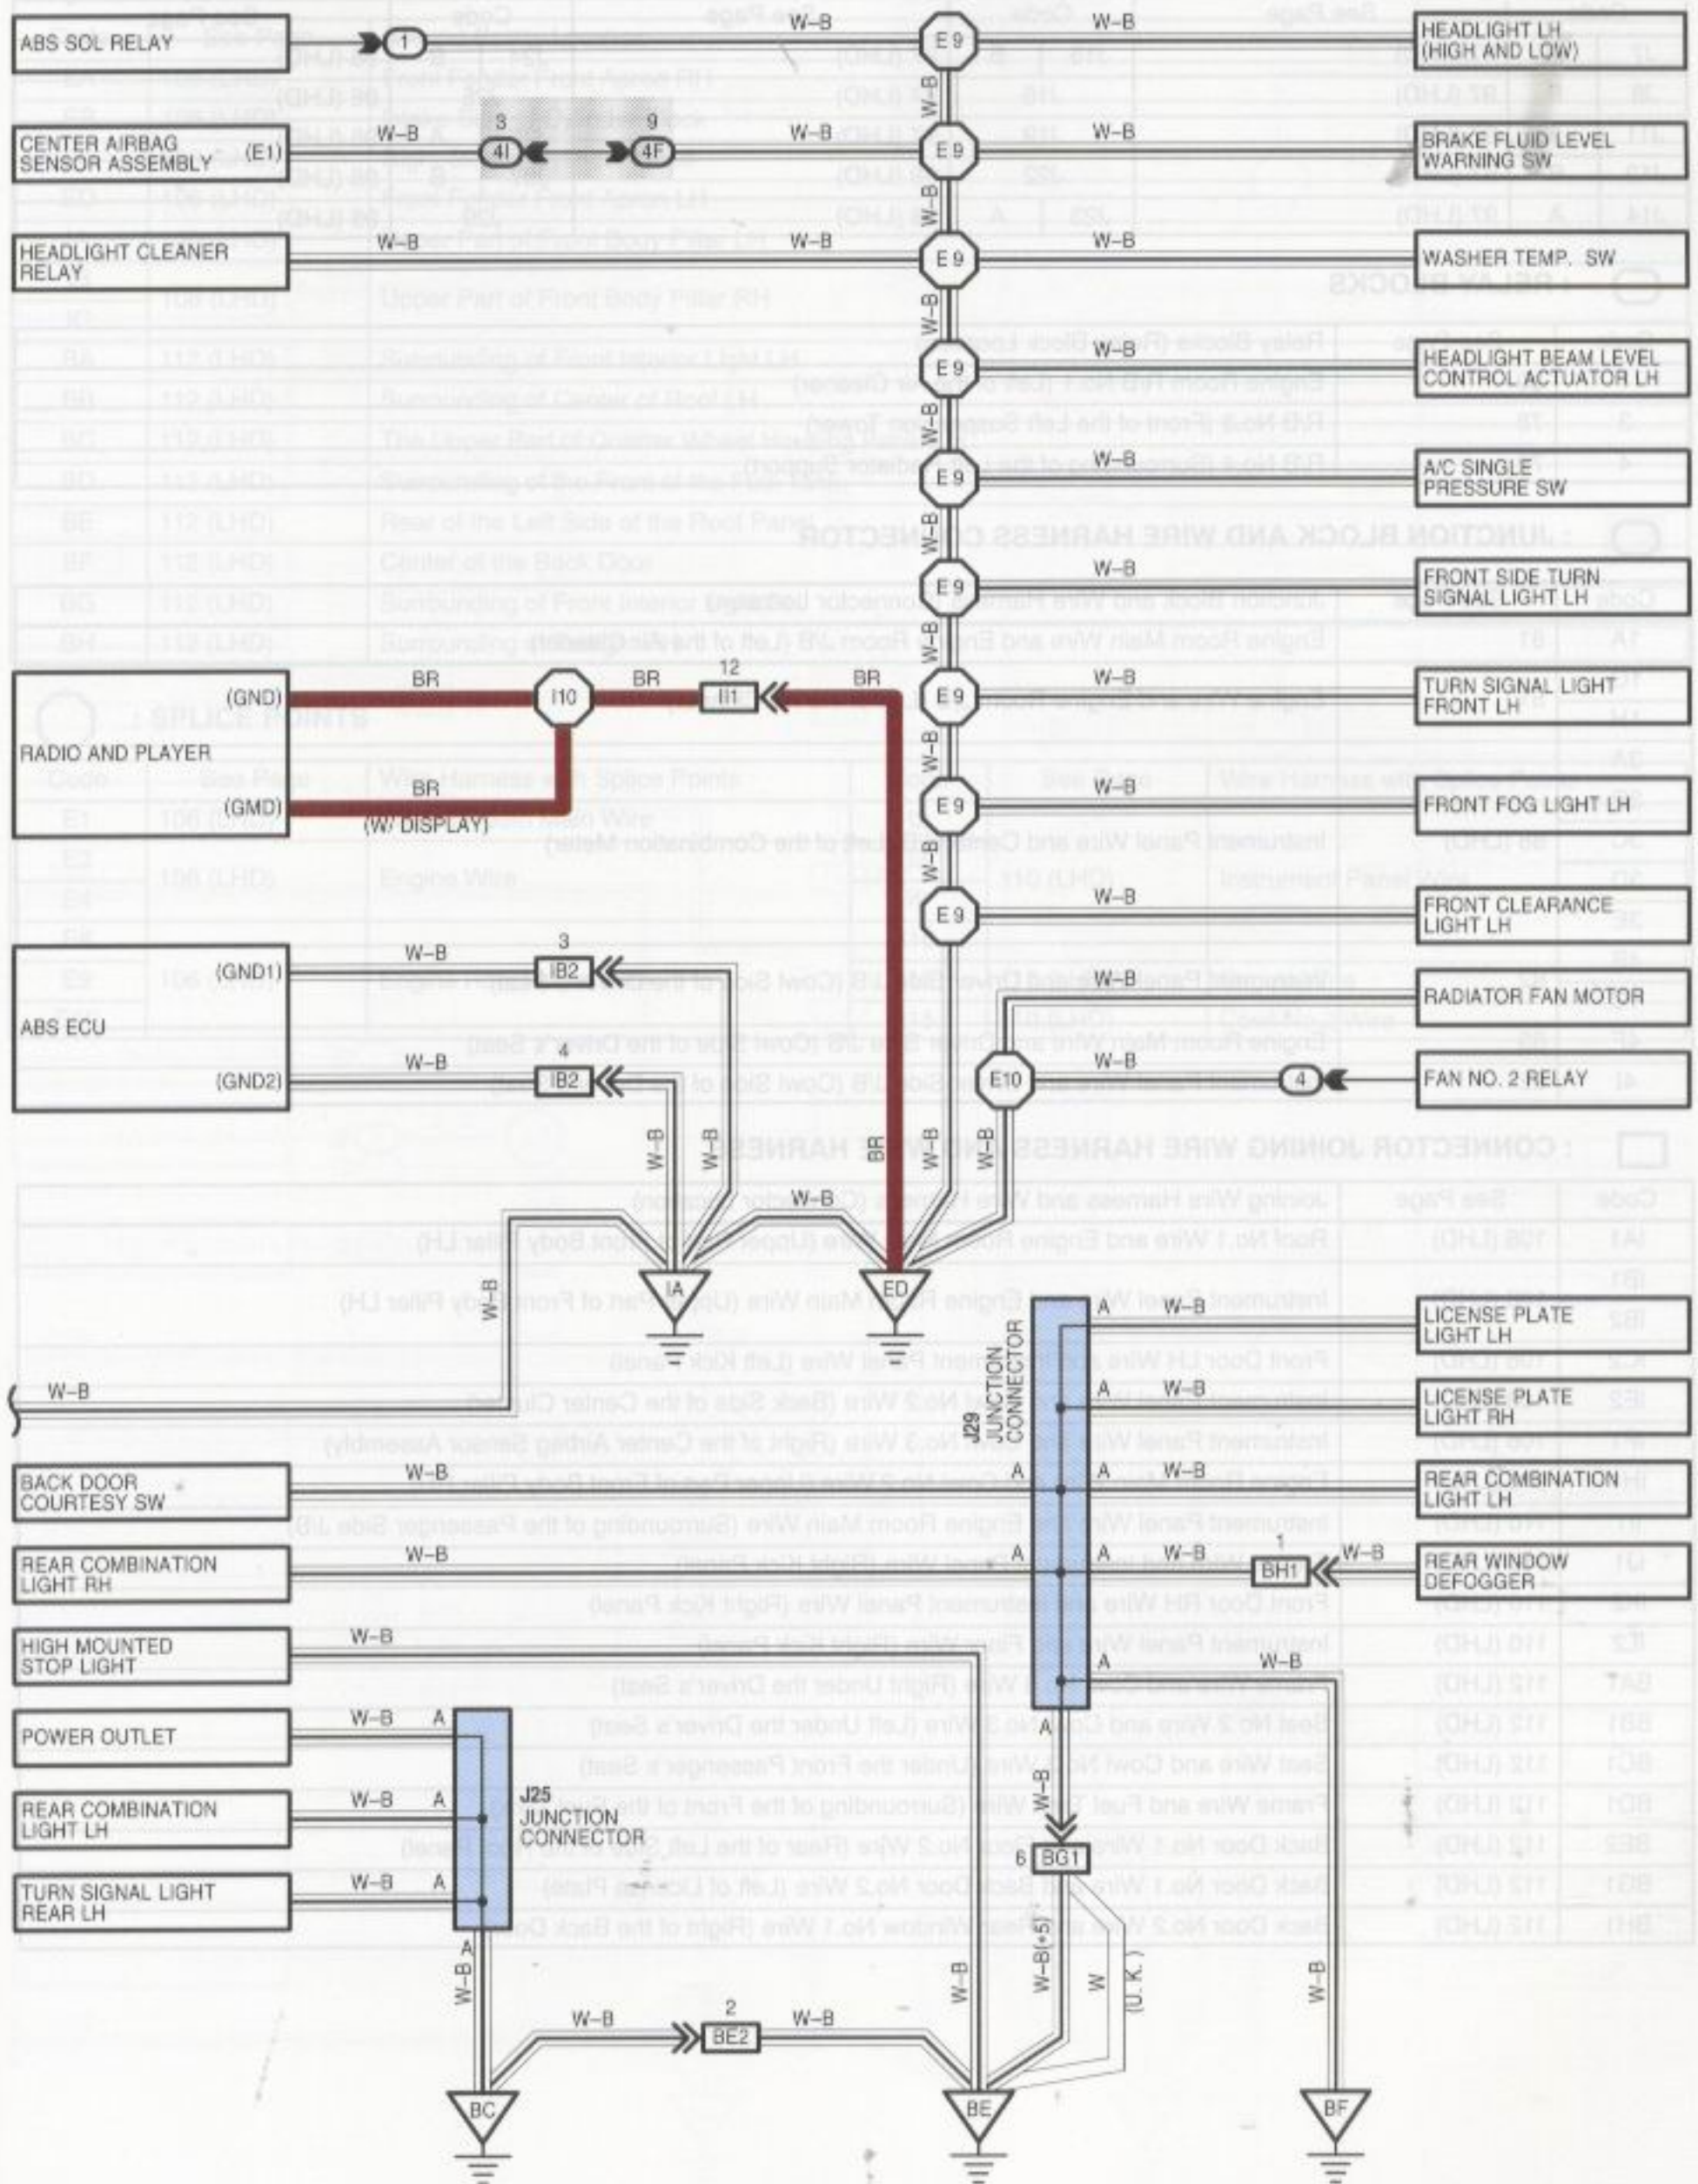

I GROUND POINT (LHD)

☐ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
J7	A	97 (LHD)	J15	B	97 (LHD)	J24	B	98 (LHD)
J8	B	97 (LHD)	J16		97 (LHD)	J25		98 (LHD)
J11	A	97 (LHD)	J19		97 (LHD)	J26	A	98 (LHD)
J12	B	97 (LHD)	J22		98 (LHD)	J27	B	98 (LHD)
J14	A	97 (LHD)	J23	A	98 (LHD)	J29		98 (LHD)

☐ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	80	Engine Room R/B No.1 (Left of the Air Cleaner)
3	78	R/B No.3 (Front of the Left Suspension Tower)
4	79	R/B No.4 (Surrounding of the Left Radiator Support)

☐ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	81	Engine Room Main Wire and Engine Room J/B (Left of the Air Cleaner)
1G	81	Engine Wire and Engine Room J/B (Left of the Air Cleaner)
1H		
3A		
3B	88 (LHD)	Instrument Panel Wire and Center J/B (Left of the Combination Meter)
3C		
3D		
3E		
4B	82	Instrument Panel Wire and Driver Side J/B (Cowl Side of the Driver's Seat)
4C		
4F	83	Engine Room Main Wire and Driver Side J/B (Cowl Side of the Driver's Seat)
4I	82	Instrument Panel Wire and Driver Side J/B (Cowl Side of the Driver's Seat)

☐ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	108 (LHD)	Roof No.1 Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
IB1	108 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
IB2		
IC2	108 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2	108 (LHD)	Instrument Panel Wire and Cowl No.2 Wire (Back Side of the Center Cluster)
IF1	108 (LHD)	Instrument Panel Wire and Cowl No.3 Wire (Right of the Center Airbag Sensor Assembly)
IH1	110 (LHD)	Engine Room Main Wire and Cowl No.2 Wire (Upper Part of Front Body Pillar RH)
II1	110 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Surrounding of the Passenger Side J/B)
IJ1	110 (LHD)	Engine Wire and Instrument Panel Wire (Right Kick Panel)
IK2	110 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2	110 (LHD)	Instrument Panel Wire and Floor Wire (Right Kick Panel)
BA1	112 (LHD)	Frame Wire and Cowl No.3 Wire (Right Under the Driver's Seat)
BB1	112 (LHD)	Seat No.2 Wire and Cowl No.3 Wire (Left Under the Driver's Seat)
BC1	112 (LHD)	Seat Wire and Cowl No.3 Wire (Under the Front Passenger's Seat)
BD1	112 (LHD)	Frame Wire and Fuel Tank Wire (Surrounding of the Front of the Fuel Tank)
BE2	112 (LHD)	Back Door No.1 Wire and Floor No.2 Wire (Rear of the Left Side of the Roof Panel)
BG1	112 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Left of License Plate)
BH1	112 (LHD)	Back Door No.2 Wire and Rear Window No.1 Wire (Right of the Back Door)



: GROUND POINTS


Code	See Page	Ground Points Location
EA	106 (LHD)	Front Fender Front Apron RH
EB	106 (LHD)	Intake Side of Cylinder Block
EC	106 (LHD)	Right Side of Cylinder Head
ED	106 (LHD)	Front Fender Front Apron LH
IA	108 (LHD)	Upper Part of Front Body Pillar LH
IB	108 (LHD)	Upper Part of Front Body Pillar RH
IC		
BA	112 (LHD)	Surrounding of Front Interior Light LH
BB	112 (LHD)	Surrounding of Center of Roof LH
BC	112 (LHD)	The Upper Part of Quarter Wheel Housing Panel LH
BD	112 (LHD)	Surrounding of the Front of the Fuel Tank
BE	112 (LHD)	Rear of the Left Side of the Roof Panel
BF	112 (LHD)	Center of the Back Door
BG	112 (LHD)	Surrounding of Front Interior Light RH
BH	112 (LHD)	Surrounding of Taillight RH




: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	106 (LHD)	Engine Room Main Wire	I2	110 (LHD)	Instrument Panel Wire
E3	106 (LHD)	Engine Wire	I3		
E4			I9		
E8	106 (LHD)	Engine Room Main Wire	I10	110 (LHD)	Engine Wire
E9			I13		
E10			I15		

I GROUND POINT (RHD)

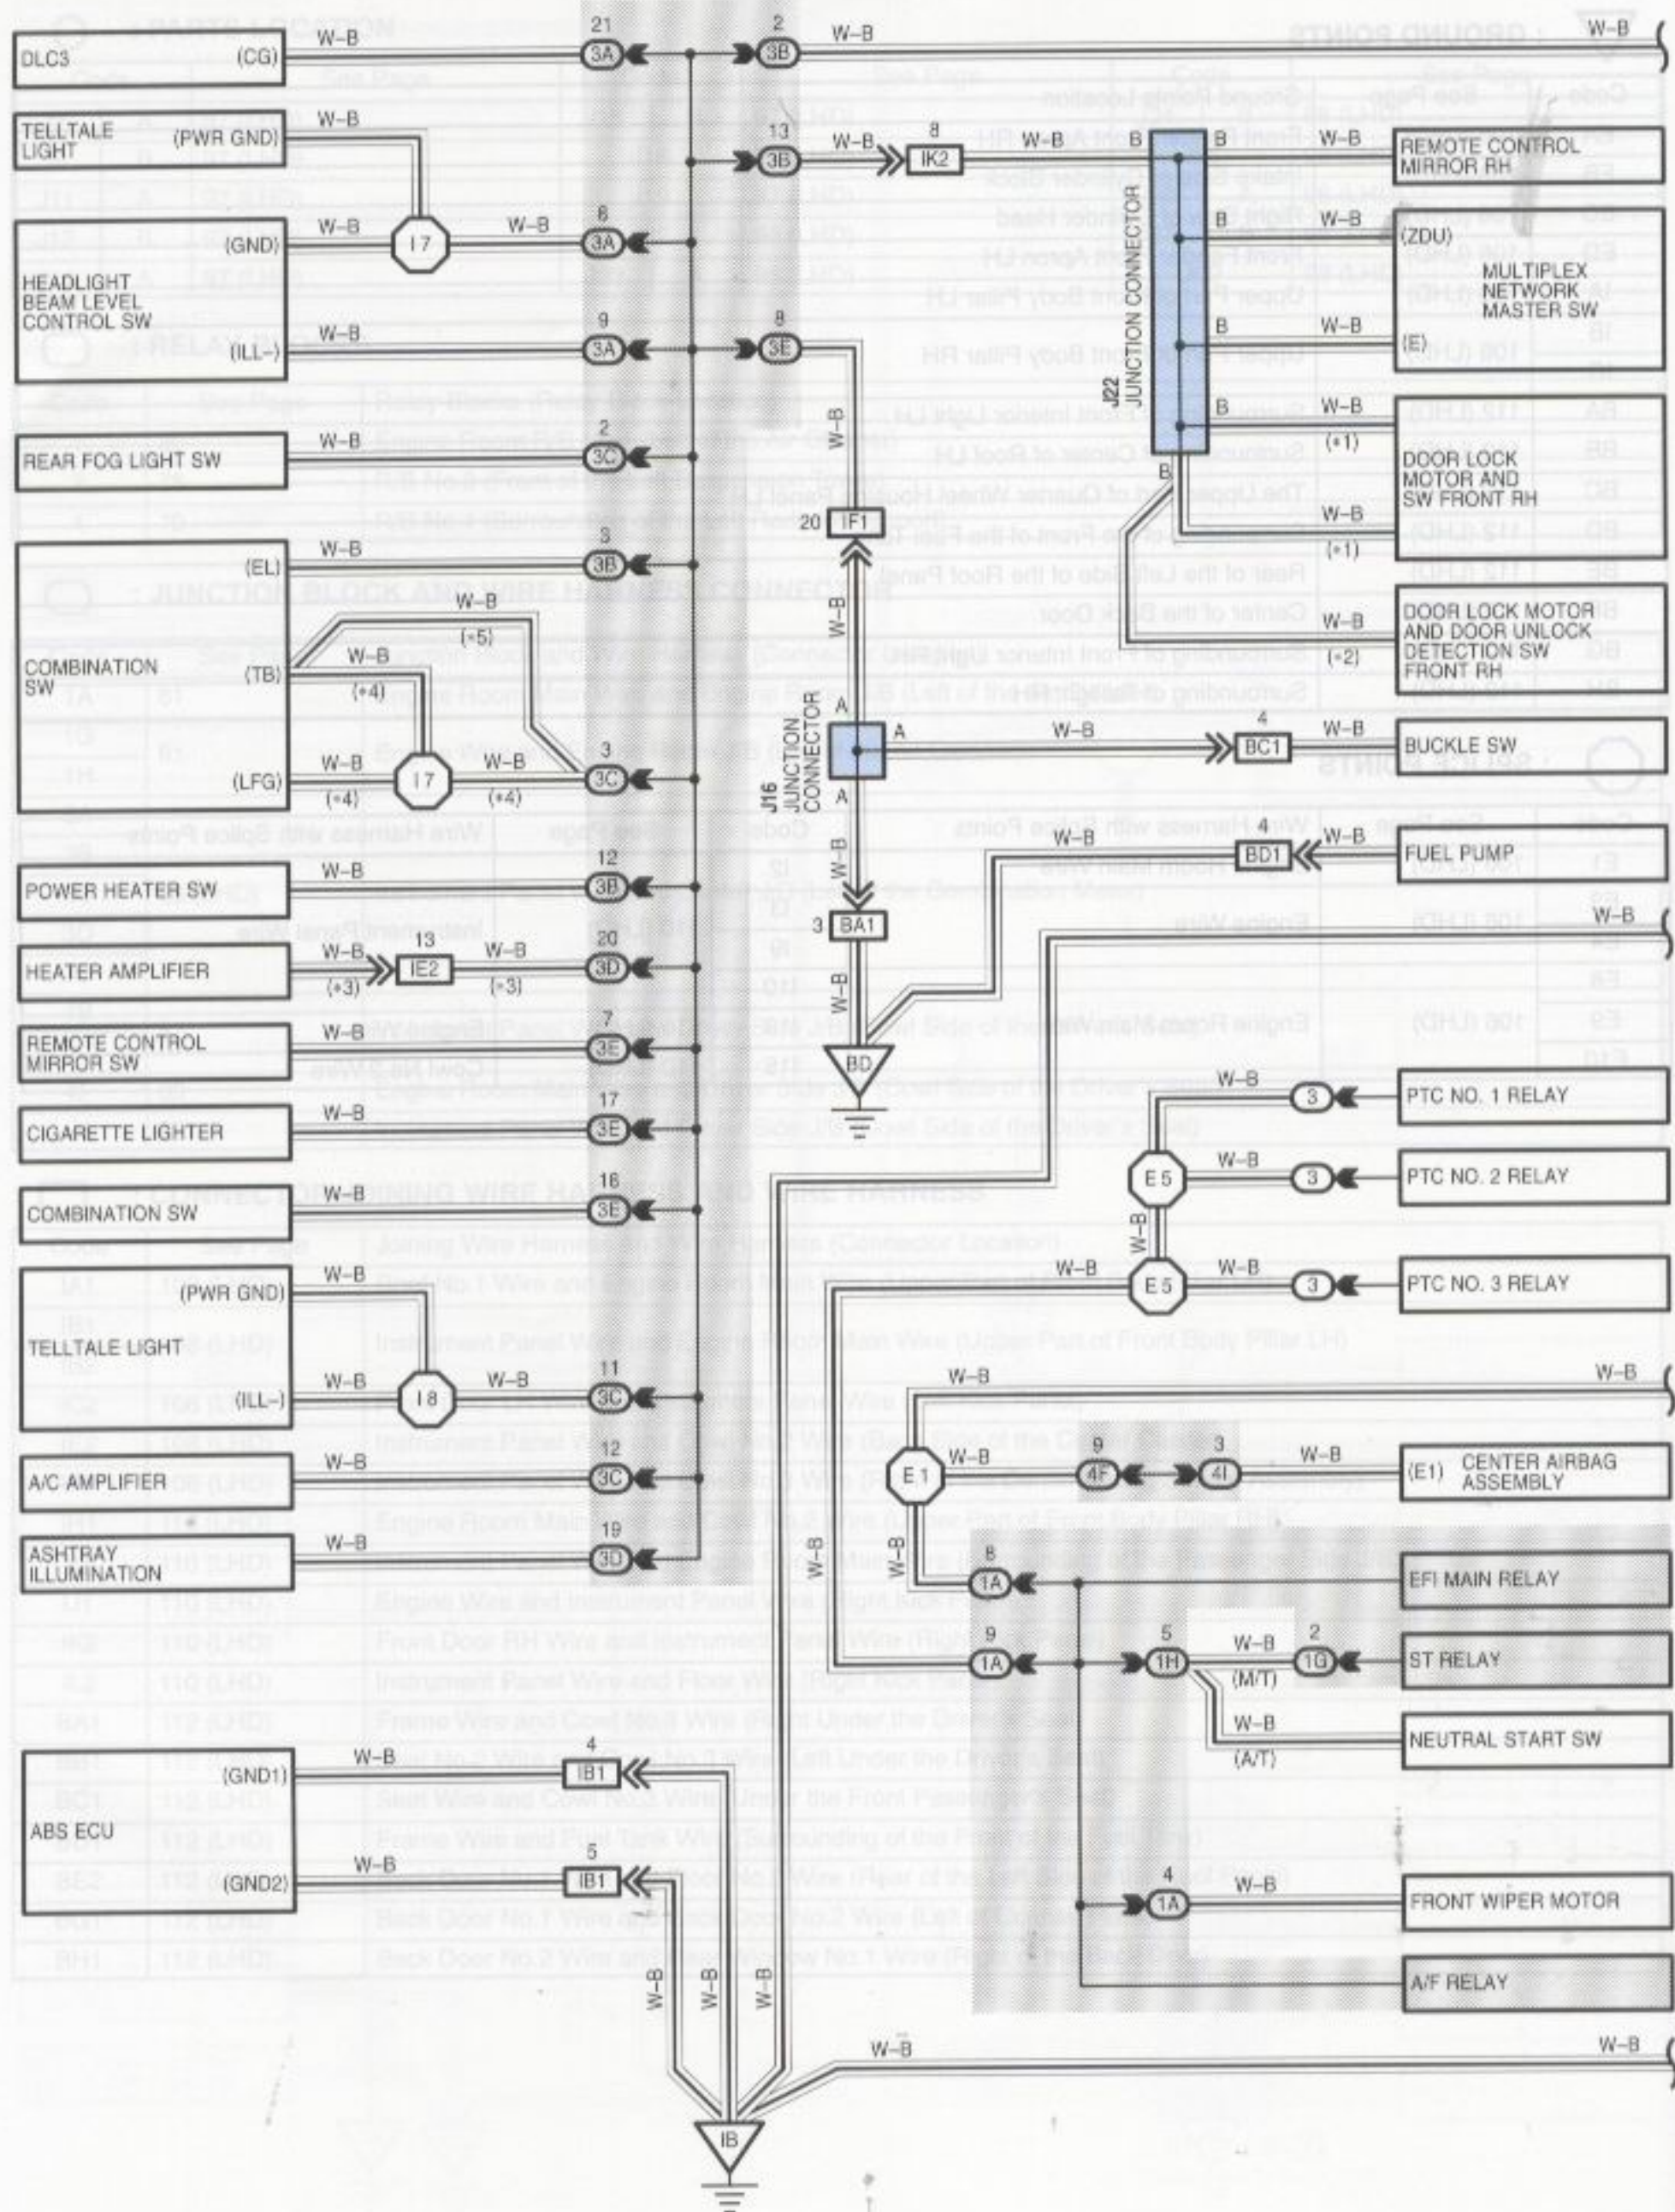

I GROUND POINT (RHD)

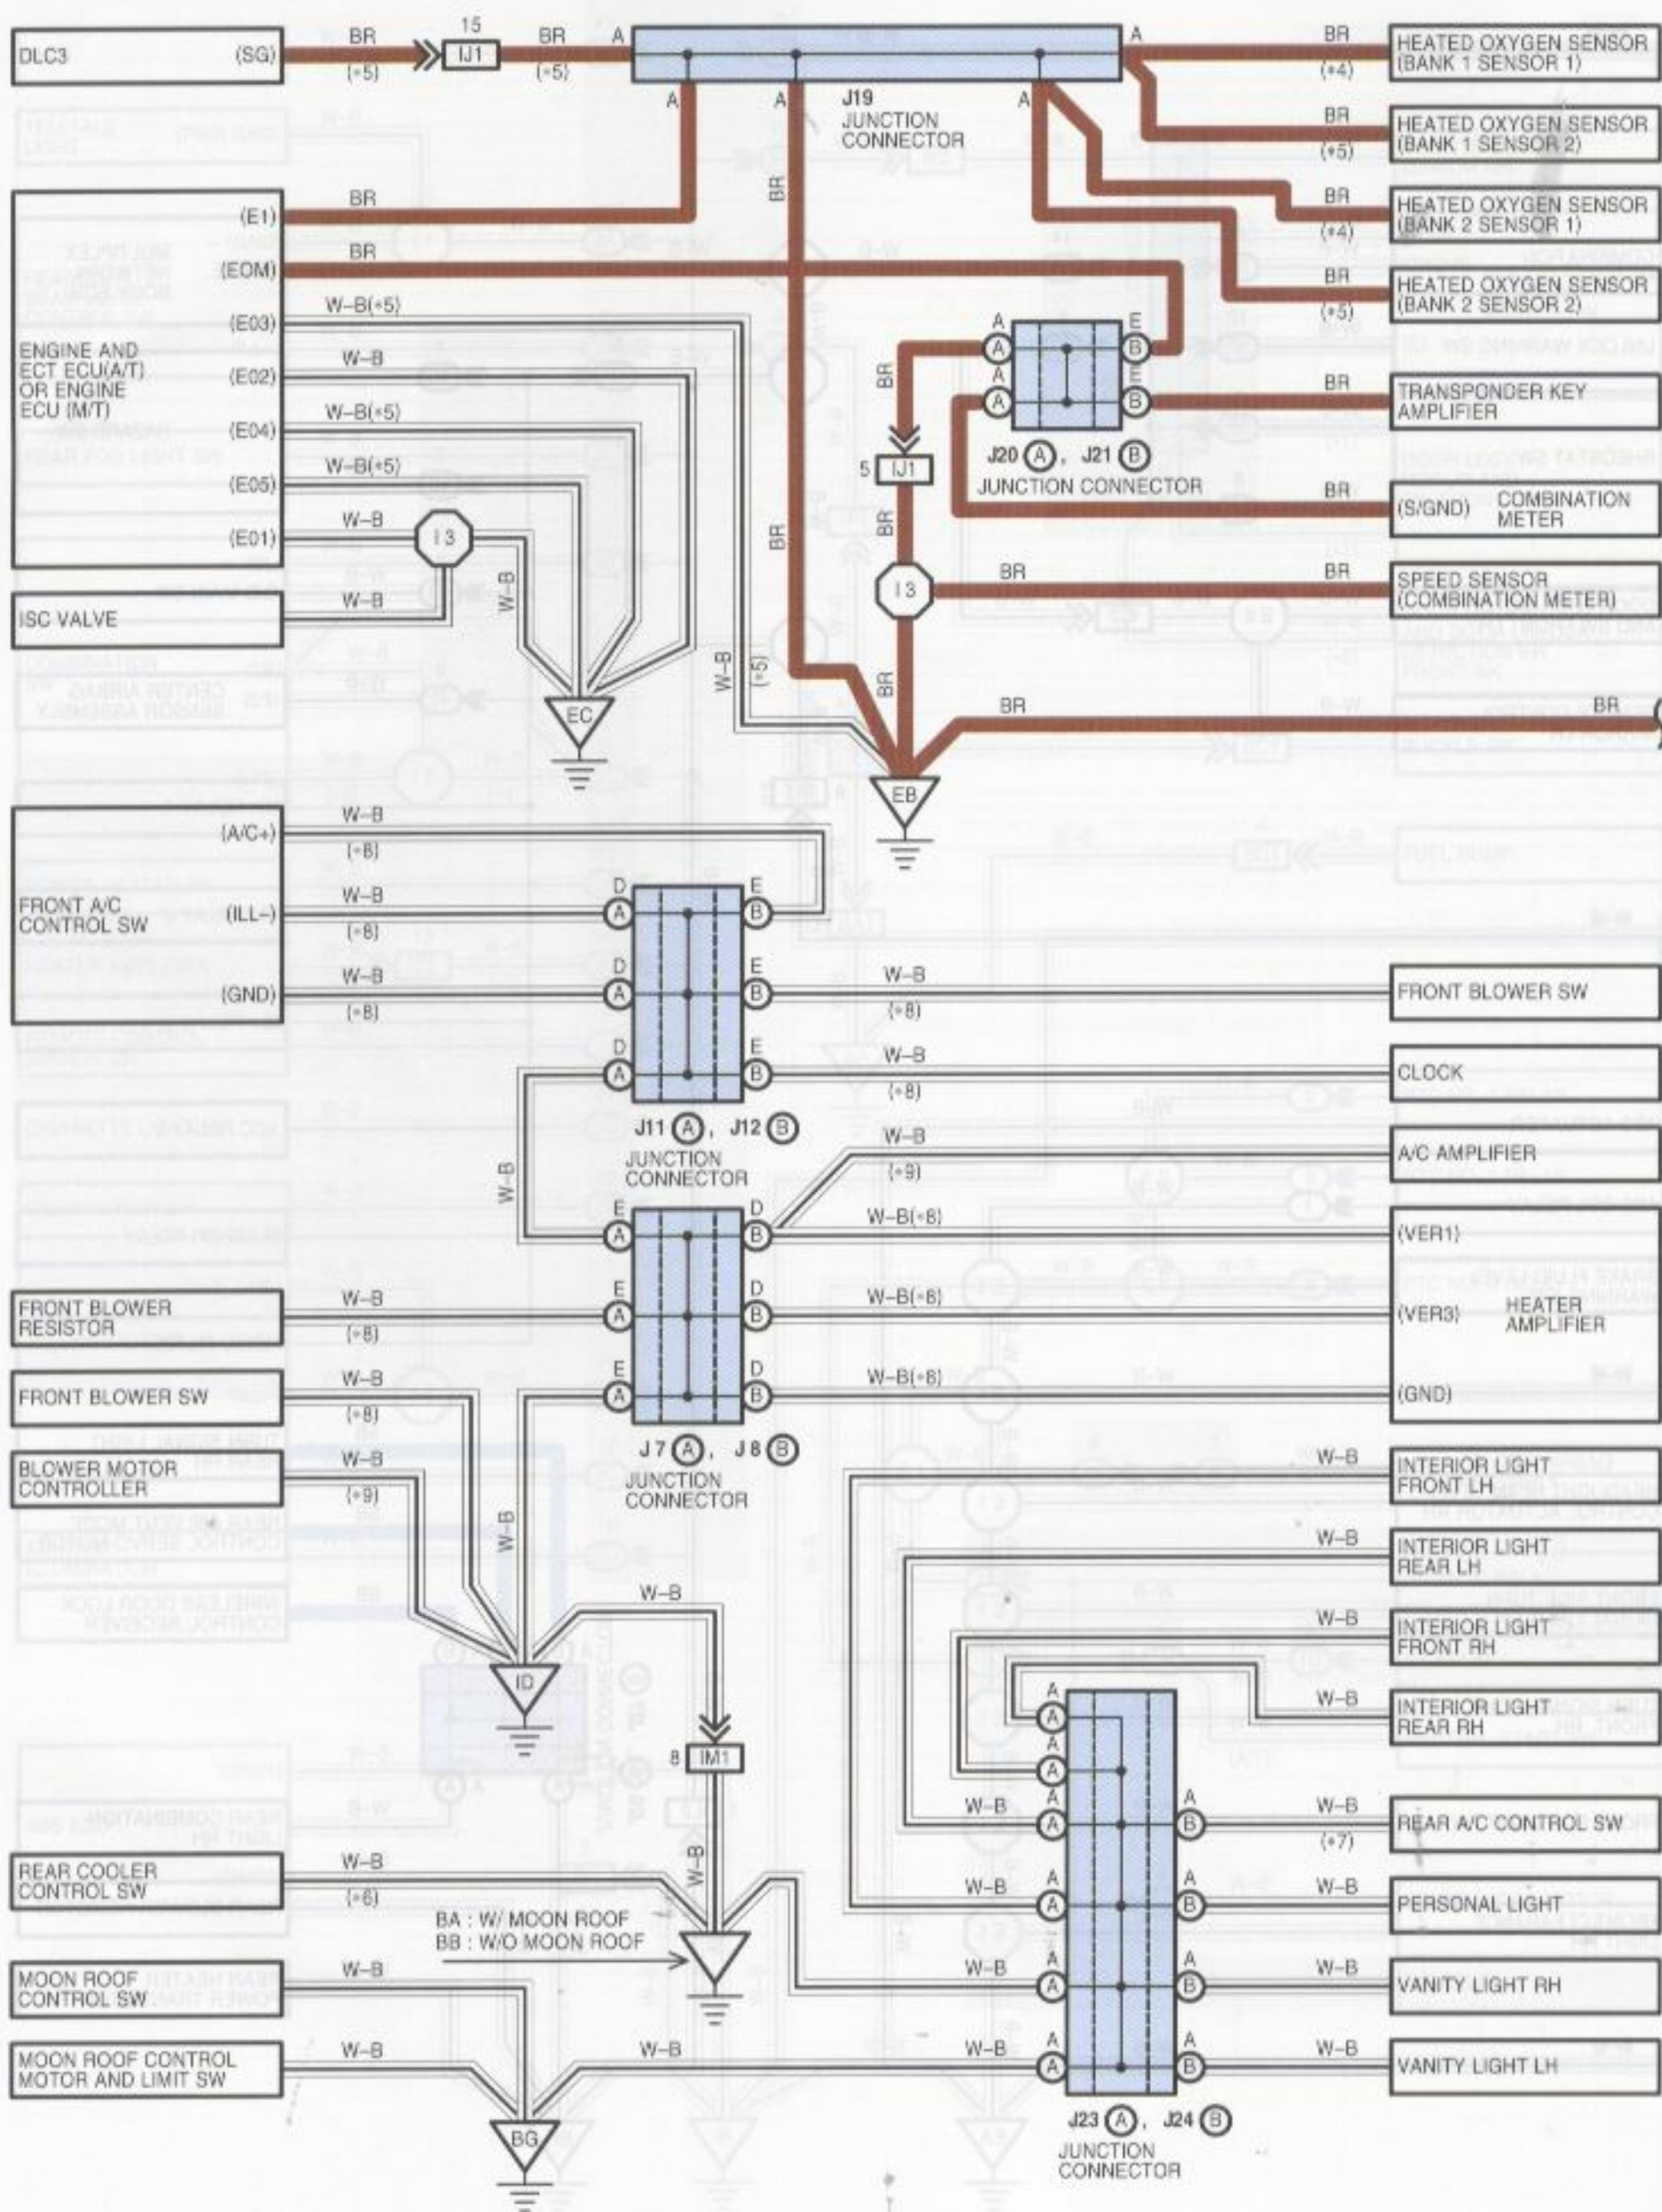


* 4 : AUSTRALIA
* 5 : EXCEPT AUSTRALIA

* 6 : EXCEPT COLD AREA SPEC.
* 7 : COLD AREA SPEC.

* 8 : MANUAL A/C
* 9 : AUTOMATIC A/C

* 10 : EXCEPT U. K.

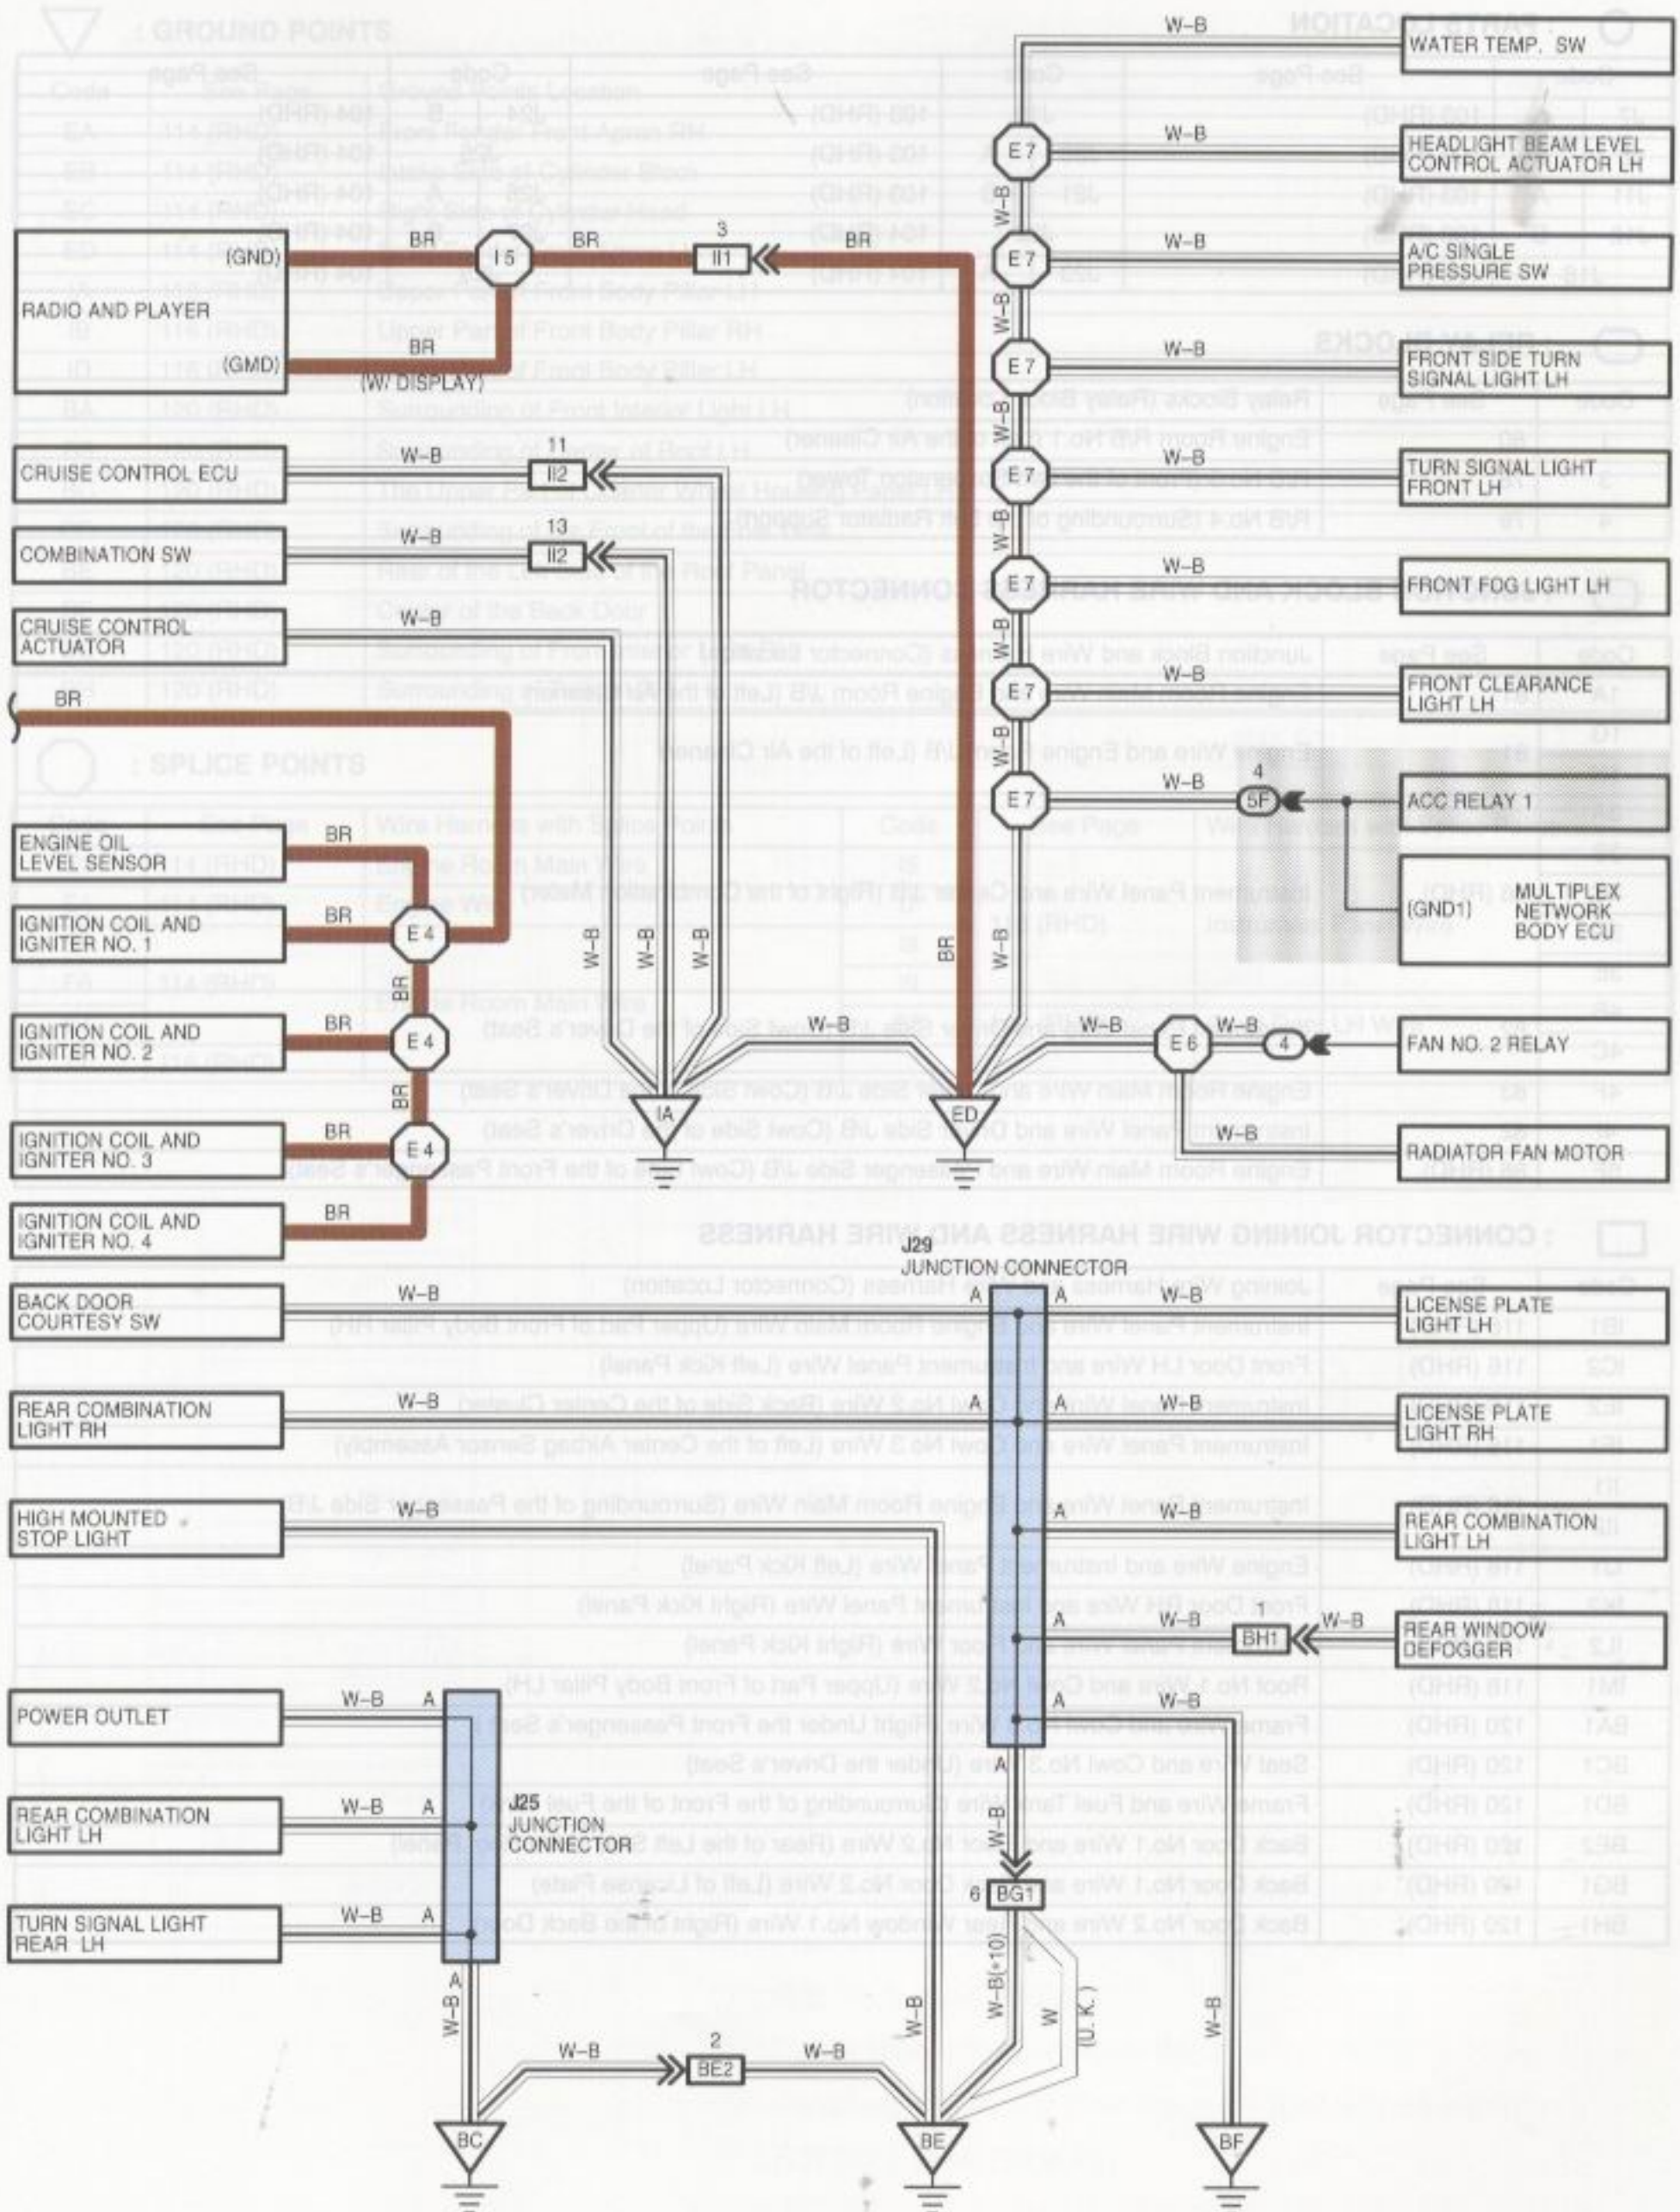

I GROUND POINT (RHD)

☐ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
J7	A	103 (RHD)	J19		103 (RHD)	J24	B	104 (RHD)
J8	B	103 (RHD)	J20	A	103 (RHD)	J25		104 (RHD)
J11	A	103 (RHD)	J21	B	103 (RHD)	J26	A	104 (RHD)
J12	B	103 (RHD)	J22		104 (RHD)	J27	B	104 (RHD)
J16		103 (RHD)	J23	A	104 (RHD)	J29		104 (RHD)

☐ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	80	Engine Room R/B No.1 (Left of the Air Cleaner)
3	78	R/B No.3 (Front of the Left Suspension Tower)
4	79	R/B No.4 (Surrounding of the Left Radiator Support)

☐ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	81	Engine Room Main Wire and Engine Room J/B (Left of the Air Cleaner)
1G	81	Engine Wire and Engine Room J/B (Left of the Air Cleaner)
1H		
3A		
3B		
3C	88 (RHD)	Instrument Panel Wire and Center J/B (Right of the Combination Meter)
3D		
3E		
4B	82	Instrument Panel Wire and Driver Side J/B (Cowl Side of the Driver's Seat)
4C		
4F	83	Engine Room Main Wire and Driver Side J/B (Cowl Side of the Driver's Seat)
4I	82	Instrument Panel Wire and Driver Side J/B (Cowl Side of the Driver's Seat)
5F	86 (RHD)	Engine Room Main Wire and Passenger Side J/B (Cowl Side of the Front Passenger's Seat)

☐ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	116 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)
IC2	116 (RHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2	116 (RHD)	Instrument Panel Wire and Cowl No.2 Wire (Back Side of the Center Cluster)
IF1	116 (RHD)	Instrument Panel Wire and Cowl No.3 Wire (Left of the Center Airbag Sensor Assembly)
II1	118 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Surrounding of the Passenger Side J/B)
II2		
IJ1	118 (RHD)	Engine Wire and Instrument Panel Wire (Left Kick Panel)
IK2	118 (RHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2	118 (RHD)	Instrument Panel Wire and Floor Wire (Right Kick Panel)
IM1	118 (RHD)	Roof No.1 Wire and Cowl No.2 Wire (Upper Part of Front Body Pillar LH)
BA1	120 (RHD)	Frame Wire and Cowl No.3 Wire (Right Under the Front Passenger's Seat)
BC1	120 (RHD)	Seat Wire and Cowl No.3 Wire (Under the Driver's Seat)
BD1	120 (RHD)	Frame Wire and Fuel Tank Wire (Surrounding of the Front of the Fuel Tank)
BE2	120 (RHD)	Back Door No.1 Wire and Floor No.2 Wire (Rear of the Left Side of the Roof Panel)
BG1	120 (RHD)	Back Door No.1 Wire and Back Door No.2 Wire (Left of License Plate)
BH1	120 (RHD)	Back Door No.2 Wire and Rear Window No.1 Wire (Right of the Back Door)



: GROUND POINTS

Code	See Page	Ground Points Location
EA	114 (RHD)	Front Fender Front Apron RH
EB	114 (RHD)	Intake Side of Cylinder Block
EC	114 (RHD)	Right Side of Cylinder Head
ED	114 (RHD)	Front Fender Front Apron LH
IA	116 (RHD)	Upper Part of Front Body Pillar LH
IB	116 (RHD)	Upper Part of Front Body Pillar RH
ID	116 (RHD)	Upper Part of Front Body Pillar LH
BA	120 (RHD)	Surrounding of Front Interior Light LH
BB	120 (RHD)	Surrounding of Center of Roof LH
BC	120 (RHD)	The Upper Part of Quarter Wheel Housing Panel LH
BD	120 (RHD)	Surrounding of the Front of the Fuel Tank
BE	120 (RHD)	Rear of the Left Side of the Roof Panel
BF	120 (RHD)	Center of the Back Door
BG	120 (RHD)	Surrounding of Front Interior Light RH
BH	120 (RHD)	Surrounding of Taillight RH



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	114 (RHD)	Engine Room Main Wire	I5	118 (RHD)	Instrument Panel Wire
E4	114 (RHD)	Engine Wire	I7		
E5	114 (RHD)	Engine Room Main Wire	I8		
E6			I9		
E7			B6	120 (RHD)	Front Door LH Wire
I3	118 (RHD)				

