

## M PART NUMBER OF CONNECTORS

| Code | Part Name                                                | Part Number | Code | Part Name                                             | Part Number |
|------|----------------------------------------------------------|-------------|------|-------------------------------------------------------|-------------|
| A 1  | A/C Condenser Fan Motor                                  | 90980-10928 | C11  | Combination Meter                                     | 90980-11913 |
| A 2  | A/C Magnetic Clutch and Lock Sensor                      | 90980-11016 | C12  | Combination Meter                                     | 90980-11915 |
| A 3  | A/C Triple Pressure SW (A/C Dual and Single Pressure SW) | 90980-10943 | C13  | Combination SW (Except Australia)                     | 90980-11672 |
| A 4  | ABS Actuator                                             | 90980-11413 |      | Combination SW (Australia)                            | 90980-11671 |
| A 5  | ABS Actuator                                             | 90980-10891 | C14  | Combination SW                                        | 90980-11594 |
| A 6  | ABS Speed Sensor Front LH                                | 90980-11003 | C15  | Combination SW                                        | 90980-11986 |
| A 7  | ABS Speed Sensor Front RH                                |             | C16  | Cruise Control Clutch SW                              | 90980-10906 |
| A 8  | Air Flow Meter                                           | 90980-11317 | C17  | Cruise Control ECU                                    | 90980-12094 |
| A 9  | Air Fuel Ratio Sensor (Bank 1 Sensor 1)                  | 90980-11178 | C18  | Condenser (Rear A/C)                                  | 90980-10825 |
| A10  | Air Fuel Ratio Sensor (Bank 2 Sensor 1)                  | 90980-10869 | D 1  | Daytime Running Light Relay                           | 90980-10807 |
| A11  | Alternator                                               | 90980-11964 | D 2  | Diode (A/C No.1)                                      | 90980-11251 |
| A12  | Alternator                                               | 90980-09212 | D 3  | Diode (A/C No.2)                                      | 90980-10962 |
| A13  | Ambient Temp. Sensor                                     | 90980-11070 | D 4  | Diode (Door Courtesy No.1)                            | 90980-11251 |
| A14  | A/C Amplifier                                            | 90980-10819 | D 5  | Diode (Door Courtesy No.2)                            | 90980-10962 |
| A15  | A/C Amplifier                                            | 90980-11877 | D 6  | Diode (Idle-Up)                                       | 90980-11071 |
| A16  | A/C Amplifier                                            | 90980-11973 | D 7  | Diode (Remote Control Mirror)                         | 90980-10962 |
| A17  | A/C Amplifier                                            | 90980-11974 | D 8  | DLC3                                                  | 90980-11665 |
| A18  | A/C Room Temp. Sensor                                    | 90980-11918 | D 9  | Door Courtesy Light Front LH                          | 90980-11148 |
| A19  | A/C Solar Sensor                                         |             | D10  | Door Courtesy Light Front RH                          |             |
| A20  | ABS ECU                                                  | 90980-11424 | D11  | Door Courtesy SW Front LH                             | 90980-10871 |
| A21  | ABS ECU                                                  | 90980-11390 | D12  | Door Courtesy SW Front RH                             |             |
| A22  | Air Inlet Control Servo Motor                            | 90980-11909 | D13  | Door Lock Motor and Door Unlock Detection SW Front LH | 90980-12057 |
| A23  | Airbag Squib (Front Passenger Airbag Assembly)           | 90980-11884 | D14  | Door Lock Motor and Door Unlock Detection SW Front RH |             |
| A24  | Airbag Squib (Steering Wheel Pad)                        |             | D15  | Door Lock Motor and SW Front LH                       | 90980-10799 |
| A25  | Ashtray Illumination                                     | 90980-10355 | D16  | Door Lock Motor and SW Front RH                       |             |
| A26  | Automatic Light Control Sensor                           | 90980-11107 | D17  | Door Lock Motor Front LH                              | 90980-11019 |
| A27  | ABS Speed Sensor Rear LH                                 | 90980-10905 | D18  | Door Lock Motor Front RH                              |             |
| A28  | ABS Speed Sensor Rear RH                                 |             | D19  | Door Speaker Front LH                                 | 90980-10935 |
| B 1  | Back-Up Light SW                                         | 90980-11250 | D20  | Door Speaker Front RH                                 |             |
| B 2  | Brake Fluid Level Warning SW                             | 90980-11207 | E 1  | ECT Solenoid                                          | 90980-11658 |
| B 3  | Blower Motor Controller                                  | 90980-11676 | E 2  | EFI Water Temp. Sensor                                | 90980-10737 |
| B 4  | Back Door Courtesy SW                                    | 90980-10859 | E 3  | Engine Oil Level Sensor                               | 90980-10532 |
| B 5  | Back Door Lock Motor                                     | 90980-11150 | E 4  | Engine and ECT ECU (A/T) or Engine ECU (M/T)          | 90980-11638 |
| B 6  | Buckle SW                                                | 90980-10825 | E 5  | Engine and ECT ECU (A/T) or Engine ECU (M/T)          | 90980-11637 |
| C 1  | Camshaft Position Sensor                                 | 90980-10947 | E 6  | Engine and ECT ECU (A/T) or Engine ECU (M/T)          | 90980-11586 |
| C 2  | Camshaft Timing Oil Control Valve                        | 90980-11162 | E 7  | Engine and ECT ECU (A/T) or Engine ECU (M/T)          | 90980-11476 |
| C 3  | Counter Gear Speed Sensor                                | 90980-11156 | E 8  | Engine and ECT ECU (A/T) or Engine ECU (M/T)          | 90980-11421 |
| C 4  | Crankshaft Position Sensor                               | 90980-10947 | F 1  | Front Airbag Sensor LH                                | 90980-11856 |
| C 5  | Cruise Control Actuator                                  | 90980-12057 | F 2  | Front Airbag Sensor RH                                |             |
| C 6  | Center Airbag Sensor Assembly                            | 90980-11869 |      |                                                       |             |
| C 7  | Center Airbag Sensor Assembly                            | 90980-11872 |      |                                                       |             |
| C 8  | Center Airbag Sensor Assembly                            | 90980-11867 |      |                                                       |             |
| C 9  | Cigarette Lighter                                        | 90980-10760 |      |                                                       |             |
| C10  | Clock                                                    | 90980-10789 |      |                                                       |             |

Note: Not all of the above part numbers of the connector are established for the supply.

Nota: Toutes les références du connecteur ne sont pas définies pour la fourniture.

| Code | Part Name                                | Part Number | Code | Part Name                            | Part Number |
|------|------------------------------------------|-------------|------|--------------------------------------|-------------|
| F 3  | Front Clearance Light LH                 | 90980-11156 | I11  | Ignition SW                          | 90980-11778 |
| F 4  | Front Clearance Light RH                 |             | I12  | Interior Light Front LH              | 90980-10908 |
| F 5  | Front Fog Light LH                       | 90980-11660 | I13  | Interior Light Front RH              | 90980-11107 |
| F 6  | Front Fog Light RH                       |             | I14  | Interior Light Rear LH               | 90980-10908 |
| F 7  | Front Side Turn Signal Light LH          | 90980-11162 | I15  | Interior Light Rear RH               |             |
| F 8  | Front Side Turn Signal Light RH          |             | J 1  | Junction Connector                   | 90980-10891 |
| F 9  | Front Wiper Motor                        | 90980-11599 | J 2  | Junction Connector                   |             |
| F10  | Front A/C Control SW                     | 90980-11469 | J 3  | Junction Connector                   | 90980-11542 |
| F11  | Front Air Mix Control Servo Motor        | 90980-11909 | J 4  | Junction Connector                   | 90980-11398 |
| F12  | Front Air Vent Mode Control Servo Motor  |             | J 5  | Junction Connector                   | 90980-11661 |
| F13  | Front Blower Motor                       | 90980-10385 | J 6  | Junction Connector                   |             |
| F14  | Front Blower Resistor                    | 90980-10976 | J 7  | Junction Connector                   |             |
| F15  | Front Blower SW                          | 90980-10877 | J 8  | Junction Connector                   |             |
| F16  | Front Thermistor                         | 90980-11918 | J 9  | Junction Connector                   |             |
| F17  | Fuel Pump and Sender                     | 90980-11077 | J10  | Junction Connector                   | 90980-10803 |
| H 1  | Headlight Beam Level Control Actuator LH | 90980-11016 | J11  | Junction Connector                   |             |
| H 2  | Headlight Beam Level Control Actuator RH |             | J12  | Junction Connector                   |             |
| H 3  | Headlight Cleaner Motor                  | 90980-11410 | J13  | Junction Connector                   | 90980-11661 |
| H 4  | Headlight Cleaner Relay                  | 90980-10939 | J14  | Junction Connector                   |             |
| H 5  | Headlight LH (High and Low)              | 90980-10428 | J15  | Junction Connector                   |             |
| H 6  | Headlight LH (High)                      | 90980-11659 | J16  | Junction Connector                   | 90980-10803 |
| H 7  | Headlight RH (High and Low)              | 90980-10428 | J17  | Junction Connector                   |             |
| H 8  | Headlight RH (High)                      | 90980-11659 | J18  | Junction Connector                   |             |
| H 9  | Heated Oxygen Sensor (Bank 1 Sensor 1)   | 90980-11028 | J19  | Junction Connector                   | 90980-11915 |
| H10  | Heated Oxygen Sensor (Bank 2 Sensor 1)   | 90980-10869 | J20  | Junction Connector                   |             |
| H11  | Horn (High)                              | 90980-10619 | J21  | Junction Connector                   | 90980-10803 |
| H12  | Horn (Low)                               |             | J22  | Junction Connector                   |             |
| H13  | Hazard SW                                | 90980-10801 | J23  | Junction Connector                   | 90980-11661 |
| H14  | Headlight Beam Level Control SW          | 90980-10996 | J24  | Junction Connector                   |             |
| H15  | Heater Amplifier                         | 90980-11911 | J25  | Junction Connector                   | 90980-10803 |
| H16  | Heater Amplifier                         | 90980-11913 | J26  | Junction Connector                   | 90980-11661 |
| H17  | Heater Amplifier                         | 90980-11915 | J27  | Junction Connector                   | 90980-12090 |
| H18  | High Mounted Stop Light                  | 90980-11159 | J28  | Junction Connector                   | 90980-11542 |
| H19  | Heated Oxygen Sensor (Bank 1 Sensor 2)   | 90980-11028 | J29  | Junction Connector                   |             |
| H20  | Heated Oxygen Sensor (Bank 2 Sensor 2)   |             | K 1  | Knock Sensor                         | 90980-11166 |
| I 1  | Ignition Coil and Igniter No.1           | 90980-11885 | K 2  | Kick Down SW                         | 90980-11156 |
| I 2  | Ignition Coil and Igniter No.2           |             | L 1  | License Plate Light LH               | 90980-11148 |
| I 3  | Ignition Coil and Igniter No.3           |             | L 2  | License Plate Light RH               |             |
| I 4  | Ignition Coil and Igniter No.4           | 90980-11875 | L 3  | Luggage Compartment Light            | 90980-10121 |
| I 5  | Injector No.1                            |             | M 1  | Multiplex Network Body ECU           | 90980-10801 |
| I 6  | Injector No.2                            |             | M 2  | Multiplex Network Body ECU           | 90980-11915 |
| I 7  | Injector No.3                            |             | M 3  | Multiplex Network Master SW          | 90980-11469 |
| I 8  | Injector No.4                            | 90980-11145 | M 4  | Moon Roof Control Motor and Limit SW | 90980-10997 |
| I 9  | ISC Valve                                |             | M 5  | Moon Roof Control SW                 | 90980-10797 |
| I10  | Ignition Key Cylinder Light              | 90980-10906 | N 1  | Neutral Start SW                     | 90980-11784 |

*Nota : No todos los números de las partes del conector indicados arriba están dispuestos para el suministro.*

Anmerkung: Nicht alle der obenerwähnten Teile-Nummern der Stecker werden für die Lieferung etabliert.

## M PART NUMBER OF CONNECTORS

| Code | Part Name                              | Part Number | Code | Part Name                               | Part Number |
|------|----------------------------------------|-------------|------|-----------------------------------------|-------------|
| N 2  | Noise Filter (Ignition)                | 90980-10843 | R25  | Remote Control Mirror LH                | 90980-11587 |
| O 1  | Oil Pressure SW                        | 90980-11363 | R26  | Remote Control Mirror RH                |             |
| O 2  | O/D Main SW                            | 90980-10825 | S 1  | Speed Sensor (Combination Meter)        | 90980-11143 |
| P 1  | Power Steering Oil Pressure SW         | 90980-11428 | S 2  | Starter                                 | 90980-11400 |
| P 2  | Parking Brake SW                       | 90980-10871 | S 3  | Starter                                 | 90980-09506 |
| P 3  | Power Heater SW                        | 90980-11013 | S 4  | Seat Heater SW (Driver's Seat)          | 90980-10797 |
| P 4  | PTC Heater                             | 90980-10956 | S 5  | Seat Heater SW (Front Passenger's Seat) | 90980-10996 |
| P 5  | Personal Light                         | 90980-10365 | S 6  | Stop Light SW                           | 90980-11118 |
| P 6  | Power Outlet                           | 90980-10859 | S 7  | Seat Heater (Driver's Seat)             | 90980-11296 |
| P 7  | Power Window Control SW Front LH       | 90980-10789 | S 8  | Seat Heater (Front Passenger's Seat)    |             |
| P 8  | Power Window Control SW Front RH       |             | S 9  | Slide Door Courtesy SW LH               | 90980-10871 |
| P 9  | Power Window Control SW Rear LH        | 90980-10631 | S10  | Slide Door Courtesy SW RH               |             |
| P10  | Power Window Control SW Rear RH        |             | S11  | Slide Door Junction SW LH               | 90980-10891 |
| P11  | Power Window Motor Front LH (LHD)      | 90980-11011 | S12  | Slide Door Junction SW LH               | 90980-10798 |
|      | Power Window Motor Front LH (RHD)      | 90980-10860 | S13  | Slide Door Junction SW RH               | 90980-10891 |
| P12  | Power Window Motor Front RH (LHD)      |             | S14  | Slide Door Junction SW RH               | 90980-10798 |
|      | Power Window Motor Front RH (RHD)      | 90980-11011 | S15  | Slide Door Lock Motor and SW LH         |             |
| P13  | Power Window Motor Rear LH             | 90980-10860 | S16  | Slide Door Lock Motor and SW RH         | 90980-12057 |
| P14  | Power Window Motor Rear RH             |             | S17  | Slide Door Lock Motor LH                |             |
| P15  | Pretensioner LH                        | 90980-11862 | S18  | Slide Door Lock Motor RH                |             |
| P16  | Pretensioner RH                        |             | T 1  | Throttle Position Sensor                | 90980-11261 |
| R 1  | Radiator Fan Motor                     | 90980-10928 | T 2  | Turbine Speed Sensor                    | 90980-11156 |
| R 2  | Radio and Player                       | 90980-10997 | T 3  | Turn Signal Light Front LH              | 90980-11019 |
| R 3  | Radio and Player                       | 90980-10996 | T 4  | Turn Signal Light Front RH              |             |
| R 4  | Radio and Player                       | 90980-10819 | T 5  | Telltale Light (LHD)                    | 90980-11115 |
| R 5  | Radio and Player                       | 90980-10803 |      | Telltale Light (RHD)                    | 90980-11114 |
| R 6  | Rear Fog Light SW                      | 90980-11165 | T 6  | Telltale Light                          | 90980-11113 |
| R 7  | Remote Control Mirror SW               | 90980-11657 | T 7  | Telltale Light                          |             |
| R 8  | Rheostat SW                            | 90980-10797 | T 8  | Transponder Key Amplifier               | 90980-12092 |
| R 9  | Rear A/C Control SW                    | 90980-11923 | T 9  | Turn Signal Light Rear LH               | 90980-10825 |
| R10  | Rear Air Mix Control Servo Motor       | 90980-11921 | T10  | Turn Signal Light Rear RH               | 90980-12088 |
| R11  | Rear Air Vent Mode Control Servo Motor | 90980-12091 | T11  | Tweeter Speaker LH                      | 90980-10915 |
| R12  | Rear Blower Motor                      | 90980-10214 | T12  | Tweeter Speaker RH                      |             |
| R13  | Rear Blower Resistor                   | 90980-11136 | U 1  | Unlock Warning SW                       | 90980-10860 |
| R14  | Rear Combination Light LH              | 90980-10908 | V 1  | VSV (EVAP)                              | 90980-11156 |
| R15  | Rear Combination Light LH              | 90980-10795 | V 2  | Vanity Light LH                         | 90980-10621 |
| R16  | Rear Combination Light RH              | 90980-10908 | V 3  | Vanity Light RH                         |             |
| R17  | Rear Combination Light RH              | 90980-10795 | W 1  | Washer Motor                            | 90980-10981 |
| R18  | Rear Cooler Control SW                 | 90980-10976 | W 2  | Water Temp. SW                          | 90980-11235 |
| R19  | Rear Heater Power Transistor           | 90980-11136 | W 3  | Water Temp. Sensor                      | 90980-10860 |
| R20  | Rear Speaker LH                        | 90980-10935 | W 4  | Wireless Door Lock Control Receiver     | 90980-11921 |
| R21  | Rear Speaker RH                        |             |      |                                         |             |
| R22  | Rear Window Defogger                   |             |      |                                         |             |
| R23  | Rear Window Defogger                   |             |      |                                         |             |
| R24  | Rear Wiper Relay and Motor             | 90980-11296 |      |                                         |             |

Note: Not all of the above part numbers of the connector are established for the supply.

Nota: Toutes les références du connecteur ne sont pas définies pour la fourniture.

