


# Power Outlet

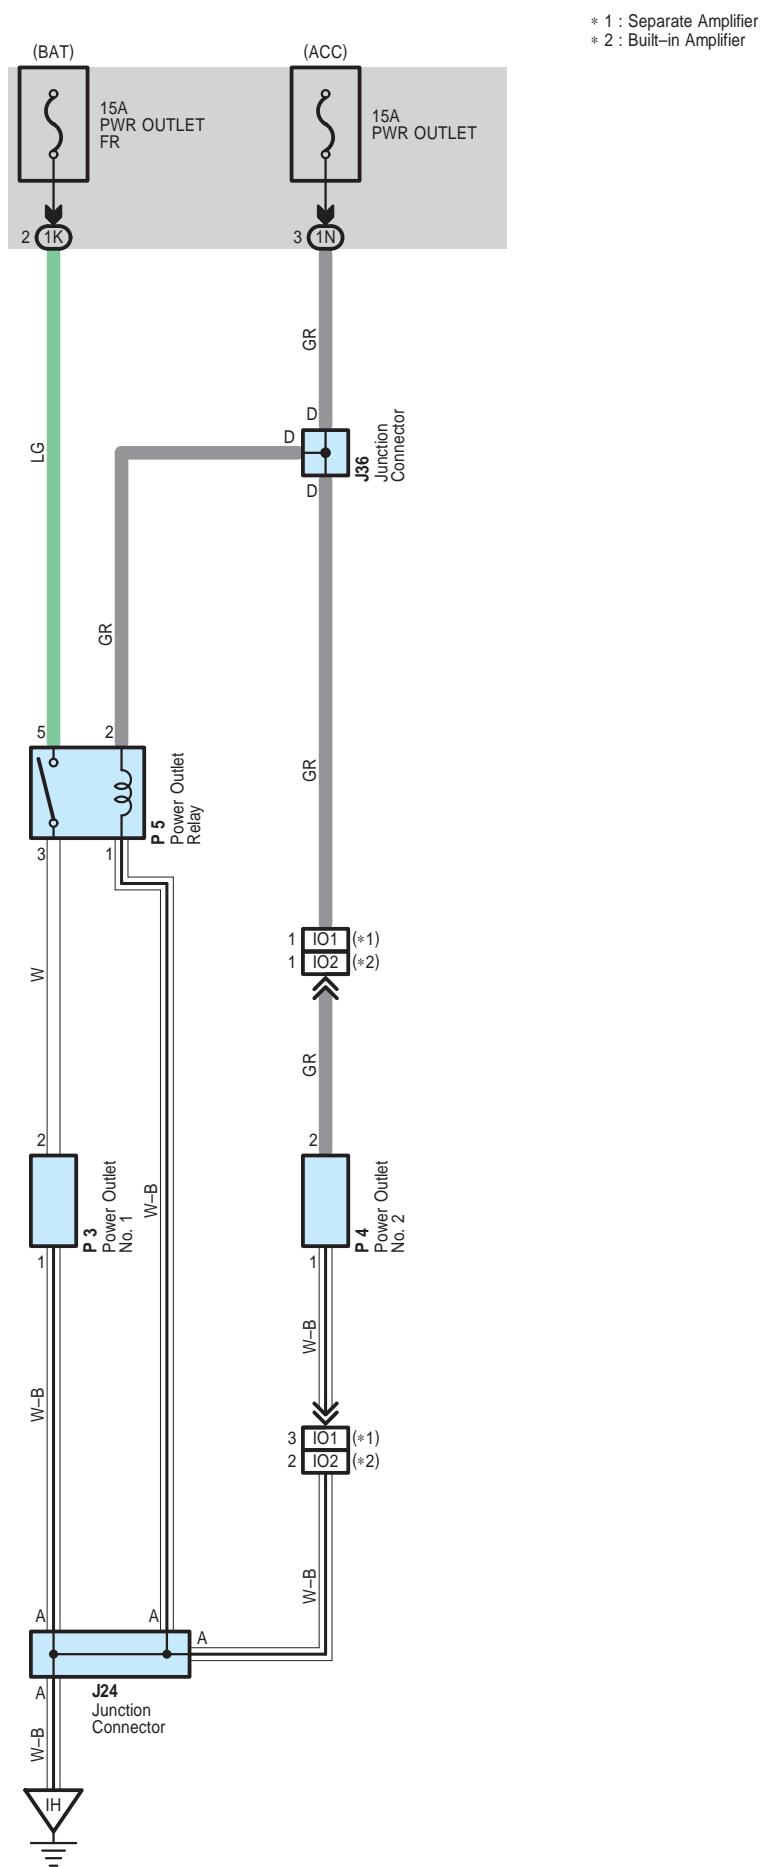

○ : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| J24  | 50       | P3   | 51       | P5   | 51       |
| J36  | 50       | P4   | 51       |      |          |

□ : Junction Block and Wire Harness Connector

|      |          |  |
|------|----------|--|
| Code | See Page | Junction Block and Wire Harness (Connector Location)           |
| 1K   | 31       | Instrument Panel Wire and Driver Side J/B (Lower Finish Panel) |
| 1N   |          |  |

□ : Connector Joining Wire Harness and Wire Harness

|      |          |   |
|------|----------|---|
| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)                  |
| IO1  | 59       | Instrument Panel Wire and Instrument Panel No.4 Wire (Front Console Box LH) |
| IO2  |          |   |

▽ : Ground Points

|      |          |                        |
|------|----------|------------------------|
| Code | See Page | Ground Points Location |
| IH   | 58       | Cowl Side Panel LH     |